



DriBUDDi

Electric Clothes Dryer **COMPACT**


Instruction Manual



DriBUDDi

Electric Clothes Dryer **COMPACT**

Thank you for choosing Dri Buddi Compact from JML. Before you start, please take a few moments to carefully read these instructions, and retain this manual for future reference.

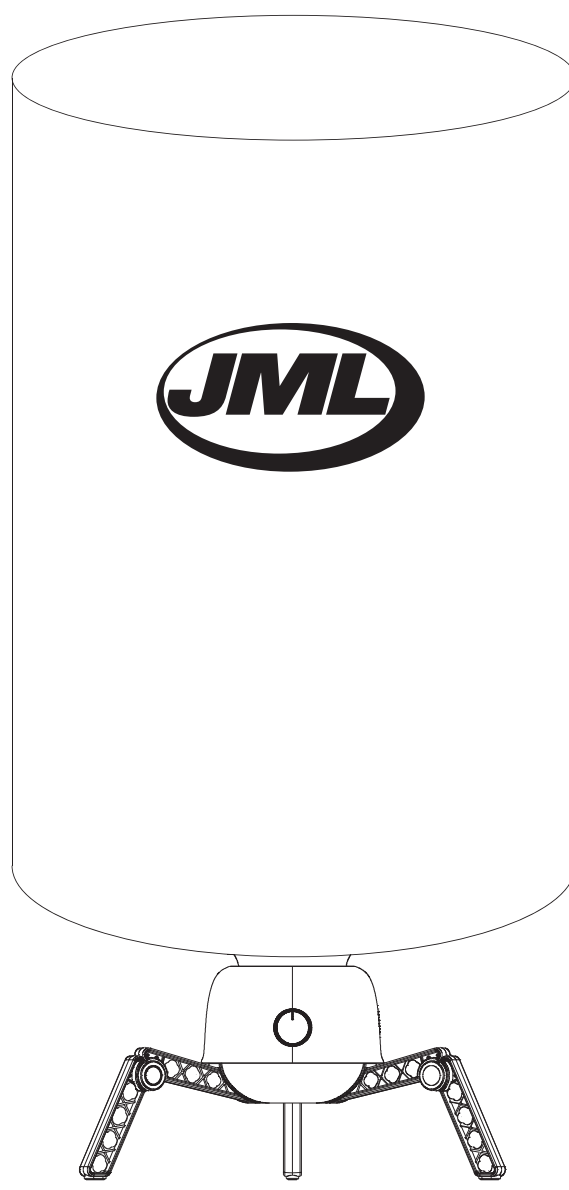

Contents


Safety Warnings & Advice _____	2	Using your Dri Buddi Compact _____	6
Your Dri Buddi Compact _____	3	Cleaning and Maintenance _____	6
Components _____	3	Technical Information _____	6
Assemble Dri Buddi Compact _____	3-5	Fuse & Mains Plug Replacement _____	7
Stage 1 _____	3	Guarantee _____	7
Stage 2 _____	4	Disposal and Environment _____	7
Stage 3 _____	4		
Stage 4 _____	4		
Stage 5 _____	5		
Stage 6 _____	5		
Stage 7 _____	5		



Safety Warnings & Advice

- This is not a toy. Keep out of reach of children.
- **CAUTION:** The plastic bags used to wrap this appliance or the packaging may be dangerous. To avoid risk of suffocation, keep these bags out of reach of babies and children. These bags are not toys.
- Do not use Dri Buddi Compact for any purpose other than those described in this manual.
- For indoor household use only.
- This appliance is not intended for use by anyone with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not overload your Dri Buddi Compact. Its maximum capacity is 10kg of damp clothing, and the maximum weight load that each arm can hold is 2kg of damp clothing. Dri Buddi Compact can fit up to 18 garments.
- Keep your Dri Buddi Compact at least 1.5 metres away from any water or fire source.
- This appliance is only intended for drying fabrics washed in water.
- Keep children away from Dri Buddi Compact whilst in use. Do not allow them to play with Dri Buddi Compact or near it when it is in use.
- Unplug the cord after use, before assembly or disassembly, and before cleaning.
- Periodically check the power cord and plug for any damage. If it is damaged, do not use.
- If the power cord and plug is damaged, it must be exclusively replaced by the manufacturer or a similarly qualified electrician in order to avoid a hazard.
- Keep the power cord away from hot surfaces and sharp edges.
- Do not open the Heater or attempt to change or repair it. Unauthorised repairs will invalidate the warranty and could result in injury.
- Ensure the appliance is folded out securely before loading it with laundry and switching it on.
- Keep fingers away from folding parts.
- The Heater may become hot during use. NEVER touch any metal parts as they may cause burns to the skin.
- Ensure that the area around the Dri Buddi Compact is kept clear.
- Ensure that the holes on top of the Cover are not covered during operation.
- Keep Dri Buddi Compact away from water or other liquids. Do not plug in if it is resting on a wet surface.
- Dri Buddi Compact should only be used in a well-ventilated area. If ventilation is lacking, it can also be used near an open window. Do not push directly up against a wall; leave at least a gap of an inch so air can circulate around it.
- Please regularly inspect your Dri Buddi Compact to make sure clothes have not fallen off their hangers.
- Always use the Dri Buddi Compact in a clean environment to avoid any ingress of dust or debris into the Dri Buddi Compact unit.
- Clothes should never be dripping when placed inside the unit.
- Long clothes that may obstruct the warm air vent need to be placed correctly so there is no obstruction that may cause overheating of the motor.
- The feet should always be attached.
- The vent on the underside should be checked for any sign of dust/fluff and this should be removed where possible.
- The unit should not be used for any other means – i.e. as a warm heater (without the canvas bag).
- Do not leave this product unattended.
- Do not use the Dri Buddi Compact while sleeping.

Your Dri Buddi Compact

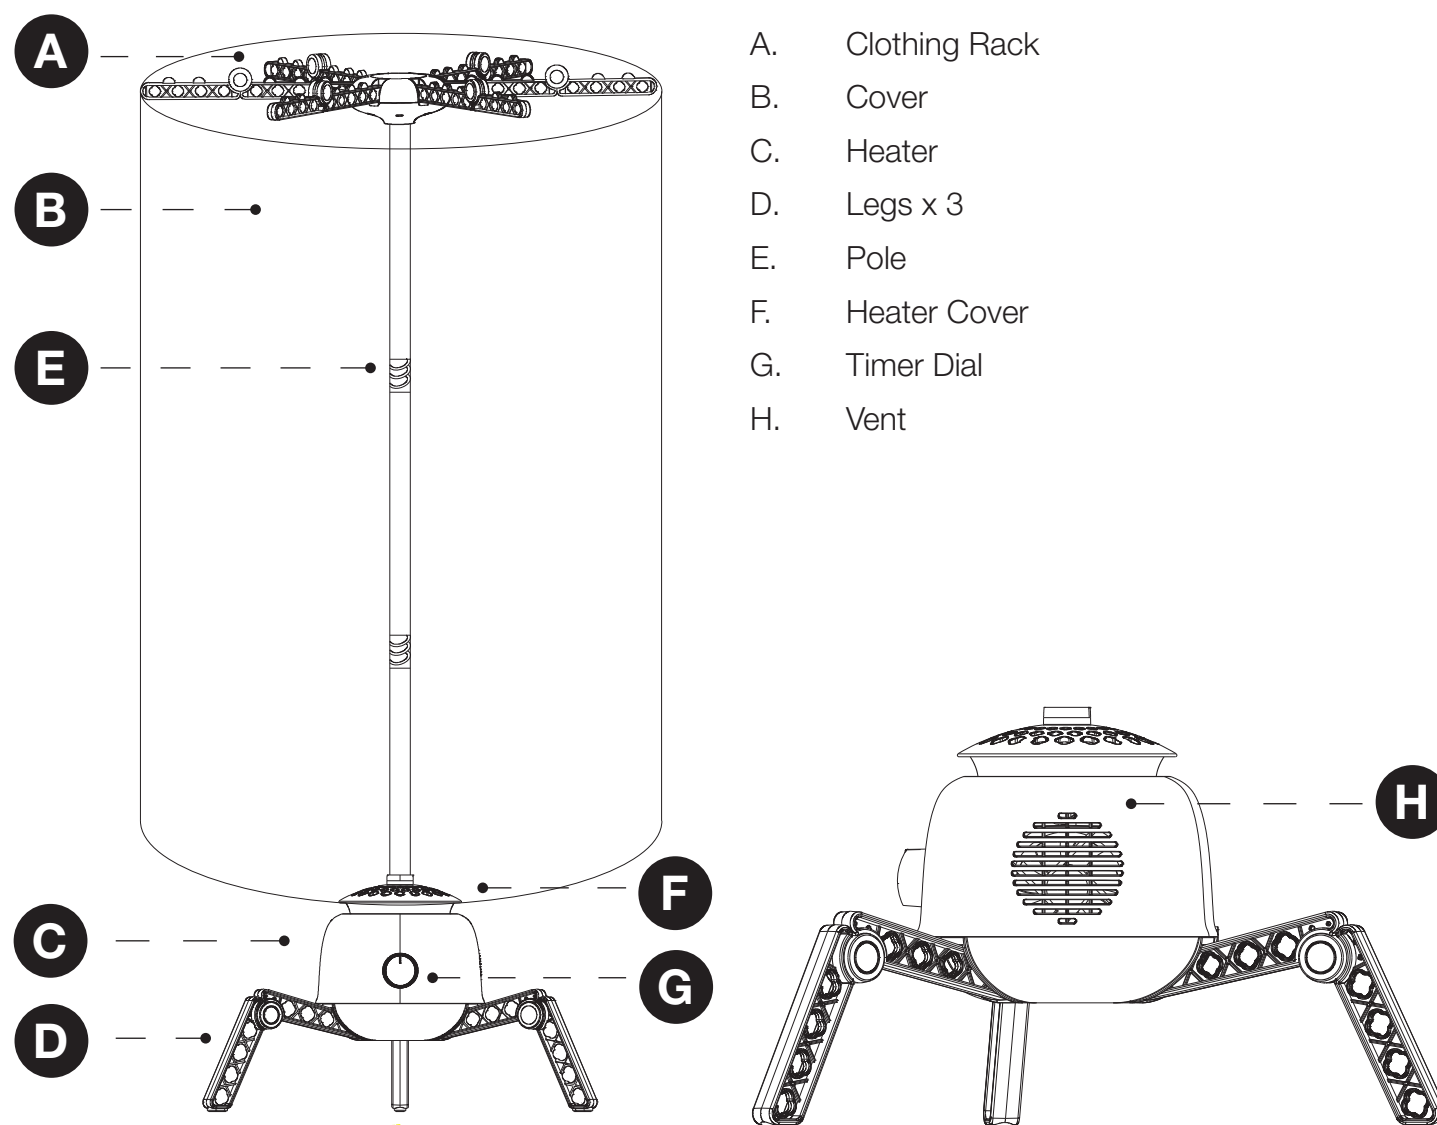


Assembling Dri Buddi Compact

Dri Buddi Compact is quick and easy to put together.


Carefully unpack the parts and remove all the packaging. Ensure the appliance switched is off and unplugged during assembly.

1. Push the 3 Legs (D) into the holes on the underside of the Heater (C). Ensure they are all fitted tightly and equally so there is stability.

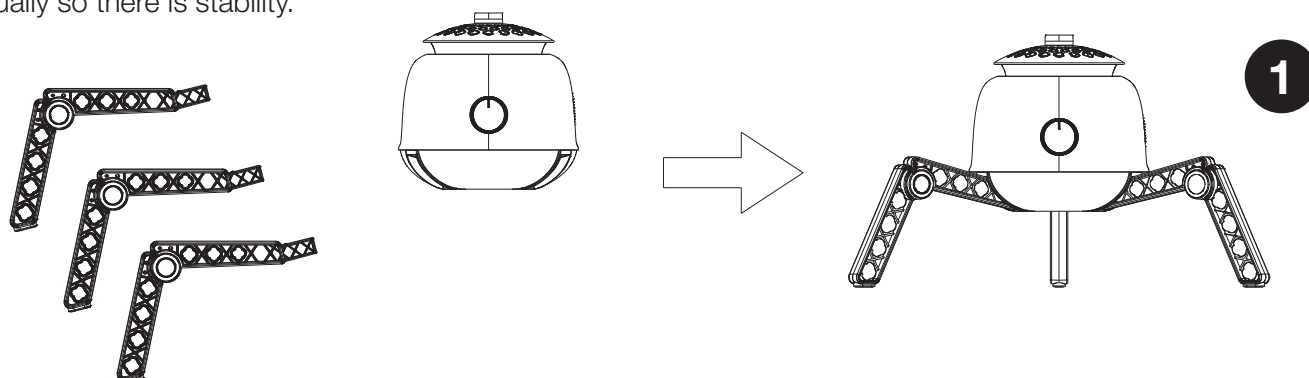


Assembling Dri Buddi Compact Cont.

2. Connect the 3 segments of the Pole (E) together by screwing the male thread into the female thread clockwise until it stops.
3. Fit the Pole (E) into the hole in the top of the Heater (C) until tight.

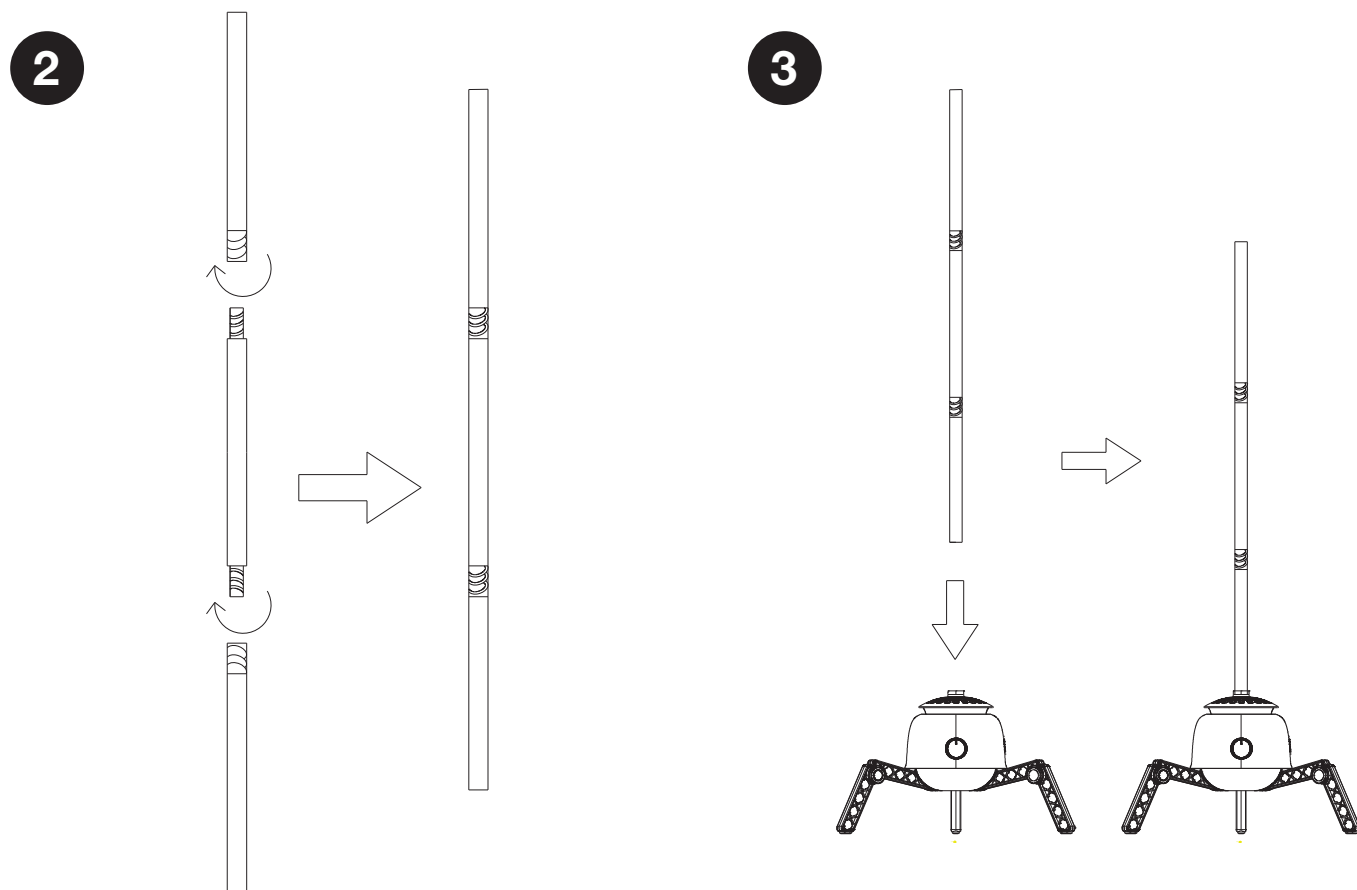

4. Sit the Clothing Rack (A) onto the Pole (E) until tight. Open the arms fully for clothes hangers.

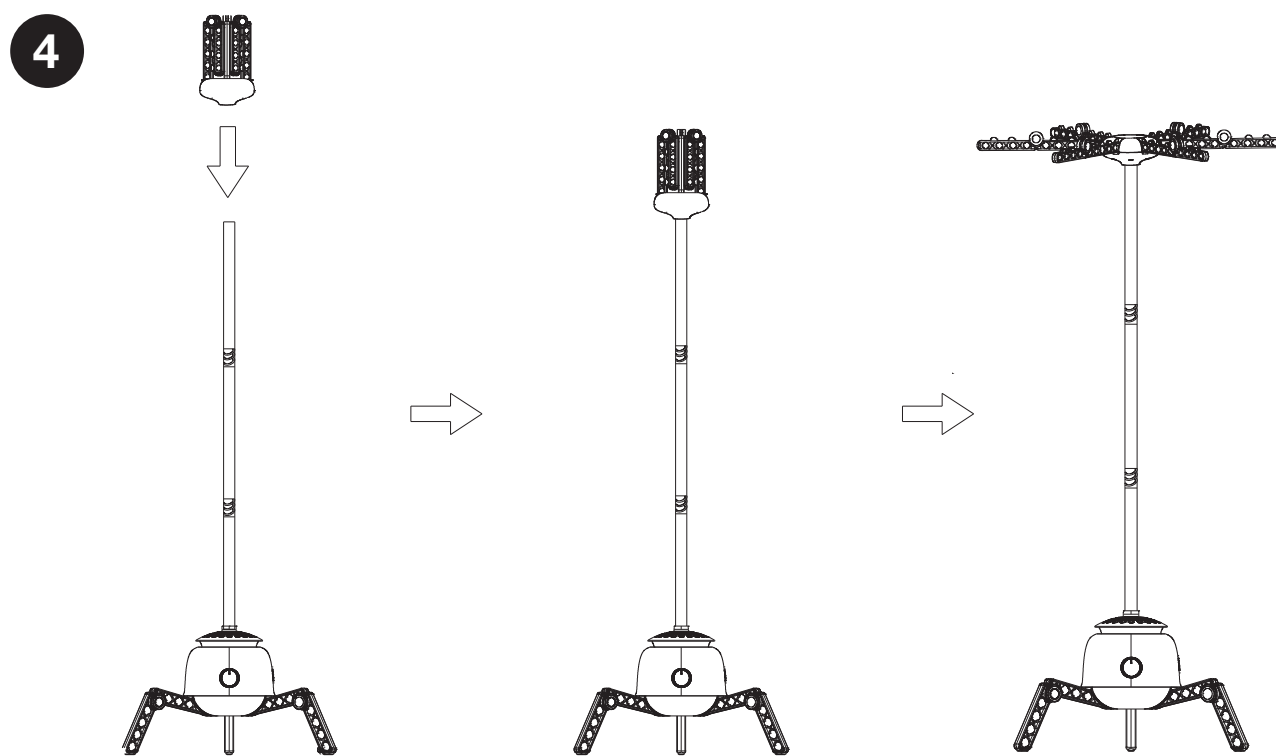


Assembling Dri Buddi Compact Cont.

5. Open all the zips on the Cover (B). The top of the Cover (B) is above where the three zips meet, the black ring is at the bottom.
6. Place the Cover (B) around Dri Buddi Compact, ensuring that it surrounds all your clothes and that the black ring sits around the Heater Cover (F) on the Heater (C).
Ensure the Cover (B) is correctly positioned on, not over, the Heater (C).
7. Zip up all the zips and fold down the zip cover at the top. Dri Buddi Compact is now ready to use.





CAUTION: DO NOT place the Cover on the Dri Buddi Compact while turned on and/or hot. This may result in burning or the Cover may not be placed on correctly.

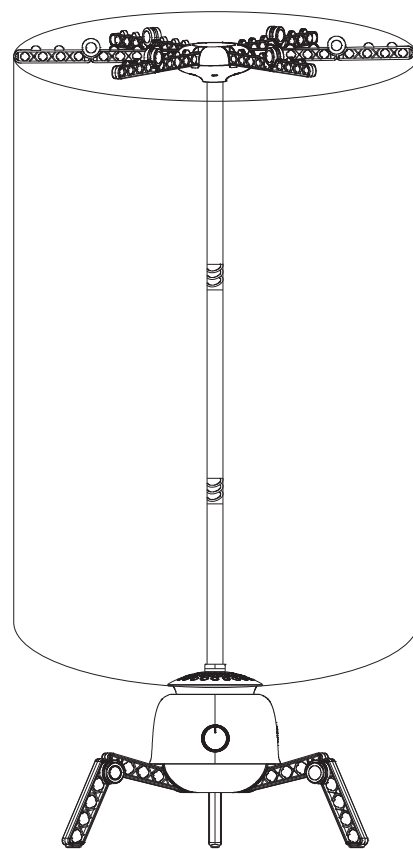

5

6

7

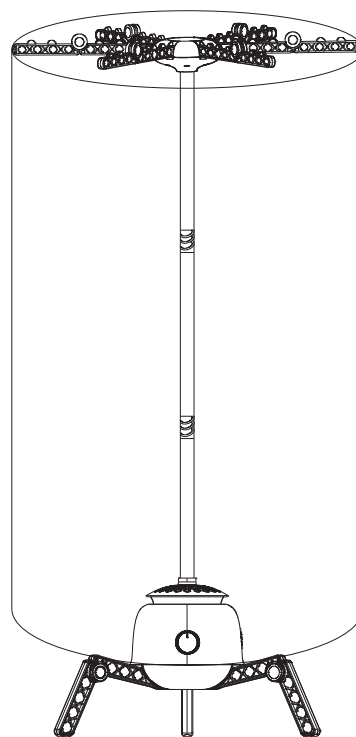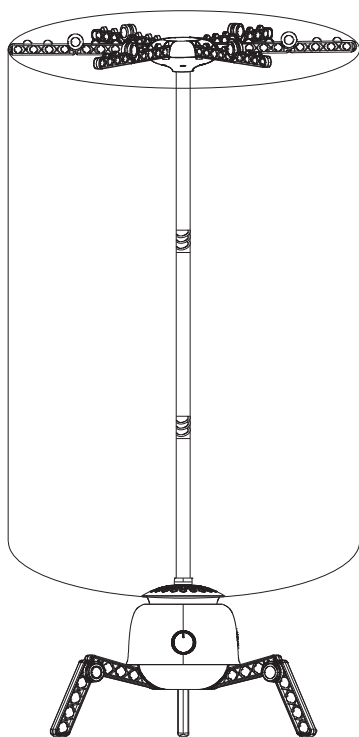

Using your Dri Buddi Compact

Dri Buddi Compact gets clothes dry whatever the weather by circulating warm air around them within a specially designed cover. The powerful fan is quiet and efficient, drying your clothes in 1 to 3 hours. It is gentler on your clothes than a tumble dryer. Clothes are dried gently, with no shrinkage and far less creases, so ironing time is reduced too.


Dri Buddi Compact is not recommended for clothes that are soaking/dripping wet. Clothes should be ideally spin-dried by a washing machine or well-wrung if hand washed. This helps keep drying times to a minimum and prevent excess water dripping onto your floor.

Note: Dri Buddi Compact should only be used in a well-ventilated area. If ventilation is lacking, it can also be used near an open window. **DO NOT** push directly up against a wall, leave at least a gap of an inch so air can circulate.

1. Firstly, make sure the Dri Buddi Compact is fully assembled, unplugged and switched off. Place the Dri Buddi Compact on a level, dry surface ready for use.
2. Undo all three zips. Pull down the Cover, but leave the black ring still resting above the Heater. Allow the rest of the Cover to fall to the floor.
3. Place your wet clothes on coat hangers (plastic hangers are recommended) and hang them onto the clothing rack, spacing them out evenly for best results. Do not hang clothes too close together. They will dry quicker if air is allowed to circulate between them. Each arm is designed to hold 2-3 hangers, and the maximum weight load that each arm can hold is 2kg. Load evenly across the clothing rack to avoid the Dri Buddi Compact tipping over. Put the heavier clothes on the inner side and lighter

clothes on the outer side. Do not exceed the maximum load for the Dri Buddi Compact of 10kg. Dri Buddi Compact can fit up to 18 garments.

4. Pull the Cover back over Dri Buddi Compact and zip-up all the zips.
5. Plug in and switch on the Dri Buddi Compact at a mains socket.
6. Turn the Dial clockwise to set the desired time – minimum 30 minutes, maximum 180 minutes. The power light will light up red to indicate the unit is on. Dri Buddi Compact will automatically turn off when the timer reaches zero.
7. Switch off and unplug at the mains socket. Then let everything cool down for a few moments before unzipping the cover and removing the hangers.
8. Let the Dri Buddi Compact cool completely before storing it away.

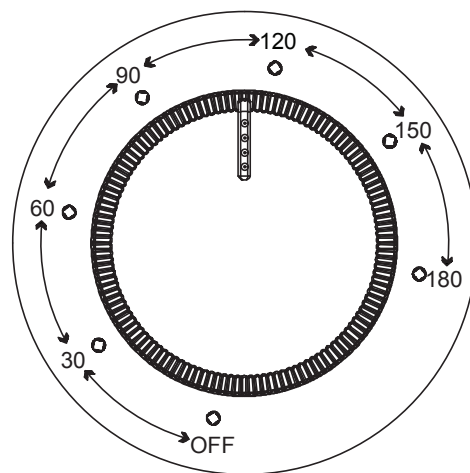

Cleaning and Maintenance

Wipe with a soft damp cloth. DO NOT rinse with water in any way.

Check the fan vent and the air intake vent on the side of the Heater to make sure they are clear of blockages / dust. Only use a dry or a lightly moist cloth when cleaning the vent.

Technical Information

Model No.: MZX-Y90-1

Rated voltage: 220-240V

Rated frequency: 50Hz

Rated power: 850W

Approximate size (fully open): Dia. 64 cm x H 130 cm


Weight of product: 2.4 kg

Fuse & Mains Plug Replacement - (UK & Ireland only)

This appliance is fitted with a BS 1363 13-amp plug. If you have to replace the fuse, only use those that are ASTA or BSI approved to BS 1362 and have a rated current of 13 amps. If you are unsure which plug or fuse to use, always refer to a qualified electrician.

To change the fuse

1. Use a flat-head screwdriver to lift the cover off the fuse compartment.
2. Carefully remove the existing fuse.
3. Clip the new 13 amp fuse into place.
4. Clip the cover back firmly into place.

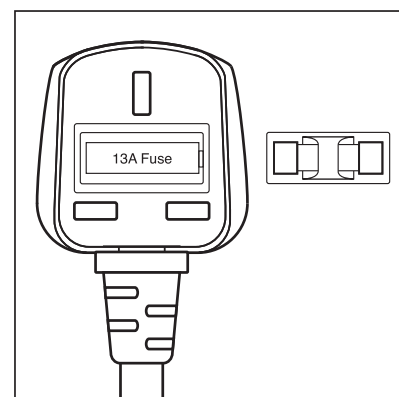

If the power cord is damaged in any way, please contact JML customer services.

Guarantee

This product is guaranteed for one year against all defects of workmanship and materials. This guarantee does not affect your statutory rights. For refunds and replacements, please return the item to the retailer where you initially made the purchase. You will be required to provide proof of purchase. If you have any problems or queries about this product, please contact JML customer service.

Disposal and Environment

This product is covered by the waste electrical and electronic equipment (WEEE) regulations. It should not be discarded with normal household waste, but taken to your local collection centre for recycling. For further information, please contact your local authority or approved disposal agency.



Distributed and manufactured by:

JML, Unit 1 Eastside, Port of Tyne, South Shields, UK, NE33 5SP.

JML GmbH, Rheinstraße 3, 63225 Langen, Germany.

Customer Services: UK: 0800 031 9020

(Freephone). ROI: 041-978 0003 (Local rate)

Email: info@JMLgroup.co.uk. **Web:** www.JMLdirect.com

©JohnMillsLtd/AL/05.24/1384/A. Made in China

