

**BUSH** *Classic*

Instruction Manual  
KTS-607





You'll soon be enjoying your new Turntable.

It all begins here, with your instructions. Don't worry, there's nothing too technical coming up. Just simple, step-by-step guidance to get you up and running quickly. Sound good? Then let's get started.

## Help and Guidance


We're here to help you get the most from your Turntable. Should you require any guidance, a simple solution can often be found online at:

[www.bush-support.com](http://www.bush-support.com)

If you still require further assistance, call one of our experts on 0345 604 0105

# Safety information

1

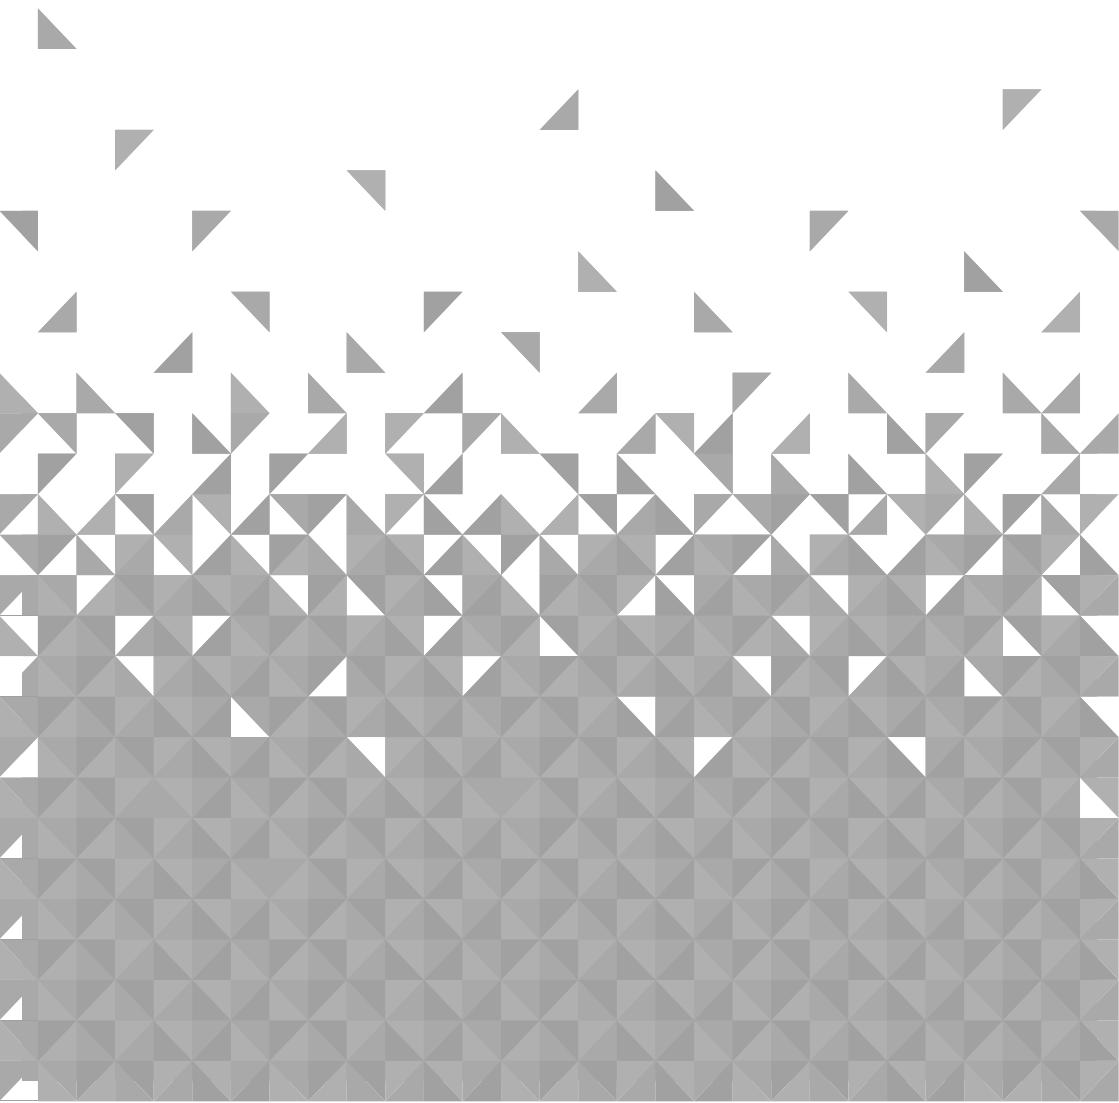





## Safety information

Important - Please read these instructions fully before installing or operating

### Power source

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE ANY COVER. NO USER-SERVICEABLE PARTS INSIDE, REFER ANY SERVICING TO QUALIFIED SERVICE PERSONNEL .

- Please read this owner's guide
- Please take the time to follow the instructions in this owner's guide carefully. It will help you set up and operate your system properly and enjoy all of its advanced features .
- Please save this owner's guide for future reference .
- The product label is located on the back of the product.
- Heed all warnings - on the product and in the owner's guide.
- Do not use this apparatus near water or moisture .
- Do not use this product near a bathtub, washbowl, kitchen sink, and laundry tub, in a wet basement, near a swimming pool, or anywhere else that water or moisture is present .
- Only use attachments/accessories specified by the manufacturer .
- Unplug this apparatus during lightning storms or when unused for long periods of time - to prevent damage to this product .
- Refer all servicing to qualified service personnel
- Servicing is required when the apparatus has been damaged in any way, such as liquid has been spilled or objects have fallen into the apparatus; the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped -
- Do not attempt to service this product yourself.
- Opening or removing covers may expose you to dangerous voltages or other hazards .
- To prevent risk of fire or electric shock, avoid overloading wall outlets, extension cords, or integral convenience receptacles .
- Use suitable power sources - Plug the product into a suitable power source, as described in the operating instructions or as marked on the product .

The mains plug is used as the disconnect device, the disconnect device shall remain readily accessible.



This product complies with European low voltage (2006/95/EC) and electromagnetic compatibility (2004/108/EC) directives .



#### WEEE marking "Information for the consumer"

Disposal of your old product Your product is designed and manufactured with high quality materials and components, which can be recycled and reused . When this crossed out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.

Please make yourself aware of the local collection system for electrical and electronic products. Please act according to your local rules and do not dispose of your old products with your normal household waste. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.

# Contents

## Page Contents

Warnings .....	6
Box contents and features .....	7
Assembling and attaching the legs .....	8
Set up and operating turntable .....	9~11
Replacing the stylus .....	12
Precautions .....	12
Troubleshooting .....	13
Specifications .....	13
Guarantee .....	15~19

## Warnings

### Warning

1. No naked flame sources, such as lighted candles, should be placed on or near this equipment.
2. Do not place the product in enclosed bookcases or racks without proper ventilation.
3. The mains adaptor is used as the disconnect device and must be easily reached to unplug.
4. Always use the power adaptor supplied if it needs to be replaced make sure the replacement has the same rating.
5. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
6. Do not expose to dripping or splashed fluids. Objects filled with liquids, such as vases, must not be placed on or near this equipment.
7. The unit should not be exposed to direct sunlight, very high or low temperature, moisture, vibrations or placed in dusty environment.
8. Do not use abrasives, benzene, thinner or other solvents to clean the surface of the unit. To clean, wipe with clean soft cloth it and a mild detergent solution.
9. Never attempt to insert wires, pins or other such objects into the vents or opening of the unit.
10. Do not disassemble or modify the turntable - apart from the stylus which can be replaced, there are no other user serviceable parts.
11. If the turntable is damaged in anyway or malfunctions do not use. Consult a qualified service engineer.
12. Switch off the mains socket the power adaptor is connected to when the turntable is not in use.
13. Do not dispose of this product with household waste at the end of its life cycle; hand it over to a collection centre for the recycling of electrical and electronic appliances. By recycling, some of the materials can be reused. You are making an important contribution to protect our environment. Please check with your Local Authority or recycling advice.






Warning: To prevent possible hearing damage, do not listen at high volume for long periods.

### Disposal of your old appliance:

1. When this crossed-out wheeled bin symbol is attached to a product, it means the product is covered by the European Directive.
2. All electrical and electronic products should be disposed of separately from household waste at an appropriate recycling point/centre.
3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
4. For more detailed information about disposal of your old appliance, please contact your local authority or the shop where you purchased the product.



# Box contents and features

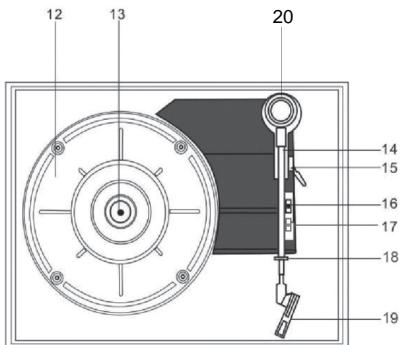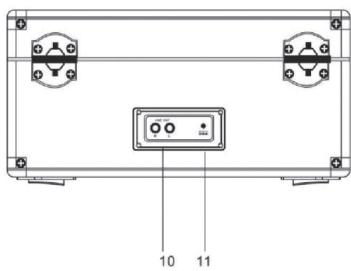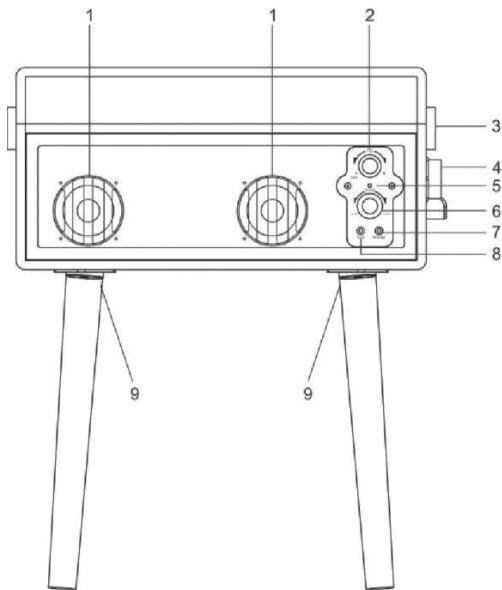

## Box Contents

- 1x Turntable with wooden case housing
- 4x screw-on wooden legs
- 1x Power adaptor
- 1x 3.5mm to RCA cable
- 1x User guide

1 Built-in speaker

2 Power On/Off, Volume control, Bluetooth ON/OFF control

3 Lock catch

4 Handle

5 Power red LED indicator

6 Tone control

7 Headphone jack

8 AUX in jack

9 Removable foot

10 Line Out RCA/Left & Right Channel

11 DC in socket

12 Turntable deck

13 Turntable shaft

14 Tone arm

15 Cuing lever

16 Turntable speed selector

17 Auto stop control switch

18 Tone arm lock


19 Stylus(Needle)cartridge

20 There is no Bluetooth switch, the Tone arm lock needs to be down to Activate before the Bluetooth Connection is made

## Attaching the legs

Follow the below instructions to install the legs.

1. Make sure the tone arm is secured and the lid catches are closed before turning the turntable upside down and placing on a soft flat surface.
2. Now screw the assembled legs securely to the threaded sockets on the base of the turntable making sure not to cross thread or over tighten them.
3. Turn the unit back over and position the turntable on a steady surface away from direct sunlight and heat sources.

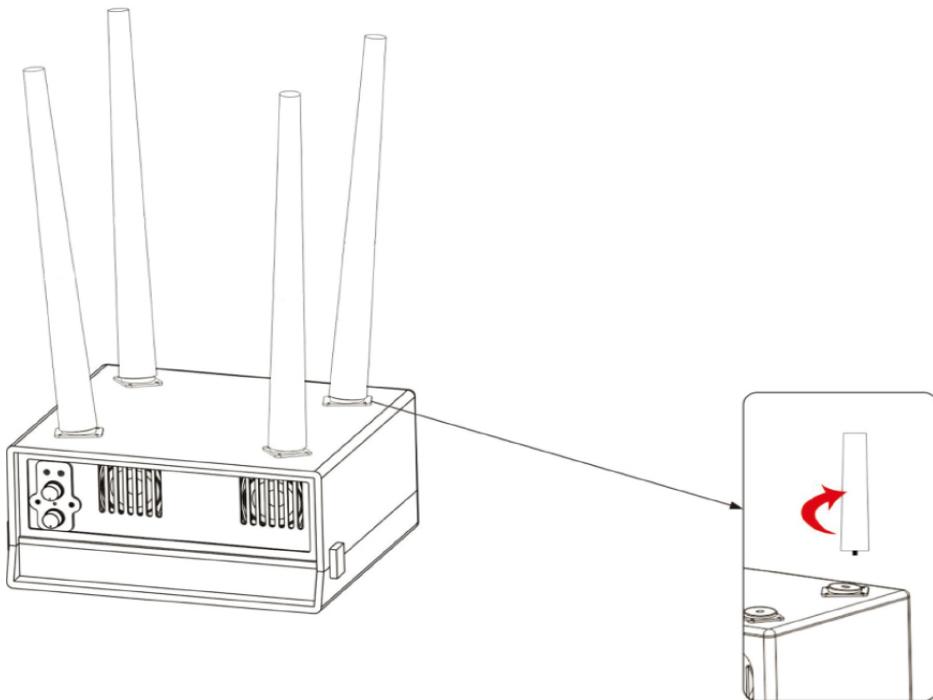

## Initial setup

1. Connect the power adaptor to a mains socket and the DC IN socket (11) on the back of the turntable .
2. If you wish to listen to your records with suitable amplifier (see -Fig 5 )  
Or connect to your Hi-Fi system using the 3.5mm to RCA cable provided
3. If you want to listen on headphones connect them to the headphone socket (7) on the front panel of the turntable .
4. If you wish to listen to playback from your phone or other device connect it to the AUX IN socket(8)on the front panel of the turntable.

# Using the turntable

1. Place the turntable case on a flat level surface.
2. Insert the adaptor cord into the DC jack at the rear of the case and plug the adaptor into the mains supply socket
3. On first use, ensure that the cable tie is removed from the player arm
4. Remove the stylus cover (fig. 1) and keep in a safe place for future use
5. Move the speed selector to the speed (33, 45 or 78rpm) corresponding to the record to be played
6. Turn the VOLUME knob to turn the turntable on and the mode indicator will illuminate red
7. Place a record onto the turntable spindle and unclip the tone arm (fig. 2)
8. Use the cuing lever to lift the tone arm (fig 3) and move the arm (fig 4) so that the stylus is positioned just inside the edge of the record or aligned with the start of the track to be played.
9. Slowly lower the arm and after a short interval the record will start to play
10. Adjust the volume to the desired level by rotating the volume control knob
11. When the end of the record has been reached the turntable will automatically stop.
12. Use the lever again to lift the tone arm (the deck will start to rotate again), move it back to the clip and lower into the cradle. The deck will stop
13. Secure the tone arm using the clip and refit the stylus cover after use and **ALWAYS** before moving the turntable
14. To turn off the turntable at any time, lift the tone arm off the record and turn the VOLUME knob fully anticlockwise.

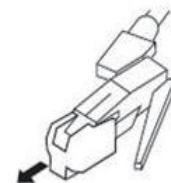


Fig 1

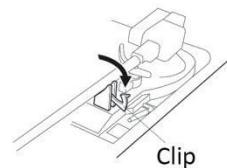


Fig 2

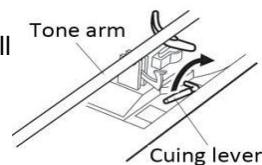


Fig 3

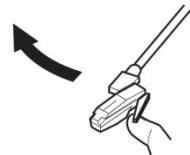


Fig 4

## Note

Some records have larger centre hole and it may be necessary to fit the centre hole adaptor to the turntable shaft before placing the record on the turntable


Always refit the stylus cover and secure the turntable arm using the clip before moving the turntable

## Bluetooth operation

- 1.Turn on the power and enter Bluetooth mode
- 2.Search “BUSH KTS-607” with the Bluetooth device. When the device find“BUSH KTS-607”,select and connect
- 3.Now you can use your Bluetooth device and enjoy the music

### NOTE:

- 1.To reduce the energy consumption of energy-using products, the device automatically switches to standby after approx.15 minutes without a signal.  
To use the device again, switch the device off and then on again.
- 2.If you wish to select Bluetooth Mode, The tone arm must be locked by tone arm lock(18)

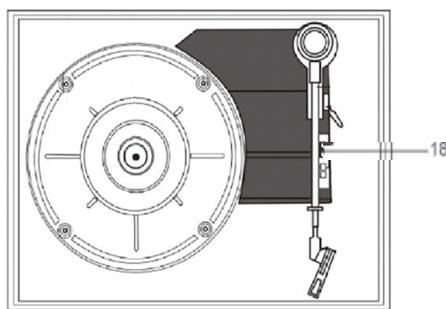

Bluetooth Mode

# Using With Auxiliary Device

1. Auxiliary analogue audio equipment can be connected and amplified via the turntable
2. Connect the auxiliary equipment using a 3.5mm jack cable into the Line In jack next to the mode knob
3. Press the PLAY button on the auxiliary equipment and use the track controls as usual on the auxiliary device
4. The volume can be adjusted using the volume knob on the turntable or the controls on the connected auxiliary device.
5. To turn off the unit at any time, turn the volume knob fully anticlockwise

## Using Headphones (not included)

A stereo headphone jack has been provided so that the turntable can be used without disturbing others. Plug in the headphones at the point marked "HEADPHONE" near the volume knob and adjust the listening volume to your chosen level. Excessive sound pressure from earphones and headphones can cause hearing loss. The turntable speakers will not operate when earphones are fitted

## Connecting the Turntable to External Speaker

If connecting the turntable to external speakers (via a suitable amplifier) use a twin phono to twin phono lead (not included) to connect the RCA output jacks to the AUDIO IN of the amplifier (see Fig. 5). Ensure red plugs are inserted into the red sockets and white into white.

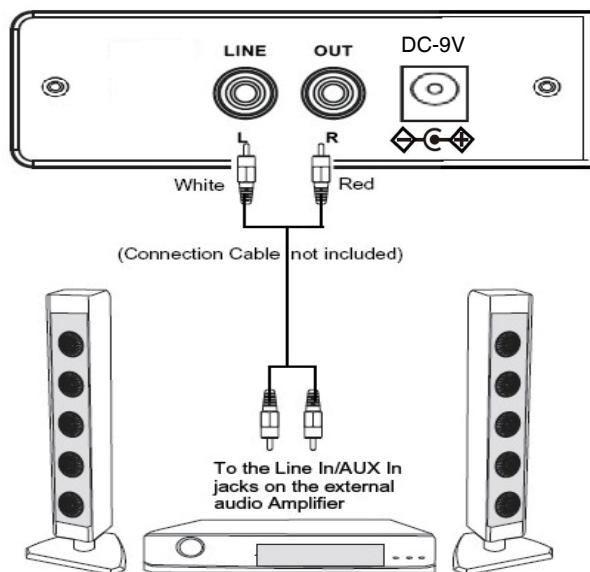


Fig 5

# Care and Maintenance

## Changing the stylus

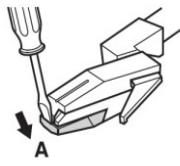


Fig 6

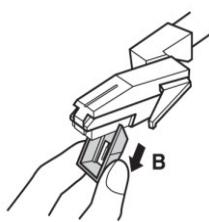


Fig 7

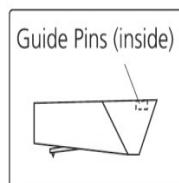


Fig 8

1. Ensure the tone arm is secured by the clip
2. Insert a tip of a small screwdriver as shown and gently push in a downward direction
3. Remove the old stylus (fig.7)
4. Hold the tip of the new stylus, align the guide pins as shown and clip into position (fig 8)

## Caring for the turntable

Wipe external surfaces with a soft cloth. If the case is very dirty, unplug from the mains supply and use a damp cloth soaked in a weak solution of washing up liquid and water. Allow to dry thoroughly before reusing


## Caring for records

Hold records by the label or edges (fig 9). Oils from clean hands can leave a residue on the record surface that will gradually deteriorate the quality of your record

Keep in a cool, dry place and store records in their sleeves and jackets when not in use

Store records upright (on their edges). Records stored horizontally will eventually bend and warp

Do not expose records to direct sunlight, high humidity and high temperatures. Long exposure to high temperatures will warp the record  
Should the record become dirty, gently wipe the surface in a circular motion using a soft anti-static cloth (fig. 10) suitable for this application

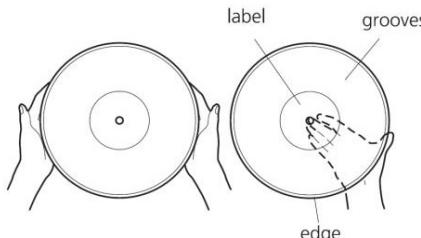

## Trouble Shooting Guide

Observation	Potential cause / solution
The turntable does not work	Has the adaptor lead been correctly plugged into the mains and the DC input jack at the rear of the case? Does the socket that is being used have power? Has the volume knob been turned in a clockwise direction to switch the unit on?
No sound	Is the volume control set at minimum on the turntable or any auxiliary that has been connected?
Noisy sound	Has the turntable been placed close to a TV set or similar?
Record does not play	Has the stylus cover been removed? Is the stylus in contact with the record surface? Check the Aux in cable was removed?
Record sound skips	Is the stylus damaged? Does the surface of the record need cleaning? Is the record scratched or warped?
Auxiliary equipment does not play	Is the auxiliary equipment correctly connected to the unit?

In the unlikely event of difficulties with your appliance please follow the trouble shooting guide below  
If the problem persists, visit the technical support website: [www.bush-support.com](http://www.bush-support.com)


## Specifications

Model No.	BUSH KTS-607
Unit Dimension	W 360mm x L 400mm x H 600mm
Unit weight	7.55kgs
Turntable Speed	33½, 45 and 78 RPM
Audio	Output power 2Wx2 (RMS) Frequency Response 20Hz to 16 KHz
I/O	AUX in 3.5mm Jack (Headphone) RCA Output
Power Source Input	Mains adaptor:Input 100-240V~50/60Hz,Max 0.3A Manis adaptor: Output DC 9V, 0.8A, 7.2W Efficiency at low load(10%):--
Bluetooth version and profiles	Bluetooth v5.0 (Profile support: A2DP, AVCTP, AVDTP, AVRCP, HFP, SPP)
Bluetooth auto standby/off time	15mins



Product support

2

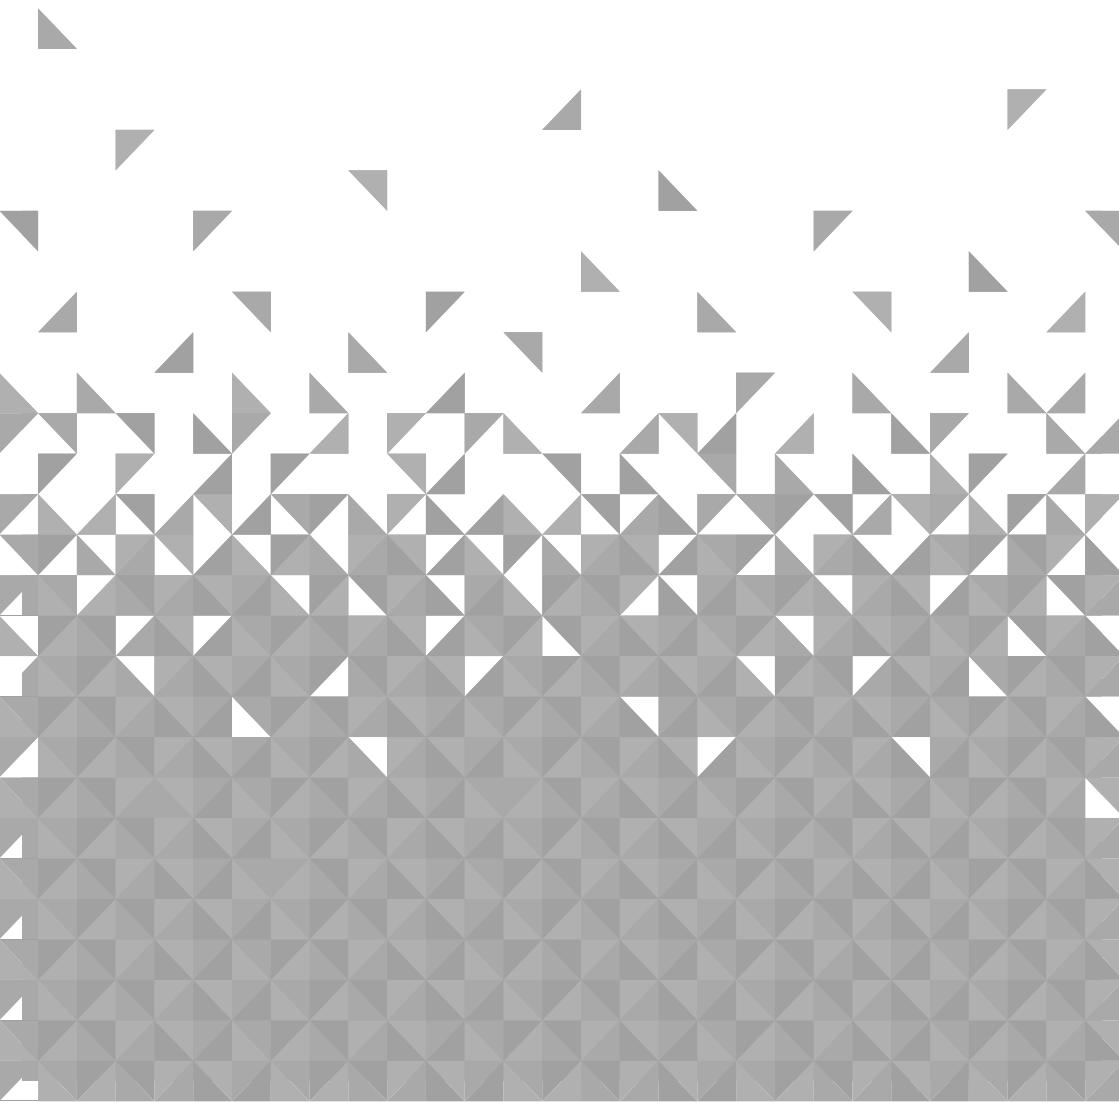



# Product support

## Help is always at hand

### Help and assistance

If you require any technical guidance or find that your <enter product name> is not operating as intended, a simple solution can often be found in the Troubleshooting section of these instructions or online at [www.bush-support.com](http://www.bush-support.com)

If you still require further assistance, call one of our experts on 0345 604 0105 . To help give us give you a fast and efficient service please have the following information ready.

Model Ref.

You can find these on the rating plate - a small information panel (usually a sticker or metal plate) on the rear of your product.

Serial number

Date of purchase

This will be shown on your receipt

Local call rates applies\*

Lines open 8am-7pm Monday to Saturday and 10am-4pm Sunday.

\*Calls to Argos enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see [www.bt.com/pricing](http://www.bt.com/pricing) for details.

For security and training purposes, telephone calls to and from customer service centres may be recorded and monitored. Calls from Republic of Ireland will attract international call charges.

# Product support

Help is always at hand

## Disposal

The symbol on the product or its packaging indicates that this product may not be treated as household waste. Instead it should be handed over to the applicable collection point for the recycling of electrical and electronic equipment.. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.. For more detailed information about recycling this product, please contact your local council office, your household waste disposal service or the shop where the product was purchased.



## Declaration

Argos Ltd. hereby declares that this Turntable with legs is in compliance with the essential requirements and other relevant provisions of the Radio Equipment Directive 2014/53/EU. The complete declaration of conformity can be obtained by contacting <http://www.argos-support.co.uk>



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Sainsbury's Argos is under license. Other trademarks and trade names are those of their respective owners.

# Product support

Help is always at hand



Call us now and activate your 12 month guarantee

Thank you for choosing Bush. Your new product is guaranteed against faults and breakdowns for 12 months. Don't forget to register it with us today so we can provide you with our best possible after-sales service and useful updates.

[www.bushregistration.co.uk](http://www.bushregistration.co.uk)

FREEPHONE\*

0800 597 8548

Lines are open 8am - 8pm, 365 days a year. \*Calls may be recorded and monitored.

Guarantor: Argos Limited, London, EC1M 6HA, UK. Argos (N.I.) Ltd, Forestside Shopping Centre, Upper Galwally, Belfast, BT8 6FX, UK.

## Your Bush Guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from who your purchased the unit.

### The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in the manual.
- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- Bush disclaim any liability for loss or damage arising from the breakdown of the product.
- This guarantee is in addition to and does not diminish your statutory or legal rights.

## Important Data Protection Information

To find out how we and Domestic & General insurance Plc use your data

Please refer to the guarantee registration material or visit [www.bushregistrations.co.uk](http://www.bushregistrations.co.uk)

# BUSH *Classic*

Electronic contact  
<http://argos.co.uk/help/contact-us>  
<http://bush-support.com>  
Helpline: 0345 604 0105