

Instruction Guide and 2 Year Guarantee

IS42



SERVICE AND REPAIRS

Your SEKONDA watch is guaranteed against defects in materials and workmanship for a period of **2 years** from the date of purchase. During this period, we will exchange or repair, at our discretion, any defective components.

IMPORTANT – Not covered by Guarantee

1. Batteries, straps and bracelets.
2. Damage caused by accident, misuse or lack of care.
3. Water penetration except in watches marked as "Water Resistant".
4. Unauthorised repairs and general wear.

SERVICING AND REPAIRS UNDER GUARANTEE

Please post your watch, together with the Retailer's Sales Receipt or Proof of Purchase, the completed Guarantee slip, and a brief note to explain the nature of the fault, by Registered Post or Recorded Delivery to the address shown. Do not send the presentation box as this will not be returned.

SERVICING AND REPAIRS OUTSIDE OF GUARANTEE

Available at a reasonable charge after an estimate has been sent by SEKONDA. Send your watch to us by Registered Post or Recorded Delivery to the address shown.

Important Note

It is important to identify your watch correctly. If, after reading this Instruction Guide, you have any further questions regarding the use, operation or adjustment of your watch, please call us during office hours on **0116 288 2500**.

WATER RESISTANCY

If your watch is water resistant, it will clearly state "Water Resistant" or have a static water pressure indication (eg "30/50/100 metres") on the dial and/or case back.
If it is NOT marked as water resistant, it should not be allowed to come into contact with water or be worn in conditions that could expose it to moisture (eg washing, heavy rain etc). Certain chemicals in water may damage the watch seals. To maintain its water resistance, we recommend that your watch is serviced and re-sealed at least every 12 months by SEKONDA.

IMPORTANT Buttons must not be operated while in contact with water.

WATER RESISTANT OR RESISTANT TO 30 METRES

Suitable for normal everyday use and will resist exposure to splashes and rain; it is NOT designed to be used while bathing or swimming.

WATER RESISTANT TO 50 METRES

As 30 metres plus bathing or swimming.

WATER RESISTANT TO 100 METRES

As 50 metres plus poolside diving and snorkelling, but NOT highboard or scuba diving.

WATER RESISTANT TO 200 METRES

As 100 metres plus scuba diving, but NOT high board diving.

OPERATING AND ADJUSTING YOUR WATCH

Your quartz analogue watch is powered by a battery which was inserted at the time of manufacture and will require periodic replacement. New batteries can be supplied and fitted by your nearest SEKONDA stockist.

Quartz analogue watches do NOT require winding.

For maximum protection, please keep your watch in its presentation box when not in use.

QUARTZ 2 EYE CHRONOGRAPH - WITH DATE AND 24HR INDICATOR:

TIME SETTING:

- Pull button out to position "C".
- Advance hands to correct time.
- Return hands to position "A".

NB: 24hr indicator is synchronised with hour hand.

IMPORTANT: Do not press PB1 or PB2 when time setting is in progress.

DATE SETTING:

- Pull button out to position "B".
- Turn clockwise to set correct date.
- Return button to position "A".

NOTE: Do not use this function between 8.30 pm and 1.30 am as date change cycle is in progress.

OPERATING CHRONOGRAPH

- Push PB1 to start/stop chronograph.
- Push PB2 to reset.

CHRONOGRAPH ZERO RESET

In the event that the chronograph hands do not return to zero when reset - take the following steps.

- Pull button out to position "C".
- Push PB1 to adjust chrono hands (counter clockwise).
- Push PB2 to adjust chrono hands (clockwise).
- Return button to position "A".

Date of Purchase



Retailers Stamp if required or full name and address

Attach Receipt or Proof of Purchase; failure to attach may invalidate guarantee. This guarantee does not affect your statutory rights.






IS42/07.17

Instructions continued overleaf.

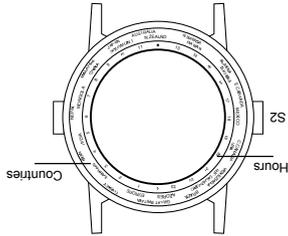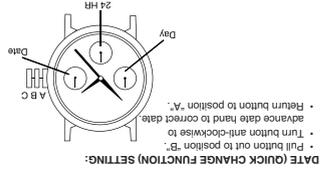

Your watch has an in-built World Time Indicator.

- Rotate crown S2 clockwise or counter-clockwise to show the local time.
- Align the local time below the desired local country.
- Your desired World time will now be shown as the hour closest to your desired country on the rotating ring.

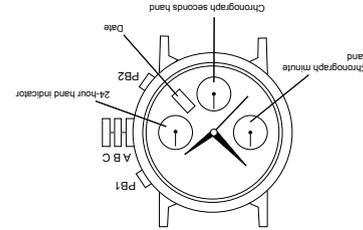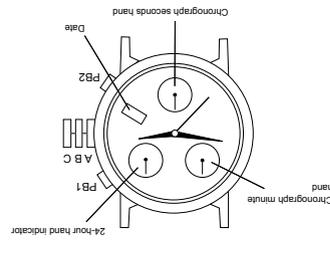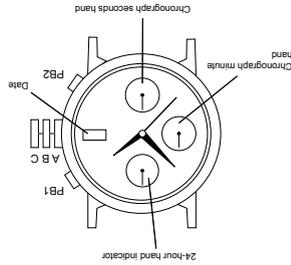

For free bracelet adjusting service, return the watch to the address below.

TP (UK) Ltd., Alexander House, Chartwell Drive, Wigston, Leicester LE18 2EZ

Important

This guarantee slip should be retained by the owner of the product and should only be sent to Sekonda together with the product and £6.00 to cover handling and postage when service under guarantee is required. Please refer to services and repairs under guarantee for further information on service under guarantee. This guarantee does not affect your statutory rights.

Name _____

Address _____

Post Code _____

Day time Phone _____

Block Capitals

Guarantee

QUARTZ THREE-EYE WITH DAY-DATE-24 HOUR FUNCTION

TIME/24 HOUR FUNCTION SETTING:

- Pull button out to position "C".
- Turn button clockwise to set hour, minute and 24 hour hands to correct time. When setting the hour hand, be sure to check that the 24 hour hand is set properly.

(e.g. 12 Midnight = 24hrs)

• Return button to position "A".

NOTE: When setting the minute hand first advance it to 5 minutes ahead of the desired time and then turn it back to the exact minute.

DAY SETTING:

- Pull button out to position "C".
- Turn button clockwise until correct day is shown.
- Return button to position "A".

DATE (QUICK CHANGE FUNCTION) SETTING:

- Pull button out to position "B".
- Turn button anti-clockwise to advance date hand to correct date.
- Return button to position "A".