


# Ball Run

Assembly & User Instructions - Please keep for future reference

719/4184

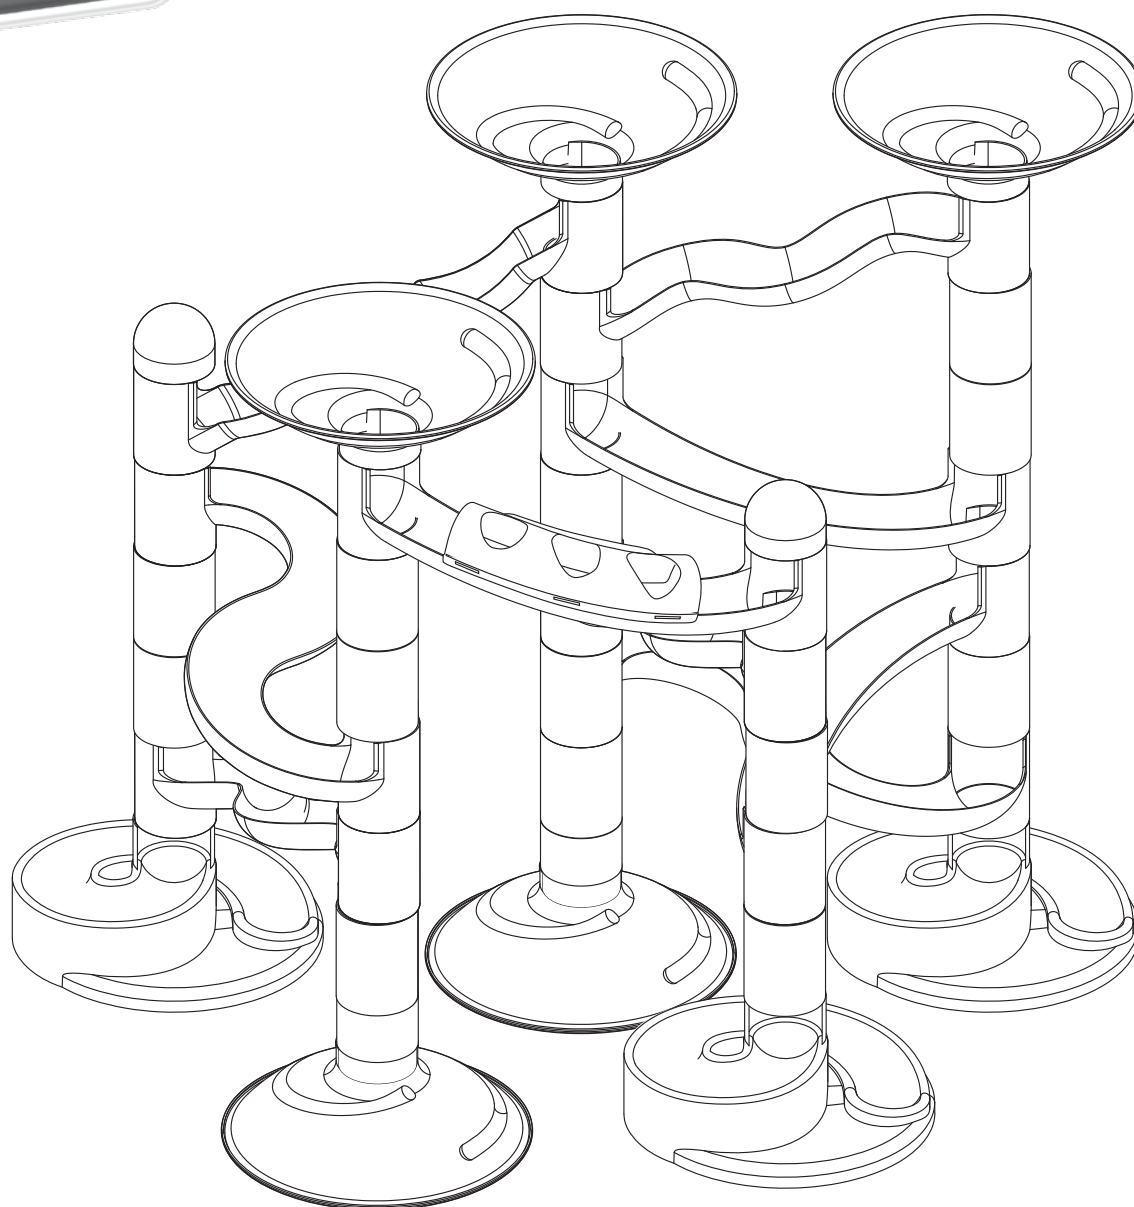

**Important**

**Age: 12 months +**

**Important** – Please read these instructions fully before assembly or use

These instructions contain important information which will help you get the best from your product and ensure safe and correct assembly, use and maintenance.



# Safety Information

**Important – Please read these instructions fully before assembly or use**

## General safety

Surface clean only.

Remove all packaging before giving to your child.


Please keep this packaging for reference since it contains important information. Adult assembly required. Please read enclosed instructions before use. Young children in play are unaware of potential dangers and hazards, therefore responsible adult supervision is essential.

### Safety Battery Precaution

Non-rechargeable batteries are not to be recharged. Rechargeable batteries are to be removed from the toy before being charged. Rechargeable batteries are only to be charged under adult supervision. Different types of batteries or new and used batteries are not to be mixed. Only batteries of the same or equivalent types as recommended are to be used. Batteries are to be inserted with correct polarity. Exhausted batteries are to be removed from the toy. The supply terminals are not to be short-circuited. Do not dispose of the batteries in fire, battery may leak or explode. Battery should be replaced by an adult.

### Battery Installation & Replacement

Switch off the power of the unit. Loosen the screw with a screw driver to open the battery compartment door at the back of the product. Insert/replace the new battery in the proper direction indicated inside the battery compartment. Close and screw the battery door.

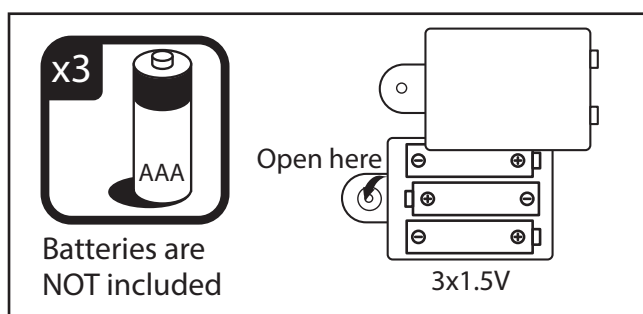


## Parts

If you have damaged or missing parts,  
call the **Customer Helpline: +44 (0)1253775570**

**Please check you have all the parts and fittings listed below**



**A** Funnel x 5

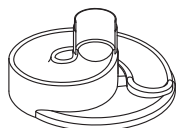

**B** Base x 3



**C** Cap x 2



**D** Tube D x 2



**E** Tube E x 12




 
**F** Tunnel x 1




**G** Ramp G x 3



**H** Ramp H x 2

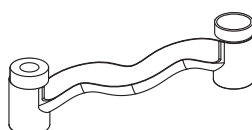

**J** Ramp J x 3

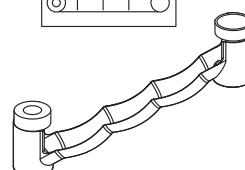

**K** Ramp K x 1





**L** Ball x 5

# Assembly Instructions



## Step 1

Connect parts as shown.

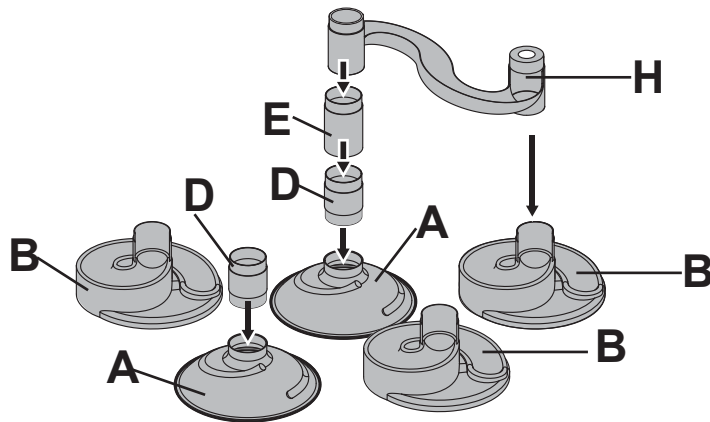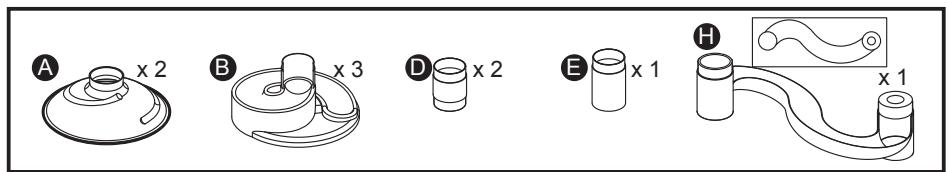



## Step 2

Connect parts as shown.

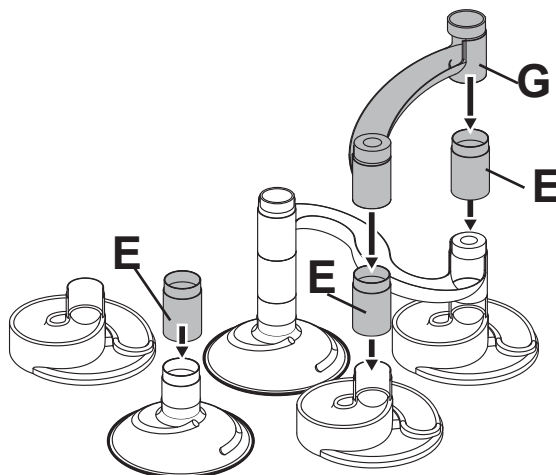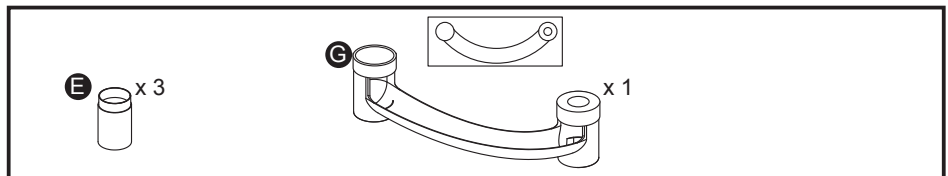

## Step 3



Connect parts as shown.

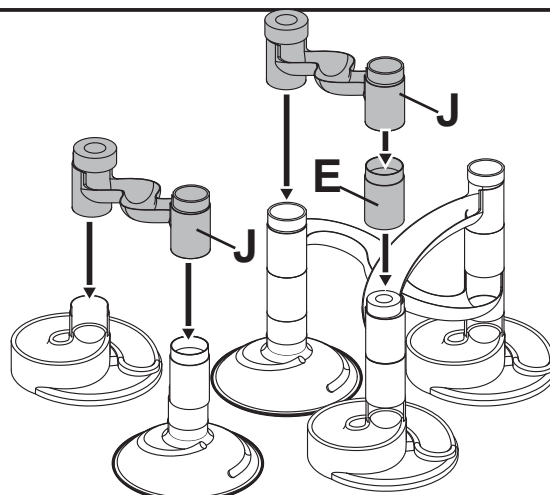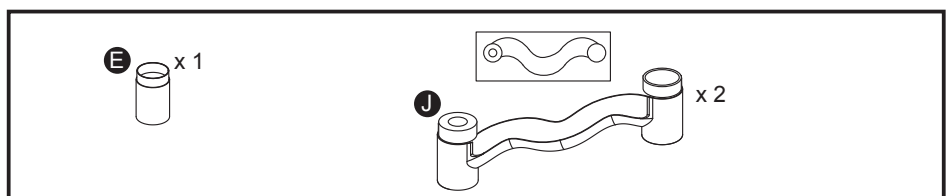

# Assembly Instructions



## Step 4

Connect parts as shown.

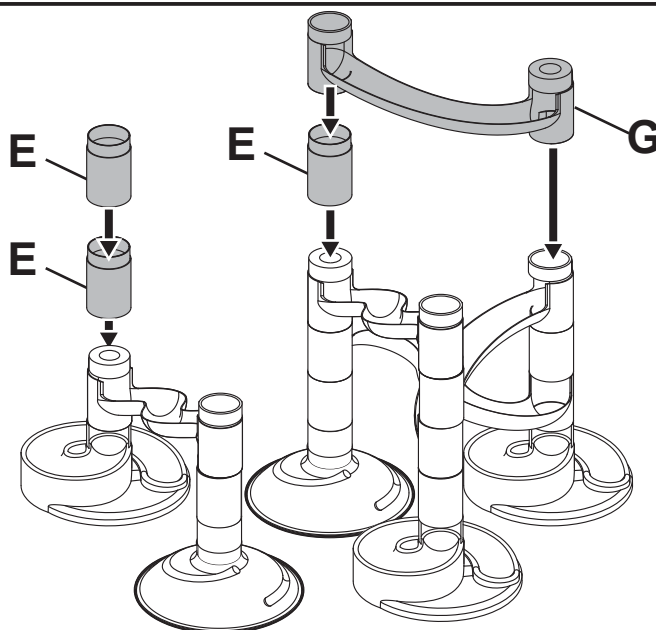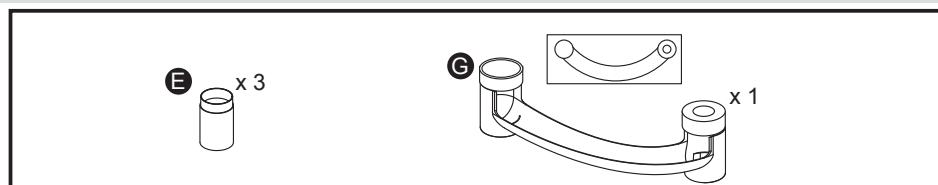

## Step 5



Connect parts as shown.

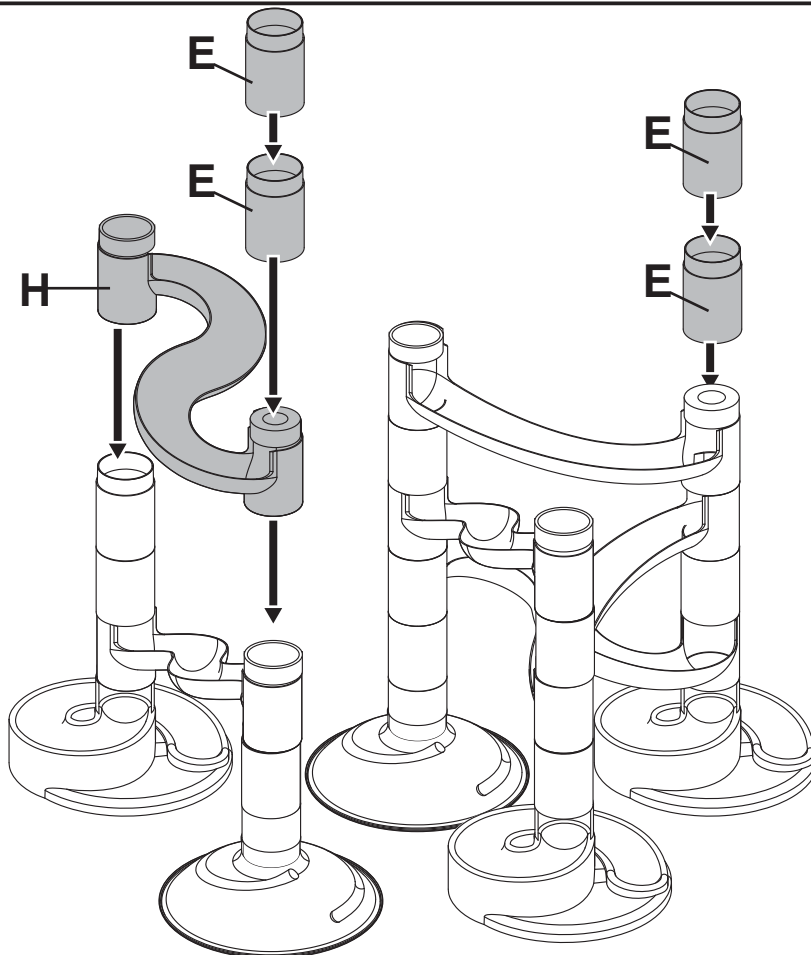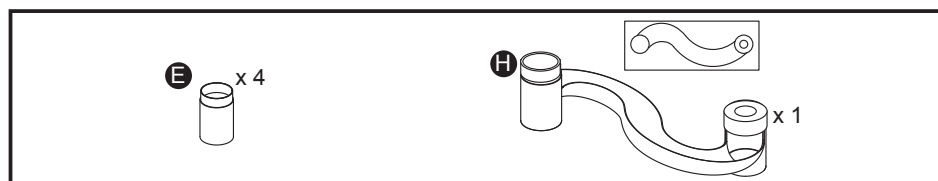

# Assembly Instructions



## Step 6

Connect parts as shown.

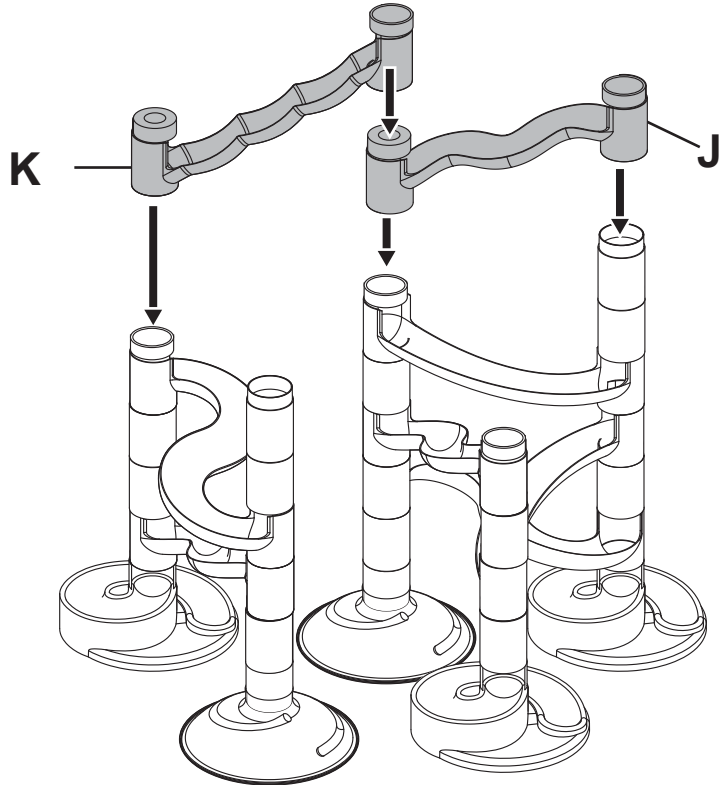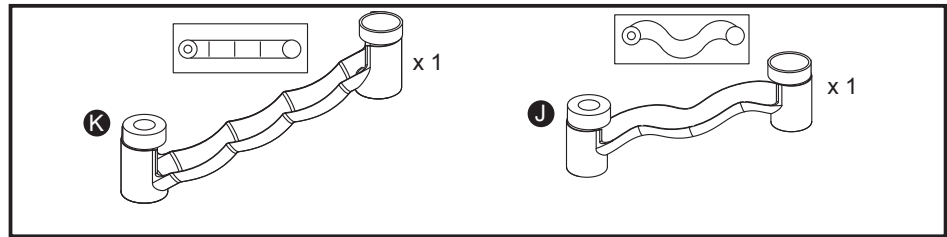

## Step 7


Connect parts as shown.

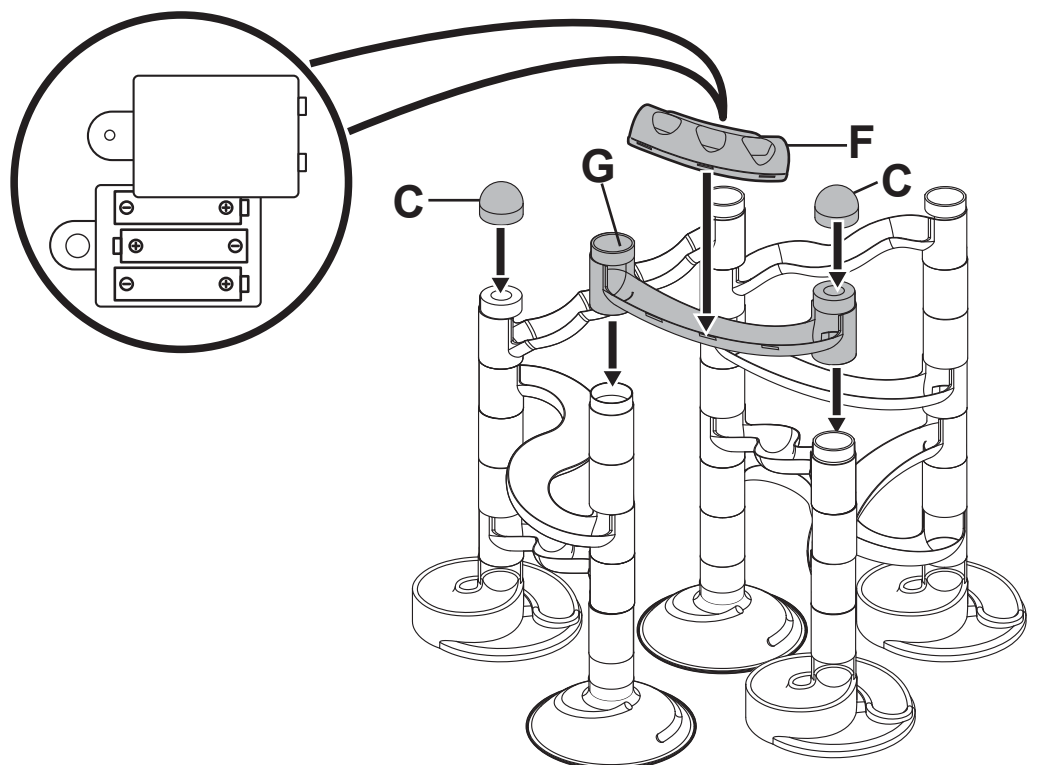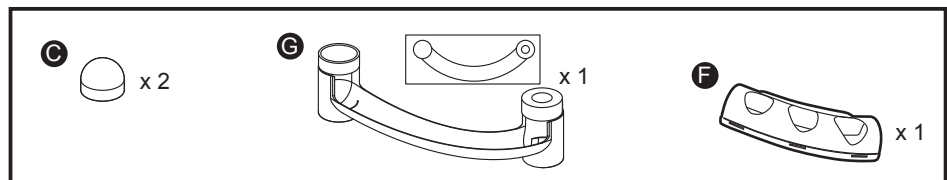

# Assembly Instructions

## Step 8


Connect parts as shown.

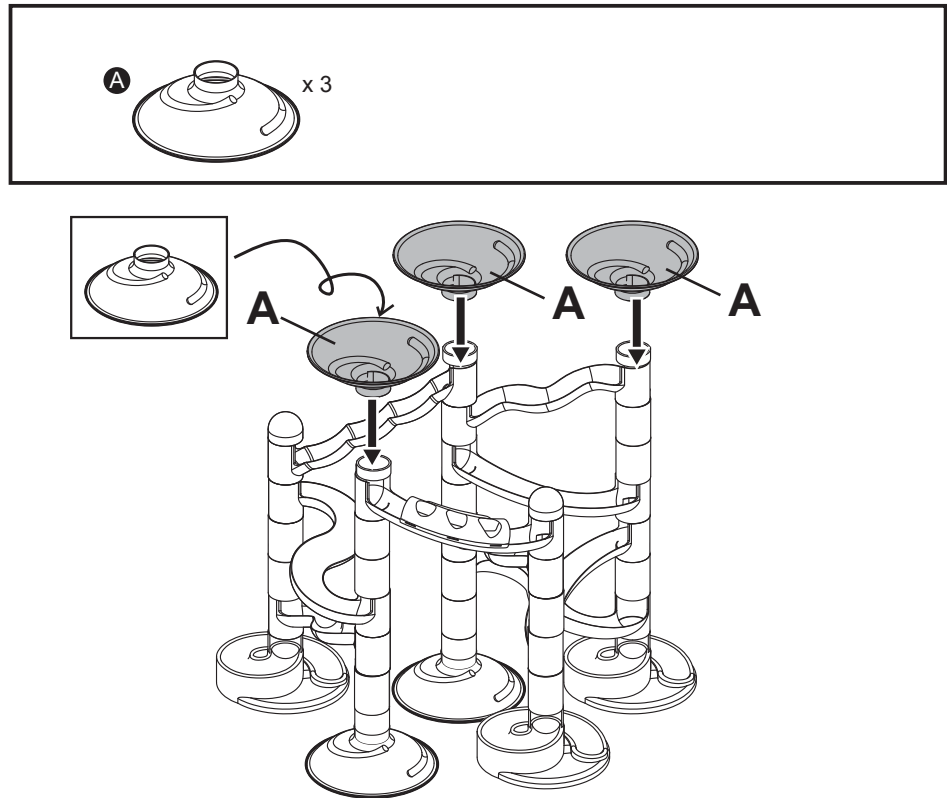

# User Instructions


## Step 1

Turn on the unit with the switch at the back of the tunnel.

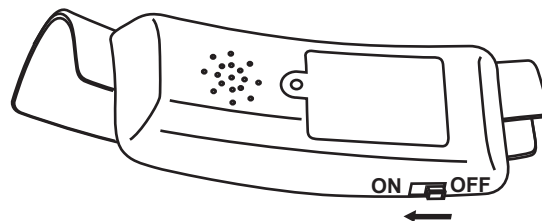

## Step 2

Drop in a ball as shown. The light and sound effects will work as the ball passes through the tunnel piece.

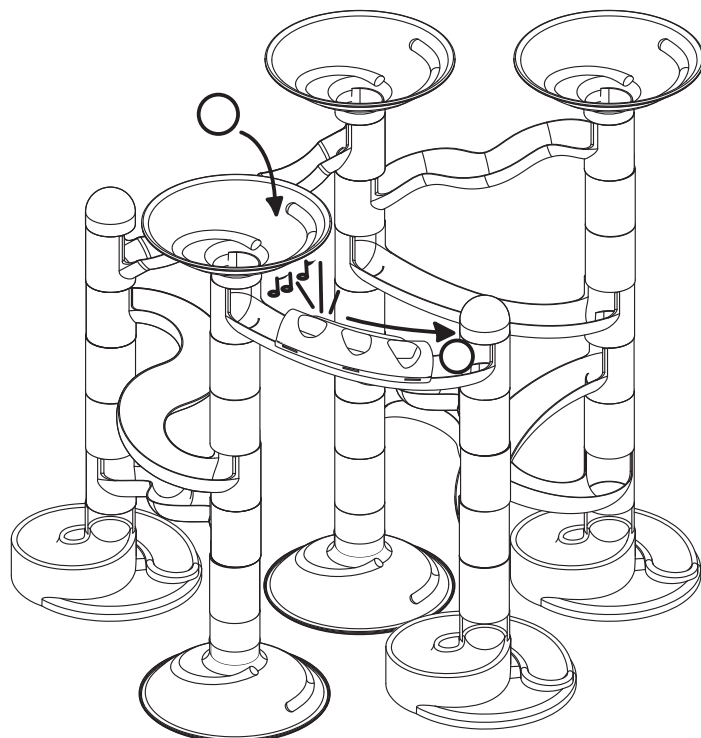

# Care and Maintenance

## General

- Wipe clean with damp cloth before storage.
- Adults should inspect the product regularly for broken or damaged parts.

## Disposal information



Electrical product waste should not be discarded with household waste. Please actively support us in conserving resources and protecting the environment by returning the non-working electrical products to an appropriate disposal/ recycling centre (if available).



If you need help or have damaged or missing parts, call the **Customer Helpline: +44 (0)1253775570**

Produced for Chad Valley Toys. Country of origin: Made in China

Address: 489-499 Avebury Boulevard, Central Milton Keynes, MK9 2NW.