

# ANDREW BARTON

LONDON



## BODY BOOSTER

Smoothing Ionic Airstyler

Model 2781ABBU  
[andrew-barton.com](http://andrew-barton.com)

## SAFETY CAUTIONS

- This appliance should only be used as described within this instruction booklet. Please retain for reference.

## IMPORTANT CHILD SAFETY

**WARNING!** Polythene bags over a product or package may be dangerous. To avoid danger of suffocation, keep this wrapper away from babies and children. This bag is not a toy.

### **WARNING! THIS APPLIANCE GETS HOT!**

- **ALWAYS** keep out of reach of children (during and after use and while cooling)
- This appliance should not be used, cleaned or maintained by children.
- Always take extra care if used on children or near children
- Do not use on very young children.

## IMPORTANT SAFETY INFORMATION

- **UK Only:** This appliance must not be used in the bathroom.
- **Outside the UK:** If using the appliance in a bathroom, unplug after use as the proximity of water can be dangerous even if the appliance is switched off. For additional protection the installation of a residual current device (RCD) with a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.



- Do not use the appliance near water contained in basins, bathtubs or other vessels.
- Do not immerse the appliance in water or other liquids.
- Always inspect the appliance before use for noticeable signs of damage, or if the appliance has been dropped.
- Do not use if the appliance or lead are damaged. In the event of damage, discontinue use immediately. contact the Conair Customer Care Line (refer to “UK After Sales Service” section for further information).
- Do not look down the barrel of the styler or into any vents in the attachments when the styler is switched on.
- Do not leave the appliance unattended when switched on or plugged in.
- Take care that the air vents do not become blocked when the appliance is in use. Ensure the rear filter is clear of hair and other debris before use (refer to Cleaning & Maintenance section for further information).
- This appliance is equipped with a safety thermostat. In the event of overheating, the appliance will either stop automatically or run hot and cold intermittently. Should this happen, switch the appliance off, unplug and allow to cool for 10 minutes. Ensure the rear filter is clear of hair and other debris (refer to Cleaning & Maintenance section for

further information). Plug the appliance into the mains and switch on. If the appliance continues to overheat, discontinue use immediately, switch the appliance off and unplug. Contact the Conair Customer Care Line (refer to “UK After Sales Service” section for further information).

- Do not place the appliance on any surface whilst in operation.
- Take care to avoid the hot surfaces of the appliance coming into direct contact with the skin, in particular the eyes, ears, face and neck.
- Careful adult supervision is required when this appliance is used on or near children. Do not use on very young children.
- This appliance should not be used by adults whose reduced physical, sensory or mental capabilities, or whose lack of experience and knowledge, might cause a hazard, unless they have been correctly instructed to understand the safe use and hazards involved and are adequately supervised.
- Allow the appliance to cool before storing away.
- After use, do not coil the lead around the appliance as this may cause damage. Instead coil loosely by the side of the appliance.
- This product complies fully with all appropriate EU and UK Legislation and the Standards relevant to this type and class of

appliance. We are an ISO9001:2015 certified company that continually evaluates our Quality Management System performance. If you have any queries regarding product safety and compliance, please contact the Conair Customer Care Line (refer to “UK After Sales Service” section.)

“Great tools are the secret to gorgeous looking hair! So I’ve designed my own unique range for you to achieve everyday glamour and create salon beautiful hair.”



## FEATURES

- Powerful 800W airstyler
- Ionic conditioning for a frizz free high shine finish
- 2 Heat/speed settings I/II
- Cool setting \*
- 3 interchangeable attachments
- 38mm tourmaline-ceramic coated thermal brush
- 20mm soft bristle brush
- Vent brush
- 3 year guarantee

## Ionic Technology

Many aspects of modern living, including air conditioning, contact with man-made fibres and air pollution, even brushing and towel drying hair contributes to a build-up of static. As a result hair becomes dull, “fly-away” and difficult to style.

Ionic technology neutralises the static, smoothing hair and leaving it looking shiny, conditioned and manageable.

## INSTRUCTIONS FOR USE

- Plug the appliance into a suitable mains socket.
- Ensure the hair is towelled dry and combed through to remove tangles prior to styling.
- It is not essential, but you may find it quicker and easier to use a hairdryer first to rough dry your hair and remove the excess moisture. Then once your hair is 80% dry, start to use the styler.
- Select the required heat and speed settings.
- Choose the attachment to use.
- **ALWAYS** ensure to keep hair away from the rear filter to prevent it being sucked into the fan as this may cause the styler to overheat.
- Use the high heat / speed setting (II) for initial drying and for thicker hair. Use the low heat / speed setting (I) for more controlled styling and for finer or coloured hair.
- Line up the rounded raised panel on the attachment with the corresponding raised panel on the appliance. Push the attachment and appliance together until the buttons on either side of the appliance click into place.
- The vent brush is perfect for general styling and introducing lift. With the vent brush attached, place the appliance into the hair and brush through to remove any tangles, brushing up and away from the scalp to introduce lift.
- For added root lift and for creating body and volume, attach the thermal brush. Place it into the hair close to the roots; hold the brush in place at the roots for a few seconds then gently remove from the hair trying to disturb the curl as little as possible to retain the root lift. Alternatively place into the hair and brush down the hair length stopping just short of the ends, wind the brush up the hair length until it reaches the scalp, then hold in place for a few seconds. Unwind the hair from the brush without pulling to retain the shape you have created.
- Use the bristle brush in the same way as the thermal brush. The smaller diameter of the brush creates greater shape and movement in the hair.
- At any stage of styling you can set styled hair with cool air by moving the slide switch to the first setting \*.
- To remove the attachment, press the buttons on either side of the

- appliance and pull the attachment away from the appliance.
- After use, switch off and unplug the appliance. Allow to cool before storing away.

## **STYLING TIPS**

For a sleek look that's full of volume, use the thermal brush to create great shape in your hair. Brush the hair in an arc as you dry to create a really long lasting curve in the hair length and leave the hair looking sculpted and full of body.

For a smooth straight look, divide the hair into sections and with the vent brush attached, slowly brush down the hair length keeping the hair as taut as possible. Place your free hand against the bristles of the vent brush to increase the resistance and enhance the straightening effect.

## **CLEANING & MAINTENANCE**

To keep your styler in the best possible condition and maintain optimum performance, the rear filter should be cleaned on a regular basis.

- Ensure the appliance is switched off, unplugged and cool.
- To open the filter, pull the grips on either side of the power cord to unclip it and let the hinged filter cover drop open. Using a soft brush, clean any hair and debris from the sponge filter mesh and the metal mesh on the hinged filter cover as well as the inlet to the styler itself.
- Replace the rear filter before using the styler again making sure it clicks shut.


## **Care of your styler**

- Do not use the styler at a stretch from the power point. Stretching the connection between the lead and the styler can be dangerous.
- Always keep the rear of the styler away from your hair during use to prevent hair ingress.
- Always unplug after use. Smooth out the lead to remove kinks and prevent damage.
- Do not wrap the lead around the styler, instead coil it loosely by the side.

- Make sure the styler is used on the correct voltage.

## SAFE DISPOSAL



The  symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be handed to an appropriate collection point for the recycling of Electrical and Electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council office or your household waste disposal service.

## UK GUARANTEE

The Conair Group Ltd, Unit 3, Waterfront Business Park, Fleet,  
GU51 3TW

This Andrew Barton appliance is guaranteed for consumer use for 3 years and is only valid within the United Kingdom.

This guarantee covers consumer use only **i.e.** defects occurring under normal use within the home from date of purchase or date of delivery, whichever is later.

If the product develops a fault due to defects in materials or manufacture **within 12 months** from the date of purchase, to avoid delays and unnecessary inconvenience, where possible please return the product to the point of purchase for an exchange.

If the product develops a fault due to defects in materials or manufacture **after 12 months** from the date of purchase, and within the guarantee period, Conair UK After Sales Service will repair or replace the product.



## Exclusions

This guarantee will no longer be valid meaning that The Conair Group Ltd will not be liable to repair or replace your product where:

- 1.) The appliance has been used on a voltage supply other than that which is marked on the product, or advised within this instruction booklet
- 2.) The appliance has been purchased from an unauthorised stockist\*
- 3.) The appliance is used for professional / non domestic usage
- 4.) Repairs or alterations have been attempted by unauthorised persons
- 5.) The failure of the appliance is a direct result of misuse
- 6.) The failure is a result of not following the instructions for use

This guarantee does not cover any cosmetic damage due to misuse of the product nor any damage to persons or property that occurs because of product misuse.

\*unauthorised stockists include, but are not limited to online auction sites, private sellers and those selling second hand goods, refurbished products etc

Please contact the Conair Customer Care Line on 03705 133 191 (09:00 to 17:00 Monday to Friday) or e-mail [ukinfo@conair.com](mailto:ukinfo@conair.com) for further information on authorised stockists.

**It is important to retain your proof of purchase. We recommend attaching your receipt to this page.**

**Even where a refund may be applicable, no refund will be provided without a valid receipt or proof of purchase, we will only be able to offer a repair or replacement service. Please note this does not apply if the product was purchased directly from The Conair Group Ltd.**

Guarantees on replacement products run from the original purchase date or date of delivery, whichever is later, and **not** from the date of replacement.

This guarantee is an additional benefit and does not affect your statutory rights as a consumer.

If you have any queries regarding this guarantee please contact the Conair Customer Care Line on 03705 133 191 (09:00 to 17:00 Monday to Friday) or e-mail [ukinfo@conair.com](mailto:ukinfo@conair.com)

## **UK AFTER SALES SERVICE**

For further advice on using the appliance or should you need to return your product, please contact the Conair Customer Care Line on 03705 133 191 (09:00 to 17:00 Monday to Friday) or e-mail your enquiry to [ukinfo@conair.com](mailto:ukinfo@conair.com)

Return address:

Customer Care Centre  
Conair Logistics  
Unit 4, Revolution Park  
Buckshaw Avenue  
Buckshaw Village  
Chorley  
PR7 7DW

Please enclose your returns number, name and address details, together with a copy of proof of purchase and details of the fault.

**Please note this Instruction Booklet is not the guarantee.**



