

ANDREW BARTON

— LONDON —



CURL DEFINER

Ultra Slim 13mm Tong

Model 2313ABBU
andrew-barton.com

SAFETY CAUTIONS

- This appliance should only be used as described within this instruction booklet. Please retain for reference.

IMPORTANT CHILD SAFETY

WARNING! Polythene bags over a product or package may be dangerous. To avoid danger of suffocation, keep this wrapper away from babies and children. This bag is not a toy.

WARNING! THIS APPLIANCE GETS HOT!

- **ALWAYS** keep out of reach of children (during and after use and while cooling)
- This appliance should not be used, cleaned or maintained by children.
- Always take extra care if used on children or near children
- Do not use on very young children.

IMPORTANT SAFETY INFORMATION

- Do not use the appliance in the bathroom.
- Do not use the appliance near water contained in basins, bathtubs or other vessels.
- Do not immerse the appliance in water or other liquids.
- Always inspect the appliance before use for noticeable signs of damage, or if the appliance has been dropped.
- Do not use if the appliance or lead are damaged. In the event of damage, contact



the Conair Customer Care Line (refer to “UK After Sales Service” section for further information). No repair must be attempted by the consumer.

- Do not leave the appliance unattended when switched on or plugged in.
- Do not place the appliance on any heat sensitive surface whilst in operation.
- Ensure the appliance is only ever placed on a flat, level heatproof surface.
- Take care to avoid the hot surfaces of the appliance coming into direct contact with the skin, in particular the eyes, ears, face and neck.
- This appliance should not be used by adults whose reduced physical, sensory or mental capabilities, or whose lack of experience and knowledge, might cause a hazard, unless they have been correctly instructed to understand the safe use and hazards involved and are adequately supervised.
- This appliance is equipped with an auto off feature. If left on, the appliance will automatically switch off after around 60-72minutes.
- After use, always switch off the appliance before unplugging. Allow appliance to cool before storing away.
- Do not coil the lead around the appliance as this may cause damage. Instead coil loosely by the side of the appliance.
- This product complies fully with all

appropriate EU and UK Legislation and the Standards relevant to this type and class of appliance. We are an ISO9001:2015 certified company that continually evaluates our Quality Management System performance. If you have any queries regarding product safety and compliance, please contact the Conair Customer Care Line (refer to “UK After Sales Service” section.)

“Great tools are the secret to gorgeous looking hair! So I’ve designed my own unique range for you to achieve everyday glamour and create salon beautiful hair.”

A handwritten signature in black ink that reads "Andrew Barton" followed by a stylized 'X' mark.

FEATURES

- Up to 190°C salon high heat performance
- Tourmaline-ceramic barrel for an ultra smooth and shiny finish
- Ultra fast heat up
- 10 temperature settings for all hair types
- Adjustable temperature dial ◀
- On/off buttons I / O
- On/off indicator
- Salon length swivel cord
- Auto Off after around 60-72 minutes
- 3 year guarantee

IMPORTANT! This appliance is designed to reach very high temperatures. If the maximum setting is too hot for your hair type, then select a lower temperature setting.

CAUTION! This is a high heat appliance. Care must be taken to avoid the hot surfaces including the housing around the outside of the barrel coming into direct contact with the skin, in particular the eyes, ears, face and neck.

WARNING! Keep out of the reach of children at all times. This appliance reaches high temperatures and can take time to cool down, even after it has been switched off. Always ensure the appliance has cooled down completely before storing away. Do not leave unattended when switched on, plugged in or cooling down.

INSTRUCTIONS FOR USE

- Select a heat setting by adjusting the dial ◀ on the handle. Always start on a low setting and increase it if required.
- If you have delicate, fine or coloured hair, use the lower heat settings. For thicker hair, use the higher heat settings.
- Plug the appliance into a suitable mains socket.
- Press the "I" on button; the 'on' indicator will illuminate and will flash until the required temperature is reached.
- Allow the appliance to heat up. Only ever place on a flat, level heatproof surface using the integrated heat rest. Do not place the appliance on any heat sensitive surface.
- Section dry hair evenly, and comb through before styling.
- Press the thumb rest to lift the 'spoon' away from the tong barrel.
- Take a section of hair and place the tong barrel midway up the hair section, taking care not to touch the hot surfaces of the tong.
- When the hair is in place, release the thumb rest to close the spoon against the tong barrel.
- Gently slide the tong down the hair section stopping just short of the end.
- Wind the tong up the hair as far as you want it curled, making sure to spread the hair evenly all along the full length of the tong barrel, not just in one place. Be careful not to let the tong barrel touch your scalp or your face.
- To avoid crimped ends do not wind the clamped hair back over the spoon; wind the clamped hair around the barrel first.
- Hold in place for 5-8 seconds, being careful not to let the tong touch the scalp or face.
- Remove the tong from the hair without disturbing the curl, press the thumb rest to release the spoon and pull the tong straight out of the hair without sliding it down the hair section.
- Repeat as required.

- For tighter, bouncier curls, wind less hair round the tong. For looser curls, wind more hair round the tong.
- Press the “O” off button to switch off after use.

STYLING TIPS

To achieve long lasting curls, as you tong each section of hair, spray hairspray onto the section before curling. Hold the hair in the tong for several seconds. When you release the hair, without touching the tong barrel, try to keep the curl in an “O” as though it is still wrapped round the tong and clip it close to the head. Don’t take the clips out until your hair is totally cold. Spritz the curls lightly with more hair spray but don’t over do it or you’ll weigh the curls down.

AUTO OFF

As an additional safety feature if left on by mistake, the appliance automatically switches off after around 60-72 minutes. Do not use this feature instead of switching off after use. Do not leave unattended when switched on, plugged in or cooling down.

CLEANING & MAINTENANCE

The appliance may require cleaning due to build up of residue from hair styling products.

- Ensure the appliance is switched off, unplugged and cool.
- Slightly moisten a cloth and wipe the surface of the barrel and the spoon.
- Make sure the tong has dried thoroughly before re-using.

IMPORTANT! Do not immerse the appliance in water or other liquids.

SAFE DISPOSAL



The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be handed over to an appropriate collection point for the recycling of electrical and electronic equipment.

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council office or your household waste disposal service.

UK GUARANTEE

The Conair Group Ltd, Unit 3, Waterfront Business Park, Fleet,
GU51 3TW

This Andrew Barton appliance is guaranteed for consumer use for 3 years and is only valid within the United Kingdom.

This guarantee covers consumer use only **i.e.** defects occurring under normal use within the home from date of purchase or date of delivery, whichever is later.

If the product develops a fault due to defects in materials or manufacture **within 12 months** from the date of purchase, to avoid delays and unnecessary inconvenience, where possible please return the product to the point of purchase for an exchange.

If the product develops a fault due to defects in materials or manufacture **after 12 months** from the date of purchase, and within the guarantee period, Conair UK After Sales Service will repair or replace the product.

Exclusions

This guarantee will no longer be valid meaning that The Conair Group Ltd will not be liable to repair or replace your product where:

- 1.) The appliance has been used on a voltage supply other than that which is marked on the product, or advised within this instruction booklet
- 2.) The appliance has been purchased from an unauthorised stockist*
- 3.) The appliance is used for professional / non domestic usage
- 4.) Repairs or alterations have been attempted by unauthorised persons
- 5.) The failure of the appliance is a direct result of misuse
- 6.) The failure is a result of not following the instructions for use

This guarantee does not cover any cosmetic damage due to misuse of the product nor any damage to persons or property that occurs because of product misuse.

*unauthorised stockists include, but are not limited to online auction sites, private sellers and those selling second hand goods, refurbished products etc

Please contact the Conair Customer Care Line on 03705 133 191 (09:00 to 17:00 Monday to Friday) or e-mail ukinfo@conair.com for further information on authorised stockists.

It is important to retain your proof of purchase. We recommend attaching your receipt to this page.

Even where a refund may be applicable, no refund will be provided without a valid receipt or proof of purchase, we will only be able to offer a repair or replacement service. Please note this does not apply if the product was purchased directly from The Conair Group Ltd.

Guarantees on replacement products run from the original purchase date or date of delivery, whichever is later, and **not** from the date of replacement.

This guarantee is an additional benefit and does not affect your statutory rights as a consumer.

If you have any queries regarding this guarantee please contact the Conair Customer Care Line on 03705 133 191 (09:00 to 17:00 Monday to Friday) or e-mail ukinfo@conair.com

UK AFTER SALES SERVICE

For further advice on using the appliance or should you need to return your product, please contact the Conair Customer Care Line on 03705 133 191 (09:00 to 17:00 Monday to Friday) or e-mail your enquiry to ukinfo@conair.com

Return address:

Customer Care Centre
Conair Logistics
Unit 4, Revolution Park
Buckshaw Avenue
Buckshaw Village
Chorley
PR7 7DW

Please enclose your returns number, name and address details, together with a copy of proof of purchase and details of the fault.

Please note this Instruction Booklet is not the guarantee.

