

# cookworks

## Coffee and Herb Grinder

Model No. PCML2012



### Care & Instruction Manual

For household and indoor use only

Please read these instructions before use and retain for future reference




## **Electrical safety**

- You should only plug the appliance into a 220V-240V AC, 50Hz supply. Connecting it to other power sources may damage the appliance and will invalidate the guarantee.
- Switch off and unplug if unattended and before assembling, disassembling or cleaning.
- This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
- This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Keep motor housing, cable, and plug dry and away from areas where it is likely to get splashed. Never immerse in water.
- Do not pull on the cable to disconnect from the mains supply.
- Do not operate the appliance if damaged or after it malfunctions. In the event the supply cord is damaged, in order to avoid a hazard it must only be replaced by a qualified service engineer, with a suitably approved part.
- This appliance must be positioned so that the plug is accessible and the plug socket is within easy reach of the power cord.

## **Warning!**

- This appliance is intended exclusively for use in domestic households. It is not suitable for commercial use.
- Only use with the parts supplied and fully assembled.
- The grinder blades are sharp, take care when emptying the bowl and cleaning.
- Do not leave unattended during use.
- Do not attempt to operate the grinder without the cover fitted.
- Do not cover the grinder and allow the motor housing to cool fully before storing.
- This appliance can cause personal injury if misused.

## Parts

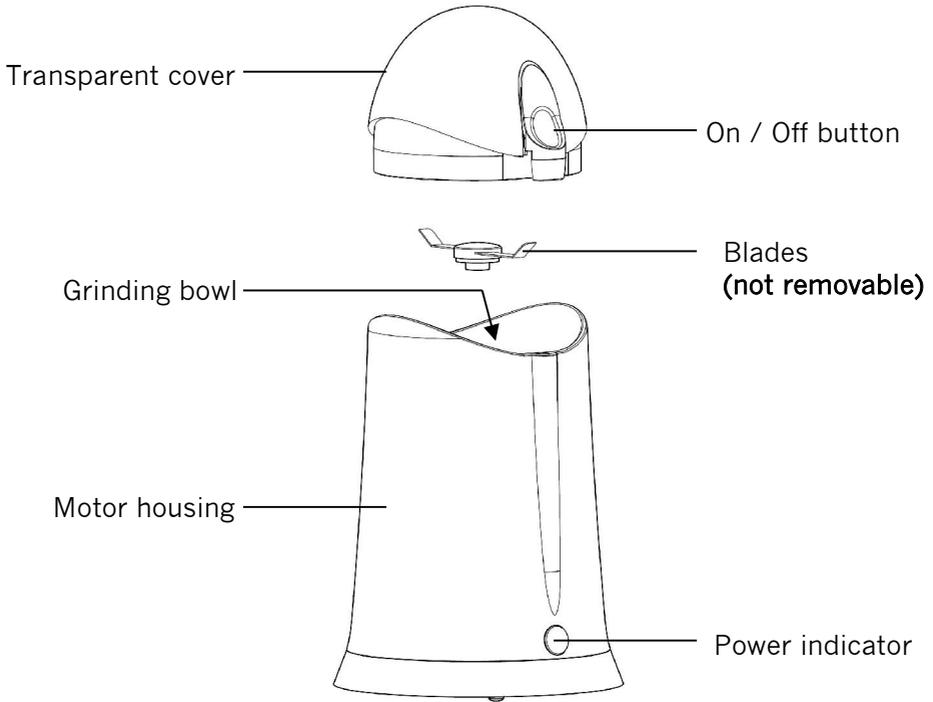

## Grinding tips

- For the most flavourful coffee, grind only enough for the pot / cup that you are making.
- Keep coffee beans in an airtight container in the fridge to help retain flavour.
- The coarseness of grind required will depend on the type of coffee maker to be used.

Coarse grind	Percolators and coffee urns
Medium grind	Drip coffee makers and steam-type espresso machines
Fine grind	Espresso machines with an electric pump.

## To use

1. Clean thoroughly before first use – see cleaning section.
2. Place the motor housing on a stable, flat surface.
3. Fill the desired quantity of coffee beans (max 36g) or spices into the grinding bowl. Do not fill above the rim of the metal bowl and do not run the grinder empty / without the blades covered.
4. Fit the transparent cover onto the motor housing.
5. Fully unwind the cable and plug in.
6. Press down on the ON / OFF button to start the grinder working, the power indicator will illuminate. Grind for a maximum of 1 minute.
7. To switch off, release the button and allow the blade to come to a complete stop before checking the fineness of the grind. If satisfactory, remove the cover from the motor housing and tip out the ground coffee.
8. If further grinding is required, wait a few seconds before restarting.
9. After using the grinder for one minute, a short rest interval (e.g. 2 minutes) is required before using the grinder again.
10. To stop or interrupt the grinding process, release the ON / OFF button or turn off at the mains.

 
## Cleaning

Clean the coffee grinder after each use.

1. Switch off and unplug.
2. Lift off the transparent cover and wash the cover in hot water with a little washing up liquid. Rinse and wipe dry. Not suitable for the dishwasher.
3. Wipe inside of the bowl, the blades and the outside of the motor housing with a damp cloth; do not use detergents or abrasives as these may scratch the surface. Never immerse the motor housing, cable or plug in water.
4. Dry completely before storing or next use.

## Technical specification

Rated voltage	220-240V AC 50/60Hz
Power consumption	150W
Class rating	2 (double insulated)
BS 1362 fuse	3A







## PRODUCT GUARANTEE

This product is guaranteed against manufacturing defects for a period of



Year

This product is guaranteed for twelve months from the date of original purchase.

Any defect that arises due to faulty materials or workmanship will either be replaced, refunded or repaired free of charge where possible during this period by the dealer from whom you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual. A replacement copy of this instruction manual can be obtained from [www.argos-support.co.uk](http://www.argos-support.co.uk)
- It must be used solely for domestic purpose.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- The manufacturer disclaims any liability for the incidental or consequential damages.
- The guarantee is in addition to, and does not diminish your statutory or legal rights.

Guarantor: Argos Ltd  
489 - 499 Avebury Boulevard  
Central Milton Keynes  
MK9 2NW  
[www.argos-support.co.uk](http://www.argos-support.co.uk)