


# Corners Large TV Unit

737/6672

724/3932

724/8841

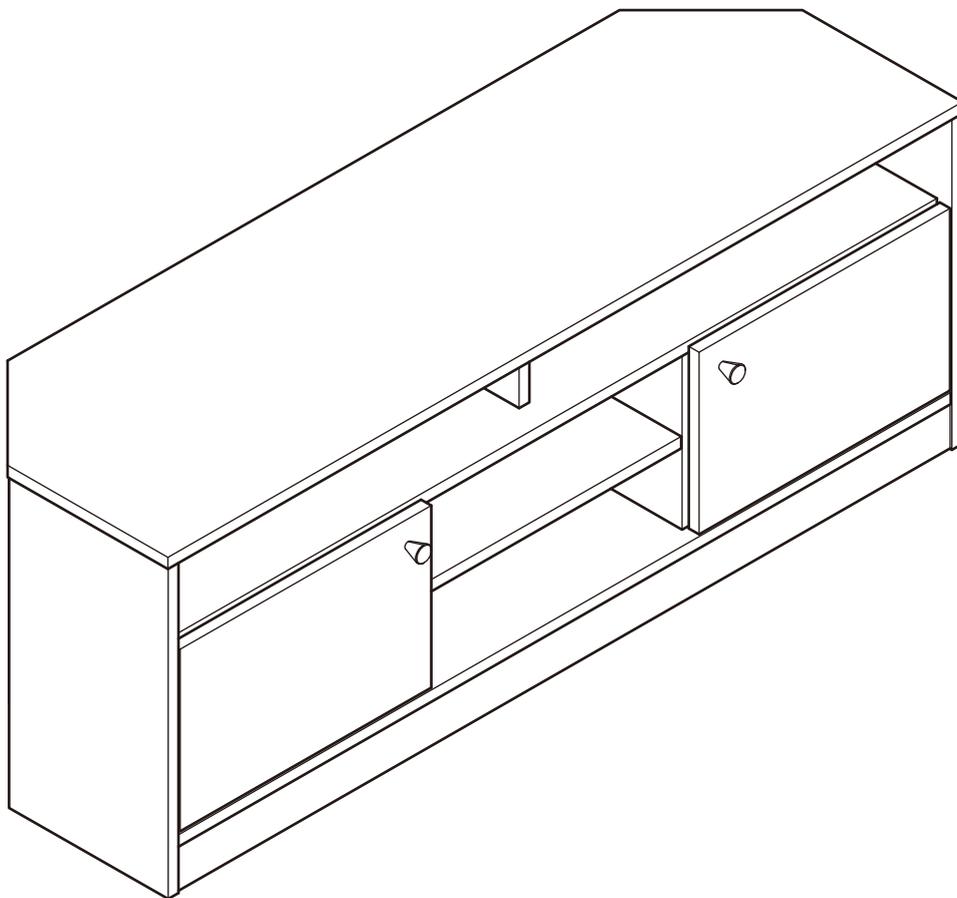

## Care & Instruction Manual

Please read and retain these instructions for future reference



# Safety and Care Advice

## Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

## Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

## Handy Hints


- Regularly check and ensure that all bolts and fittings are tightened properly.

**Note:** if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


# Components - Panels

If you have damaged or missing components, call the Customer Helpline: Argos = 0345 6400800


Please check you have all the panels listed below

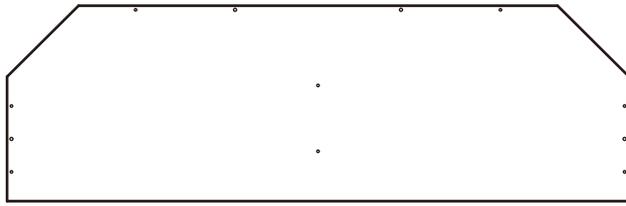


**1** Top panel (120 x 38cm)

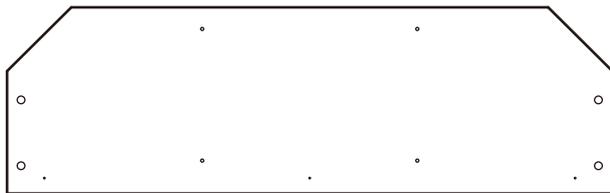

**2** Bottom panel (116.8 x 36.2cm)

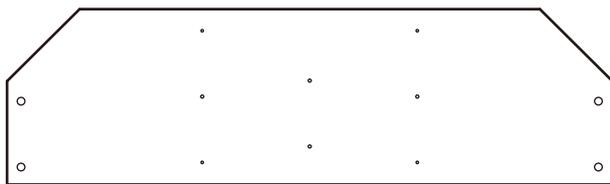


**3** Middle panel (116.8 x 34.1cm)

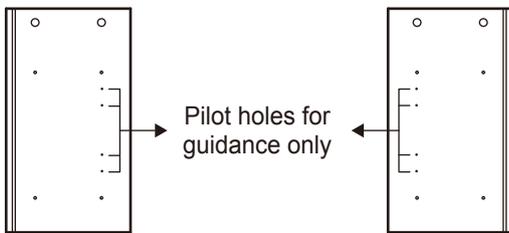


**4** Right side panel (24 x 43.5cm)

**5** Left side panel (24 x 43.5cm)

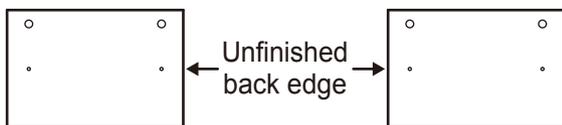

**6** Right support (34 x 22.9cm)


**7** Left support (34 x 22.9cm)

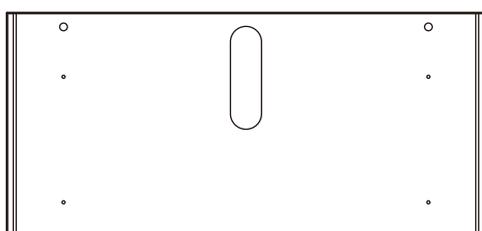

**8** Back panel (92.2 x 43.5cm)



**9** Middle support (19.8 x 11.6cm)

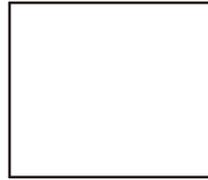

**10** Shelf panel (40 x 33.9cm)



 
**11** Front panel (116.8 x 5.9cm)



**12** Right door panel (37.9 x 24cm)



**13** Left door panel (37.9 x 24cm)




**14** Small back panel x 2 (36.1 x 20.5cm)




# Components - Fittings

 Please check you have all the fittings listed below


**Note:** The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

<b>A</b>  50mm Screw x 14	<b>B</b>  39mm Locking pin x 20	<b>C</b>  30mm Dowel x 6
<b>D</b>  15mm Locking nut x 20	<b>E</b>  Handle x 2	<b>F</b>  30mm Screw x 2
<b>G</b>  Door pad x 4	<b>H</b>  Door hinge x 4	<b>I</b>  (This screw is included in the door hinge bag) 15mm Screw x 16
<b>J</b>  Plastic support x 3	<b>K</b>  15mm Screw x 6	

## Tools required

 


Phillips screwdriver  
(medium & large)

 


Flatblade screwdriver  
(medium)



7mm Suitable drill bit  
(for use with wall plug)

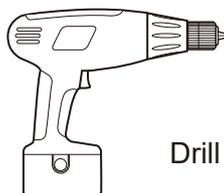

Drill

 

Small  
hammer





Ruler/tape  
measure



Eye protection  
(when using a  
hammer or glue)

## Ruler - Use this ruler to help correctly identify the screws

  

The screws length is measured from the head to the point (30mm screw shown).

# Assembly Instructions


## Step 1

### Attaching hinges

**a:** Use Screws **I** to fix the Door hinges **H** 'back plates' onto the Right side panel **4** and Left side panel **5**.

**Note:** Only two screws (not four) are fitted to the door hinge back plate.

**a:**

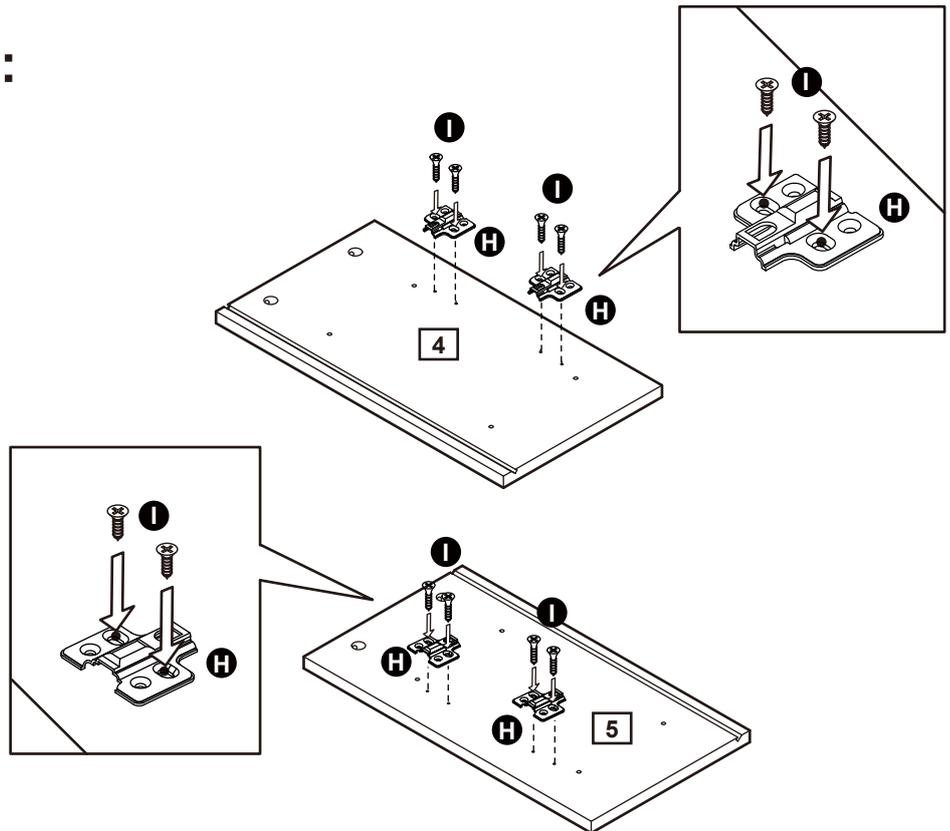


**b:** Screw Locking pins **B** into the Right side panel **4** and Left side panel **5**.

**Note:** Insert Locking pins as far as shown. **Do not over tighten.**

Insert Dowels **C** into the Right side panel **4** and Left side panel **5**.

**b:**

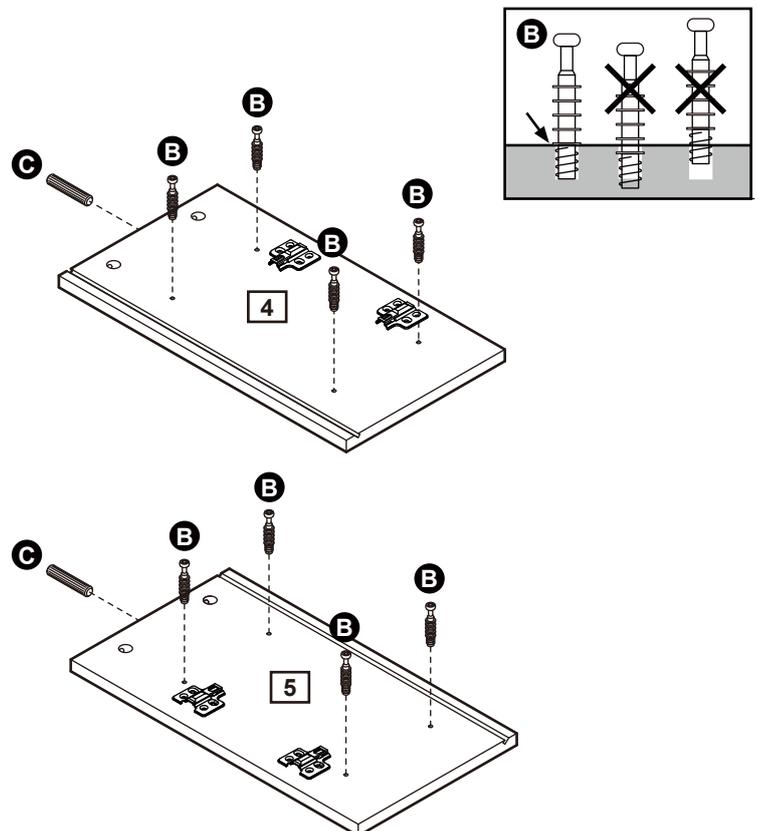

# Assembly Instructions


## Step 2

### Attaching bottom and middle panel

**a:** Use Screws **K** to fix Plastic supports **J** onto the Front panel **11**.


**Note:** Be sure the edges of the Plastic supports **J** even with the edges of the Front panel **11**.

**a:**

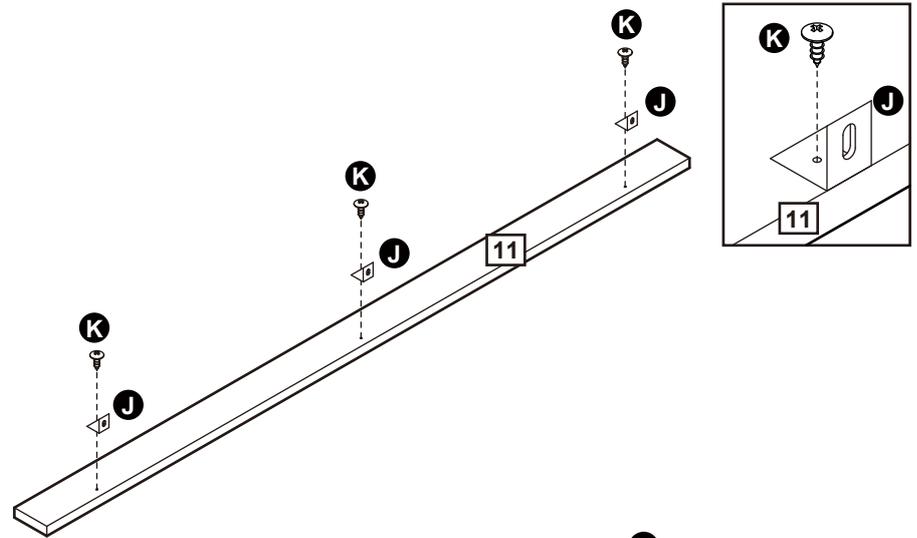

**b:** Use Screws **K** to fix the Front panel **11** onto the Bottom panel **2**.


**b:**

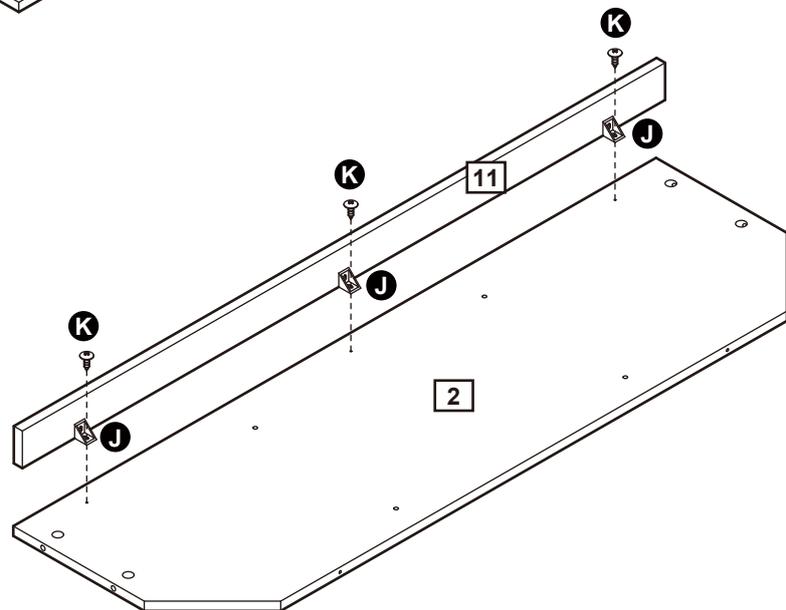

**c:** Screw Locking pins **B** into the Middle panel **3**.

**Note:** Insert Locking pins as far as shown.  
**Do not over tighten.**

**c:**

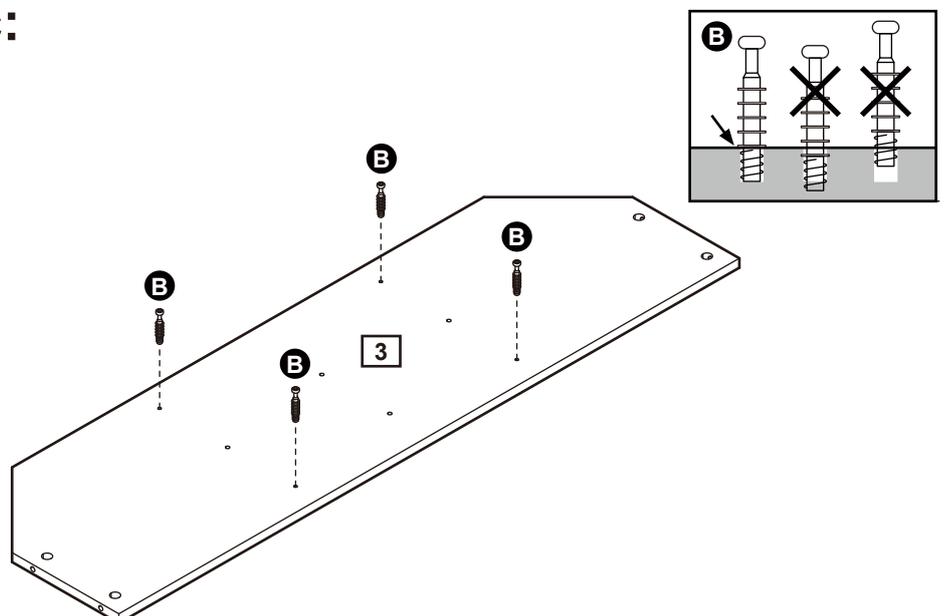


Continued on next page.

# Assembly Instructions

## Step 2 - continued

**d:** Use Screws **A** to fix the Middle support **9** onto the Middle panel **3**.


**d:**

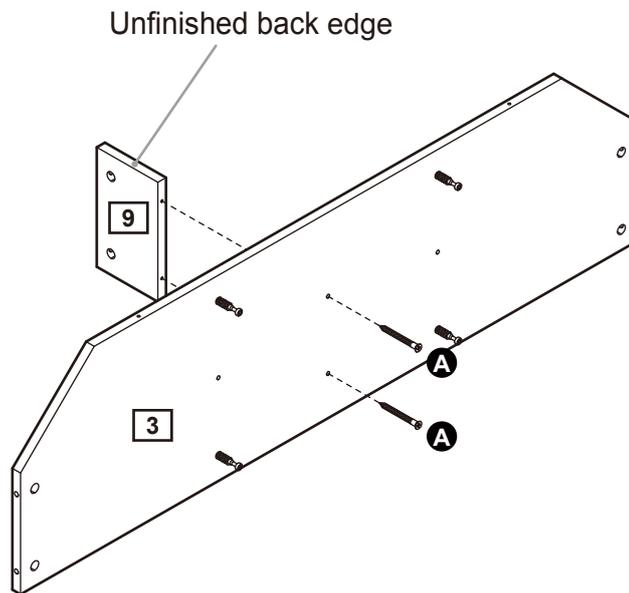

**e:** Use Screws **A** to fix the Right support **6** and Left support **7** onto the Shelf panel **10**.

**e:**

Insert Dowels **C** into the Right support **6** and Left support **7**.

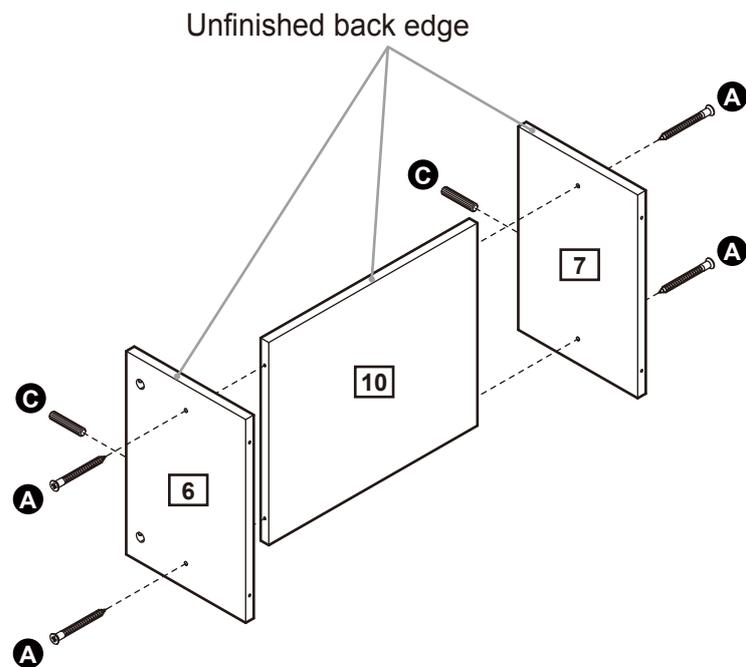

Continued on next page.

# Assembly Instructions



## Step 2 - continued

**f:** Carefully locate the Middle panel **3** onto the unit.

Insert 4 Locking nuts **D** into the unit.


Use a screwdriver to turn Locking nuts **D** clockwise to lock.

**f:**

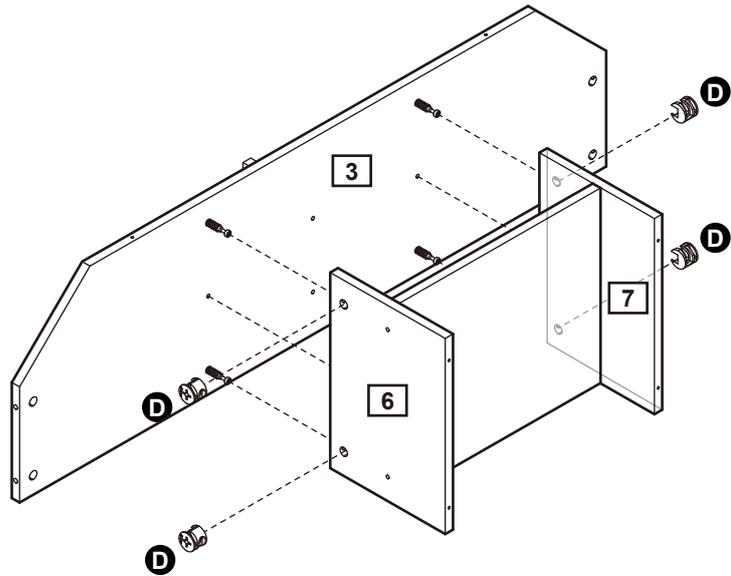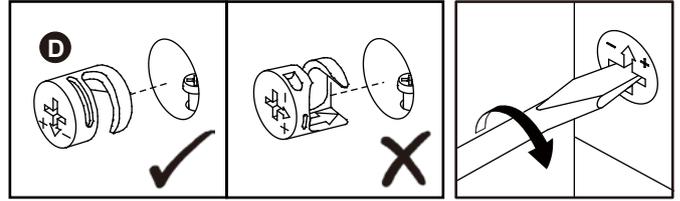

**g:** Use Screws **A** to fix Bottom panel **2** onto the unit.

**g:**

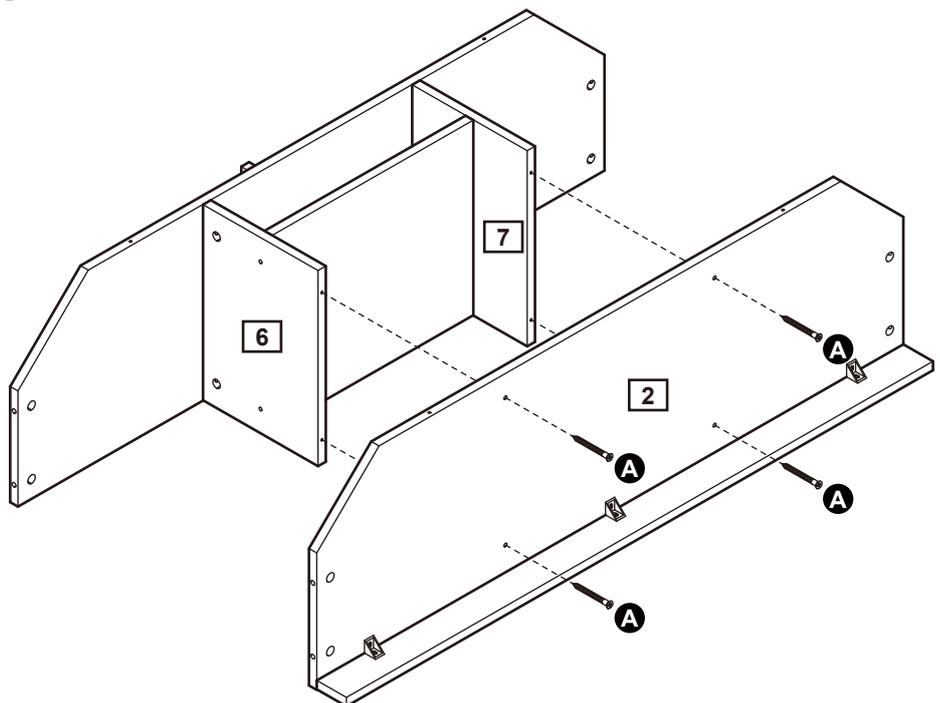

# Assembly Instructions

## Step 3



### Attaching right and left side panel

**a:** Carefully locate the Left side panel **5** onto the unit.

Insert 4 Locking nuts **D** into the unit.

Use a screwdriver to turn Locking nuts **D** clockwise to lock.

**a:**

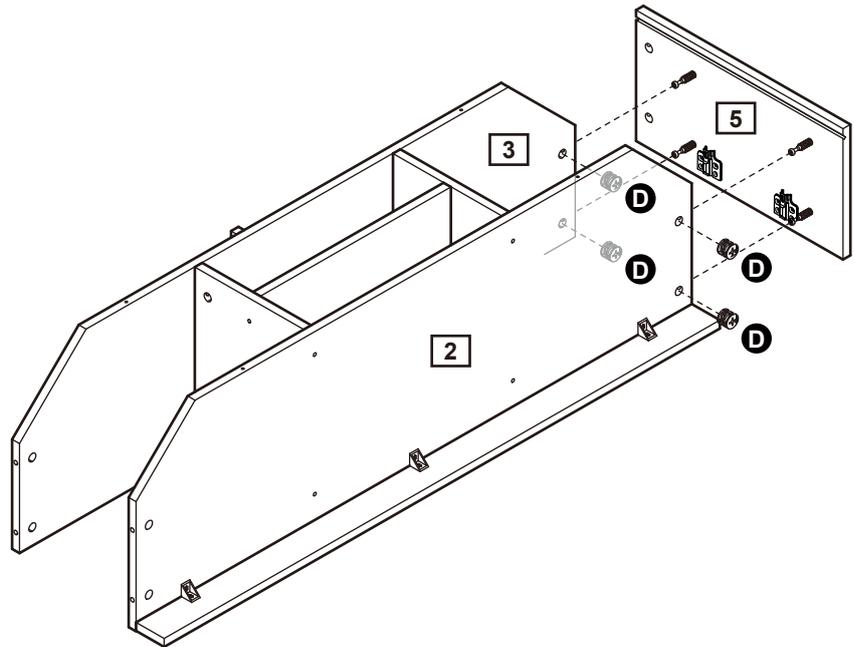
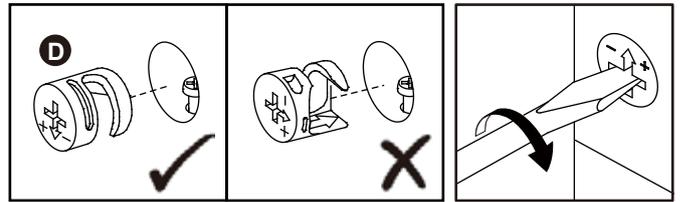


**b:** Carefully locate the Right side panel **4** onto the unit.

Insert 4 Locking nuts **D** into the unit.

Use a screwdriver to turn Locking nuts **D** clockwise to lock.

**b:**

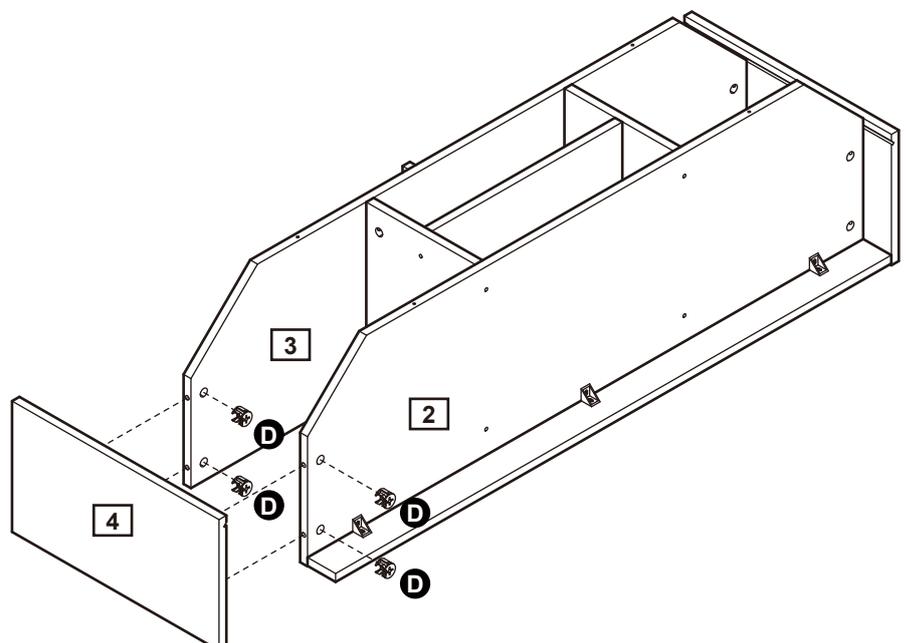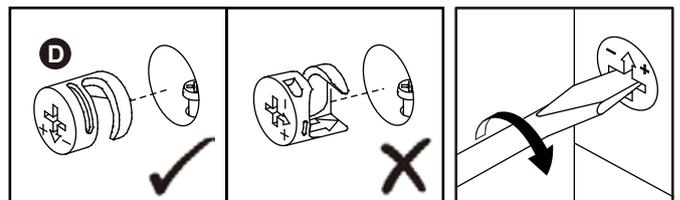

# Assembly Instructions


## Step 4

### Attaching back panel

**a:** Insert Dowels **C** into the Back panel **8**.

Use Screws **A** to fix the Back panel **8** onto the Middle panel **3** and Bottom panel **2**.

**a:**

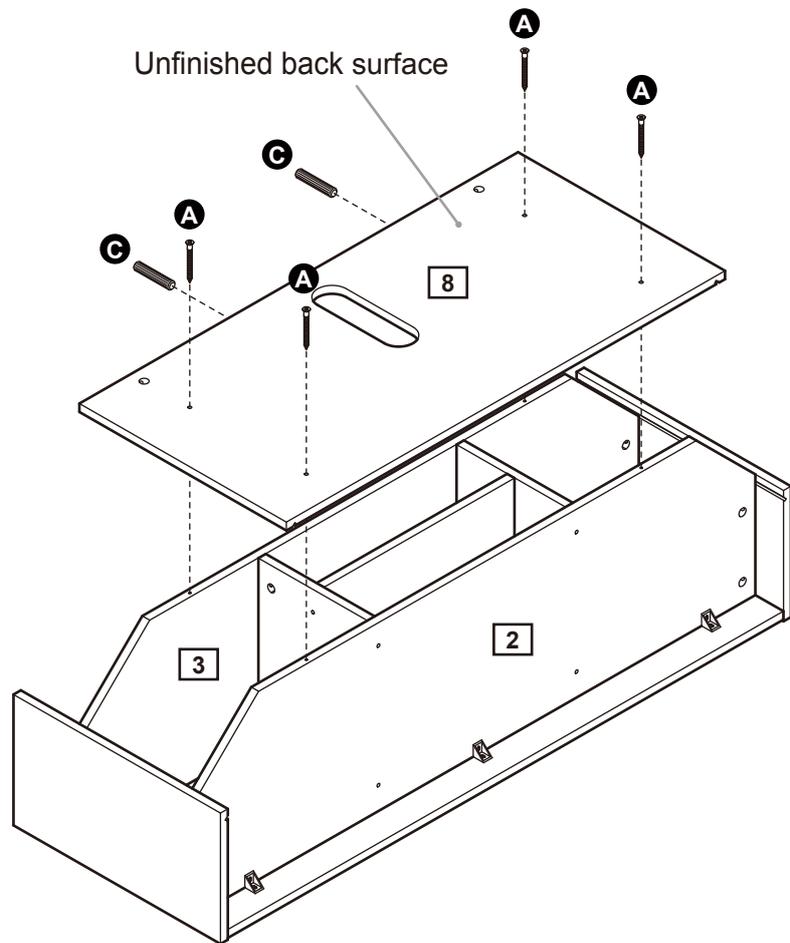

**b:** With help, carefully stand the unit upright.




**Warning:**

The unit is heavy.  
Lift with care.

Slide small back panels **14** into the unit.

**b:**

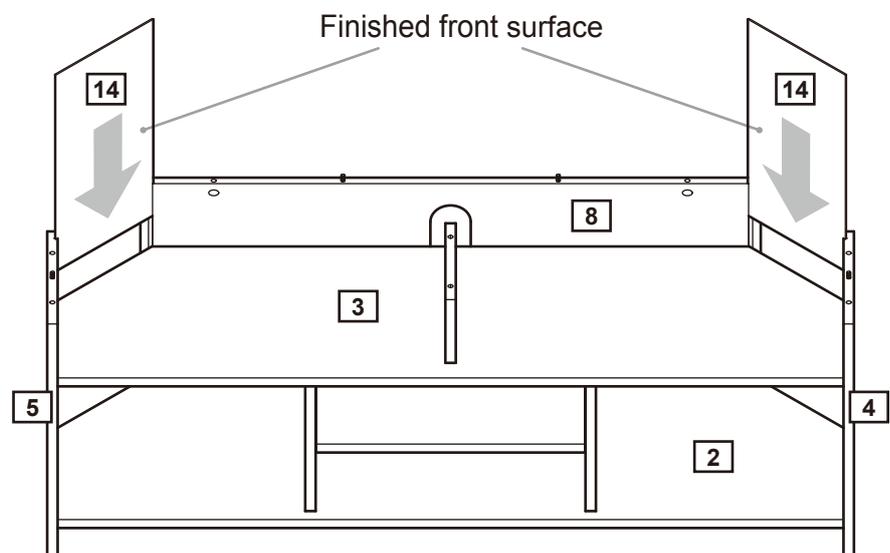

# Assembly Instructions

## Step 5


### Attaching top panel

**a:** Screw Locking pins **B** into the Top panel **1**.

**Note:** Insert Locking pins as far as shown.

**Do not over tighten.**

**a:**


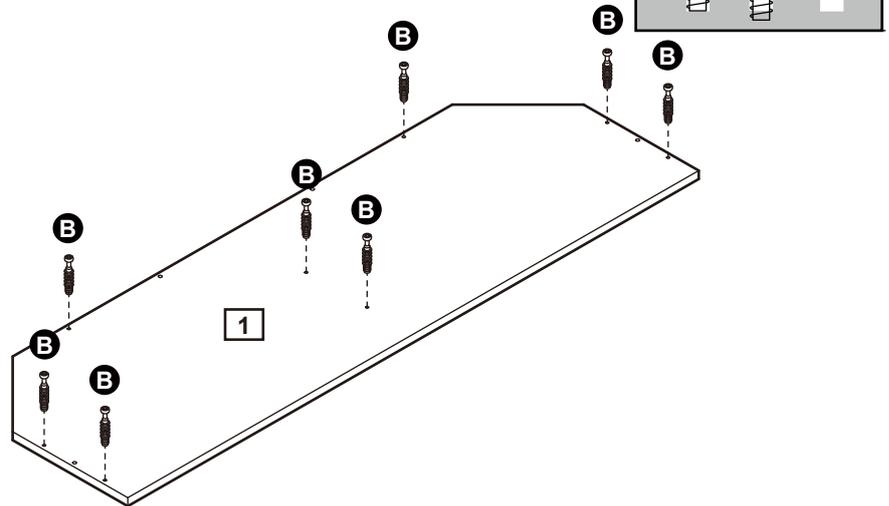


**b:** Carefully locate the Top panel **1** onto the unit.

Insert 8 Locking nuts **D** into the unit.

Use a screwdriver to turn Locking nuts **D** clockwise to lock.

**b:**

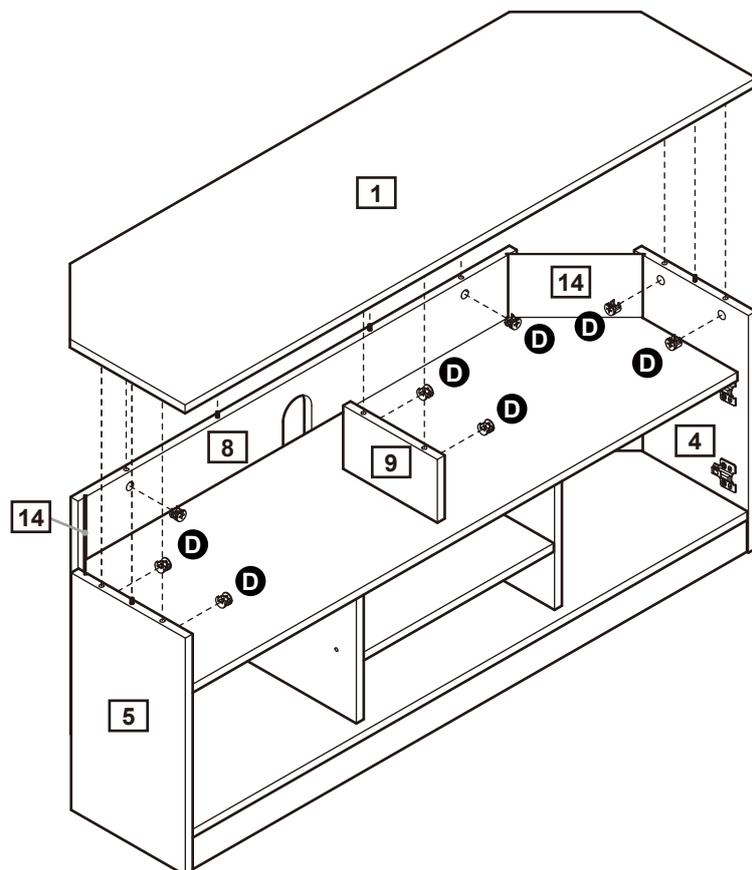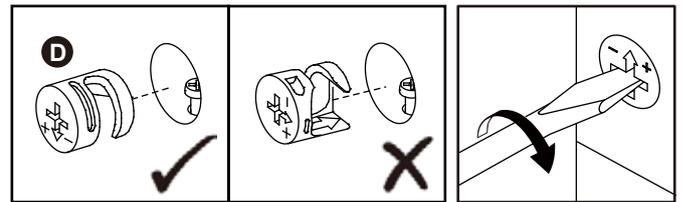

# Assembly Instructions


## Step 6

### Attaching hinges to doors

Fix 4 Door hinges **H** to Left door panel **13** and Right door panel **12** using Screws **I**.

Tear off the protective backing from the Door Pads **G**.

Carefully stick the Door pads **G** onto the Left door panel **13** and Right door panel **12**.

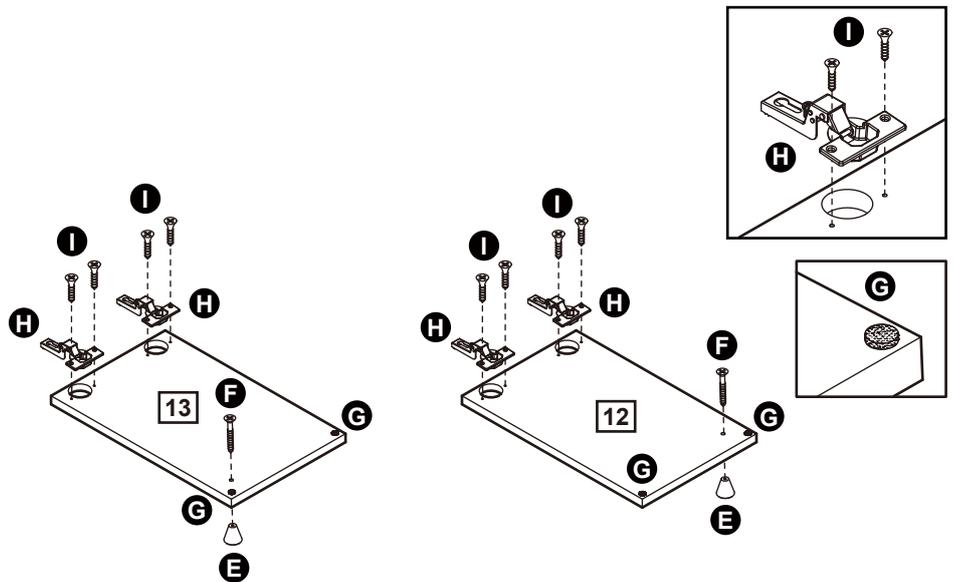




## Step 7

### Hanging doors

**a:** With help, Mount the doors by clipping the hinge **H** arms onto the mounting plates.

**b:** Press the hinge **H** end button to unclip the door if need be .

See ' **Hinge adjustment** ' in page13 .

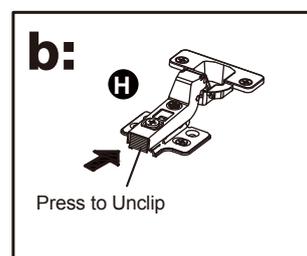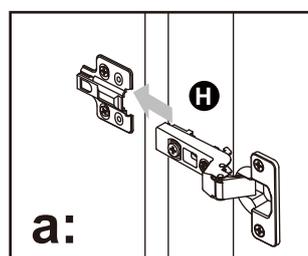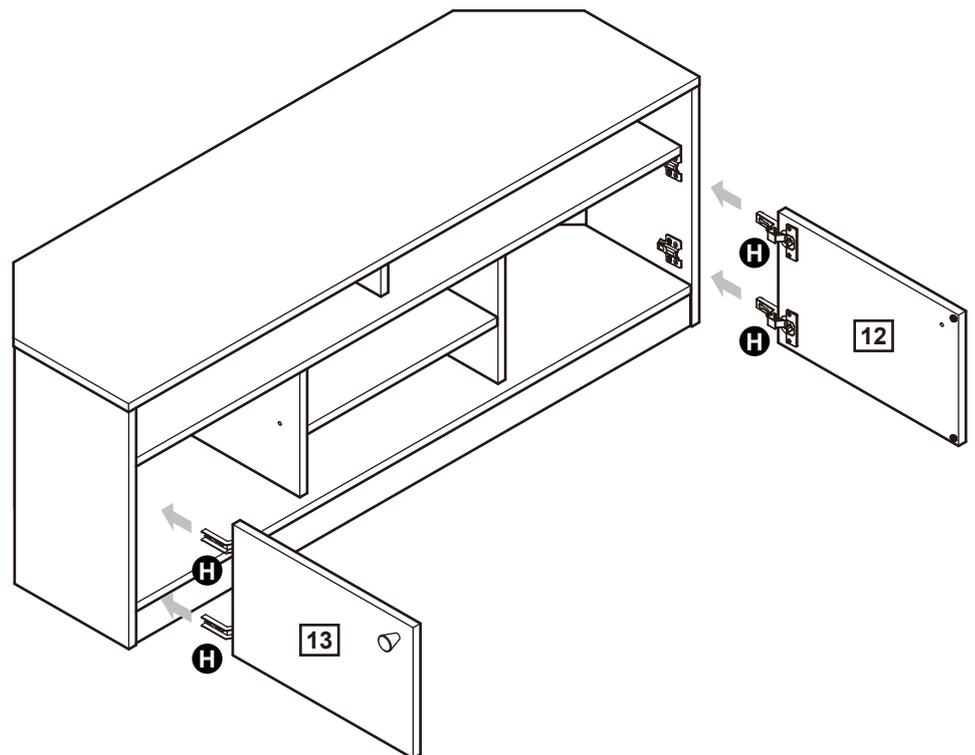


# Assembly Instructions

## Step 8

### Finishing the unit

**Note:** It would be useful to ask someone to help you at this stage.

With help, place the unit in the intended position.


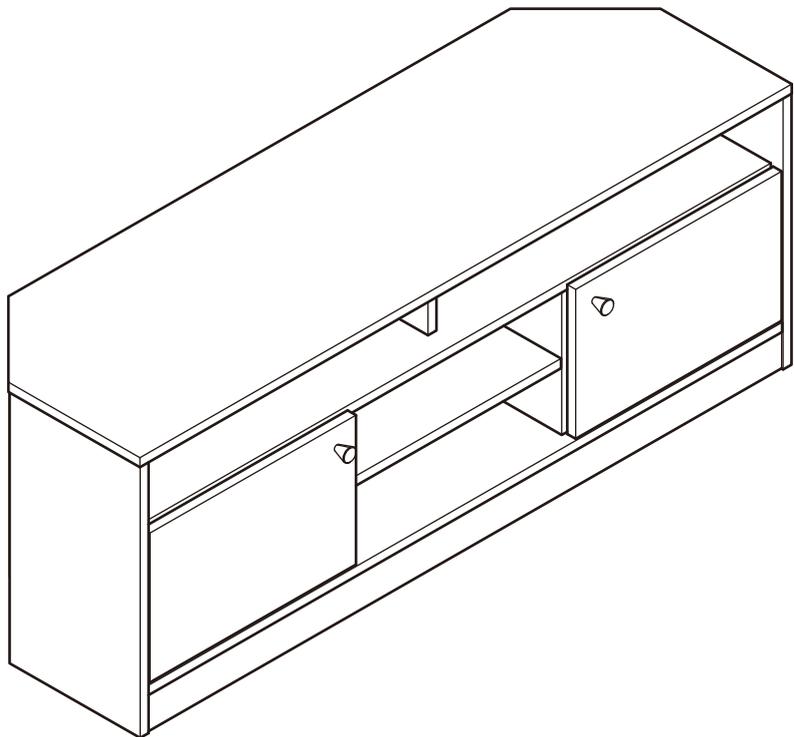


# Fittings-Hinges

**a:** You will need to support the weight of the door during this process. If the door is close to the ground this can be achieved by using blocks or similar. Otherwise a second person may be required to assist.



Loosen, but do not remove the top and bottom screws on all hinge mounting plates.

**a:**

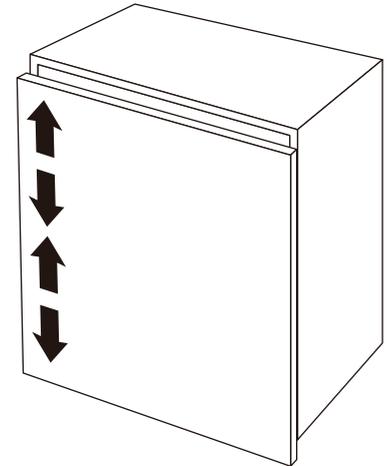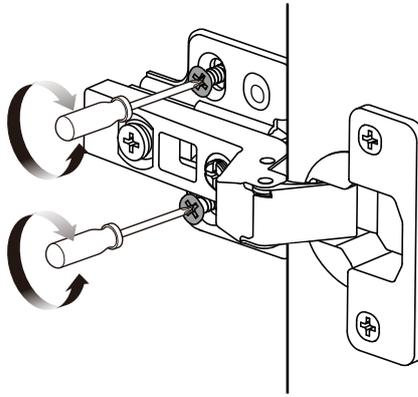

**b:** Try to work on the hinges one at a time. This will prevent the weight of the door pulling it out of position.

**b:**

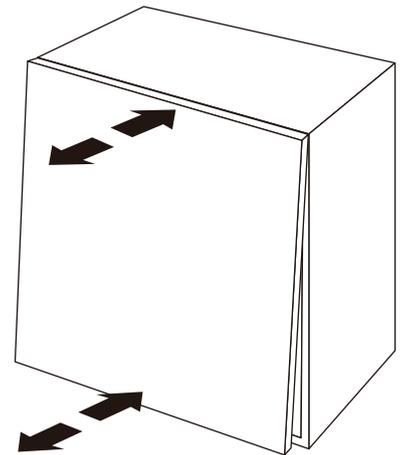
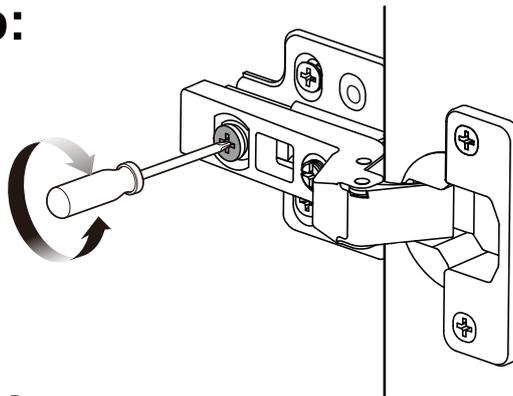


**c:** This method can also be used to straighten-up tilting or twisting doors.

Try to work on the hinges one at a time. Gradually adjusting and checking to see what changes each adjustment makes.

If you are finding the screw difficult to turn it may help to slightly loosen the rear screw, retightening after.

**c:**

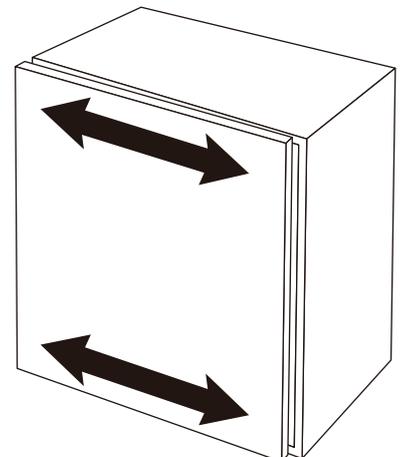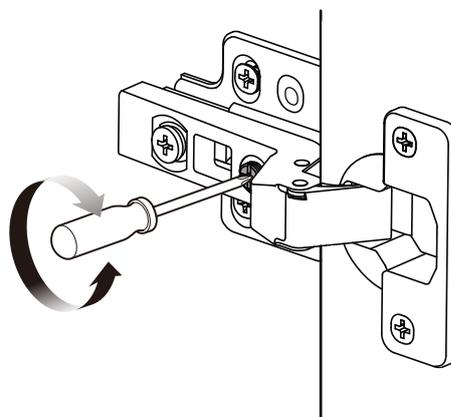

**Assembly is complete.**

If you need help or have damaged or missing parts, call the **Customer Helpline: Argos = 0345 6400800**  
Produced in Indonesia for Argos Limited, 489-499 Avebury Boulevard, Milton Keynes, MK9 2NW  
[www.argos.co.uk](http://www.argos.co.uk)