

cookworks

4 Slice Sandwich Toaster

Model No. LW-605B



Care & Instruction Manual

For household and indoor use only

Please read these instructions before use and retain for future reference




Electrical safety

- You should only plug the appliance into a 220V-240V AC, 50Hz supply. Connecting it to other power sources may damage the appliance and will invalidate the guarantee.
- Switch off and unplug when not in use and before cleaning the appliance.
- Keep the appliance and its cord out of reach of children less than 8 years.
- Do not allow children to use the appliance without supervision.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep cable and plug and appliance dry and away from areas where it is likely to get splashed. Never immerse in water.
- Do not pull on the cable to disconnect from mains supply.
- Do not operate the appliance if damaged or after it malfunctions. In the event the supply cord is damaged, in order to avoid a hazard it must only be replaced by a qualified service engineer, with a suitably approved part.
- This appliance must be positioned so that the plug is accessible and the plug socket is within easy reach of the power cord.
- This appliance must be plugged in to an earthed socket outlet.

Warning!

- This appliance is intended exclusively for use in domestic households. It is not suitable for commercial use.
- Do not leave unattended during use.
- Do not cover and allow the sandwich toaster to cool fully before storing.
- Do not operate the sandwich toaster using a timer or separate remote control.
-  The surfaces of the sandwich toaster are liable to become hot during and immediately after use; wear oven gloves when handling the appliance. Note the hotplates are subject to residual heat after use.
- Bread may burn, do not use the sandwich toaster on, near or under flammable materials (e.g. curtains) or heat sensitive surfaces.
- Do not place foil wrapped food in this sandwich toaster and remove all wrappings from food before toasting.
- The filling of a toasted sandwich will be hot, allow it to cool to a comfortable temperature before eating.
- Ensure that there is adequate ventilation. A minimum of 5cm around all sides of the sandwich toaster is recommended.

Parts

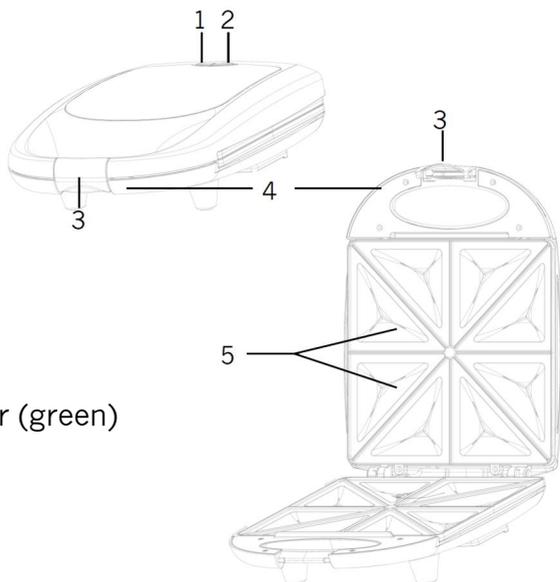

1. Power indicator (red)
2. Temperature indicator (green)
3. Catch
4. Handle
5. Hotplates

To use

1. Place the sandwich toaster on a stable, flat heat resistant surface and clean thoroughly before use.
2. Close the lid, plug in and switch the power on at the mains. The red 'power' light will illuminate.
3. Whilst waiting for the sandwich toaster to reach the correct working temperature prepare the sandwiches, placing the butter or spread on the OUTSIDE of the sandwich.
4. When the hotplate has reached the correct temperature (after approximately 3 minutes) the green 'temperature control' light will illuminate.
5. Open the lid and taking care not to touch the hotplates, place the sandwiches onto the hotplate.
6. Check that the sandwich edges cover the edges of the mould. Close the lid slowly by pressing down on the handle until the catch closes.
7. After approximately 3-4 minutes check to see if the sandwiches have reached the required level of browning.
8. If satisfactory, remove the sandwiches using heat resistant plastic or wooden implements. Do not use sharp or metal implements, as this will damage the coating on the hotplates.
9. If more browning is required, close the lid and recheck after a short interval.
10. The sandwich toaster can be stopped at any time by removing the plug.

Notes:

- Before using the sandwich toaster for the first time, wipe internal surfaces with a damp cloth and then coat the hotplates with some oil or butter. Follow the directions above.
- The thickness of each slice of bread should be a maximum of 1cm.
- Position fillings (such as cheese) toward the center of each sandwich to minimize leakage.
- A teaspoon of sugar sprinkled on the outside of sandwiches with fruit fillings (before browning) will make them crisper.
- If difficulty is experienced when closing the lid, remove some of the filling or use thinner bread to prevent damaging the sandwich toaster.

Cleaning

Clean the sandwich toaster after each use.

1. Switch off and unplug the sandwich toaster from the mains and allow the grill to cool before cleaning.
2. Wipe the cool hotplates with paper kitchen towel to remove grease before wiping with a damp (not wet) dishcloth soaked in washing up water.
3. Wipe again with a damp dishcloth, this time soaked in clean water and dry thoroughly with paper kitchen towel.
4. If any filling is difficult to remove, pour a little cooking oil onto the hotplate and wipe off after 5 minutes when the filling has softened.
5. Wipe outside surfaces with a soft damp cloth and ensure that no moisture or oil enters the cooling slots. Do not use detergents or abrasives as these may scratch the surface and **never immerse in water**.
6. Allow all surfaces to fully dry before using the sandwich toaster again.

Technical specification

Rated voltage	220-240V AC 50/60Hz
Power consumption	1200W
Class rating	I (Earthed)
BS 1362 fuse	13A
Capacity	4 Slice



Plug / Wiring advice

The wires in this mains lead are coloured in accordance with the following UK electrical code:

BLUE = NEUTRAL

BROWN = LIVE


GREEN + YELLOW = EARTH

Non-rewireable plug

This appliance may be fitted with a “non-rewireable” plug. If you need to change the fuse in a “non-rewireable” plug, the fuse cover must be refitted. If the fuse cover is lost or damaged, the appliance must not be used.

Rewireable plug

The colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in a rewireable plug. **Rewireable plugs should only be replaced by a suitably competent person. If in doubt, consult a qualified electrician.**

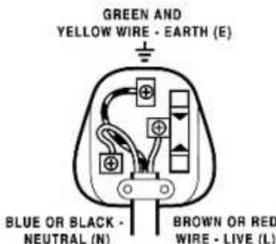

The BLUE wire must be connected to the terminal marked with the letter N

The BROWN wire must be connected to the terminal marked with the letter L

The GREEN & YELLOW wire must be connecting to the terminal marked with the letter E or the earth symbol .

Recycling electrical products



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

If you encounter any problems with this product please call our customer care team on 0345 640 30 30

Produced in China for Argos Limited, 489 – 499 Avebury Boulevard Central Milton Keynes MK9 2NW. UK.



PRODUCT GUARANTEE

This product is guaranteed against manufacturing defects for a period of



Year

This product is guaranteed for twelve months from the date of original purchase.

Any defect that arises due to faulty materials or workmanship will either be replaced, refunded or repaired free of charge where possible during this period by the dealer from whom you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual. A replacement copy of this instruction manual can be obtained from www.argos-support.co.uk
- It must be used solely for domestic purpose.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- The manufacturer disclaims any liability for the incidental or consequential damages.
- The guarantee is in addition to, and does not diminish your statutory or legal rights.

Guarantor: Argos Ltd
489 - 499 Avebury Boulevard
Central Milton Keynes
MK9 2NW
www.argos-support.co.uk