 


2 Way Shelf Kit

Assembly Instructions - Important: Retain these instructions for future reference

725/5573

HOME

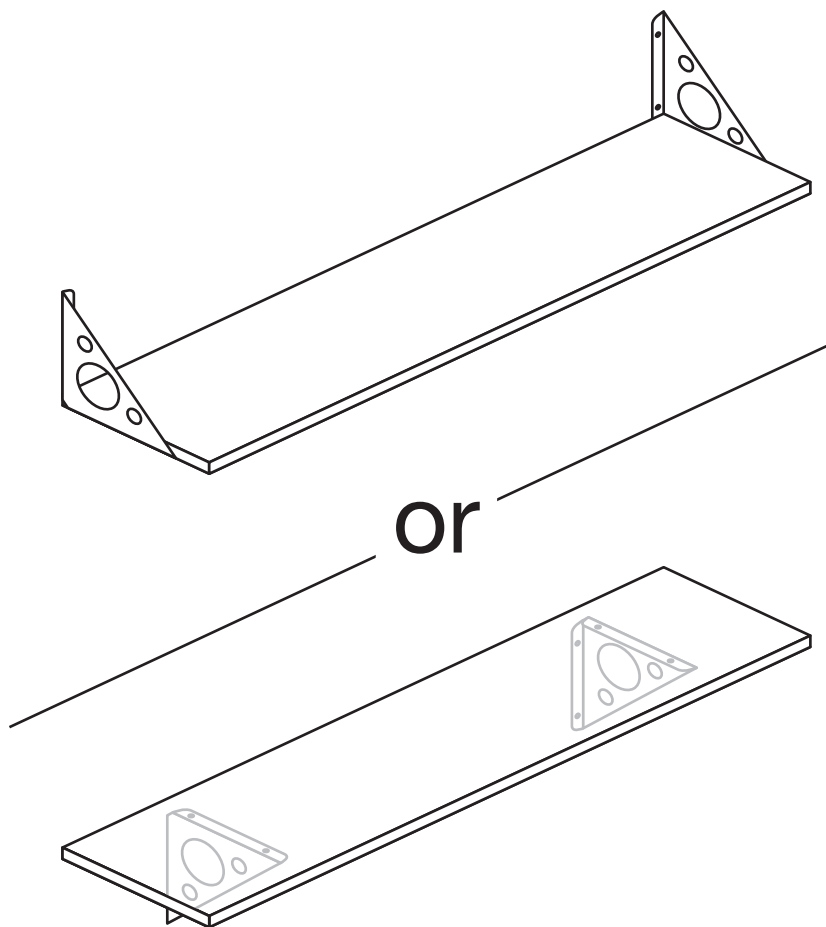

Dimensions

Width - 79.5cm

Depth - 19.5cm

Height - 1.5cm



**MADE IN
BRITAIN**

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, please visit www.argos-support.co.uk or email: Help@ClickSpares.co.uk (quoting your original order number)

Alternatively, call the Spares Helpline on: 0370 112 1928.

For any other queries please contact the Customer Helpline on: 0345 640 2020



Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- **Warning:** This unit weighs approximately 2kgs. Please lift with care.
- Assembly to be carried out by a competent adult only.
- Check you have all the components and tools listed on page 2.
- Remove all fittings from the plastic bags and separate them into their groups.
- During assembly children should be kept away from the product due to possible risk of injury.
- Installation shall only be carried out exactly according to the manufacturer's instructions - otherwise a safety risk can occur if incorrectly installed.

- Parts of the assembly will be easier with 2 people.
- Make sure you have enough space to layout the parts before starting.
- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).



• We do not recommend the use of power drill/drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.

- Dispose of all packaging carefully and responsibly.
- Do not use this item if any components are missing or damaged.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- Regularly check all fastenings to ensure that they are properly tightened.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

Components - Panels and Fittings

If you need help or have damaged or missing parts, please visit www.argos-support.co.uk or email: Help@ClickSpares.co.uk (quoting your original order number)

Alternatively, call the Spares Helpline on: 0370 112 1928.

For any other queries please contact the Customer Helpline on: 0345 640 2020

Please check you have all the panels and fittings listed below



 
1 Shelf (DPF215)
(79.5 x 19.4cm)

When applicable, remove
any protective film from the
panel before it is used

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.




12mm Screw (F883) x 4

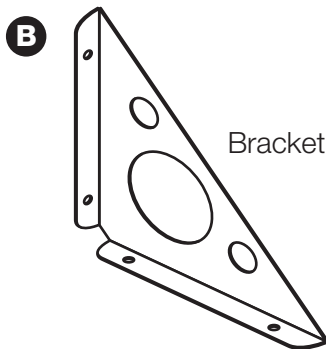


Bracket (F297) x 2

 Tools required



Spirit level

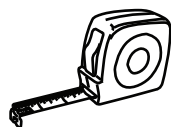 

Rule



Cross-head
screwdriver



 
Bradawl



Scissors




Eye protection
(when using a
hammer or drill)

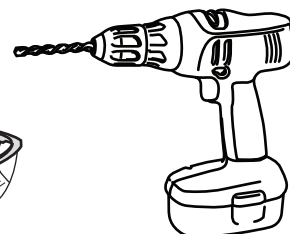

Electric drill
(only use when
drilling into walls)

 Ruler - Use this ruler to help correctly identify the screws




Assembly Instructions


Step 1

Choose which look you would like for your shelf

 If you have chosen to have your shelf this way, go to step 2

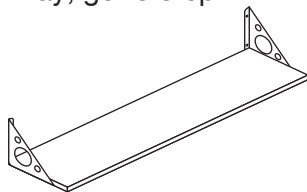

 If you have chosen to have your shelf this way, go to step 3

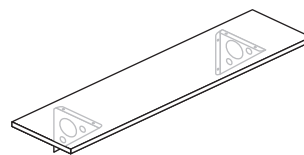


Step 2

Fit the brackets

Push the 2 brackets **B** onto the shelf **1**, as shown.

Mark the holes with a bradawl and secure each bracket **B** to the shelf **1** using 2 screws **A**.

 Note: Before fitting the screws, make sure that the shelf is pushed into the 'corner' of the brackets.

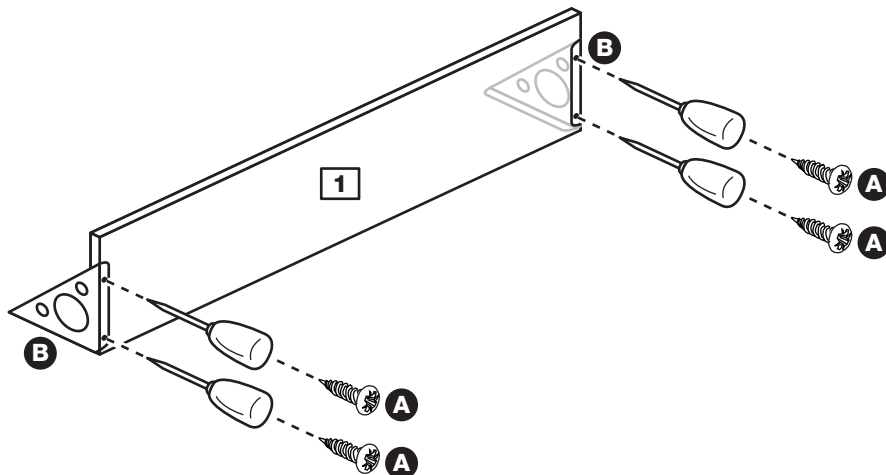




Step 3

Fit the brackets

Push the 2 brackets **B** onto the shelf **1**, as shown.

Mark the holes with a bradawl and secure each bracket **B** to the shelf **1** using 2 screws **A**.

   The back edge of the bracket must be flush with the back edge of the shelf and positioned with the screw holes 130mm from the ends.

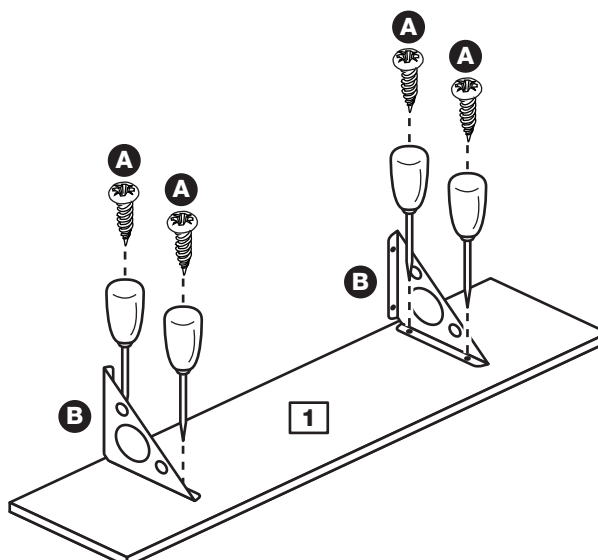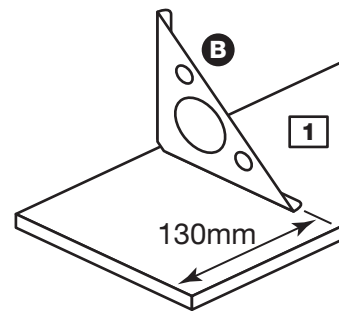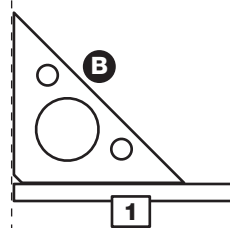

Assembly Instructions

Step 4

Mark the bracket positions

 
Hold the shelf **1** up to the wall and, using a spirit level, make sure that it is level.

Mark the bracket **B** holes with a pencil.

Drill the 4 mark holes to suit the wall plugs and screws (not supplied).



Warning: Take care when drilling the wall that you do not drill into any pipes, wires etc. If in doubt, consult an expert.

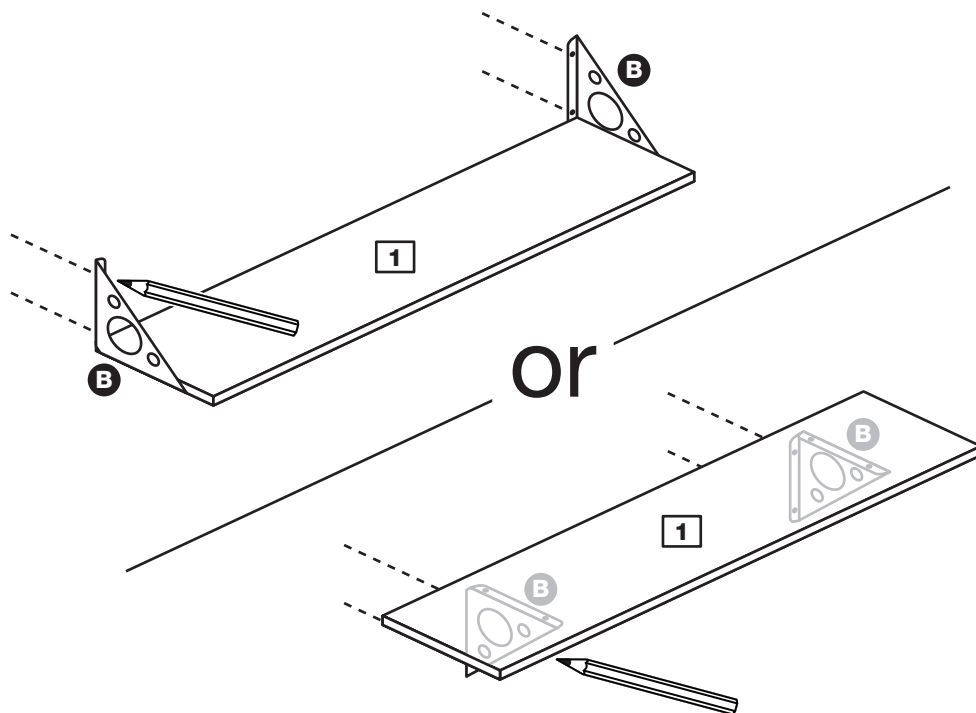


Step 5

Fit the shelf unit

See the next page for a guide to wall mounting and fixings

Push 4 wall plugs (not supplied) into the drilled holes.

 
Line the brackets **B** up with the wall plugs and fit them using 4 screws (not supplied).

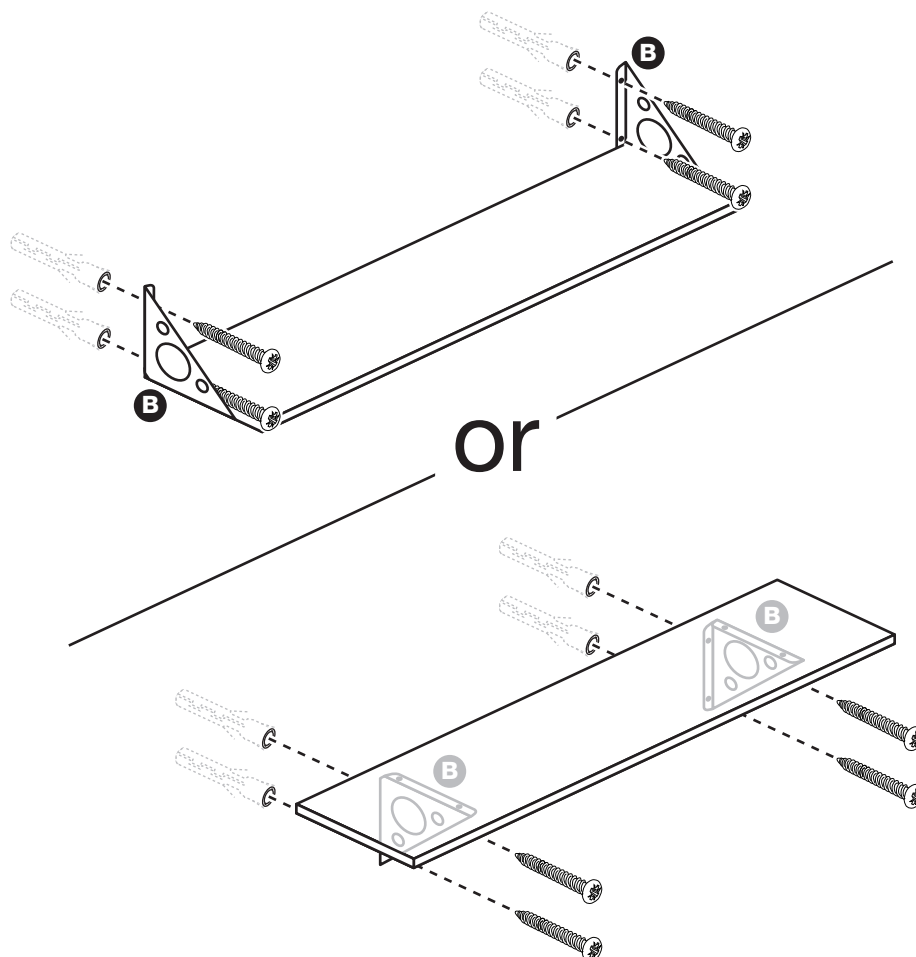

A Guide to Wall Mounting & Fixings

Important note:

 If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fixings is the responsibility of the installer.



Important: When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.

 
Hints:

- 1: General rule: Always use a larger screw and wall plug if you are not sure.
- 2: Ensure you use the recommended drill bit to match the wall plug and hole size.
- 3: Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
- 4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
- 5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 "General Purpose" wall plug

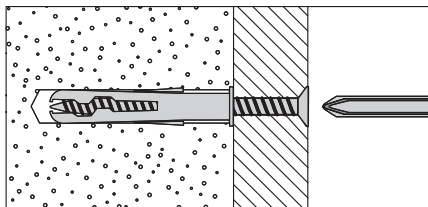


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

 No.2 "Plasterboard" wall plug

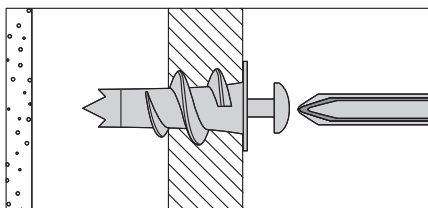


For use when attaching light loads on to plasterboard partitions.

 No.3 "Cavity Fixing" wall plug

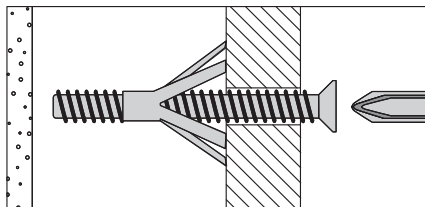


For use with plasterboard partitions or hollow wooden doors.

 No.4 "Cavity Fixing-Heavy Duty" wall plug

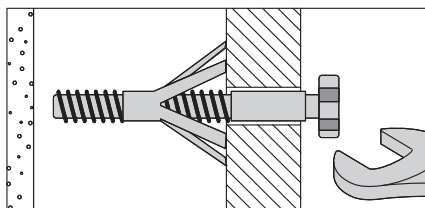


For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

 No.5 "Hammer Fixing" wall plug

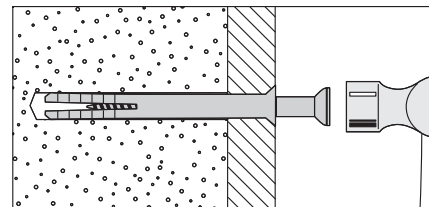

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

 No.6 "Shield Anchor" wall plug Heavy loads

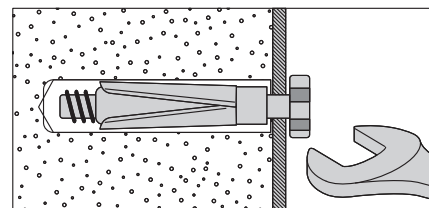

For use with heavier loads such as TV & HiFi speakers and satellite dishes etc.



Care & Maintenance

 
Safety: Always check the fitting and location to ensure your safety in and around the home.

Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.

Assembly Instructions

Step 6

Assembly is complete

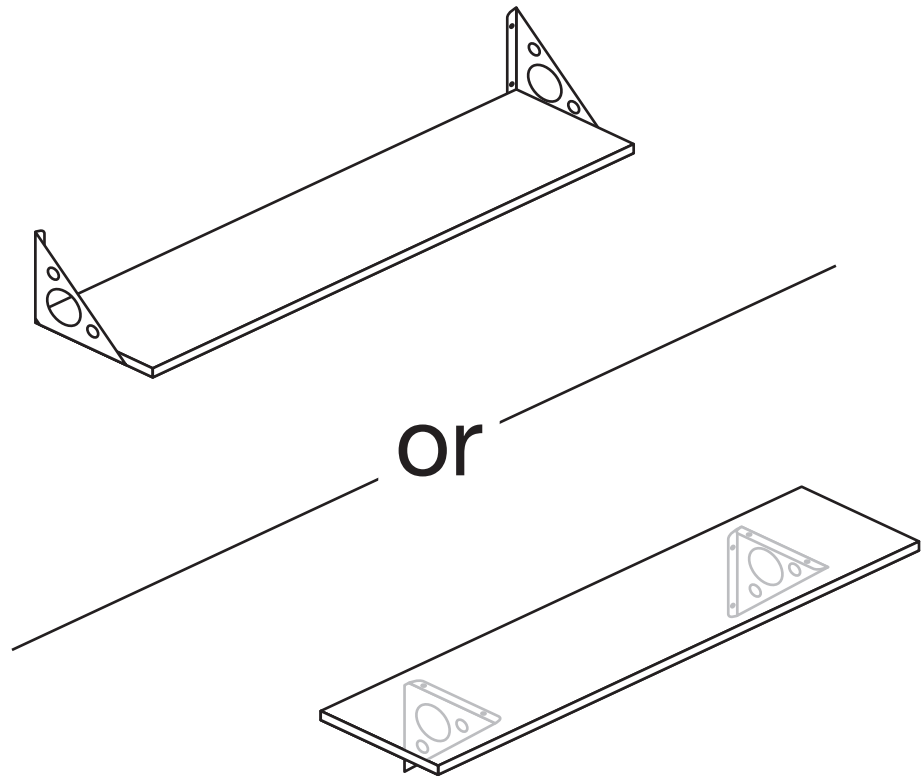

If you need help or have damaged or missing parts, please visit www.argos-support.co.uk
or email: Help@ClickSpares.co.uk (quoting your original order number)
Alternatively, call the Spares Helpline on: 0370 112 1928.
For any other queries please contact the Customer Helpline on: 0345 640 2020

