


BUSH *Classic*

Instruction Manual
KTS-601

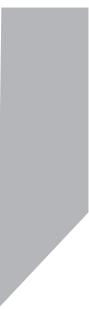



You'll soon be enjoying your new Turntable.

It all begins here, with your instructions. Don't worry, there's nothing too technical coming up. Just simple, step-by-step guidance to get you up and running quickly. Sound good? Then let's get started.

Help and Guidance


We're here to help you get the most from your Turntable. Should you require any guidance, a simple solution can often be found online at:

www.argos-support.co.uk

If you still require further assistance, call one of our experts on 0345 604 0105

Safety information

1

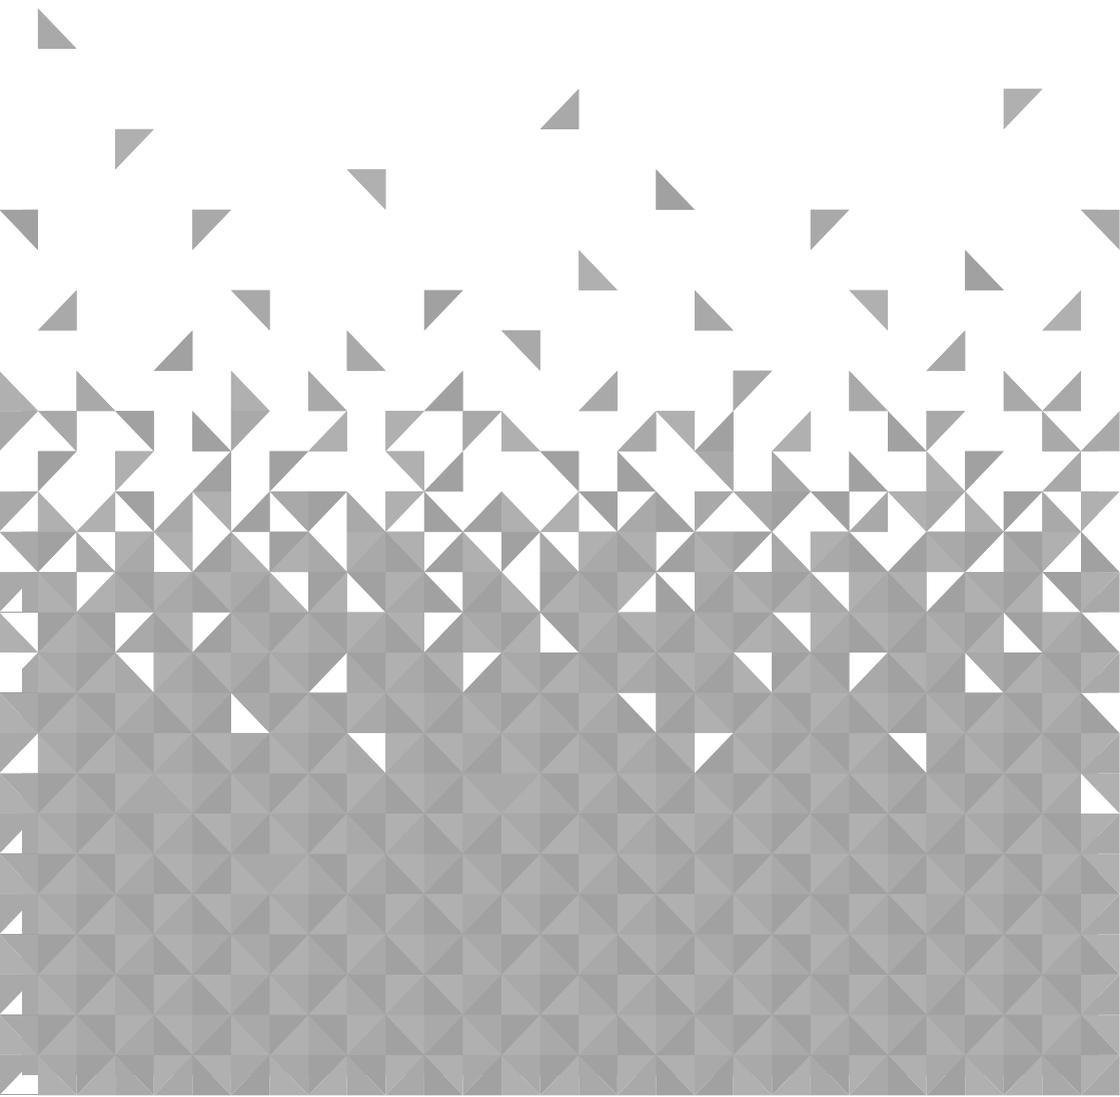



Safety information

Important - Please read these instructions fully before installing or operating

Power source

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE ANY COVER. NO USER-SERVICEABLE PARTS INSIDE, REFER ANY SERVICING TO QUALIFIED SERVICE PERSONNEL .

- Please read this owner's guide
- Please take the time to follow the instructions in this owner's guide carefully. It will help you set up and operate your system properly and enjoy all of its advanced features .
- Please save this owner's guide for future reference .
- The product label is located on the back of the product.
- Heed all warnings - on the product and in the owner's guide.
- Do not use this apparatus near water or moisture .
- Do not use this product near a bathtub, washbowl, kitchen sink, and laundry tub, in a wet basement, near a swimming pool, or anywhere else that water or moisture is present .
- Only use attachments/accessories specified by the manufacturer .
- Unplug this apparatus during lightning storms or when unused for long periods of time - to prevent damage to this product .
- Refer all servicing to qualified service personnel
- Servicing is required when the apparatus has been damaged in any way: such as liquid has been spilled or objects have fallen into the apparatus; the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped -
- Do not attempt to service this product yourself.
- Opening or removing covers may expose you to dangerous voltages or other hazards .
- To prevent risk of fire or electric shock, avoid overloading wall outlets, extension cords, or integral convenience receptacles .
- Use suitable power sources - Plug the product into a suitable power source, as described in the operating instructions or as marked on the product .

The mains plug is used as the disconnect device, the disconnect device shall remain readily accessible.



This symbol means that this unit is double insulated . An earth connection is not required.



This product complies with European low voltage (2006/95/EC) and electromagnetic compatibility (2004/108/EC) directives .

Disposal information



WEEE marking "Information for the consumer"

Disposal of your old product . Your product is designed and manufactured with high quality materials and components, which can be recycled and reused . When this crossed out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.

Please make yourself aware of the local collection system for electrical and electronic products. Please act according to your local rules and do not dispose of your old products with your normal household waste. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.

Contents

Page Contents

Warnings	5
Box contents and features	6- 7
Set up and operating the turntable	7
Replacing the stylus	8
Precautions	8
Specifications	8
Guarantee	10-13

Warnings

Warning

1. No naked flame sources, such as lighted candles, should be placed on or near this equipment.
2. Do not place the product in enclosed bookcases or racks without proper ventilation.
3. The mains adaptor is used as the disconnect device and must be easily reached to unplug.
4. Always use the power adaptor supplied if it needs to be replaced make sure the replacement has the same rating.
5. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
6. Do not expose to dripping or splashed fluids. Objects filled with liquids, such as vases, must not be placed on or near this equipment.
8. The unit should not be exposed to direct sunlight, very high or low temperature, moisture, vibrations or placed in dusty environment.
9. Do not use abrasives, benzene, thinner or other solvents to clean the surface of the unit. To clean, wipe with clean soft cloth it and a mild detergent solution.
10. Never attempt to insert wires, pins or other such objects into the vents or opening of the unit.
11. Do not disassemble or modify the turntable - apart from the stylus which can be replaced, there are no other user serviceable parts.
12. If the turntable is damaged in anyway or malfunctions do not use. Consult a qualified service engineer.
13. Switch off the mains socket the power adaptor is connected to when the turntable is not in use.
14. Do not dispose of this product with household waste at the end of its life cycle; hand it over to a collection centre for the recycling of electrical and electronic appliances. By recycling, some of the materials can be reused. You are making an important contribution to protect our environment. Please check with your Local Authority or recycling advice.

Disposal of your old appliance:

1. When this crossed-out wheeled bin symbol is attached to a product, it means the product is covered by the European Directive.
2. All electrical and electronic products should be disposed of separately from household waste at an appropriate recycling point/centre.
3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
4. For more detailed information about disposal of your old appliance, please contact your local authority or the shop where you purchased the product.




Box contents and features

Box Contents

- 1 x Turntable with attache case housing
- 1 x 3 Pin mains to 9V \approx 0.8A plug-in power adaptor
- 1 x 2 Phono to 3.5mm jack AUX IN lead
- 1 x User guide
- 1 x Spare stylus



1. Lock catch
2. Dust cover
3. Adapter - Use this when playing 45rpm records with cut out centres.
4. Tone arm lift
5. Auto stop control
6. Speed selection - Three speed for choice: 33.3, 45, 78 rpm.
7. LED power indicator
8. Power switch / Volume control
9. Headphone jack
10. Tone arm
11. Speaker
12. Cartridge
13. Carrying handle
14. Aux in
15. Line out R channel
16. Line out L channel
17. DC power jack

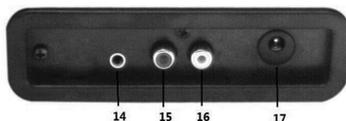

Features

- 33,45,78 RPM selectable speed turntable
- AUX IN for connecting other audio sources
- Headphone socket - can also be used for AUX OUT
- Built-in stereo speakers
- Portable attache case design
- Precision diamond stylus

Set up and operating the turntable

1. Remove all packaging from the unit.
2. Ensure that the security latch is closed so that the tone arm is not free to move.
3. Ensure unit is on a solid level surface, away from sources of heat, sunlight, etc.
4. Plug the jack plug from the power adaptor into the DC IN socket on the back of the turntable case then plug the power adaptor into a three pin mains socket and switch the socket on.
5. Remove the protective stylus guard from the tone arm cartridge by gently pulling it forwards.
6. Carefully place a record/disc on the platter/turntable.
7. Turn the Power On/Off and volume control to on - turn clockwise.
8. Select the correct speed for the disc you want to play.
9. Release the security clip.
10. Lift the tone arm and place the stylus at the start of the record.
11. Turn the volume control knob clockwise to increase the volume or anti clockwise to reduce the volume.

Tone Arm Lift

Please use Tone Arm Lift-up/Lift-down everytime start playing the Vinyl or stop playing Vinyl

Auto stop function

When the auto stop switch is in the 'on' position the turntable will automatically stop spinning at the end of most records. When the auto stop switch is in the 'off' position the turntable will keep turning until the tone arm is lifted and returned to the rest position.


Using AUX IN

You can use the AUX IN 2 Phono to 3.5mm jack AUX IN lead supplied to connect other audio sources such as a smartphone or tablet to the AUX IN sockets (15 & 16) on the back of the unit. Switch on the turntable and play the audio from your device. Adjust the volume on the device and turntable to get the best results.

Headphone socket

You can use the headphone socket to connect headphones to the turntable or to connect via the 2 Phono to 3.5mm RCA Jack lead supplied to a Hi Fi system if you want a bit more volume or want to record the disc playing.

Replacing the Stylus

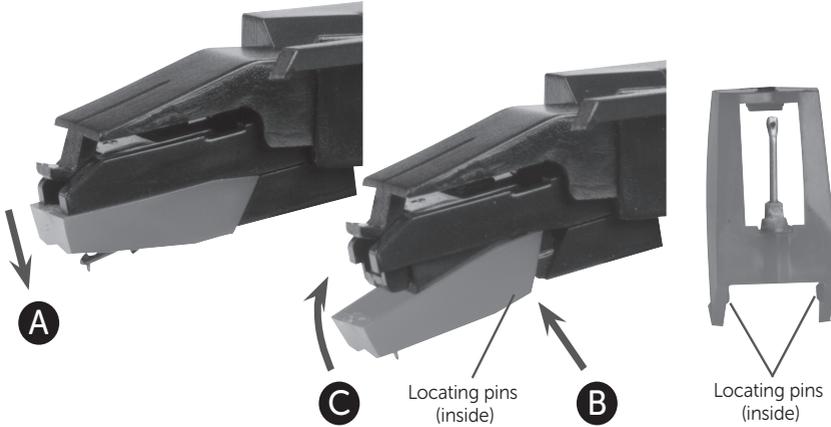

Removing the stylus from the cartridge

1. Place a screwdriver between the top of the red stylus shell and the black holder and push downwards in the direction "A" as shown above left
2. Remove the stylus shell by pulling it forwards and pushing downwards.

Replacing the stylus

1. Hold the tip of the red stylus shell and insert it by pushing in direction "B" as above
2. Push the stylus shell upwards in the direction "C" until it locks into position.

Precautions

- If the turntable stops spinning before a long playing record is finished play switch off the auto stop when playing LPs in the future.
- Do not place unit on top of or near loudspeakers as acoustic feedback can occur.
- Do not play badly worn or chipped records.
- Ensure Stylus is clean and free of fluff and dust.
- Clean the unit with a soft, damp lint free cloth, never use chemicals or harsh abrasives.
- Use a good quality record cleaner for optimum results.
- Always secure the tone arm with the security clip before moving the unit.

Specifications

Mains adaptor


Input: 100-240V~50/60Hz

Output: 9 V ≈0.8A

Turntable

Speeds: 33,45,78 RPM

Product support 2

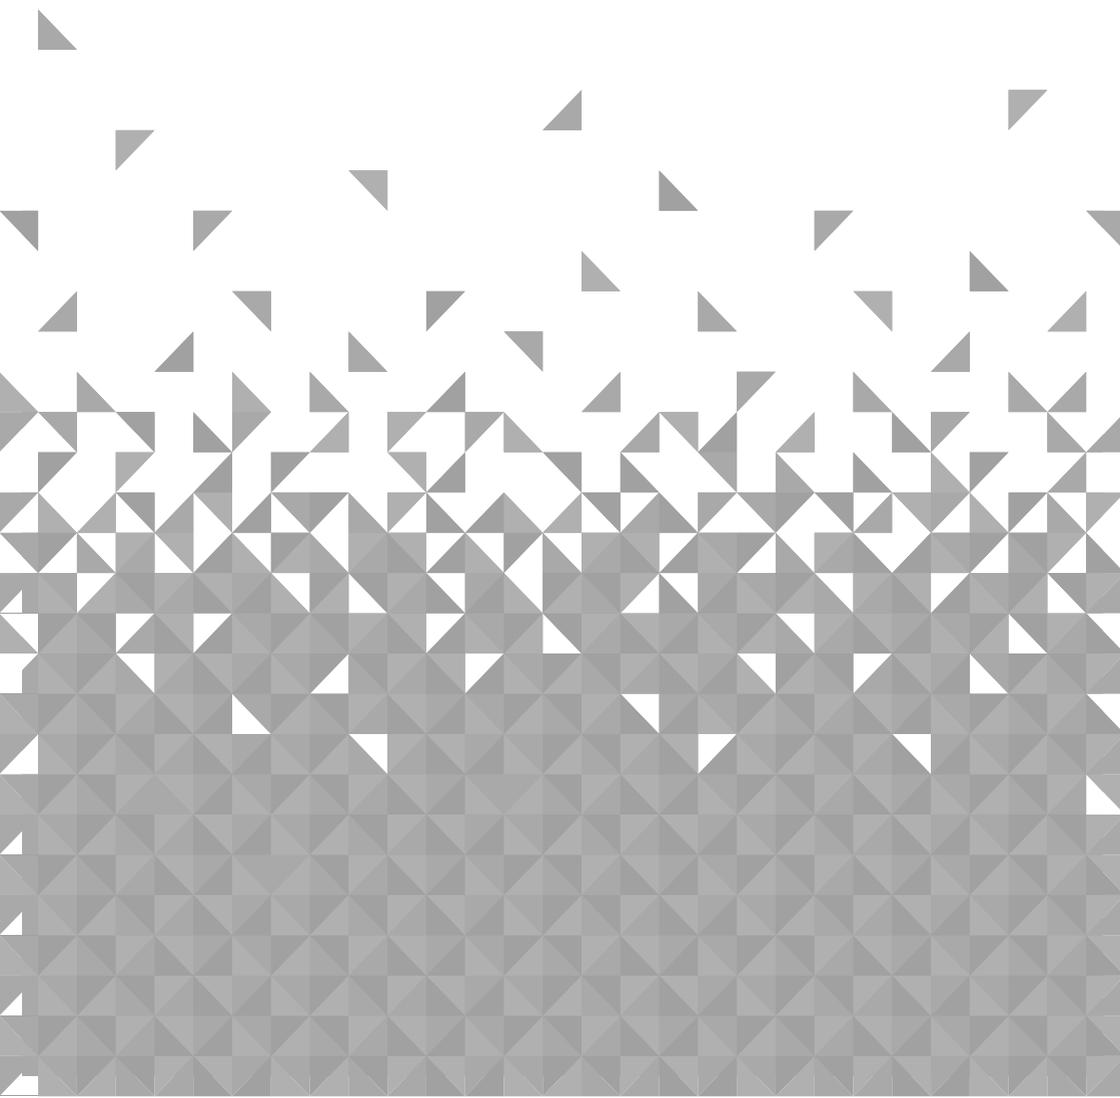

Product support

Help is always at hand

User instructions

Troubleshooting

In the unlikely event of difficulties with your appliance please follow the trouble shooting guide below. If the problem persists, visit the technical support website: www.argos-support.co.uk

Problem	Reason(s)	Solution(s)
No power	<ul style="list-style-type: none">• Power cable not connected to wall socket• Power socket is not switched on• The power saving mode is activated.	<ul style="list-style-type: none">• Make sure the plug is connected• Switch the power on• See 'Mains connection' page 5 for details.
No sound when connected to a home stereo system	<ul style="list-style-type: none">• Volume is too low• The RCA cables are not connected correctly.• The stereo system is not set to the correct input mode.	<ul style="list-style-type: none">• Increase the volume• Check the connections.• Check which input you connected the RCA cables to and switch to that input mode on your stereo system.
No sound when connected to a computer	<ul style="list-style-type: none">• The device was not recognised when connected.• The software playthrough option was not ticked.• The recording level bar was not clicked.	<ul style="list-style-type: none">• Re-boot the computer and try again.• See page 7 'Setting up the device on a computer section 5' for details.• See page 7 'Setting the recording levels section 2' for details.
The start or stop position is not accurate	<ul style="list-style-type: none">• The tone arm alignment is not set correctly.	<ul style="list-style-type: none">• See page 6 for instructions on alignment.
Recordings made through a computer are distorted	<ul style="list-style-type: none">• The input levels are too high	<ul style="list-style-type: none">• Adjust the input levels. See page 7 'Setting the recording levels.'
The stylus is skating across the record	<ul style="list-style-type: none">• The counter weight is not set correctly.	<ul style="list-style-type: none">• Adjust the counterweight. See page 4 'Installing the counter weight.'
The record is playing too fast or too slow.	<ul style="list-style-type: none">• The pitch adjustment needs fine tuning.	<ul style="list-style-type: none">• Increase or decrease the pitch adjust control. See page 5 'Pitch adjust'.

Product support

Help is always at hand

Help and assistance

If you require any technical guidance or find that your <enter product name> is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions or online at www.argos-support.co.uk

If you still require further assistance, call one of our experts on **0345 604 0105** . To help give us give you a fast and efficient service please have the following information ready:

Model Ref.	<input type="text"/>	You can find these on the rating plate - a small information panel (usually a sticker or metal plate) on the rear of your product.
Serial number	<input type="text"/>	
Date of purchase	<input type="text"/>	This will be shown on your receipt

Local call rates applies*

Lines open 8am-7pm Monday to Saturday and 10am-4pm Sunday.

*Calls to Argos enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see www.bt.com/pricing for details.

For security and training purposes, telephone calls to and from customer service centres may be recorded and monitored. Calls from Republic of Ireland will attract international call charges.

Product support

Help is always at hand

Disposal

The symbol on the product or its packaging indicates that this product may not be treated as household waste. Instead it should be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which should otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling this product, please contact your local council office, your household waste disposal service or the shop where the product was purchased.



Product support

Help is always at hand



Call us now and activate your 12 month guarantee

Thank you for choosing Bush. Your new product is guaranteed against faults and breakdowns for 12 months. Don't forget to register it with us today so we can provide you with our best possible after-sales service and useful updates.

www.bushregistration.co.uk

FREEPHONE*

0800 597 8548

Lines are open 8am - 8pm, 365 days a year. *Calls may be recorded and monitored.

Your Bush Guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from who you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in the manual.
- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- Bush disclaim any liability for loss or damage arising from the breakdown of the product.
- This guarantee is in addition to and does not diminish your statutory or legal rights.

Important Data Protection Information

If you provide us with information about another person, you confirm that they have appointed you to act for them, to consent to the processing of their personal data including sensitive personal data and that you have informed them of our identity and the purposes (as set out in the Important Data Privacy notice displayed overleaf) for which their personal data will be processed.

You are entitled to ask for a copy of the information we hold about you (for which we may charge a small fee) and to have any inaccuracies in your information corrected.

For quality control and training purposes, we may monitor or record your communications with us.

If your personal details change, if you change your mind about any of your marketing preferences or if you have any queries about how we use your information, please let us know by contacting our Data Protection Officer, Domestic & General, Leicester House 17 Leicester Street, Bedworth, Warwickshire CV12 8JP.

BUSH *Classic*

Contact:

www.argos-support.co.uk

Helpline: 0345 604 0105