AH 2 TIER HD CLOTHES RAIL 4 FT WIDE BLACK

Assembly Instructions - Please keep for future reference

731/9907



Dimensions

Width - 120cm Depth - 44cm Height - 167cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: Argos = 0345 640 0800**

Issue - 1 14/5/2018

Components - Parts


If you have damaged or missing components,call the Customer Helpline: Argos = 0345 640 0800

Please check you have all the panels listed below 1 Leg tube x 2 2 Bottom Tube x 1 3 Side Tube x 2 4 Top Tube x 1 5 Center Tube x 1

Components - Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

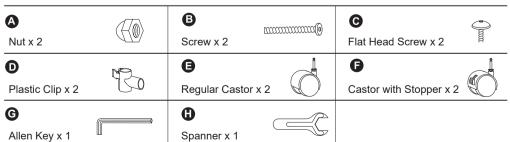

Ruler - Use this ruler to help correctly identify the screws

5 10 15 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95 100 105 110 115 120 125 130 135 140 145 150 155 160 165 170

$\langle \hat{l} \rangle$

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

room) as possible.

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- During assembly do not stand or put weight on the product, this could cause damage.
- this could cause damage.Assemble the item as close to its final position (in the same
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



• To reduce the likelihood of damaging your product please ensure that your

power drill is set on a low torque setting.

• This is the item with " Maximum loading: 50 kgs", please do not put the weight heavier than 50kgs.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightend properly.

Note: If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

Assembly Instructions

Step 1

Note: It is recommended that two people work together for easier assembly.

Repeat Step a: assemble other Leg tube 1 with Caster **B** & **G**.

Note: Please use **H** Spanner to tighten castors.

b: Insert Bottom tube 2 into Leg tube 1, align both holes on Bottom tube 2 and Leg tube 1, lock by Screw 3 and Nut 4, then tighten by Allen key 3 and Spanner 1.

Repeat Step b: assemble other side of Leg tube 1 with Bottom tube 2.

c: Connect Plastic Clip **o** to Center Tube **5**

Step 2

a: Insert Center Tube 5
into Side Tube 3 from
the top of Side Tube 3,
and connect Top Tube 4
to Side Tube 3, lock by
Flat Head Screw 6 then
tighten by Allen Key 6.

b: Insert Side Tube 3 into Leg Tube 1.

c: Assembly is complete.

