

# BUSH

## Instruction manual

ESI01U





You'll soon be enjoying your new Stereo DAB/FM Radio.

It all begins here, with your instructions. Don't worry, there's nothing too technical coming up. Just simple, step-by-step guidance to get you up and running quickly. Sound good? Then let's get started.

## Help and Guidance

We're here to help you get the most from your Stereo DAB/FM Radio. Should you require any guidance, a simple solution can often be found online at:

[www.argos-support.co.uk](http://www.argos-support.co.uk)

If you still require further assistance, call one of our experts on **0345 600 3021**.

*If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the Troubleshooting section*

**BUSH**

# Contents

## 1 Safety information

General safety information	8
Power source	8
Positioning the Stereo DAB Radio	9
Moisture and water	10
Ventilation	10
Heat sources and flames	10

## 2 Getting to know your Stereo DAB/FM Radio

Connection	20
Inserting batteries (optional)	20
Initial set-up	21
Adjusting the volume	22
Time and date	22
Change the mode	23
Display	24
Setting an alarm	24
Stop the Alarm	25
Snooze	26
Turn off the Alarm	26
Sleep timer	26
Cancel the Sleep timer	27
Using headphones	27

*of these instructions, or online at [www.argos-support.co.uk](http://www.argos-support.co.uk) If you still require further assistance, call one of our experts on 0345 600 3021.*

# Contents

## 3 Using your Stereo DAB/FM Radio

Telescopic aerial	30
DAB Radio mode	30
Changing DAB stations	30
Scanning for DAB stations	31
Prune DAB stations	31
Storing a DAB station preset	32
Storing your 3 One Touch presets	32
Tune to a One Touch DAB preset station	32
Storing a DAB station preset	33
Tune to a DAB preset station	34
DAB display information	34
Dynamic range control (DRC)	36
FM Radio mode	37
Tuning to an FM station	37
Changing the Scan setting	38
Audio mode	38
Storing an FM station preset	39
Storing your 3 One Touch presets	39
Tune to a One Touch FM preset station	40
Storing an FM station preset	40
Tune to an FM preset station	41
FM display information	42

*If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the Troubleshooting section*

# Contents


Using the Menu, System settings	43
Equaliser	43
Display backlight timeout	44
Display language	45
Software version	45
Factory reset	46
<b>4 Other information</b>	
Technical specification	50
<b>5 Product support</b>	
Troubleshooting	54
Help and assistance	56
Disposal	57
Your Bush Guarantee	58

*of these instructions, or online at [www.argos-support.co.uk](http://www.argos-support.co.uk) If you still require further assistance, call one of our experts on 0345 600 3021.*

This page is left intentionally blank

# Safety information

1

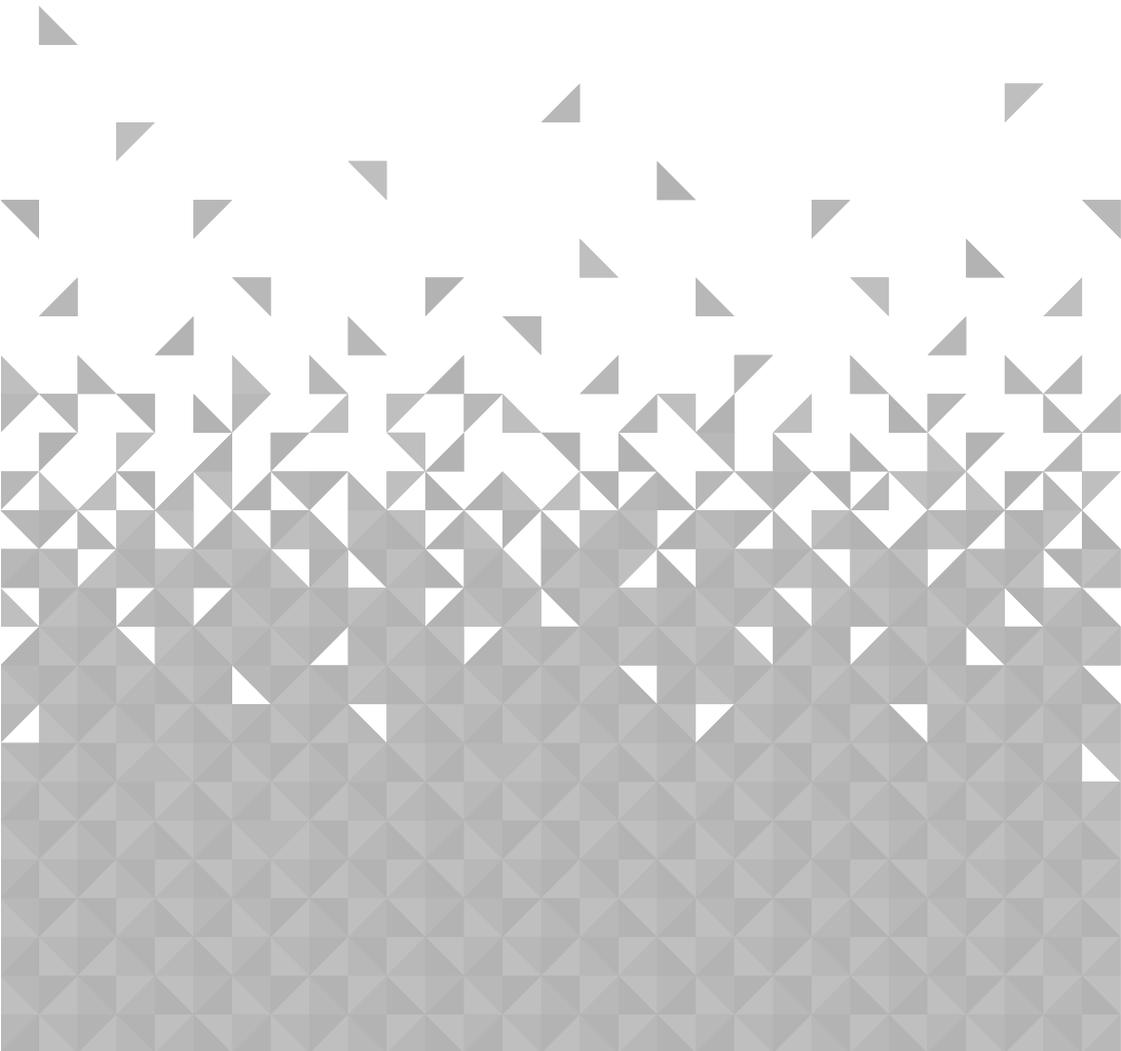



## Safety information

**Important** - Please read these instructions fully before installing or operating

### General safety information

Keep the product and all its parts out of reach of small children.

This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.

- Do not attempt to open the product. This product does not contain any user serviceable parts. Unauthorised handling of the device may damage it and will void your warranty.
- Do not use your Radio near emergency/intensive care medical equipment or during an electrical storm.



To avoid possible hearing damage, do not listen to this radio at high volume levels for long periods of time. Always keep the volume within reasonable limits.

### Power source

- Only use the power supply that came with the product. Using an unauthorised power supply will invalidate your guarantee and may irrecoverably damage the product.
- Disconnect your Radio from the mains power supply during thunderstorms.
- Always check that you have completely switched off your Radio, before you change or disconnect the power supply.
- Where the mains power plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

*If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the Troubleshooting section*



## Safety information

**Important** - Please read these instructions fully before installing or operating

- If the Radio will not be used for a long period of time, make sure that all of the batteries are removed from the battery compartment and the mains power is unplugged.
- Only use recommended batteries or those of the same or equivalent type.
- Do not mix old and new batteries or batteries of different types.
- Batteries are to be inserted with the correct polarity.
- The supply terminals are not to be short-circuited.
- Remove the batteries from the Radio if they will not be used for an extended period of time.
- Batteries should not be exposed to excessive heat, such as sunshine, fire or the like.
- Never throw batteries in a fire or attempt to open the outer casing.
- Batteries are harmful if swallowed, so keep away from young children.
- CAUTION: Danger of explosion if batteries are incorrectly replaced. Replace only with the same or equivalent type.

## Positioning the Stereo DAB Radio

It is important that you consider carefully in advance where your Radio will be situated and make sure that it is:

- on a flat and stable surface.
- within 1.4 metres of a power socket. Please ensure that the mains power lead is not a trip hazard.

*of these instructions, or online at [www.argos-support.co.uk](http://www.argos-support.co.uk) If you still require further assistance, call one of our experts on 0345 600 3021.*



## Safety information

Important - Please read these instructions fully before installing or operating

- at least 1 metre away from other electrical appliances to avoid interference.
- where you can fully extend the telescopic aerial.
- Never place your Radio directly onto antique or polished surfaces.

## Moisture and water

- Keep it dry. Avoid exposure to precipitation, humidity and liquids which could all affect the product circuitry.
- Do not leave it in low temperatures as moisture can form inside the product, which may damage the circuit board.

## Ventilation

- Do not block or cover slots, holes or openings on the product by placing on soft furnishings such as carpets, rugs or beds as these are provided for functionality and/or ventilation to ensure safe operation of the product.

## Heat sources and flames

- Do not leave it in high temperatures as electronic devices and plastic parts may warp in heat.
- Keep it away from bright sunlight or heat sources, such as a radiator.
- Never place any type of candle or naked flame on top of, or near the product.

*If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the Troubleshooting section*


This page is left intentionally blank

*of these instructions, or online at [www.argos-support.co.uk](http://www.argos-support.co.uk) If you still require further assistance, call one of our experts on 0345 600 3021.*

This page is left intentionally blank

# Getting to know your Stereo DAB/FM Radio

# 2

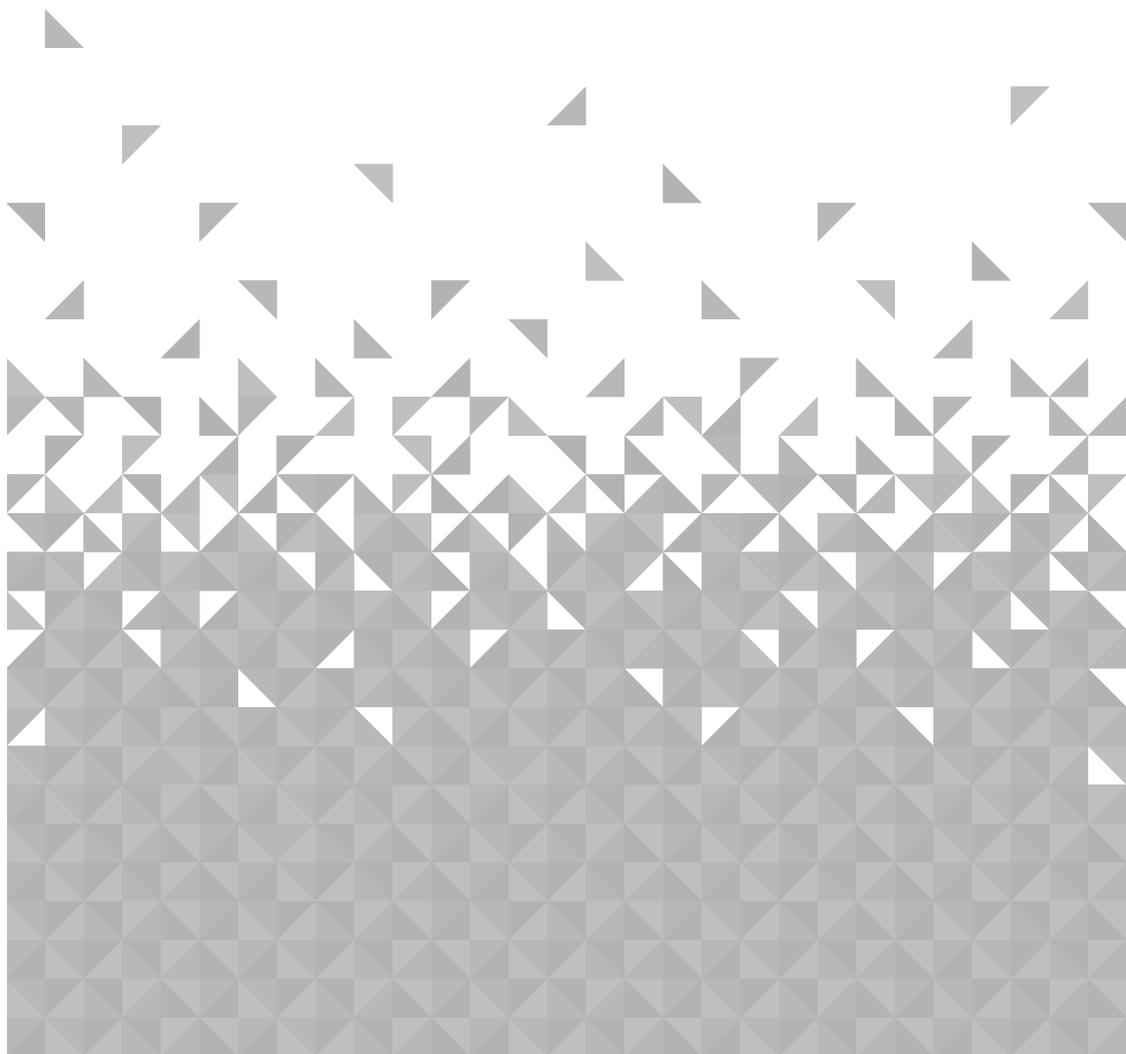

# Getting to know your Stereo DAB/FM Radio

You'll be up and running in no time

## Ready? Let's begin...

Please read these instructions carefully. They contain important information which will help you get the best from your product and ensure safe and correct installation and operation.

If you require any further assistance, our technical experts are happy to help. For full details, refer to the product support section at the end of these instructions.


1. Telescopic aerial
2. Top button cover
  - Press in the dimple recess to open/close
3. Carry handle
4. Rotary Tune/Select control
  - Rotate: Move up and down the DAB station list or the FM frequency band
  - Rotate: Move through the Menu options
  - Short press: Select a displayed radio station or option
  - Short press when an alarm sounds: Active Snooze

*If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the Troubleshooting section*

# Getting to know your Stereo DAB/FM Radio

You'll be up and running in no time

Fig 1.

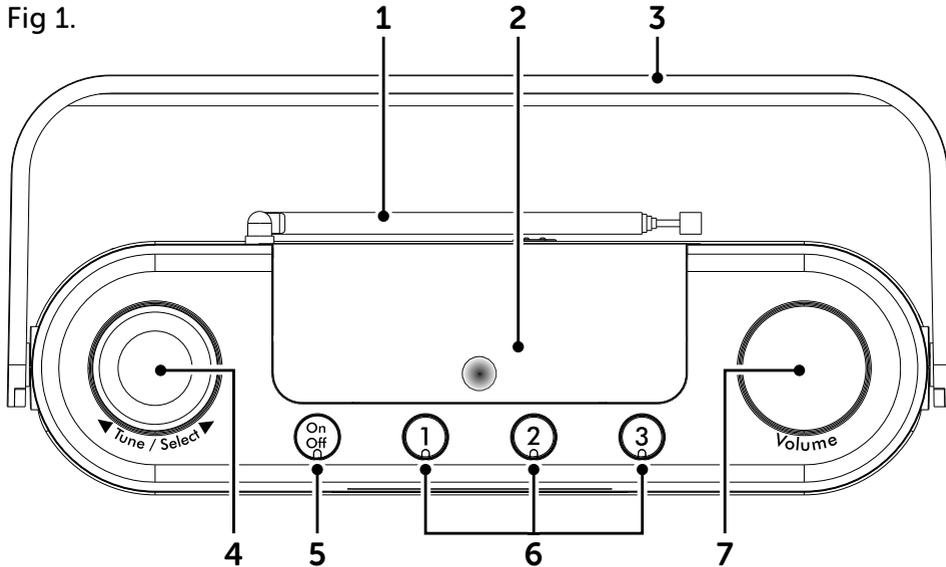

5. On/Off (with Red LED)
  - Short press: Power on
  - Short press: Standby (Mains power)
  - Short press: Off (When using batteries)
6. Presets 1, 2 and 3 (with Blue LEDs)
  - Long press: Preset store
  - Short press: Preset recall
7. Rotary Volume control
  - Rotate to change the volume

of these instructions, or online at [www.argos-support.co.uk](http://www.argos-support.co.uk) If you still require further assistance, call one of our experts on 0345 600 3021.

# Getting to know your Stereo DAB/FM Radio

You'll be up and running in no time

## 8. Menu

- Short press: Enter/Exit the Menu

## 9. Mode

- Short press: Change the mode (DAB/FM)

## 10. Preset (10 DAB/10 FM)

- Short press: Preset recall
- Long press: Preset store

## 11. Info

- Short press: Changes displayed radio station information

## 12. Scan

» In DAB mode:

- Short press: Scans for radio stations

» In FM mode:

- Short press: Scans up the frequency band
- Long press: Scans down the frequency band

## 13. Display

- Repeatedly short press: Changes the display brightness

## 14. Top button cover latch

## 15. Alarm

- Short press: Set Alarm 1 or 2

## 16. Sleep


- Short press: Set the sleep timer

*If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the Troubleshooting section*

# Getting to know your Stereo DAB/FM Radio

You'll be up and running in no time

Fig 2.

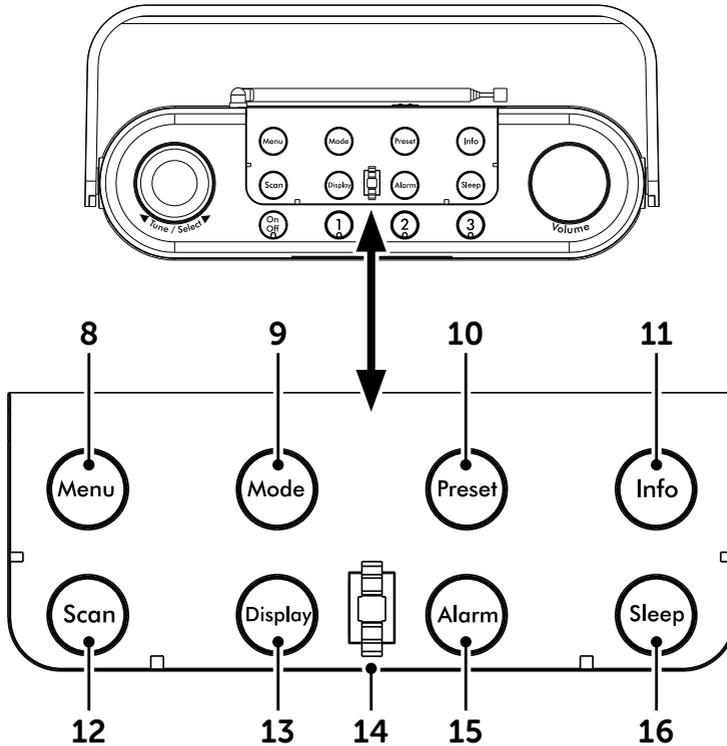


of these instructions, or online at [www.argos-support.co.uk](http://www.argos-support.co.uk) If you still require further assistance, call one of our experts on 0345 600 3021.

# Getting to know your Stereo DAB/FM Radio

You'll be up and running in no time

Fig 3.

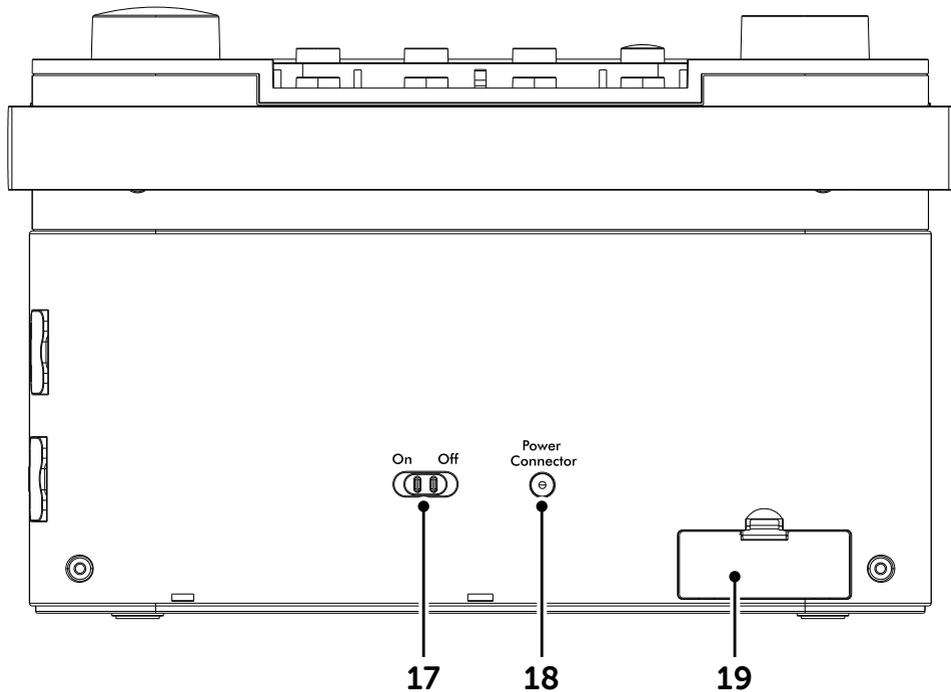

17. On/Off slide switch

18. Mains power socket

19. Battery compartment (4 x AA Alkaline batteries).

20. Backlit display

21. Headphone socket

*If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the Troubleshooting section*

# Getting to know your Stereo DAB/FM Radio

You'll be up and running in no time

Fig 4.


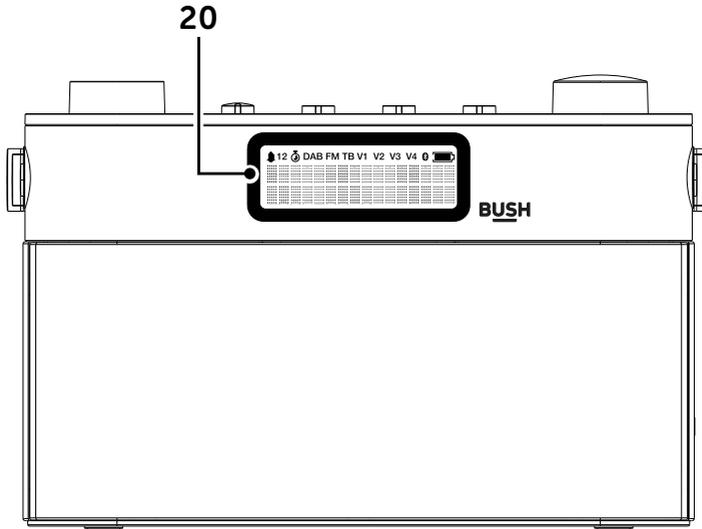


Fig 5.

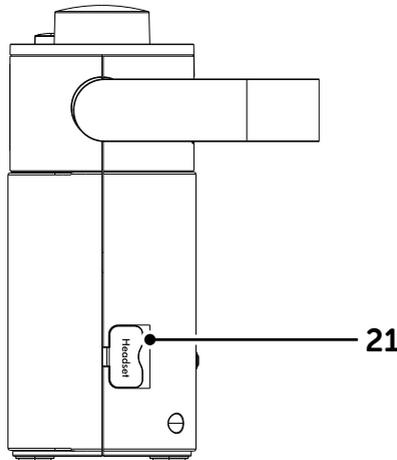



of these instructions, or online at [www.argos-support.co.uk](http://www.argos-support.co.uk) If you still require further assistance, call one of our experts on 0345 600 3021.

# Getting to know your Stereo DAB/FM Radio

You'll be up and running in no time


## Connection

1. Connect the mains power lead into the socket on the back of the Radio.
2. Plug the power adaptor into the mains power wall socket and switch on.
3. Slide the On/Off switch on the back of the radio to On. The Radio will switch on, Welcome to Digital Radio will be displayed and then your Radio will go to Standby mode.
4. The Red LED, on the On/Off button, will light up to confirm that you are in Standby mode.

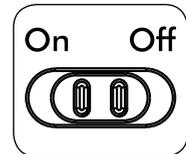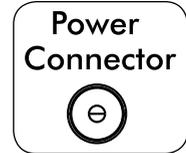

## Inserting batteries (optional)

1. Before installing the batteries (not included) please ensure that the Radio is switched off using the On/Off button on the top of the radio and the On/Off slide switch on the back of the radio.
2. Please unplug your radio from the mains power supply.
3. On the back of the Radio, on the bottom right hand side, press in the tab on the battery compartment cover to remove it.

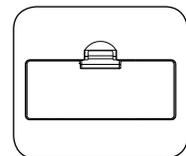


*If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the Troubleshooting section*

# Getting to know your Stereo DAB/FM Radio

You'll be up and running in no time

4. Insert 4 x 1.5V AA-size (also known as LR-6) Alkaline batteries, making sure to note the '+' and '-' markings and position the batteries the correct way around.

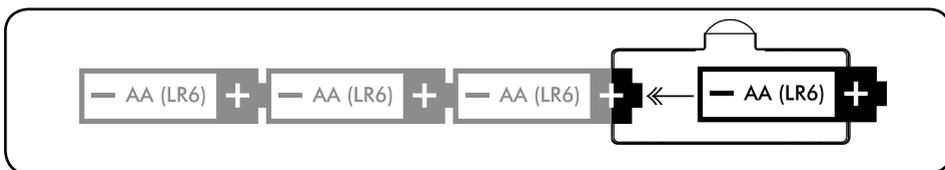

**Note:** You can check the base of your radio for the correct direction to install your AA Alkaline batteries.

5. Replace the battery cover, making sure that it 'clicks' shut.

**Note:** For battery operation please ensure that the mains power is switched off and remove the mains power plug from the socket on the back of the Radio.

## Initial set-up

1. Extend the telescopic aerial to ensure the maximum signal strength when you scan for radio stations.
2. Short press the On/Off button on the top of your radio. The red LED will turn off and your radio will switch on and begin an automatic scan for DAB stations. A progress bar will show the progress of the scan and the number of stations found during the scan will also be displayed.
3. When the scan is complete your radio will select the first available station and begin to play. Stations are listed in numerical and then alphabetical order by default.

*of these instructions, or online at [www.argos-support.co.uk](http://www.argos-support.co.uk) If you still require further assistance, call one of our experts on 0345 600 3021.*

# Getting to know your Stereo DAB/FM Radio

You'll be up and running in no time

---

**Note:** The DAB radio station list is stored in the memory and so the next time you switch your radio on, the station search does not take place. It is possible to scan manually for stations by pressing and releasing the Scan button, which can be found under the top cover.

---

4. Use the rotary Tune/Select control, to scroll through the available stations in the station list. When the station that you would like to listen is displayed, short press the rotary control. There will be a short delay whilst your radio tunes to your selected station.

## Adjusting the volume

- Turn clockwise to increase the volume.
- Turn anti-clockwise to decrease the volume.

## Time and date

The first time you listen to DAB radio, the time and date of your product will be synchronised automatically to that broadcast by the DAB service in 24 hour mode; which is in line with daylight saving, so there is no need to set the time and date manually.

If you do wish to set the time and date manually, turn on the radio and follow the steps below:

1. Short press the Menu button (under the top cover), to enter the menu options.
2. Use the rotary Tune/Select control to scroll to <System>. Short press the rotary Tune/Select control to select.
3. Use the rotary Tune/Select control to scroll to <Time>.

*If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the Troubleshooting section*

# Getting to know your Stereo DAB/FM Radio

You'll be up and running in no time

Short press it to Select. <Set Time/Date> is displayed. Short press the rotary Tune/Select control again.

4. Set time is displayed and the hour digits will flash. Use the rotary Tune/Select control to scroll to the correct hour. Short press the rotary Tune/Select control to select..
5. The minutes will now flash. Use the rotary Tune/Select control to scroll to the correct minutes. Short press the rotary Tune/Select control to select.
6. Set date is displayed and the day will flash. Use the rotary Tune/Select control to scroll and press to select, to confirm the day, month and year, using the same method as you used to set the time.

When you confirm the correct date. 'Time Saved' is displayed and the display returns to <Set Time/Date>.

You can now use the rotary Tune/Select control to scroll and press to select, as you did to set the time and date to change the settings for:

12/24 hour clock display, the date format, DD-MM-YYYY or MM-DD-YYYY and to auto update the time from the DAB signal, FM signal, DAB or FM signal or no update.

7. Short press the Menu button to exit the Menu options.

## Change the mode

Short press the Mode button (under the top cover), to change between DAB and FM modes. Please check the display, which will confirm the mode.

*of these instructions, or online at [www.argos-support.co.uk](http://www.argos-support.co.uk) If you still require further assistance, call one of our experts on 0345 600 3021.*

# Getting to know your Stereo DAB/FM Radio

You'll be up and running in no time

## Display

You can repeatedly short press the Display button (under the top cover) to change the display brightness.

## Setting an alarm

---

**Note:** Check that the radio has the correct time and date before you set an alarm.

---

1. Short press the Alarm button (under the top cover). Alarm 1 Setup is displayed (Short press Alarm button again to set Alarm 2).
2. Short press the rotary Tune/Select control, Alarm 1 (or 2) Wizard On time is displayed and the hour digits for the alarm will flash.
3. Use the rotary Tune/Select control to scroll to the hour for the alarm and press to select.
4. The minutes will now flash. Use the rotary Tune/Select control to scroll to the minutes for the alarm and press to select. The duration time will now flash.
5. Use the rotary Tune/Select control to scroll to the duration for the alarm and press to select. You can choose from 15, 30, 45, 60, 90 and 120 minutes. The source for the alarm will now flash.
6. Use the rotary Tune/Select control to scroll to the sound source for the alarm. You can choose from Buzzer, DAB or FM radio. Short press the rotary Tune/Select control to select.

*If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the Troubleshooting section*

# Getting to know your Stereo DAB/FM Radio

You'll be up and running in no time

---

**Note:** If you select DAB or FM radio for the alarm source, 'Last listened' will flash in the display and if you have set radio station presets, you can also use the rotary Tune/Select control to scroll through the options available and press to select. The last listened to radio station or radio preset in DAB or FM, as appropriate, will be used for your alarm.

---

7. Use rotary Tune/Select control to scroll to the frequency for the alarm. You can choose from Daily, Once, Weekends or Weekdays. Short press the rotary Tune/Select control to select.

---

**Note:** If you select 'Once', you will then be prompted to set the date for your alarm.

---

8. Use the rotary Tune/Select control to set the volume for your alarm. You will not be able to set this for less than 4 bars. Short press the rotary Tune/Select control to select.

---

**Note:** Remember to set the alarm radio volume, using the rotary volume control, to one that will wake you.

---

9. Use the rotary Tune/Select control to choose Alarm On or Off and press to select. Alarm Saved is displayed.
10. A bell icon will appear in the radio display, together with a '1' or '2' as appropriate, to confirm that an alarm has been set.

## Stop the Alarm

When the alarm sounds, short press any button, Alarm off will be displayed. Alternatively, you can press the rotary Tune/Select control to Snooze (see Snooze function below).

*of these instructions, or online at [www.argos-support.co.uk](http://www.argos-support.co.uk) If you still require further assistance, call one of our experts on 0345 600 3021.*

# Getting to know your Stereo DAB/FM Radio

You'll be up and running in no time

---

**Note:** When you press a button to stop the alarm, the alarm symbol will remain in the display and the alarm will sound again at the same time the next day, unless it was set for 'Once' only.

---

## Snooze

When the alarm sounds you can press the rotary Tune/Select control to Snooze. Snooze will be displayed, followed by the snooze time countdown from 10 minutes, until the alarm sounds again.

## Turn off the Alarm

Follow the steps for 'Setting an Alarm' and select 'Off' in step 9. In Standby mode, you can short press the Alarm button (under the top cover) to turn Alarm 1 or 2 on or off.

## Sleep timer

You can set your radio to switch to Standby mode (or Off in battery mode) automatically using the sleep timer. You can choose from Sleep off, 15, 30, 45, 60 and 90 minutes.

With your radio switched on (not in Standby mode):

1. Short press the Sleep button (under the top cover). Set sleep time, is displayed.
2. Use the rotary Tune/Select control to scroll through the available options. Stop when the sleep time you would like is displayed and press to select.

*If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the Troubleshooting section*

# Getting to know your Stereo DAB/FM Radio

You'll be up and running in no time

3. Sleep XX min will be displayed on the second line of the radio display, where XX is the number of minutes you have selected for your sleep timer.
4. The Sleep XX min will count down until your radio switches off automatically.

## Cancel the Sleep timer

With your radio switched on (not in Standby mode):

Follow the steps for 'Sleep timer' and select 'off' in step 2.

## Using headphones

You can connect headphones with a 3.5mm plug (not included) to the Headset socket behind the rubber cover on the right hand side of your Radio. When you have headphones connected the Radio speakers are switched off and all sound is via the headphones.

---

**Note:** Always keep the volume within reasonable limits.


---

*of these instructions, or online at [www.argos-support.co.uk](http://www.argos-support.co.uk) If you still require further assistance, call one of our experts on 0345 600 3021.*

This page is left intentionally blank

# Using your Stereo DAB/FM Radio

3

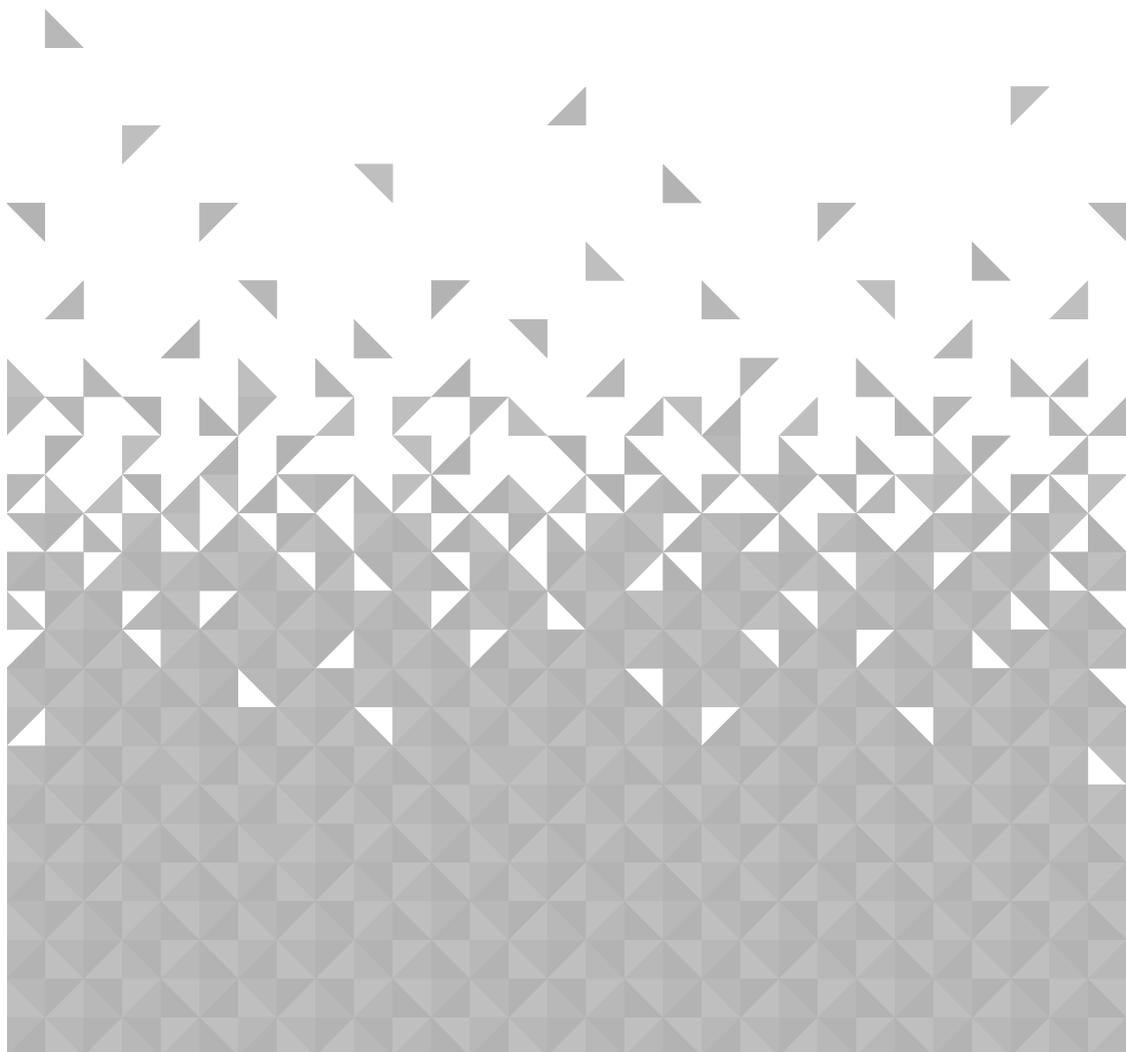

# Using your Stereo DAB/FM Radio

Let's get started

## Telescopic aerial

Please make sure that the aerial is fully extended before you attempt to tune to a DAB station (a vertical position is recommended). This will ensure that the maximum signal strength is available when the radio begins to scan. Extending the aerial also ensures the best possible sound quality.

## DAB Radio mode

- Check that your Radio is in DAB mode. If you are not already in DAB mode, short press the Mode button (under the top cover), until you are in DAB mode (check the display).
- The first time you use the Radio or if the station list is empty, your radio will automatically begin to scan for DAB radio stations. A progress bar will show the progress of the scan and the number of stations found during the scan will also be displayed.
- If you were listening to a DAB station when you switched the radio off, then this station will automatically be selected when you switch the radio back on.

## Changing DAB stations

1. Use the rotary Tune/Select control to scroll through the available stations.
2. When the station that you would like to listen to is displayed, short press the rotary Tune/Select control to select. There will be a short delay whilst your radio tunes to your selected station.

*If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the Troubleshooting section*

# Using your Stereo DAB/FM Radio

Let's get started

## Scanning for DAB stations

With DAB radio additional stations and services regularly become available, so it's a good idea to carry out a manual scan every now and then to make sure that you have the most up to date station listing stored within the memory of your Radio. If you have moved your Radio to another location, e.g.: if you go on holiday, then it's also a good idea to carry out a manual scan.

In DAB mode:

1. Short press the Scan button (under the top cover), to begin a search for stations. The display will change to 'Scanning...'. A progress bar will show the progress of the scan and the number of stations found during the scan will also be displayed.

## Prune DAB stations

You can remove the DAB stations in the station list that cannot be received in your area. These are listed with a '?' prefix.

In DAB mode:

1. Short press the Menu button (under the top cover), to enter the menu options.
2. Use the rotary Tune/Select control to scroll to <Prune> and press to select.
3. Prune? Yes <No> is displayed. Use the rotary Tune/Select control to scroll to Yes, press to select and prune the station list. Stations with a '?' prefix will now no longer be displayed.
4. Short press the Menu button to exit the Menu options.

*of these instructions, or online at [www.argos-support.co.uk](http://www.argos-support.co.uk) If you still require further assistance, call one of our experts on 0345 600 3021.*

# Using your Stereo DAB/FM Radio

Let's get started

## Storing a DAB station preset

Your Radio can store up to 10 DAB radio stations in its preset memories for instant access to your favourite stations. 3 of the 10 presets can be quickly and easily stored to the 3 one touch buttons 1, 2 and 3, on the top of your radio.

---

**Note:** When you store DAB radio station presets, these do not overwrite your FM station presets.

---

## Storing your 3 One Touch presets

1. Tune the Radio to the DAB radio station that you wish to preset.
2. Long press the One Touch preset button 1, 2 or 3 that you wish to store the radio station to. Preset X Stored is displayed, where 'X' is the number of the preset button 1, 2 or 3, as appropriate.

---

**Note:** If there is already an existing DAB station stored under a One Touch preset button, it will be overwritten when you store the new station.

---

3. The Blue LED on the One Touch Preset button will also light up to confirm that the radio station has been stored to that particular preset button.

## Tune to a One Touch DAB preset station

In DAB mode:

1. Short press the One Touch preset button, 1, 2 or 3, where the station you would like to listen to has been stored.

*If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the Troubleshooting section*

# Using your Stereo DAB/FM Radio

Let's get started

2. The name or frequency of the station stored there will be displayed and your radio will instantly tune to that station and begin to play.
3. The Blue LED on the One Touch preset button will light up to confirm that the radio station you are now listening to, is stored under that particular One Touch preset button.

---

**Note:** If no DAB station has been stored under the One Touch preset button, 'Preset Empty' will be displayed, then the radio will revert to the previously selected radio station.

---

## Storing a DAB station preset

1. Tune the Radio to the DAB radio station that you wish to preset.
2. Long press the Preset button (under the top cover) for approximately 2 seconds until Preset Store <4:(Empty)> is displayed.
3. Use the rotary Tune/Select control to move to the preset location that you would like to store the radio station to (1-10).

---

**Note:** If you store a preset to numbers 1, 2 or 3 using this method, it will also be saved under the 1, 2 or 3 one-touch buttons on the top of your radio.

---

4. Short press the rotary Tune/Select control. The display will confirm Preset X stored, where 'X' is the number of the preset (1-10).

*of these instructions, or online at [www.argos-support.co.uk](http://www.argos-support.co.uk) If you still require further assistance, call one of our experts on 0345 600 3021.*

# Using your Stereo DAB/FM Radio

Let's get started

---

**Note:** If there is already an existing DAB station stored under a preset number, including the 1, 2 or 3 one touch buttons, it will be overwritten when you store the new station to that number.

---

## Tune to a DAB preset station

In DAB mode:

1. Short press the Preset button (under the top cover). Preset Recall <4:> is displayed together with the name or frequency of the station stored there, or (Empty) if no previous station has been stored.
2. Use the rotary Tune/Select control to move to the Preset location and station that you would like to listen to (1-10).
3. Short press the rotary Tune/Select control. The radio will instantly tune to that station and begin to play.

---

**Note:** If no DAB station has been stored under the preset button, 'Preset Empty' will be displayed, then the radio will revert to the previously selected radio station.

---

## DAB display information

When listening to a DAB station you can change the information that will appear on the display. There are several different types of information that are sent by the broadcaster.

- Dynamic Label Segment (DLS) - this is scrolling text information supplied by the broadcaster. Information could be the name of an artist or music title, DJ's name, contact details for the radio station etc.

*If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the Troubleshooting section*

# Using your Stereo DAB/FM Radio

Let's get started

- Signal Strength - An empty  will appear on the display to indicate the minimum signal strength for acceptable listening. The row of solid rectangles indicates the actual signal strength that you are receiving. The stronger the signal, the further to the right the row of solid rectangles will be.
  - Program Type (PTY) - such as 'Rock', 'Pop', 'Talk' or 'News'
  - Multiplex Name - displays the broadcasting area and collection of radio stations on this frequency e.g.: BBC National DAB, Digital 1 Network.
  - Channel and Frequency - e.g.: 12B 225.648 MHz
  - Signal error - This is displayed as a number between 0-99. It would not be possible to satisfactorily listen to a radio station with a signal error rate of 30 or above. Try adjusting the aerial or relocating your radio to improve reception.
  - Signal information - The data rate at which the signal is being transmitted.
  - Power source - Mains or battery power
  - Time and date - supplied by the broadcaster.
1. Repeatedly short press the Info button (under the top cover) to cycle through the different information options.

*of these instructions, or online at [www.argos-support.co.uk](http://www.argos-support.co.uk) If you still require further assistance, call one of our experts on 0345 600 3021.*

# Using your Stereo DAB/FM Radio

Let's get started

## Dynamic range control (DRC)

In DAB mode:

The dynamic range for each radio programme is set by the broadcaster for each radio station and may be different for the types of programme broadcast, such as pop or classical music or a chat show. The dynamic range control signal is transmitted in parallel with the audio signal for each programme and with your radio you can use this control signal to expand or compress the dynamic range (the difference between the loudest and quietest sounds) of the reproduced audio signal. Changing the dynamic range can affect the 'loudness' and/or 'quality of sound' of the programme that you hear so that it will be more suited to your listening conditions and your own personal listening requirements. e.g. in a noisy environment, where quiet sounds might be swamped, setting the compression to maximum will 'boost' the quiet sounds, whilst keeping the loudest sounds at their original level.

There are 3 levels of compression:

- DRC off - no compression. This is the default setting.
  - DRC low - medium compression.
  - DRC high - maximum compression.
1. Short press the Menu button (under the top cover), to enter the menu options.
  2. Use the rotary Tune/Select control to scroll to <DRC> and press to select.
  3. Use the rotary Tune/Select control to scroll through the options and press to select.

*If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the Troubleshooting section*

# Using your Stereo DAB/FM Radio

Let's get started

---

**Note:** The current DRC setting will have an '\*' in the display.

---

4. Short press the Menu button to exit the Menu options.

## FM Radio mode

- If you are not already in FM mode, short press the Mode button (under the top cover) to go to FM mode (check the display).
- If you were listening to an FM station when you switched the Radio off then this station will be automatically selected when you switch the Radio back on.

## Telescopic aerial

Please make sure that the aerial is fully extended before you attempt to tune to a FM station (a vertical position is recommended). This will ensure that the maximum signal strength is available when the radio begins to scan. Extending the aerial also ensures the best possible sound quality.

## Tuning to an FM station

- Short press the Scan button (under the top cover) to scan up the frequency band. Your radio will search for the next available station and stop on that station.
- Long press the Scan button (under the top cover) to scan down the frequency band. Your radio will search for the next available station and stop on that station.
- You can use the rotary Tune/Select control to fine tune each frequency in 0.05MHz steps or to scroll through the FM frequency band.

*of these instructions, or online at [www.argos-support.co.uk](http://www.argos-support.co.uk) If you still require further assistance, call one of our experts on 0345 600 3021.*

# Using your Stereo DAB/FM Radio

Let's get started

---

**Note:** If reception is still poor try adjusting the aerial or moving the radio to another location.

---

## Changing the Scan setting

In FM mode:

1. Short press the Menu button (under the top cover), FM <Scan setting> will be displayed. Short press the rotary control to select.

The current Scan setting will have an '\*' in the display.

There are two different options to choose from:

**Strong stations:** The scan will only stop when a strong signal strength is received which should also result in a better audio quality. It is possible that the station you are scanning for may be missed using this option.

**All stations:** The scan will stop for every station it receives, even if the signal strength is poor.

2. Use the rotary Tune/Select control to choose from the two options available and press to select.
3. Short press the Menu button to exit the Menu options.

## Audio mode

The radio will automatically switch between Stereo and Mono, depending on the quality of the signal being received but you can override this function and manually switch between Stereo and Mono.

*If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the Troubleshooting section*

# Using your Stereo DAB/FM Radio

Let's get started

1. Short press the Menu button (under the top cover), to enter the menu options.
2. Use the rotary Tune/Select control to scroll to <Audio setting>. Short press the rotary control to select.  
There are now two different options of <Forced mono> and <Stereo allowed> and the current setting will have an '\*' in the display.
3. Use rotary Tune/Select control to choose from the two options available and press to select.
4. Short press the Menu button to exit the Menu options.

## Storing an FM station preset

Your Radio can store up to 10 FM radio stations in its preset memories for instant access to your favourite stations. 3 of the 10 presets can be quickly and easily stored to the 3 one touch buttons 1, 2 and 3, on the top of your radio.

---

**Note:** When you store FM radio station presets, these do not overwrite your DAB station presets.

---

## Storing your 3 One Touch presets

1. Tune the Radio to the FM radio station that you wish to preset.
2. Long press the One Touch preset button 1, 2 or 3 that you wish to store the radio station to. Preset X Stored is displayed, where 'X' is the number of the preset button 1, 2 or 3, as appropriate.

*of these instructions, or online at [www.argos-support.co.uk](http://www.argos-support.co.uk) If you still require further assistance, call one of our experts on 0345 600 3021.*

# Using your Stereo DAB/FM Radio

Let's get started

---

**Note:** If there is already an existing FM station stored under a One Touch preset button, it will be overwritten when you store the new station.

---

3. The Blue LED on the One Touch Preset button will also light up to confirm that the radio station has been stored to that particular preset button.

## Tune to a One Touch FM preset station

In FM mode:

1. Short press the One Touch preset button, 1, 2 or 3, where the station you would like to listen to has been stored.
2. The name or frequency of the station stored there will be displayed and your radio will tune to that station and begin to play.
3. The Blue LED on the One Touch preset button will light up to confirm that the radio station you are now listening to, is stored under that particular One Touch preset button.

---

**Note:** If no FM station has been stored under the One Touch preset button, 'Preset Empty' will be displayed, then the radio will revert to the previously selected radio station.

---

## Storing an FM station preset

1. Tune the Radio to the FM radio station that you wish to preset.

*If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the Troubleshooting section*

## Using your Stereo DAB/FM Radio

Let's get started

2. Long press the Preset button (under the top cover) for approximately 2 seconds until Preset Store <4:(Empty)> is displayed.
3. Use the rotary Tune/Select control to move to the preset location that you would like to store the radio station to (1-10).

---

**Note:** If you store a preset to numbers 1, 2 or 3 using this method, it will also be saved under the 1, 2 or 3 one-touch buttons on the top of your radio.

---

4. Short press the rotary Tune/Select control. The display will confirm Preset X stored, where 'X' is the number of the preset (1-10).

---

**Note:** If there is already an existing FM station stored under a preset number, including the 1, 2 or 3 one touch buttons, it will be overwritten when you store the new station to that number.

---

### Tune to an FM preset station

In FM mode:

1. Short press the Preset button (under the top cover). Preset Recall <4:> is displayed together with the name or frequency of the station stored there, or (Empty) if no previous station has been stored.
2. Use the rotary Tune/Select control to move to the Preset location and station that you would like to listen to (1-10).

*of these instructions, or online at [www.argos-support.co.uk](http://www.argos-support.co.uk) If you still require further assistance, call one of our experts on 0345 600 3021.*

# Using your Stereo DAB/FM Radio

Let's get started

3. Short press the rotary Tune/Select control. The radio will tune to that station and begin to play.

---

**Note:** If no FM station has been stored under the preset button, 'Preset Empty' will be displayed, then the radio will revert to the previously selected radio station.

---

## FM display information

When listening to an FM station you can change the information that will appear on the second line of the display.

Radiotext (RT) - This is scrolling text information supplied by the broadcaster. Information could be the name of an artist or music title, DJ's name, contact details for the radio station etc.

Program Type (PTY) - Such as 'Rock', 'Pop', 'Talk' or 'News'

Station name or frequency - Such as BBC R4 or 93.30MHz

Audio mode - Stereo or Mono

Power source - Mains or battery power

**Time and date - Supplied by the broadcaster.**

1. Repeatedly short press the Info button (under the top cover) to cycle through the different information options.

*If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the Troubleshooting section*

# Using your Stereo DAB/FM Radio

Let's get started

## Using the Menu, System settings

### Equaliser

The sound on your radio can be adjusted to suit the type of music or programme you are listening to using the Equaliser settings. If you prefer, you can also choose to set the bass and treble settings within the My EQ profile set up option. The Equaliser options available are: My EQ, Normal, Classic, Jazz, Pop, Rock and Speech.

1. Short press the Menu button (under the top cover), to enter the menu options.
2. Use the rotary Tune/Select control to scroll to <System> and press to select.
3. <Equaliser> is displayed. Press the rotary Tune/Select control to select.
4. Use the rotary Tune/Select control to scroll through the available options of My EQ..., Normal, Classic, Jazz, Pop, Rock and Speech. Stop when the option you would like is displayed and press to select.

---

**Note:** If you select 'My EQ...', you can then use the rotary Tune/Select control to scroll through the options available and press to select and adjust the settings for the Bass, Treble and Loudness of your radio.

---

5. Short press the Menu button to exit the Menu options.

*of these instructions, or online at [www.argos-support.co.uk](http://www.argos-support.co.uk) If you still require further assistance, call one of our experts on 0345 600 3021.*

# Using your Stereo DAB/FM Radio

Let's get started

## Display backlight timeout

You can adjust the display backlight timeout. Options of permanently On, 10, 20, 30, 45, 60, 90, 120, and 180 seconds are available. The current setting will have an '\*' in the display.

With your radio switched on (not in Standby mode):

1. Short press the Menu button (under the top cover) to enter the menu options.
2. Use the rotary Tune/Select control to scroll to <System> and press to select.
3. Use the rotary Tune/Select control to scroll to <Backlight> and press to select.
4. <Timeout> is displayed. Press the rotary Tune/Select control to select.
5. Use the rotary Tune/Select control to scroll through the available backlight timeout options of On, 10, 20, 30, 45, 60, 90, 120 or 180 seconds. Stop when the backlight timeout you would like is displayed and press to select.
6. <Timeout> will be displayed.

You can now use the rotary Tune/Select control to scroll and press to select, as you did to set the Backlight timeout, to change the settings for the backlight brightness for the <Dim level> (Standby mode when using mains power) and <On level>. There are 3 options available, High, Medium and Low.

7. Short press the Menu button to exit the Menu options.

*If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the Troubleshooting section*

# Using your Stereo DAB/FM Radio

Let's get started

## Display language

You can change the display language of your radio, there are 6 options available; English, French, German, Italian, Danish and Norwegian. An '\*' will be displayed next to the current setting.

With your radio switched on (not in Standby mode):

1. Short press the Menu button (under the top cover), to enter the menu options.
2. Use the rotary Tune/Select control to scroll to <System> and press to select.
3. Use the rotary Tune/Select control to scroll to <Language> and press to select.
4. Use the rotary Tune/Select control to scroll to the language you would like and press to select.
5. Short press the Menu button to exit the Menu options.

## Software version

You can check the software version of your radio.

With your radio switched on (not in Standby mode):

1. Short press the Menu button (under the top cover) to enter the menu options.
2. Use the rotary Tune/Select control to scroll to <System> and press to select.
3. Use the rotary Tune/Select control to scroll to <SW Version> and press to select. The software version will be displayed.
4. Short press the Menu button to exit the Menu options.

*of these instructions, or online at [www.argos-support.co.uk](http://www.argos-support.co.uk) If you still require further assistance, call one of our experts on 0345 600 3021.*

# Using your Stereo DAB/FM Radio

Let's get started

## Factory reset

You can reset your radio and restore all of the original factory settings.

---

**Note:** If you reset your radio all of your stored station presets will be deleted.

---

With your radio switched on (not in Standby mode):

1. Short press the Menu button (under the top cover), to enter the menu options.
2. Use the rotary Tune/Select control to scroll to <System> and press to select.
3. Use the rotary Tune/Select control to scroll to <Factory Reset> and press to select. Factory Reset? Yes <No> will be displayed.
4. Use the rotary Tune/Select control to scroll to <Yes> and press to select.
5. Restarting... will be displayed. After a few seconds the display will change to Welcome to Digital Radio and will then go to Standby mode. When you next power on your radio from Standby mode, it will begin an automatic scan for DAB stations. A progress bar will show the progress of the scan and the number of stations found during the scan will also be displayed. When the scan is complete your radio will select the first available station and begin to play. Stations are listed in numerical and then alphabetical order by default.

*If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the Troubleshooting section*


This page is left intentionally blank

*of these instructions, or online at [www.argos-support.co.uk](http://www.argos-support.co.uk) If you still require further assistance, call one of our experts on 0345 600 3021.*

This page is left intentionally blank

# Other information

4

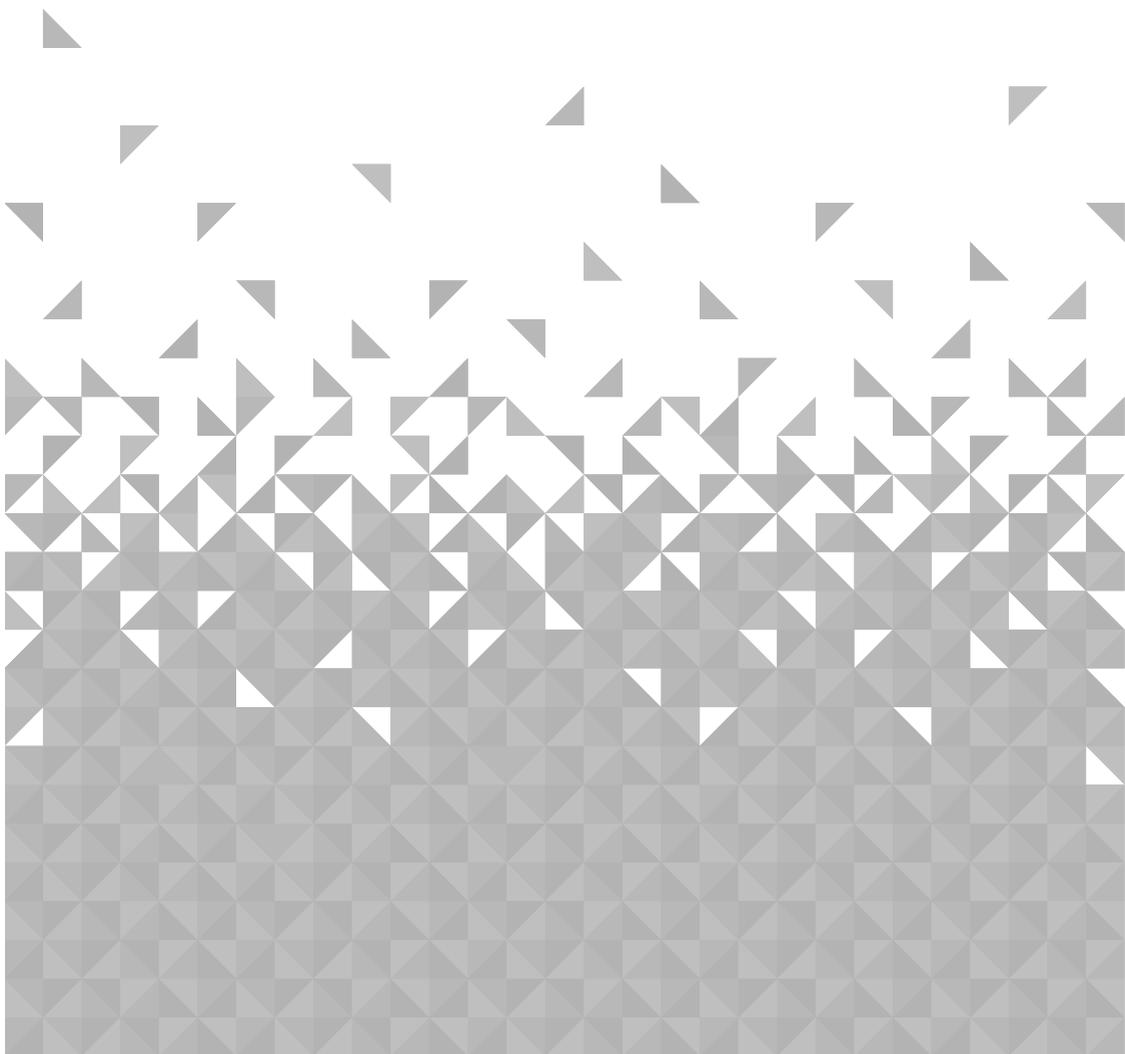

## Other information

Helpful technical information

## Technical specification



Please use only the specified external adapter

Power adapter manufacturer: Dong Guan City GangQi Electronics Co. Ltd.

Model number: GQ06 060100 AB

Power adaptor.      Output: DC 6V 1A  
                                 Input: AC 100-240V, 50/60Hz

Audio output: 2 x 3W RMS

Headphone socket: 3.5mm Stereo

Frequency range: DAB: Band III, 174 MHz to 240 MHz  
                                 FM: 87.5 MHz to 108 MHz

*If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the Troubleshooting section*


This page is left intentionally blank

*of these instructions, or online at [www.argos-support.co.uk](http://www.argos-support.co.uk) If you still require further assistance, call one of our experts on 0345 600 3021.*

This page is left intentionally blank

**Product support**

5

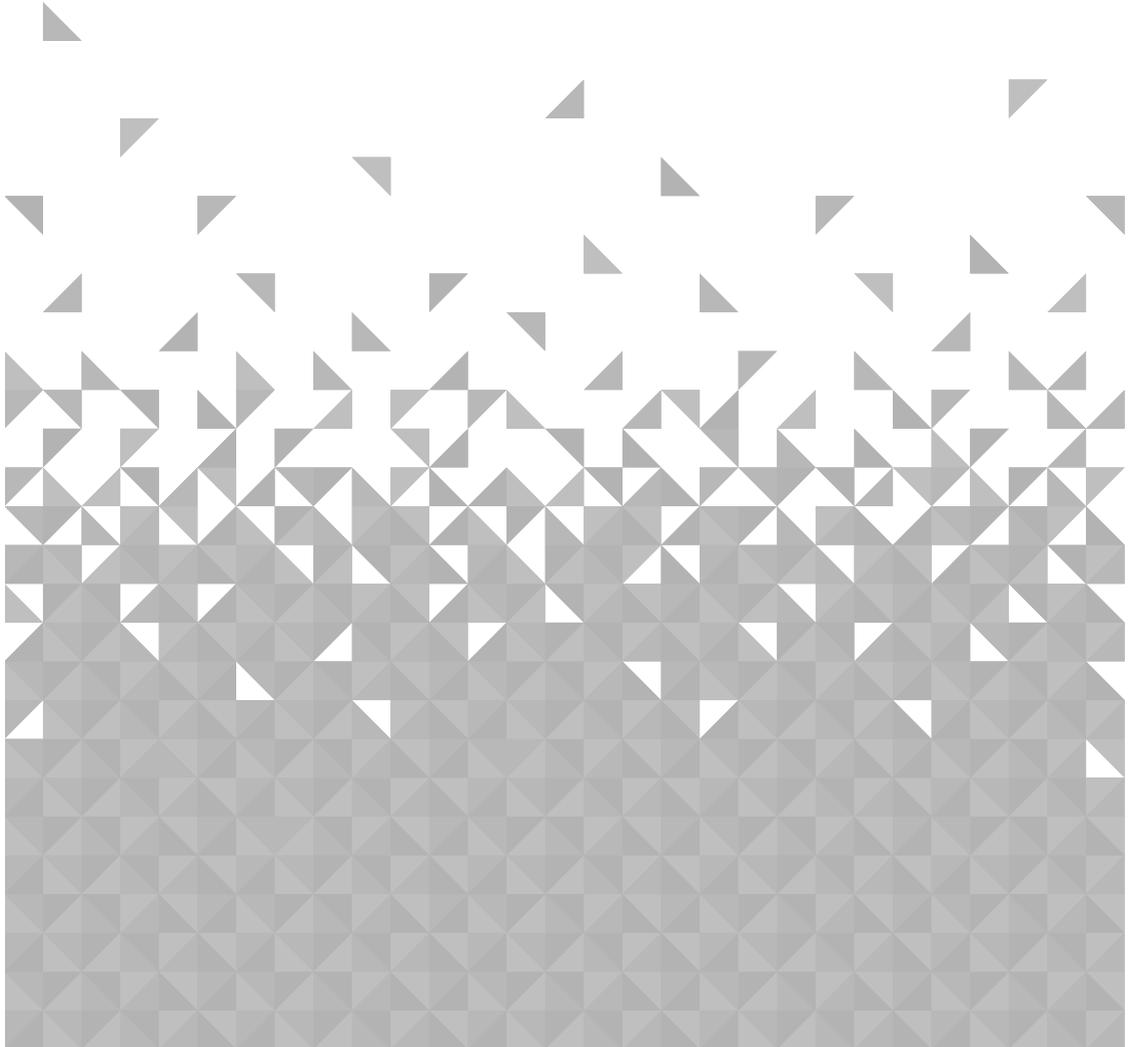

# Product support

Help is always at hand

## Troubleshooting

No sound / power:

- Adjust the volume.
- Check that the mains power wall socket is switched on and that your radio is not in Standby mode.
- If you have batteries fitted, they may be exhausted and need to be replaced. Please use only good quality AA size alkaline batteries.

Radio reception is poor:

- Make sure that you have fully extended the telescopic aerial.
- Rescan for radio stations.
- Try moving your radio to another location to see if reception improves.
- Check that you do not have other electrical equipment too close to your Radio, causing interference.
- Visit [www.digitalradionow.com](http://www.digitalradionow.com) for information about DAB reception in your area.

*If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the Troubleshooting section*

# Product support

Help is always at hand

## The function buttons do not respond:

- Check that the mains power lead is connected at the back of your radio and the mains power wall socket is switched on. Press and release the On/Off button.
- If you are using batteries, they may be exhausted and need to be replaced.
- Try a reset to factory defaults.

---

**Note:** All of your settings, including the radio station list and any presets will be deleted when you reset the Radio.

---

*of these instructions, or online at [www.argos-support.co.uk](http://www.argos-support.co.uk) If you still require further assistance, call one of our experts on 0345 600 3021.*

# Product support

Help is always at hand

## Help and assistance

If you require any technical guidance or find that your Stereo DAB/FM Radio is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions or online at [www.argos-support.co.uk](http://www.argos-support.co.uk)

If you still require further assistance, call one of our experts on **0345 600 3021\***. To help give us give you a fast and efficient service please have the following information ready:

Model Ref.

Serial number

You can find these on the rating plate - a small information panel (usually a sticker or metal plate) on the rear or base of your product.

Date of purchase

This will be shown on your receipt

Local call rates applies\*

Lines open 8am-7pm Monday to Saturday and 10am-4pm Sunday.

\*Calls to Argos enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see [www.bt.com/pricing](http://www.bt.com/pricing) for details.

For security and training purposes, telephone calls to and from customer service centres may be recorded and monitored. Calls from Republic of Ireland will attract international call charges.

*If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the Troubleshooting section*

# Product support

Help is always at hand

## Disposal



- Disposal of your old product. Your product is designed and manufactured with high quality materials and components, which can be recycled and reused
- When this crossed out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2012/19/EC.
- Please make yourself aware of the local collection system for electrical and electronic products.
- Please act according to your local rules and do not dispose of your old products with your normal household waste.
- The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.
- Batteries contain substances that may be harmful to the environment and human health. Keep out of the reach of children and seek immediate medical help if swallowed.
- Batteries should not be disposed of in the normal household waste but taken to appropriate local recycling facilities, where and when these are available.
- Never throw batteries in a fire or attempt to open the outer casing.

*of these instructions, or online at [www.argos-support.co.uk](http://www.argos-support.co.uk) If you still require further assistance, call one of our experts on 0345 600 3021.*

# Product support

Help is always at hand

# BUSH

## Call us now and activate your 12 month guarantee

Thank you for choosing Bush. Your new product is guaranteed against faults and breakdowns for 12 months. Don't forget to register it with us today so we can provide you with our best possible after-sales service and useful updates.

[www.bushregistration.co.uk](http://www.bushregistration.co.uk)

FREEPHONE\*

**0800 597 8548**

Lines are open 8am - 8pm, 365 days a year. \*Calls may be recorded and monitored.

## Your Bush Guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from who your purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in the manual.
- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- Bush disclaim any liability for loss or damage arising from the breakdown of the product.
- This guarantee is in addition to and does not diminish your statutory or legal rights.

## Important Data Protection Information

If you provide us with information about another person, you confirm that they have appointed you to act for them, to consent to the processing of their personal data including sensitive personal data and that you have informed them of our identity and the purposes (as set out in the Important Data Privacy notice displayed overleaf) for which their personal data will be processed.

You are entitled to ask for a copy of the information we hold about you (for which we may charge a small fee) and to have any inaccuracies in your information

corrected.

For quality control and training purposes, we may monitor or record your communications with us.

If your personal details change, if you change your mind about any of your marketing preferences or if you have any queries about how we use your information, please let us know by contacting our Data Protection Officer, Domestic & General, Leicester House 17 Leicester Street, Bedworth, Warwickshire CV12 8JP.

Guarantor: Argos Limited - 489 - 499 Avebury Blvd. - Milton Keynes - MK9 2NW

*If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the Troubleshooting section*

This page is left intentionally blank

*of these instructions, or online at [www.argos-support.co.uk](http://www.argos-support.co.uk) If you still require further assistance, call one of our experts on 0345 600 3021.*

# BUSH

Contact:

[www.argos-support.co.uk](http://www.argos-support.co.uk)

Helpline: 0345 600 3021

 DAB Digital  
**Radio**