 


BUSH

Instruction manual

Bluetooth Speaker BT-751

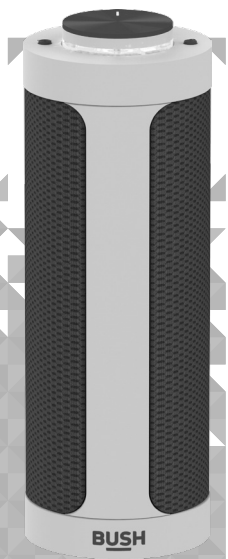



You'll soon be enjoying your new Bluetooth Speaker.

It all begins here, with your instructions. Don't worry, there's nothing too technical coming up. Just simple, step-by-step guidance to get you up and running quickly. Sound good? Then let's get started.



Help and Guidance

We're here to help you get the most from your Bluetooth speaker. Should you require any guidance, a simple solution can often be found online at:

www.argos-support.co.uk

If you still require further assistance, call one of our experts on **0345 600 3021**.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

BUSH



Contents

1 Safety information

General safety information	6
Power source	6
Moisture and water	6
Ventilation	7
Heat sources and flames	7

2 Getting to know your Bluetooth speaker

Positioning the Bluetooth speaker	12
Power connection	12

3 Using your Bluetooth speaker

Connect to a Bluetooth device	16
Listening to Music/Audio using Bluetooth	17
Adjusting the volume	18
Integral battery life and status	18
Using as a Powerbank	18
Aux in mode	19

4 Other information

Technical specification	22
-------------------------	----

5 Product support

Troubleshooting	26
Help and assistance	27
Disposal	28
Your Bush Guarantee	29



This page is left intentionally blank



Safety information

1





Safety information

Important - Please read these instructions fully before installing or operating

General safety information

Keep the product and all its parts out of reach of small children.

This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.

- Do not attempt to open the product. This product does not contain any user serviceable parts. Unauthorised handling of the device may damage it and will void your warranty.
- Do not use your Bluetooth speaker near emergency/intensive care medical equipment or during an electrical storm.



To avoid possible hearing damage, do not listen to this Bluetooth speaker at high volume levels for long periods of time. Always keep the volume within reasonable limits.

Power source

Only use the USB charging cable that came with the product. Using an unauthorised charging cable will invalidate your guarantee and may irreversibly damage the product.

Please charge the integral lithium battery in your Bluetooth speaker at least once a month, to prevent damage to and prolong the life of the lithium battery.

Moisture and water

- Keep it dry. Avoid exposure to precipitation, humidity and liquids which could all affect the product circuitry.
- **Do not** leave it in low temperatures as moisture can form inside the product, which may damage the circuit board.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**



Safety information

Important - Please read these instructions fully before installing or operating

Ventilation

- Do not block or cover slots, holes or openings on the product by placing on soft furnishings such as carpets, rugs or beds as these are provided for functionality and/or ventilation to ensure safe operation of the product.

Heat sources and flames

- **Do not** leave it in high temperatures as electronic devices and plastic parts may warp in heat.
- Keep it away from bright sunlight or heat sources, such as a radiator.
- Never place any type of candle or naked flame on top of, or near the product.

 


This page is left intentionally blank



Getting to know your Bluetooth speaker

2

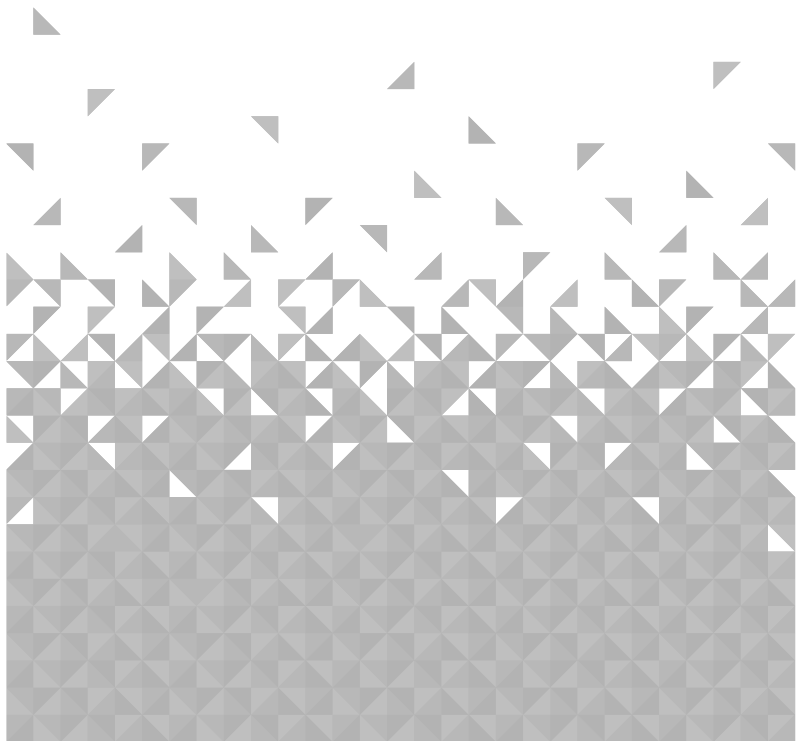

Getting to know your Bluetooth speaker


You'll be up and running in no time

Ready? Let's begin...

Please read these instructions carefully. They contain important information which will help you get the best from your product and ensure safe and correct installation and operation.

If you require any further assistance, our technical experts are happy to help. For full details, refer to the product support section at the end of these instructions.

 Fig 4.

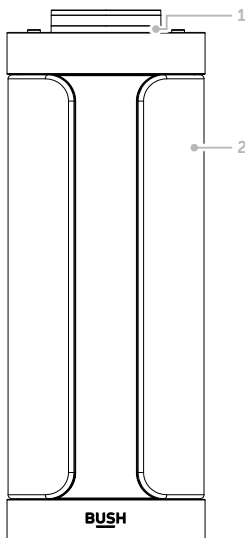

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Getting to know your Bluetooth speaker

You'll be up and running in no time

Fig 5.


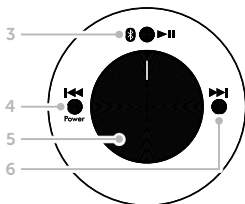 


Fig 6.

 

1. Blue LED ring
 - Flashes quickly whilst searching for other Bluetooth devices
 - Flashes twice at minimum and maximum volume levels
 - Flashes every two minutes when the battery is low
2. 2 x 5W stereo speakers
3. Play/Pause
 - Short press to Play/Pause
4. Power On/Off and Skip back
 - Long press to power on/off
 - Short press to skip back
5. Rotary volume control
6. Skip forward
 - Short press to skip forward
7. Standard USB Out 5V 1A
 - Use to charge your other mobile devices
8. Micro USB DC-In 5V charging socket
 - Use to charge your Bluetooth speaker integral battery
9. Red battery charging LED
10. Aux in socket

section of these instructions, or online at www.argos-support.co.uk if you still require further assistance, call one of our experts on 0345 600 3021.

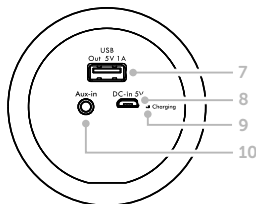

Getting to know your Bluetooth speaker

You'll be up and running in no time

Positioning the Bluetooth speaker

It is important that you consider carefully in advance where your Bluetooth Speaker will be situated and make sure that it is:

- on a flat and stable surface.
- at least 1 metre away from other electrical appliances to avoid interference.
- where it will be in range of the connected or 'paired' bluetooth device (e.g. iPod/iPhone/iPad/Android/other phone/computer, which is about 10 metres or less (33 feet or less) in line of sight.
- Never place your Bluetooth Speaker directly onto antique or polished surfaces.

Power connection

1. Connect the micro USB end of the charging cable (supplied) to the DC-in 5V socket on one end of the Bluetooth speaker. Plug the standard end of the USB charging cable into a computer or other USB charging device.
2. The red battery charging LED will light up, to indicate that the battery is charging. When the battery is fully charged the red LED will turn off.

Note: It will take approximately 6 hours to fully charge your Bluetooth Speaker, before first use.

3. When fully charged, unplug the micro USB charging cable.

Note: Your Bluetooth speaker has an approximate play time of 18 hours, before it needs to be recharged. When the battery power is low, the blue LED ring on the top of your Bluetooth speaker, at the base of the rotary volume control, will flash twice quickly every two minutes. When the battery power is very very low and just before the product powers off, the blue LED ring will flash quickly continuously. You should plug in and recharge your Bluetooth speaker straight away, using the USB charge cable provided.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**





This page is left intentionally blank



 


This page is left intentionally blank



Using your Bluetooth speaker

3

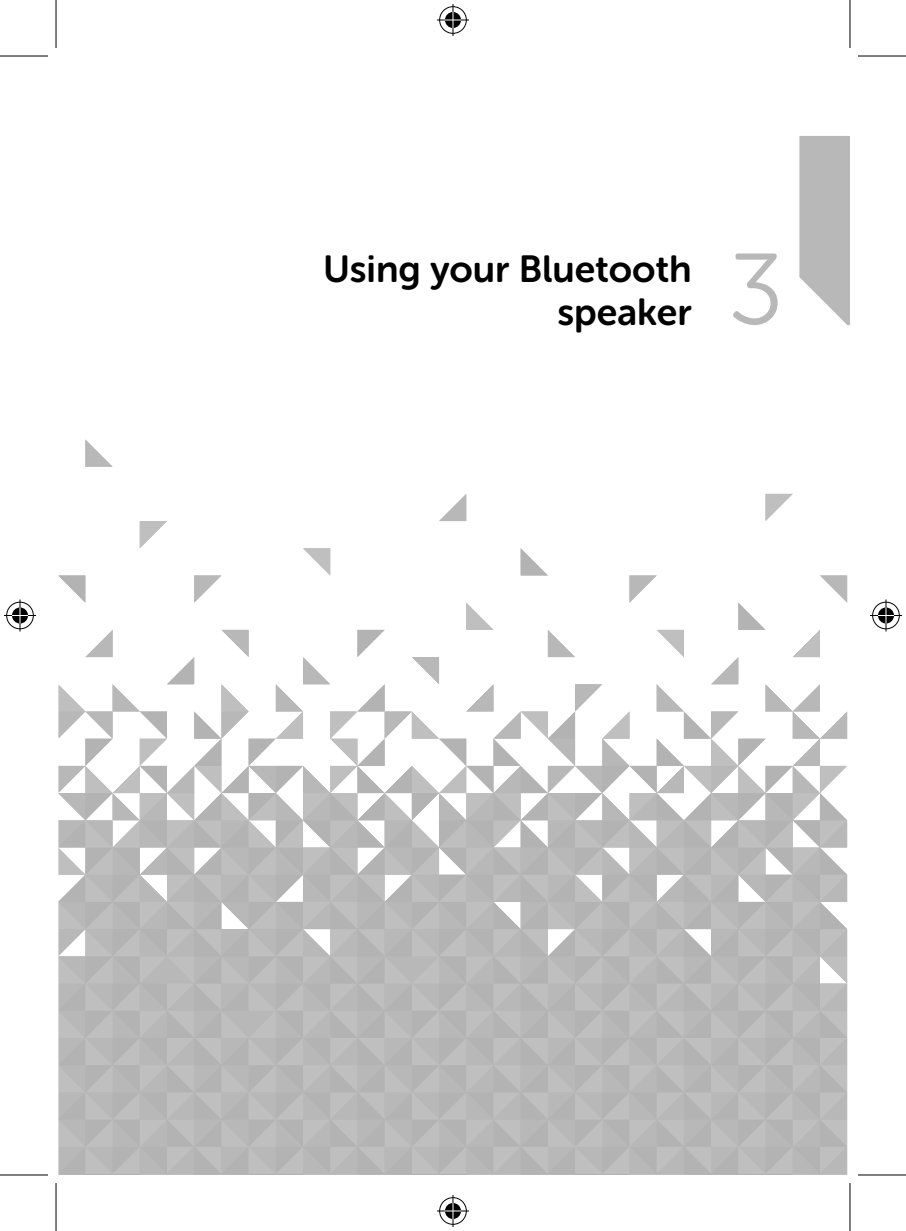



Using your Bluetooth speaker

Let's get started

Power on

Long press the Power button on the top of your product, next to the large rotary volume control. A tone will sound and the blue LED ring on the top of the product, at the base of the rotary volume control, will flash quickly whilst your product searches for Bluetooth devices.

Standby mode

If the Bluetooth speaker does not receive an audio signal for approximately 15 minutes it will go to Standby mode and the blue LED ring will flash slowly. Press and hold the Play/Pause button to turn the product back on again. Alternatively you can long press the power button to turn the product off, then long press the power button again to turn the product on again.

Power off

Long press the Power button on the top of your product to turn the speaker off.

Connect to a Bluetooth device

1. The blue LED ring on the top of the product, at the base of the rotary volume control, will flash quickly whilst your product searches for Bluetooth devices.
2. On the device that you would like to connect to your Bluetooth speaker via Bluetooth (e.g. iPhone/iPad/Android/other phone/Tablet/Computer), turn on Bluetooth connectivity and ensure that it is 'discoverable'.

Note: If necessary, refer to the instructions for your device to add or set up Bluetooth.

3. When found, your Bluetooth speaker will be displayed as 'BUSH Speaker'. Select the device name to begin pairing.

Note: If your device requests a password, please enter '0000' to complete the device pairing.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**





Using your Bluetooth speaker




Let's get started

4. When pairing is complete a tone will sound and the blue LED ring will change to be continuously on.
5. Now that you have paired your device with the Bluetooth speaker, it will connect to it when it is within range, which is about 10 metres or less (33 feet or less), line of sight.
6. Your device will remain paired with the Bluetooth speaker unless you decide to disconnect or 'unpair' it.

Note: You can press and hold the  button to unpair your current device and search for new devices.

Listening to Music/Audio using Bluetooth

In Bluetooth mode:

1. Select and start the music or audio that you wish to listen to on your paired Bluetooth device, it will now be heard through the Bluetooth speaker. Adjust the volume on the connected device and/or your Bluetooth speaker
2. You can use the controls on your paired Bluetooth device as well as those on your Bluetooth speaker.
 - Play/Pause:
 Short press to play/pause.
 - Skip forward:
 Short press to skip forward
 - Skip back:
 Short press to skip back

section of these instructions, or online at www.argos-support.co.uk if you still require further assistance, call one of our experts on 0345 600 3021.





Using your Bluetooth speaker

Let's get started

Adjusting the volume

Volume-

- Turn the large rotary control, on the top of your product, anti-clockwise to decrease the volume. The blue LED ring will flash twice at the minimum volume level.

Volume+

- Turn the large rotary control, on the top of your product, clockwise to increase the volume. The blue LED ring will flash twice at the maximum volume level.

Integral battery life and status

After a full charge, your Bluetooth speaker has an approximate play time of 18 hours, before it needs to be recharged. This play time will be significantly reduced if you are also using your Bluetooth speaker as a Powerbank to charge other mobile devices.

When the battery power is low, the blue LED ring on the top of your Bluetooth speaker, at the base of the rotary volume control, will flash twice quickly every two minutes. When the battery power is very very low and just before the product powers off, the blue LED ring will flash quickly continuously.

You should plug in and recharge your Bluetooth speaker straight away, using the USB charge cable provided. The red battery charging LED will light up, to indicate that the battery is charging. When the battery is fully charged the red LED will turn off.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**





Using your Bluetooth speaker

Let's get started

Using as a Powerbank

You can use the battery in your Bluetooth speaker to charge other devices, such as mobile phones or other devices that have a USB charging socket.

Note: You can only charge other devices when the Bluetooth speaker has a charged battery.

1. Connect the mobile device charging cable (not supplied) to your other mobile device and plug the standard USB plug end into the standard USB socket, Out 5V 1A, on one end of the Bluetooth speaker.
2. Your Bluetooth speaker will now use the charge in its integral battery to charge your other mobile device (check the display).

Note: The battery in your Bluetooth speaker will drain much more quickly if you are using it to charge other devices, as well as using it as a Bluetooth speaker.

Aux in mode

1. Connect one end of a 3.5mm audio cable (not supplied) to the headphone (or auxiliary out) socket of your secondary device. Connect the other end to the Aux in socket on one end of your Bluetooth speaker. This will switch your bluetooth speaker to Aux in mode.
2. Press the Play button on your external device to start playback through the Bluetooth speaker.
3. To gain optimal volume levels, adjust the volume level on both the secondary device and on the Bluetooth speaker.

Note: After you have finished listening to your external device you must unplug the audio cable from the Aux in socket, to be able to use it as a Bluetooth speaker again.





 
This page is left intentionally blank





Other information

4

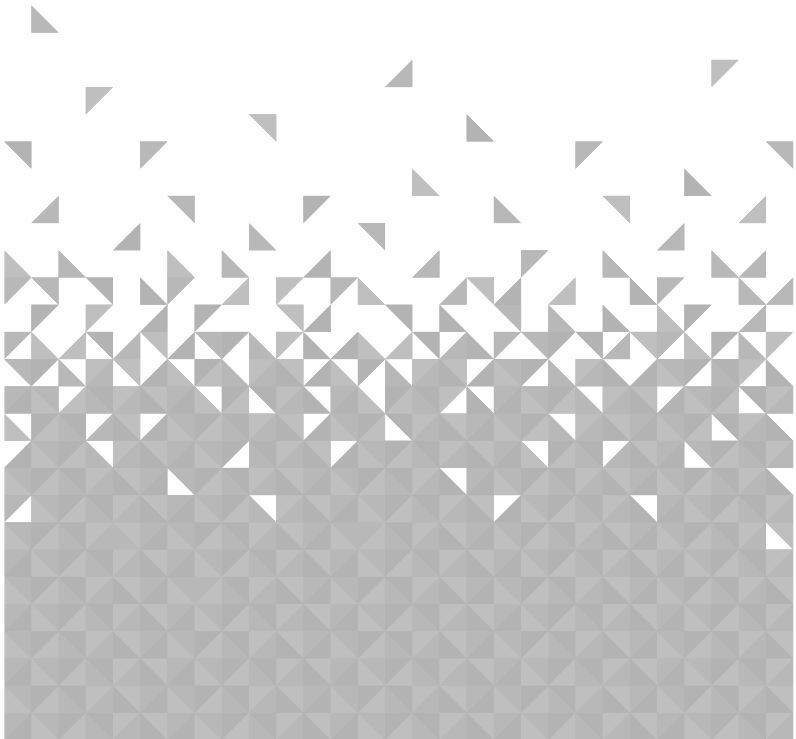

Other information

Helpful technical information

Technical specification

Audio output:	2 x 5W RMS
Micro USB socket:	Input DC 5V 1A
Standard USB socket:	Output 5V 1A
Aux in:	3.5mm stereo
Lithium battery:	6600 mAh
Bluetooth:	Version 4.2
Pairing name:	BUSH Speaker
Profiles:	HFPv1.5, A2DPv1.2, AVRCPv1.0
Frequency range:	2.400GHz-2.480GHz



This product is intended for use within the UK. This equipment complies with the essential requirements of the Radio Equipment Directive 2014/53/EU.

Declaration of Conformance

Hereby, Argos Ltd, declares that this Band II LPD device is in compliance with the essential requirements and other relevant provisions of the Radio Equipment Directive 2014/53/EU. The complete declaration of conformity can be obtained by contacting <http://www.argos-support.co.uk>

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**



This page is left intentionally blank



 


This page is left intentionally blank



Product support

5

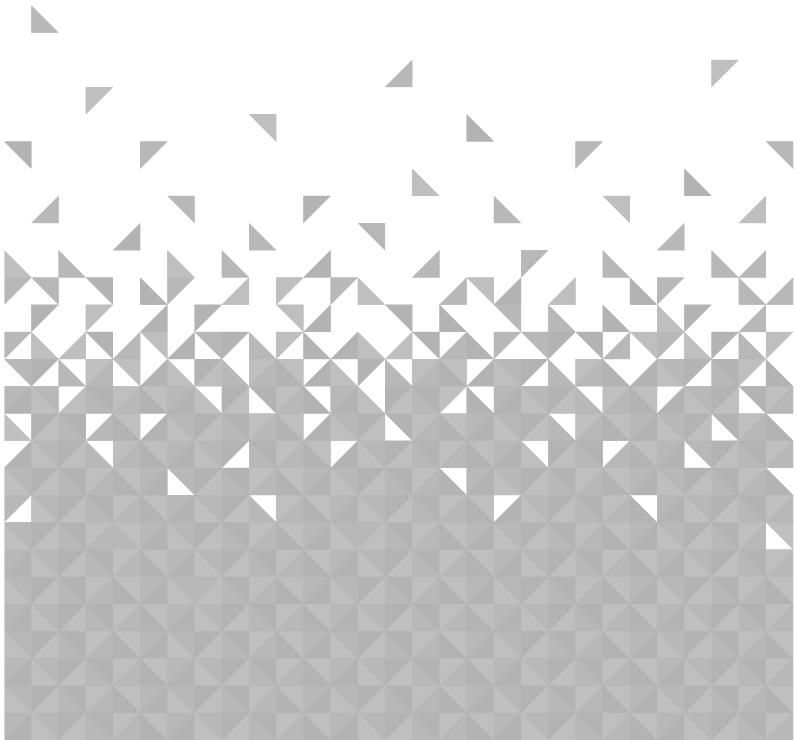

Product support

Help is always at hand

Troubleshooting

Unable to pair with a Bluetooth device:

- Check that you are in Bluetooth mode.
- Ensure that you are within range of the Bluetooth speaker for Bluetooth functionality, 10 metres or less (33 feet or less).
- Check that the device you are attempting to pair with supports A2DP stereo audio transmission.
- Move the Bluetooth speaker and Bluetooth device away from other Bluetooth devices/electrical equipment.
- If possible, turn off other nearby Bluetooth devices or disable their Bluetooth functionality.

No sound / Sound distortion:

- Adjust the volume.
- If you are using a Bluetooth connected device, check the volume on the secondary device and on your Bluetooth speaker.
- If you are in Bluetooth mode, check that an Aux in cable is not connected.
- The battery power may be low and your Bluetooth speaker may need to be recharged.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**



Product support

Help is always at hand

Help and assistance

If you require any technical guidance or find that your Bluetooth speaker is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions or online at **www.argos-support.co.uk**

If you still require further assistance, call one of our experts on **0345 600 3021***. To help give us give you a fast and efficient service please have the following information ready:

Model Ref.

Serial number

You can find these on the rating plate - a small information panel (usually a sticker or metal plate) on the rear or base of your product.

Date of purchase

This will be shown on your receipt

Local call rates applies*

Lines open 8am-7pm Monday to Saturday and
10am-4pm Sunday.

*Calls to Argos enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see www.bt.com/pricing for details.

For security and training purposes, telephone calls to and from customer service centres may be recorded and monitored. Calls from Republic of Ireland will attract international call charges.

section of these instructions, or online at **www.argos-support.co.uk** If you still require further assistance, call one of our experts on 0345 600 3021.



Product support

Help is always at hand

Disposal



- Disposal of your old product. Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.
- When this crossed out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2012/19/EC..
- Please make yourself aware of the local collection system for electrical and electronic products.
- Please act according to your local rules and do not dispose of your old products with your normal household waste.
- The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.
- Batteries contain substances that may be harmful to the environment and human health. Keep out of the reach of children and seek immediate medical help if swallowed.
- Batteries should not be disposed of in the normal household waste but taken to appropriate local recycling facilities, where and when these are available.
- Never throw batteries in a fire or attempt to open the outer casing.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**



Product support

Help is always at hand

BUSH

Call us now and activate your 12 month guarantee

Thank you for choosing Bush. Your new product is guaranteed against faults and breakdowns for 12 months. Don't forget to register it with us today so we can provide you with our best possible after-sales service and useful updates.

www.bushregistration.co.uk

FREEPHONE*

0800 597 8548

Lines are open 8am - 8pm, 365 days a year. *Calls may be recorded and monitored.

Your Bush Guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from who your purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in the manual.
- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- Bush disclaim any liability for loss or damage arising from the breakdown of the product.
- This guarantee is in addition to and does not diminish your statutory or legal rights.

Important Data Protection Information

If you provide us with information about another person, you confirm that they have appointed you to act for them, to consent to the processing of their personal data including sensitive personal data and that you have informed them of our identity and the purposes (as set out in the Important Data Privacy notice displayed overleaf) for which their personal data will be processed.

You are entitled to ask for a copy of the information we hold about you (for which we may charge a small fee) and to have any inaccuracies in your information corrected.

For quality control and training purposes, we may monitor or record your communications with us.

If your personal details change, if you change your mind about any of your marketing preferences or if you have any queries about how we use your information, please let us know by contacting our Data Protection Officer, Domestic & General, Leicester House 17 Leicester Street, Bedworth, Warwickshire CV12 8JP.

Guarantor: Argos Limited - 489 - 499 Avebury Blvd. - Milton Keynes - MK9 2NW

section of these instructions, or online at www.argos-support.co.uk if you still require further assistance, call one of our experts on 0345 600 3021.





This page is left intentionally blank





This page is left intentionally blank



BUSH

Contact:

www.argos-support.co.uk

Helpline: 0345 600 3021