

BUSH

Instruction manual

WM2760DAB





You'll soon be enjoying your new Stereo Flat Micro System.

It all begins here, with your instructions. Don't worry, there's nothing too technical coming up. Just simple, step-by-step guidance to get you up and running quickly. Sound good? Then let's get started.



Help and Guidance

We're here to help you get the most from your Stereo Flat Micro System. Should you require any guidance, a simple solution can often be found online at:

www.argos-support.co.uk

If you still require further assistance, call one of our experts on **0345 600 3021**.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

BUSH



Contents

1 Safety information

Help and Guidance	2
Power source	8
Moisture and water	8
Heat sources and flames	9
Ventilation	9
Positioning the Stereo Flat Micro System	9
General safety information	10

2 Getting to know your Stereo Flat Micro System

Initial set-up	17
Power on/off	19
Change the mode	19
Adjusting the volume	19
Equaliser	20
Mute	20
Sleep timer	20
Using the alarms	21
Using headphones	23

3 Using your Stereo Flat Micro System

DAB Radio Mode	26
Wire radio aerial	26
Changing DAB stations	26
Scanning for DAB stations	26
Prune DAB stations	27

Contents

Storing a DAB station preset	27
Tune to a DAB station preset	28
DAB display information	28
Dynamic range control (DRC)	29
FM Radio mode	30
Changing the scan setting	31
Audio mode	31
Storing an FM station preset	32
Tune to a FM station preset	32
FM display information	33
CD Mode	34
Bluetooth mode	37
Aux in mode	39
4 Other information	
Wall mounting your Micro	42
Technical specification	44
5 Product support	
Troubleshooting	48
Help and assistance	50
Your Bush Guarantee	52

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**.

This page is left intentionally blank

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 600 3021

BUSH




This page is left intentionally blank



Safety information

1

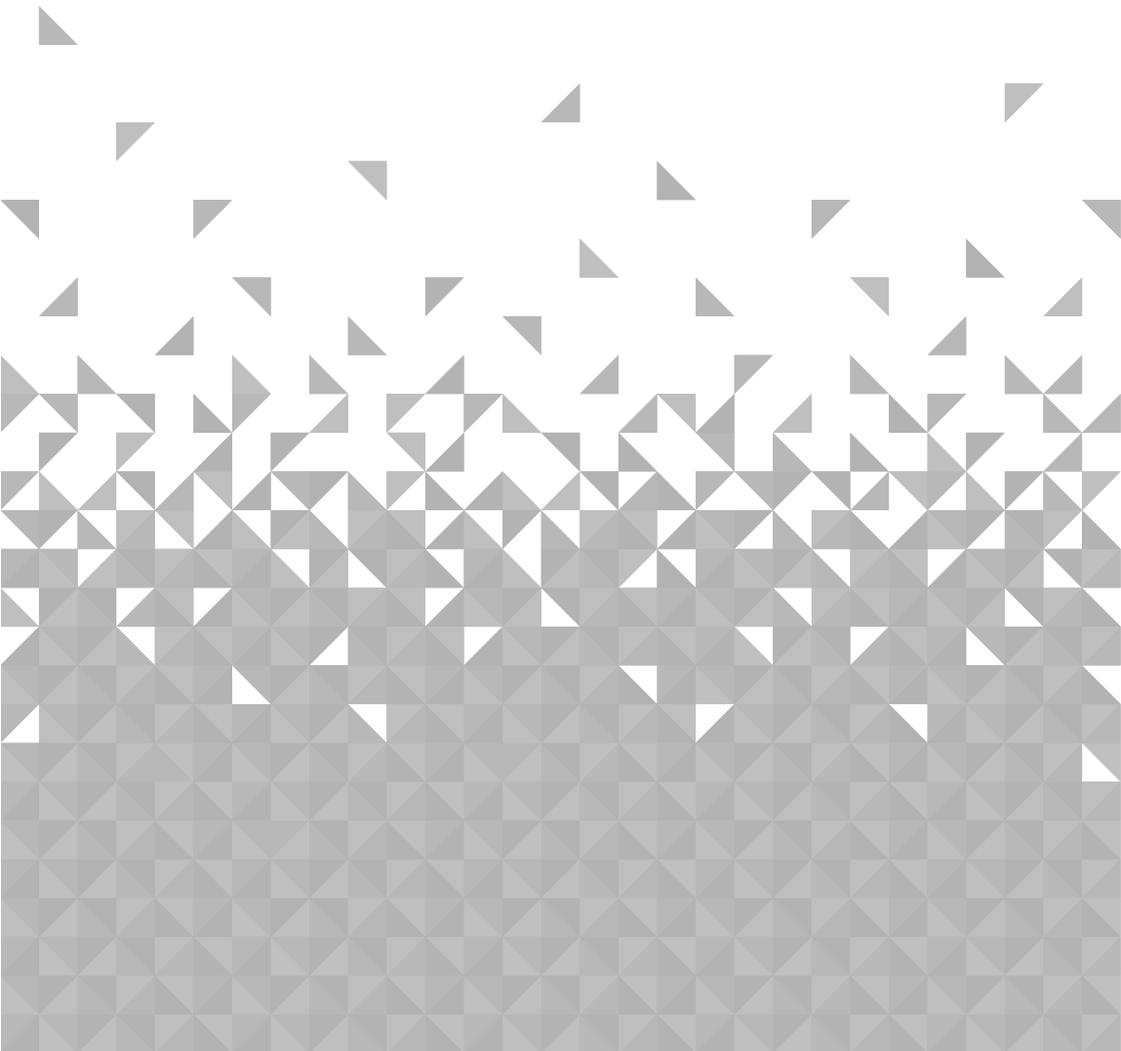



Safety information

Important - Please read these instructions fully before installing or operating

Power source

- Only use the power supply that came with the product. Using an unauthorised power supply will invalidate your guarantee and may irrecoverably damage the product.
- Disconnect your Micro from the mains power supply during thunderstorms.
- Always check that you have completely switched off your Micro System, before you change or disconnect the power supply.
- Where the mains power plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- If the Micro System will not be used for a long period of time, remove the CD and make sure that the mains power is unplugged and the battery is removed from the remote control.
- Only use recommended batteries or those of the same or equivalent type in the remote control.
- Batteries are to be inserted with the correct polarity.
- The supply terminals are not to be short-circuited.
- Never throw batteries in a fire or attempt to open the outer casing.
- Batteries are harmful if swallowed, so keep away from young children.



Caution:

- Danger of explosion if batteries are incorrectly replaced. Replace only with the same or equivalent type.

Moisture and water

- Keep it dry. Avoid exposure to precipitation, humidity and liquids which could all affect the product circuitry. Do not leave it in low temperatures as moisture can form inside the product, which may damage the circuit board.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**



Safety information

Important - Please read these instructions fully before installing or operating

Heat sources and flames

- Do not leave it in high temperatures as electronic devices and plastic parts may warp in heat.
- Keep it away from bright sunlight or heat sources, such as a radiator.
- Never place any type of candle or naked flame on top of, or near the product.

Ventilation

- Do not block or cover slots, holes or openings on the product by placing on soft furnishings such as carpets, rugs or beds as these are provided for functionality and/or ventilation to ensure safe operation of the product.
- The underneath and sides of this product may become warm after a long period of use. This is normal.

Positioning the Stereo Flat Micro System

It is important that you consider carefully in advance where your Micro System and speakers will be situated and make sure that they are:

- on a flat and stable surface.
- within 1.4 metres of a power socket. Please ensure that the mains power lead and speaker cables are not a trip hazard.
- at least 1 metre away from other electrical appliances to avoid interference.
- where it will be in range of the connected or 'paired' bluetooth device (e.g. iPod/iPhone/iPad/Android/other phone/computer, which is about 10 metres or less (33 feet or less) in line of sight.
- where there is enough height for the Micro System wire radio aerial.
- Never place your Micro System directly onto antique or polished surfaces.



Caution

To avoid possible hearing damage, do not listen to this Micro System at high volume levels for long periods of time. Always keep the volume within reasonable limits.

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 600 3021.



Safety information

Important - Please read these instructions fully before installing or operating

General safety information

- Keep the product and all its parts out of reach of small children.
- This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Do NOT place foreign objects into the CD compartment.
- CAUTION: Never touch or look into the optical lens within the CD compartment.



This is a **CLASS-1** laser product.

- Use of controls or adjustments other than those specified herein, may result in hazardous laser light beam exposure.
- Do NOT open the cover and do NOT attempt to repair it yourself.
- Refer servicing to qualified personnel. This product does not contain any user serviceable parts.
- Unauthorised handling of the device may damage it and will void your warranty.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

This page is left intentionally blank

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 600 3021

BUSH




This page is left intentionally blank



**Getting to know your Stereo Flat
Micro System**

2

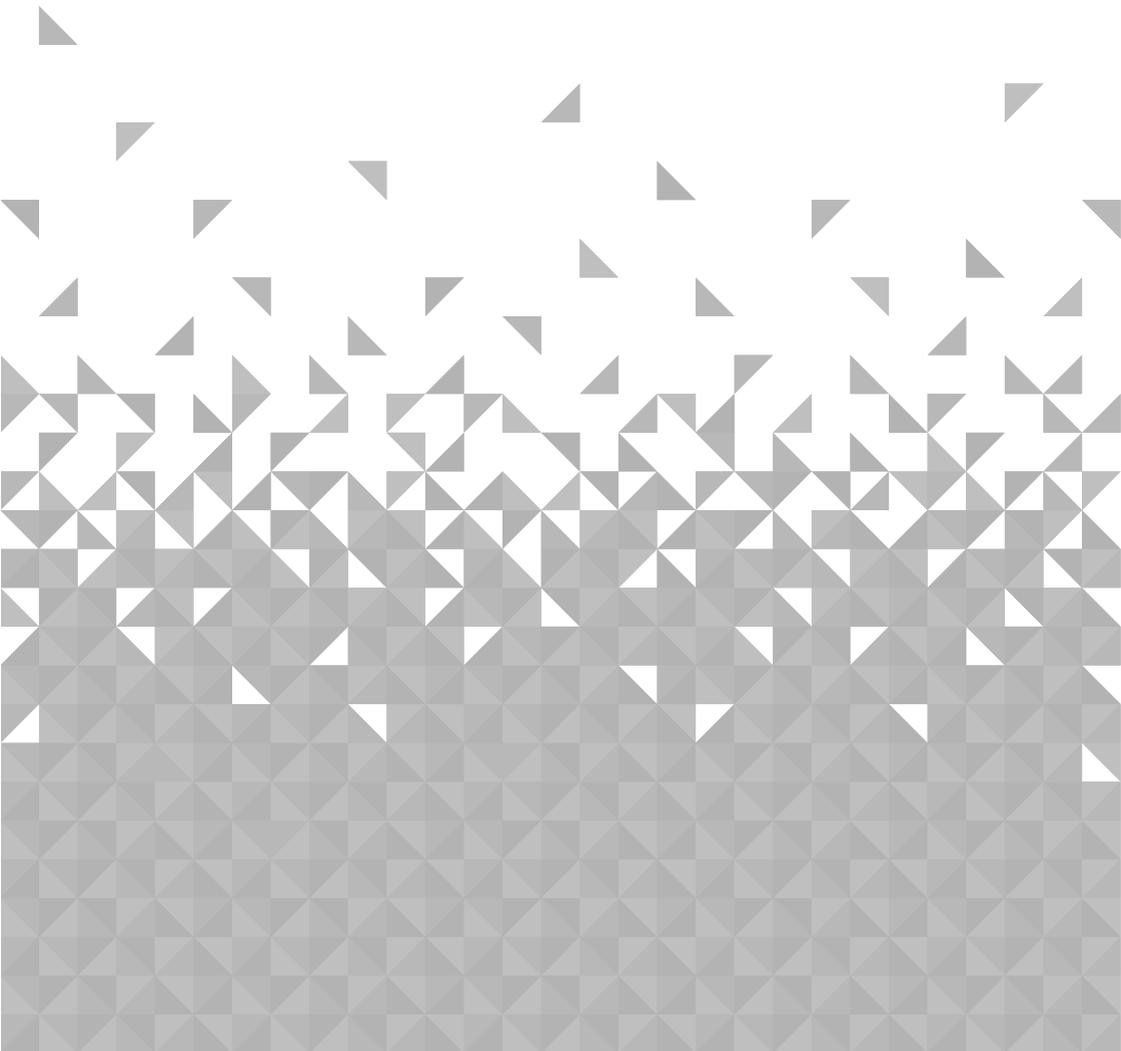

Getting to know your Stereo Flat Micro System

You'll be up and running in no time

Ready? Let's begin...

Please read these instructions carefully. They contain important information which will help you get the best from your product and ensure safe and correct installation and operation.

If you require any further assistance, our technical experts are happy to help. For full details, refer to the product support section at the end of these instructions.

Fig 1.


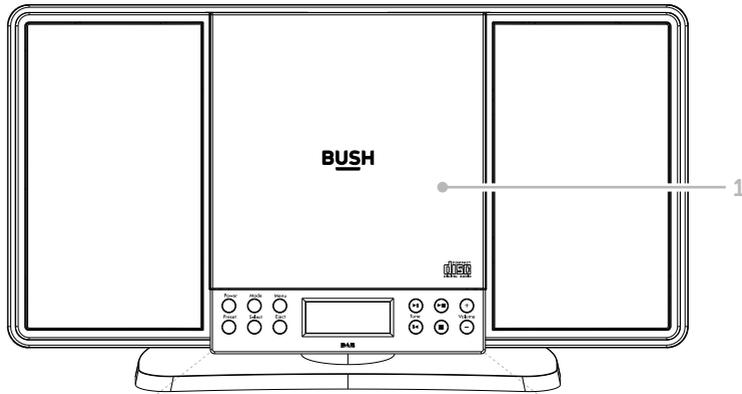


Fig 2.

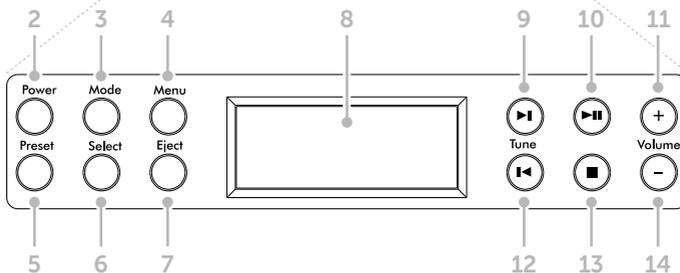

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Getting to know your Stereo Flat Micro System

You'll be up and running in no time

Fig 3.


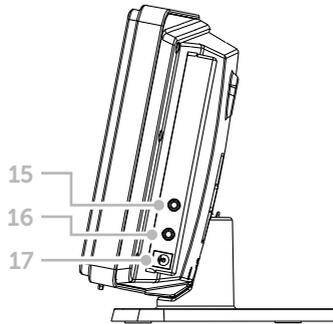


Fig 4.

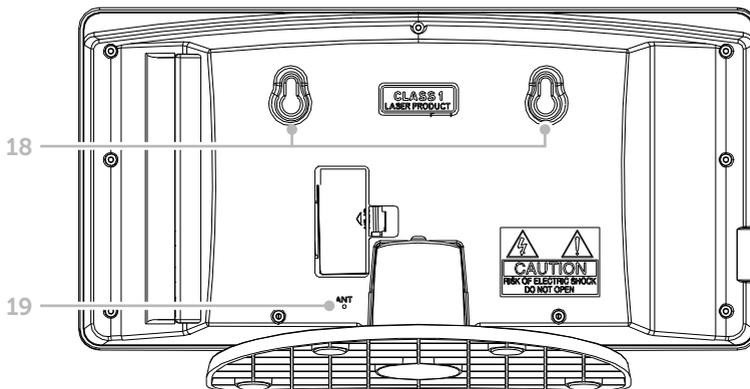


- | | |
|---------------------------|--------------------------|
| 1. CD compartment | 11. Volume + |
| 2. Power on/off (standby) | 12. Tune -/Skip backward |
| 3. Mode | 13. Stop |
| 4. Menu | 14. Volume - |
| 5. Preset | 15. Aux in socket |
| 6. Select | 16. Headphone socket |
| 7. Eject | 17. Mains power socket |
| 8. Backlit display | 18. Wall mounting points |
| 9. Tune +/Skip forward | 19. Wire radio aerial |
| 10. Play/Pause | |

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 600 3021

Getting to know your Stereo Flat Micro System

You'll be up and running in no time

Fig 5.

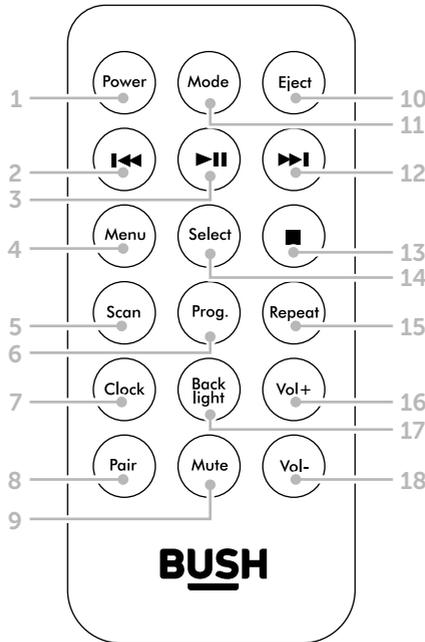

1. Power on/off (standby)
2. Skip back
3. Play/Pause
4. Menu
5. Scan
6. Prog.
7. Set the clock (Standby mode only)
8. Pair
9. Mute
10. Eject (CD mode)
11. Mode (DAB/FM/CD/BT/Aux)
12. Skip forward
13. Stop
14. Select
15. Repeat
16. Vol +
17. Backlight
18. Vol -

Note: The remote signal may not be received if there is an obstacle between the remote and the Micro. Direct sunlight or other bright light sources shining on the remote sensor next to the Micro display, may affect the performance of the remote control.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Getting to know your Stereo Flat Micro System

You'll be up and running in no time


Initial set-up

Clip your Micro onto its stand

When assembled the flat part of the stand faces towards the front.

For ease of assembly we recommend that you place your Flat Micro face down onto a soft cloth on a stable surface. Place the two prongs on the stand at the top of the two long grooves on the back of the Micro and then press down. The stand will clip into place.

Fig 6.

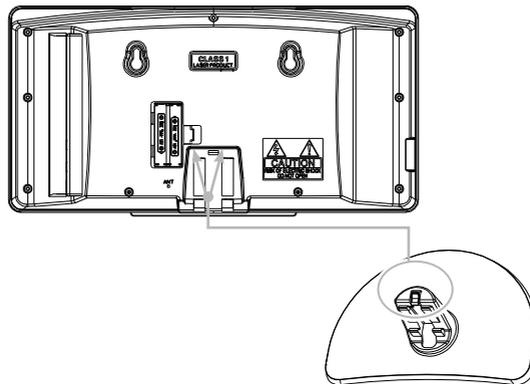

Power connection

1. Fully extend the wire radio aerial on the back of the Micro to receive the best possible radio reception and sound quality.
2. Connect the mains power lead into the bottom power socket behind the right hand speaker on the side of your Micro.
3. Plug the mains power plug into the mains power wall socket and switch on. Welcome will be displayed, followed by Scan, as your Micro begins an automatic scan for DAB radio stations. After a short delay the number of stations found during the scan will also be displayed.

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 600 3021

Getting to know your Stereo Flat Micro System

You'll be up and running in no time

When the scan is complete your radio will select the first available station and begin to play. Stations are listed in numerical and then alphabetical order by default.

Note: The DAB radio station list is stored in the memory and so the next time you switch your radio on, the station search does not take place. It is possible to scan manually for stations by short pressing the Scan button on the remote control when you are in DAB mode.

4. Pull out the safety strip on the remote control to activate the battery.

Set the time and date

The first time you listen to DAB radio, the time and date of your product will be synchronised automatically to that broadcast by the DAB service in 24 hour mode; which is in line with daylight saving, so there is no need to set the time and date manually.

If you do wish to set the time and date manually, please follow the steps below.

1. With the Micro in Standby mode, short press the Clock button on the remote control. Set time will be displayed. Short press the Select button on the remote control.
2. The hour digits will flash. Use the **◀◀** or **▶▶** buttons on the remote control to set the hour and short press the Select button.
3. The minute digits will flash. Use the **◀◀** or **▶▶** buttons on the remote control to set the minutes and short press the Select button.
4. The date will be displayed and the digits for the day will flash. Use the **◀◀** or **▶▶** buttons and the Select button on the remote control to set the day, month and year using the same method as you used to set the time.

When you confirm the correct date, Saved is displayed and the display returns to Set time.

You can now use the **◀◀** or **▶▶** buttons and the Select button on the remote control to change the settings for:

- Update: To auto update the time from the DAB signal, FM signal, DAB or FM (Any) or no update (None).

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Getting to know your Stereo Flat Micro System

You'll be up and running in no time

- 12/24 hr: To set the time display in Standby mode to be in 12 or 24 hour clock format.
 - Set the date format.
5. Short press the Menu button on the remote control to exit from the time and date settings.

Power on/off

Power on

Short press the Power button on the Micro or on the remote control to power on your product.

Power off

Short press the Power button on the Micro or on the remote control. Your Micro will go to Standby mode and the clock will be displayed.

Change the mode

Short press the Mode button on the Micro or on the remote control to change between DAB, FM CD, Bluetooth and Aux in modes. Please check the display, which will confirm the mode.

Adjusting the volume

Short press the Volume + or Volume - buttons on the Micro or the Vol+ or Vol- buttons on the remote control to adjust the volume.

Check the display, which will confirm the volume setting.

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 600 3021

Getting to know your Stereo Flat Micro System

You'll be up and running in no time

Equaliser

The sound on your Micro can be adjusted to suit the type of music or programme you are listening to using the Equaliser settings. If you prefer, you can also choose to set the bass and treble settings within the My EQ profile set up option. The Equaliser options available are: My EQ, Normal, Classic, Jazz, Pop, Rock and Speech.

1. Long press the Menu button on the Micro or on the remote control to enter the menu options.
2. Use the **◀** or **▶** buttons on the Micro or the **◀◀** or **▶▶** buttons on the remote control to scroll to System. Short press the Select button.
3. Sleep is displayed. Use the **◀** or **▶** buttons on the Micro or the **◀◀** or **▶▶** buttons on the remote control to scroll to EQ. Short press the Select button.
4. My EQ... is displayed. Use the **◀** or **▶** buttons on the Micro or the **◀◀** or **▶▶** buttons on the remote control to scroll through the available options of My EQ..., Normal, Classic, Jazz, Pop, Rock and Speech. Stop when the option you would like is displayed and short press the Select button.

Note: If you select 'My EQ...', you can then use the **◀** or **▶** buttons on the Micro or the **◀◀** or **▶▶** buttons on the remote control to scroll through the options available and short press the Select button, to adjust the settings for the Bass, Treble and Loudness of your Micro.

5. Short press the Menu button to exit the Menu options.

Mute

Short press the Mute button on the remote control to mute and unmute the sound.

Sleep timer

You can set your Micro to turn off automatically in any mode, using the sleep timer. You can choose from Off, 15, 30, 45, 60 and 90 minutes.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Getting to know your Stereo Flat Micro System

You'll be up and running in no time

1. Long press the Menu button on the Micro or on the remote control. Use the **◀** or **▶** buttons on the Micro or the **◀◀** or **▶▶** buttons on the remote control to scroll to System. Short press the Select button.
2. Sleep is displayed. Short press the Select button.
3. Use the **◀◀** or **▶▶** button to cycle through the available options, stop when the sleep time you would like is displayed and short press the Select button.
4. Sleep is displayed. Short press the Menu button to exit form the Menu options.

Note: To cancel the sleep time, follow the steps to set the sleep time but stop when Off is displayed in Step 3 and short press the Select button.

Using the alarms

Set an alarm

Note: Check that your Micro has the correct time before you set an alarm. Please remember to use 24 hour clock.

1. Long press the Menu button on the Micro or on the remote control. Use the **◀** or **▶** buttons on the Micro or the **◀◀** or **▶▶** buttons on the remote control to scroll to System. Short press the Select button.
2. Sleep is displayed. Use the **◀** or **▶** buttons on the Micro or the **◀◀** or **▶▶** buttons on the remote control to scroll to Alarm. Short press the Select button.
3. Alarm 1 is displayed. You can use the **◀** or **▶** buttons on the Micro or the **◀◀** or **▶▶** buttons on the remote control to scroll and set Alarm 2, if required. Short press the Select button.
4. The hour digits will flash. Use the **◀** or **▶** buttons on the Micro or the **◀◀** or **▶▶** buttons on the remote control to set the hour for your alarm. Short press the Select button.
5. The minute digits will flash. Use the **◀** or **▶** buttons on the Micro or the **◀◀** or **▶▶** buttons on the remote control to set the minutes for your alarm. Short press the Select button.

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 600 3021

Getting to know your Stereo Flat Micro System

You'll be up and running in no time

6. The duration for your alarm will flash. Use the **◀** or **▶** buttons on the Micro or the **◀◀** or **▶▶** buttons on the remote control to set the duration for your alarm, you can choose from 15, 30, 45, 60, 90 or 120 minutes. Short press the Select button.
7. The sound source for your alarm will flash. Use the **◀** or **▶** buttons on the Micro or the **◀◀** or **▶▶** buttons on the remote control to set the sound source for your alarm, you can choose from Buzzer, DAB or FM radio. Short press the Select button.

Note: If you select DAB or FM for the sound source, 'Last' will flash in the display. If you have set radio station presets these will also be available and you can use the **◀** or **▶** buttons on the Micro or the **◀◀** or **▶▶** buttons on the remote control to scroll through the options available and press the Select button. The last listened to radio station or radio preset in DAB or FM, as appropriate, will be used for your alarm.

8. Daily will flash in the display. Use the **◀** or **▶** buttons on the Micro or the **◀◀** or **▶▶** buttons on the remote control to set the frequency for your alarm. You can choose from Daily, Once, Weekends or Weekdays. Short press the Select button.

Note: If you select 'Once', you will then be prompted to set the date for your alarm.

9. Alarm Volume 9 will scroll in the display. Use the **◀** or **▶** buttons on the Micro or the **◀◀** or **▶▶** buttons on the remote control to set the volume for your alarm. You will not be able to set this for less than Alarm volume level 9. Short press the Select button.

Note: Remember to set the alarm volume to one that will wake you.

10. On or Off will flash in the display. Use the **◀** or **▶** buttons on the Micro or the **◀◀** or **▶▶** buttons on the remote control to choose On or Off. Short press the Select button.
11. Saved is displayed. A bell icon will appear in the Standby display, together with a '1' or '2' as appropriate, to confirm that an alarm has been set.

Stop the alarm

When the alarm sounds, short press the Power button on the Micro or on the remote control to turn off the alarm. The alarm will reset for the next day.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Getting to know your Stereo Flat Micro System

You'll be up and running in no time

Snooze

When the alarm sounds you can short press the Menu button on the Micro or on the remote control to snooze for 10 minutes. SN and the countdown from 10 minutes until the alarm sounds again will be displayed.

Turn off the alarm

Follow the steps to set an alarm and select Off in step 10.

Using headphones

You can connect headphones with a 3.5mm plug (not included) to the socket behind the right hand speaker on the side of your Micro. When you have headphones connected the Micro speakers are switched off and all sound is via the headphones.

Note: Always keep the volume within reasonable limits.




This page is left intentionally blank



Using your Stereo Flat Micro System

3

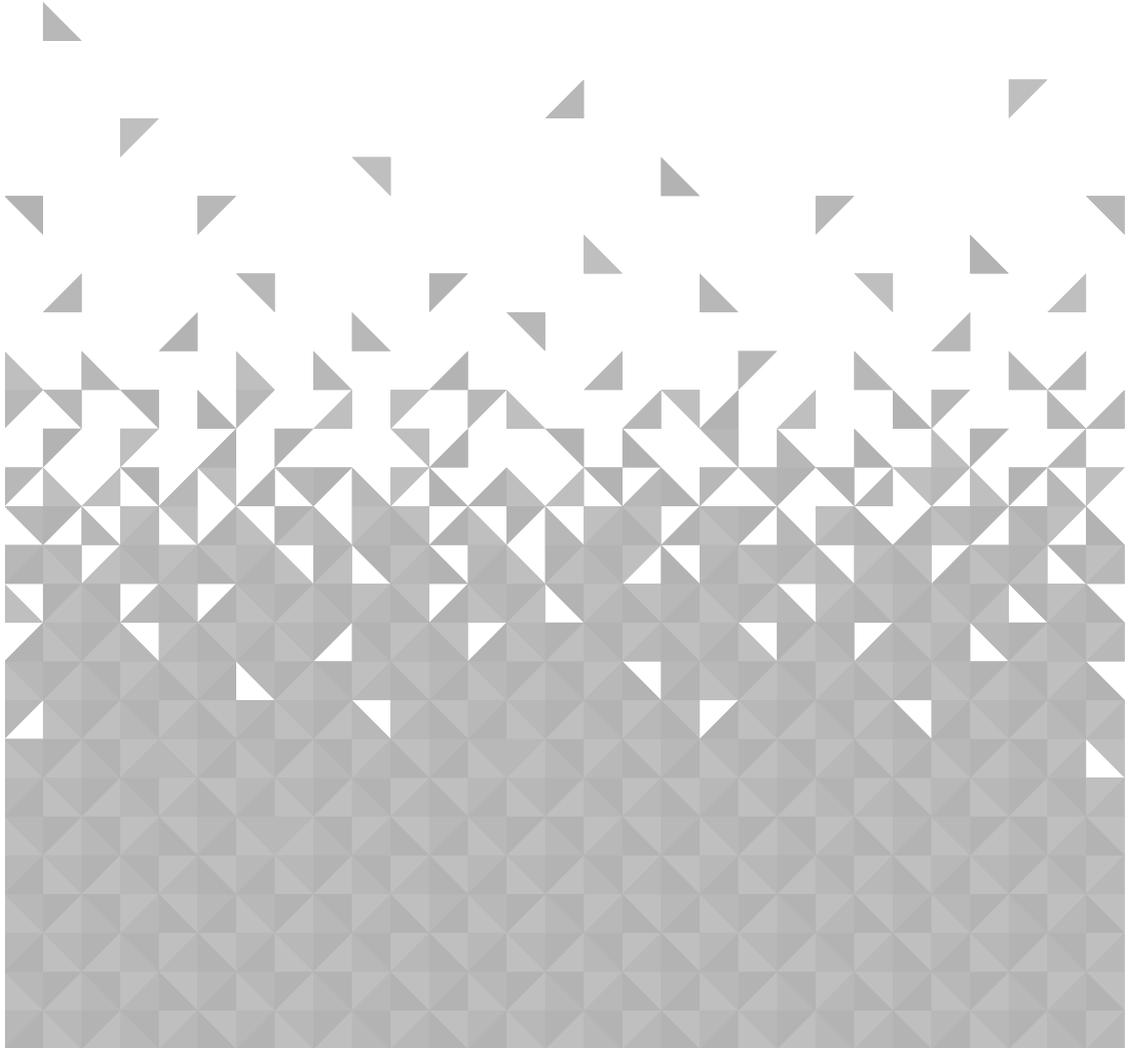

Using your Stereo Flat Micro System

Let's get started

DAB Radio Mode

- Check that your Micro is in DAB mode. If you are not already in DAB mode, short press the Mode button on the Micro or on the remote control until you are in DAB mode (check the display).
- The first time you use your Micro or if the station list is empty, your Micro will automatically begin to scan for DAB radio stations. Scan and then after a short delay the number of stations found during the scan will also be displayed.
- If you were listening to a DAB station when you switched the Micro off, then this station will automatically be selected when you switch the radio back on.

Wire radio aerial

Please make sure that the wire aerial on the back of the Micro is fully extended and adjusted before you attempt to tune to a DAB radio station (a vertical position is recommended). This will ensure that the maximum signal strength is available when the Micro begins to scan. Extending the aerial also ensures the best possible sound quality.

Changing DAB stations

In DAB mode:

1. Use the **◀** or **▶** buttons on the Micro or the **◀◀** or **▶▶** buttons on the remote control to scroll through the available stations.
2. When the station that you would like to listen to is displayed, short press the Select button on the Micro or on the remote control. There will be a short delay whilst your Micro tunes to your selected station.

Scanning for DAB stations

With DAB radio, additional stations and services regularly become available so it's a good idea to carry out a manual scan every now and then to make sure that you have the most up to date station listing stored within the memory of your Micro.

If you have moved your Micro to another location, e.g.: if you go on holiday, then it's also a good idea to carry out a manual scan.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Using your Stereo Flat Micro System

Let's get started

In DAB mode:

1. Short press the Scan button on the remote control to begin a search for stations. Scan will be displayed and after a short delay the number of stations found during the scan will also be displayed.

Prune DAB stations

You can remove the DAB stations in the station list that cannot be received in your area. These are listed with a '?' prefix.

1. Long press the Menu button on the Micro or on the remote control. Use the **◀** or **▶** buttons on the Micro or the **◀◀** or **▶▶** buttons on the remote control to scroll to Prune. Short press the Select button.
2. Prune and a flashing N is displayed. Use the **◀** button on the Micro or the **◀◀** button on the remote control to scroll to Y. Short press the Select button to prune the station list. Stations with a '?' prefix will now no longer be displayed.
3. Short press the Menu button to exit the Menu options.

Storing a DAB station preset

Your Micro can store up to 10 DAB radio stations in its preset memories for instant access to your favourite stations.

1. Tune the Micro to the DAB radio station that you wish to preset.
2. Long press the Preset button on the Micro or the Prog. button on the remote control until Empty 1 is displayed.
3. Use the **◀** or **▶** buttons on the Micro or the **◀◀** or **▶▶** buttons on the remote control to move the preset number that you would like to store the radio station to (Empty 1-Empty 10).
4. Short press the Select button on the Micro or on the remote control to store the station to that preset location. Stored will be displayed.

Note: If there is already an existing DAB station stored under a preset, it will be overwritten when you store the new station.

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 600 3021.

Using your Stereo Flat Micro System

Let's get started

Tune to a DAB station preset

In DAB mode:

1. Short press the Preset button on the Micro or the Prog. button on the remote control. The name or frequency or a stored station will be displayed, or 'Empty 1' if no station has been stored.
2. Use the **◀** or **▶** buttons on the Micro or the **◀◀** or **▶▶** buttons on the remote control to move the preset location and station that you would like to listen to (1-10).
3. Short press the Select button. Your Micro will instantly tune to that station and begin to play.

Note: If no DAB station has been stored under the preset location, 'Empty 1' will be displayed, then the Micro will revert to the previously selected radio station.

DAB display information

When listening to a DAB station you can change the information that will appear on the display. There are several different types of information that are sent by the broadcaster.

- Dynamic Label Segment (DLS)
This is scrolling text information supplied by the broadcaster. Information could be the name of an artist or music title, DJ's name, contact details for the radio station etc.
- Signal Strength
An empty will appear on the display to indicate the minimum signal strength for acceptable listening. The row of solid rectangles indicate the actual signal strength that you are receiving. The stronger the signal, the further to the right the row of solid rectangles will be.
- Program Type (PTY) - such as 'Rock', 'Pop', 'Talk' or 'News'
- Multiplex Name - displays the broadcasting area and collection of radio stations on this frequency e.g.: BBC National DAB, Digital 1 Network.
- Channel and Frequency - e.g.: 12B 225.648 MHz

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Using your Stereo Flat Micro System

Let's get started

- Signal error
This is displayed as a number between 0-99. It would not be possible to satisfactorily listen to a radio station with a signal error rate of 30 or above. Try adjusting the aerial or relocating your radio to improve reception.
 - Signal information - The data rate at which the signal is being transmitted.
1. Repeatedly short press the Menu button on the Micro or the remote control to cycle through the different information options.

Dynamic range control (DRC)

In DAB mode:

The dynamic range for each radio programme is set by the broadcaster for each radio station and may be different for the types of programme broadcast, such as pop or classical music or a chat show. The dynamic range control signal is transmitted in parallel with the audio signal for each programme and with your Micro you can use this control signal to expand or compress the dynamic range (the difference between the loudest and quietest sounds) of the reproduced audio signal. Changing the dynamic range can affect the 'loudness' and/or 'quality of sound' of the programme that you hear so that it will be more suited to your listening conditions and your own personal listening requirements. e.g. in a noisy environment, where quiet sounds might be swamped, setting the compression to maximum will 'boost' the quiet sounds, whilst keeping the loudest sounds at their original level.

There are 3 levels of compression:

- DRC off: No compression. This is the default setting.
 - DRC low: Medium compression.
 - DRC high: Maximum compression.
1. Long press the Menu button on the Micro or on the remote control. Use the **◀** or **▶** buttons on the Micro or the **◀◀** or **▶▶** buttons on the remote control to scroll to DRC. Short press the Select button.
 2. Use the **◀** or **▶** buttons on the Micro or the **◀◀** or **▶▶** buttons on the remote control to scroll through the options available and short press the Select button.

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 600 3021

Using your Stereo Flat Micro System

Let's get started

3. Short press the Menu button on the Micro or on the remote control to exit from the Menu.

FM Radio mode

If you are not already in FM mode, short press the Mode button on the Micro or on the remote control to go to FM mode (check the display). If you were listening to an FM station when you switched the Micro off then this station will be automatically selected when you switch the Micro back on.

Wire radio aerial

Please make sure that the wire aerial on the back of the Micro is fully extended and adjusted before you attempt to tune to an FM radio station (a vertical position is recommended). This will ensure that the maximum signal strength is available when the Micro begins to scan. Extending the aerial also ensures the best possible sound quality.

Tuning to an FM station

In FM mode:

Long press the Tune **▶|** on the front of the Micro or the **▶▶|** button on the remote control to scan up the frequency band, your Micro will search for the next available station and then stop on that station.

Short press the Tune **▶|** on the front of the Micro or the **▶▶|** button on the remote control to move up the frequency band in 0.05MHz steps.

Long press the Tune **|◀** button on the front of the Micro or the **◀◀** button on the remote control to scan down the frequency band, your Micro will search for the next available station and then stop on that station.

Short press the Tune **|◀** button on the front of the Micro or the **◀◀** button on the remote control to move down the frequency band in 0.05MHz steps.

Note: If reception is poor check that the wire aerial is fully extended or try moving the Micro to another location.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Using your Stereo Flat Micro System

Let's get started

Changing the scan setting

In FM mode:

1. Long press the Menu button on the Micro or on the remote control. Scan will be displayed. Short press the Select button on the Micro or on the remote control.

There are now two different options to choose from:

- Strong (stations)

The scan will only stop when a strong signal strength is received which should also result in a better audio quality. It is possible that the station you are scanning for may be missed using this option.

- All (stations)

The scan will stop for every station it receives, even if the signal strength is poor.

2. Use the **◀** or **▶** buttons on the Micro or the **◀◀** or **▶▶** buttons on the remote control to choose from the two options available and short press the Select button.
3. Short press the Menu button on the Micro or on the remote control to exit from the Menu.

Audio mode

The Micro will automatically switch between Stereo and Mono, depending on the quality of the signal being received but you can override this function and manually switch between 'Stereo' and 'Mono'.

Note: You may wish to select 'Stereo' if you are listening to your Micro using headphones.

1. Long press the Menu button on the Micro or on the remote control. Use the **◀** or **▶** buttons on the Micro or the **◀◀** or **▶▶** buttons on the remote control to scroll to Audio and short press the Select button.

Using your Stereo Flat Micro System

Let's get started

There are now two different options of 'Mono' and 'Stereo'.

2. Use the **◀** or **▶** buttons on the Micro or the **◀◀** or **▶▶** buttons on the remote control to choose from the two options available and short press the Select button.
3. Short press the Menu button on the Micro or on the remote control to exit from the Menu.

Storing an FM station preset

Your Micro can store up to 10 FM radio stations in its preset memories for instant access to your favourite stations.

1. Tune the Micro to the FM radio station that you wish to preset.
2. Long press the Preset button on the Micro or the Prog. button on the remote control until Empty 1 is displayed.
3. Use the **◀** or **▶** buttons on the Micro or the **◀◀** or **▶▶** buttons on the remote control to move the preset number that you would like to store the radio station to (Empty 1-Empty 10).
4. Short press the Select button on the Micro or on the remote control to store the station to that preset location. Stored will be displayed.

Note: If there is already an existing FM station stored under a preset, it will be overwritten when you store the new station.

Tune to a FM station preset

In FM mode:

1. Short press the Preset button on the Micro or the Prog. button on the remote control. The name or frequency or a stored station will be displayed, or 'Empty 1' if no station has been stored.
2. Use the **◀** or **▶** buttons on the Micro or the **◀◀** or **▶▶** buttons on the remote control to move the preset location and station that you would like to listen to (1-10).

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Using your Stereo Flat Micro System

Let's get started

3. Short press the Select button. Your Micro will tune to that station and begin to play.

Note: If no FM station has been stored under the preset location, 'Empty' will be displayed, then the Micro will revert to the previously selected radio station.

FM display information

When listening to an FM station you can change the information that will appear on the display. There are several different types of information that are sent by the broadcaster.

- Radiotext (RT)
This is scrolling text information supplied by the broadcaster. Information could be the name of an artist or music title, DJ's name, contact details for the radio station etc.
 - Program Type (PTY)
Such as 'Rock', 'Pop', 'Talk' or 'News'
 - Station name or frequency
Such as BBC R4 or 92.95MHz
 - Audio mode
Stereo or Mono
 - Day and date - supplied by the broadcaster.
1. Repeatedly short press the Menu button on the Micro or the remote control to cycle through the different information options.

Using your Bluetooth Micro System

Let's get started

CD Mode

Note: Please make sure that you remove the cardboard shipping protector from within the CD compartment before you try to use CD player.

Check that your Micro is in CD mode. If you are not already in CD mode, short press the Mode button on the front of the Micro or on the remote control, until you are in CD mode (check the display). The display will show 'Reading', followed by 'No disc' if the CD compartment is empty.

Play a CD

Note: It is not possible to play DVD or computer CDs.

1. Short press the Eject button on the Micro or on the remote control. The CD compartment cover will slide up and 'Open' will be displayed.
2. Place an audio CD, label side facing towards you, into the CD compartment. Please ensure that you line up the hole in the centre of the CD, with the central spindle and press back into place.
3. Short press the Eject button on the Micro or on the remote control. The CD compartment cover will slide down. 'Reading', followed by the number of tracks on the CD, e.g. 12 as well as the total number of minutes and seconds play time will be displayed.
4. Short press the ►|| button on the Micro or on the remote control to play the CD.

CD controls

You can use the following controls on your Micro in CD mode.

- Play

Short press the ►|| button on the Micro or on the remote control. The first track will begin to play and the track number and elapsed time will be displayed.

- Pause

Short press the ►|| button on the Micro or on the remote control. The track number

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Using your Bluetooth Micro System

Let's get started

will be displayed, e.g. T02. Short press the  button again to continue to play the track/CD.

- Next track:
Short press the  button on the Micro or the  button on the remote control.
- Previous track:
Short press the  button on the Micro or the  button on the remote control.
- Fast forward within a track:
Long press the  button on the Micro or the  button on the remote control.
- Fast backward within a track:
Long press the  button on the Micro or the  button on the remote control.
- Stop.
Short press the  button on the Micro or on the remote control.

Programmed play mode

In programmed play mode, you can program the play order of the tracks on your CD. You can program up to 20 tracks in total.

Note: To set up programmed play mode, the CD must be stopped in the CD compartment and must not be paused or playing.

In CD mode, with the CD you wish to programme in the CD compartment and stopped:

1. Short press the Preset button on the Micro or the Prog button on the remote control to enter CD programmed play mode. P01 T00 will be displayed.
2. Use the  or  buttons on the Micro or the  or  buttons on the remote control to go to the track number that you would like to program to play first. The track number will change in the display, e.g. P01 T03. Short press the Preset. button on the Micro or the Prog button on the remote control to confirm.

Using your Bluetooth Micro System

Let's get started

3. P02 T00 will be displayed and you can select the second track that you would like to programme. Continue to select each track as in Step 2, up to a total of 20 tracks.
4. Short press the Preset. button on the Micro or the Prog button on the remote control again to confirm the last track in the programmed play mode list. Pro FULL will be displayed when you have selected 20 tracks.
5. Short press the ►|| button on the Micro or on the remote control to play the programmed tracks.
6. To exit programmed play mode, short press the ■ button twice on the Micro or on the remote control.

Repeat and Random modes

1. Short press the Repeat button on the the remote control. Rep One is displayed. Continuously short press the Repeat button to cycle through the available options of :
 - Rep One: Repeat (current track)
 - Rep All: Repeat all (all the tracks on the CD)
 - Random: Random (randomly play the tracks on the CD)
 - Normal: Confirms that Repeat and Random mode has been turned off.

Remove the CD

1. With the CD stopped, Short press the Eject button on the Micro or on the remote control in CD mode. The CD compartment cover will slide up and Open will be displayed.
2. Put your thumb on the central spindle and put your fingers under the outside edge of the CD and lift off and remove the CD from the compartment.
3. Short press the Eject button on the Micro or on the remote control. The CD compartment cover will slide down and, Reading followed by No disc will be displayed.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Using your Bluetooth Micro System

Let's get started

Caring for compact discs

- Do NOT touch the playback side of the CD.
- Do NOT attach paper or tape or any other material to the disc.
- Fingerprints and dust on the disc will cause sound deterioration. Wipe the disc from the centre outwards with a soft cloth. Always keep the disc clean.
- If dust or marks cannot be removed with a soft cloth, wipe the disc lightly with a slightly damp soft cloth and then wipe with a soft dry cloth.
- Do NOT use any type of solvent, commercially available cleaners or antistatic spray for vinyl as it may damage the disc.
- Do NOT store discs in a place subject to direct sunlight or near a heat source.
- Do NOT store discs in a place subject to moisture or dust, such as a bathroom or near a humidifier.
- Always store discs vertically in a case, stacking or placing objects on discs may cause warping.

Bluetooth mode

Check that your Micro is in Bluetooth (BT) mode. If you are not already in BT mode, short press the Mode button on the front of the Micro or on the remote control until you are in BT mode (check the display). 'BT' will flash in the display, whilst your product searches for Bluetooth devices.

Pairing your Stereo flat Micro System

In Bluetooth (BT) Mode:

1. 'BT' will flash in the display, whilst your product searches for Bluetooth devices.
2. On the device that you would like to connect to your Micro via Bluetooth (e.g. iPhone/iPad/Android/other phone/Tablet/Computer), turn on Bluetooth connectivity and ensure that it is 'discoverable'.

Note: If necessary, refer to the instructions for your device to add or set up Bluetooth.

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 600 3021

Using your Stereo Flat Micro System

Let's get started

3. Select to 'Add new device', if necessary.

Note: Some products will automatically search for a new device and so the 'Add new device' option is not available.

4. When found, your Micro will be displayed as 'BUSH DAB MICRO'. Select the device name to begin pairing.
5. When pairing is complete 'BT' will stop flashing in the display, and will be constantly displayed.
6. Now that you have paired your device with the Micro, it will connect to it when it is within range, which is about 10 metres or less (33 feet or less), line of sight.
7. Your device will remain paired with the Micro unless you decide to disconnect or 'unpair' it.

Note: If your device should be come unpaired for any reason, follow the steps above to 'pair' it again. You can short press the Pair button on the remote control to restart the Bluetooth pairing process.

Listening to Music/Audio using Bluetooth

In Bluetooth (BT) Mode:

1. Select and start the music or audio that you wish to listen to on your paired Bluetooth device, it will now be heard through the Micro speakers. Adjust the volume on the connected device and/or your Micro.

Note: If your previously paired device is within range but does not automatically connect, go to the Bluetooth connectivity settings on your device and select 'BUSH DAB MICRO' to reconnect. Alternatively, short press the Pair button on the remote control to restart the Bluetooth pairing process.

2. You can use the controls on your paired Bluetooth device as well as those on the front of the Micro or on the remote control when listening to music via Bluetooth.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Using your Stereo Flat Micro System

Let's get started

Controls available on your Micro and the remote control are:

- Play/Pause
▶|| Short press on the front of the Micro or on the remote control.
- Skip back to the previous track
◀ Short press on the front of the Micro.
◀◀ Short press on the remote control.
- Skip forward to the next track
▶ Short press on the front of the Micro.
▶▶ Short press on the remote control.

Aux in mode

Check that your Micro is in Aux in mode. If you are not already in Aux in mode, short press the Mode button on the front of the Micro or on the remote control, until you are in Aux in mode (check the display).

Using a 3.5mm audio input connection cable (not included), Aux in allows for a quick and easy connection to an external sound source.

1. Connect one end of the 3.5mm audio connection cable to the headphone (or auxiliary out) socket of your secondary device, connect the other end to the Aux in socket behind the right hand speaker on the side of your Micro.
2. Press the Play button on your external device to start playback through the Micro speakers.

To gain optimal volume levels, adjust the output volume level on both the secondary device and on the Micro.

Note: It is recommended that you unplug the Audio cable from the Aux in socket after you have finished listening to your external device.




This page is left intentionally blank



Other information

4

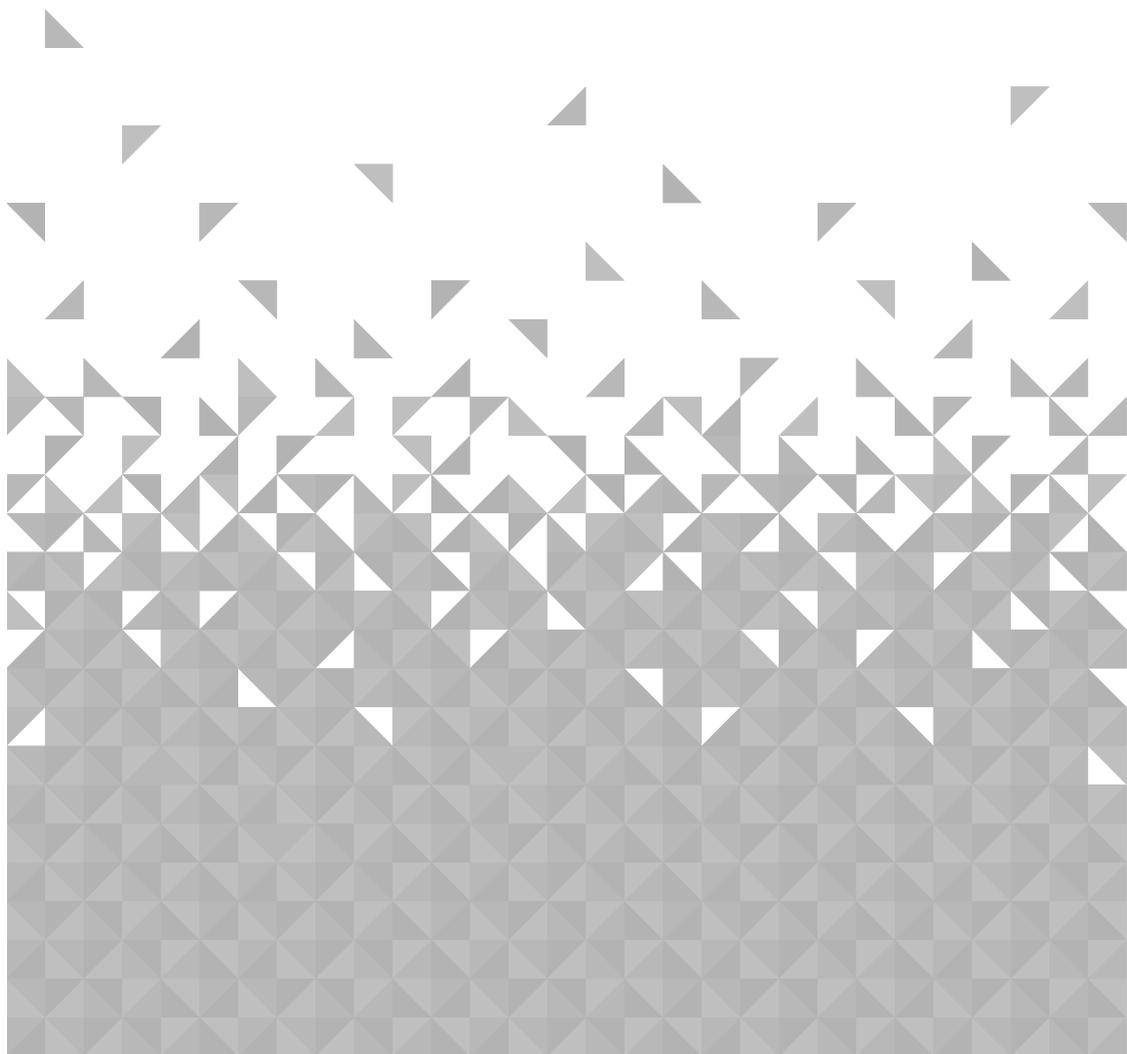

Other information

Helpful technical information

Wall mounting your Micro

You can wall mount your Micro without its stand. You will need:

2 x rawl plugs of a type and size that are suitable for the wall that you will hang the Micro on.

2 x screws that are the correct size for the rawl plugs. You will also need to check that the screw heads fit and hold well into the wall mount points on the back of the Micro.


Notes:

- Make sure that the screws and rawl plugs you use are suitable for supporting the Micro.
- To avoid damage to the Micro and personal injury, you should get a qualified person to drill the fixing surface and fit the appropriate wall fixings.
- When drilling into walls, always check that there are no hidden wires or pipes etc.
- Before wall mounting your product, check the wall strength. If this is not clear, then consult relevant qualified personnel.
- Take care not to allow the Micro to fall whilst attempting to hook it onto the screws you have fitted to hang the product onto.
- You must remove the base stand from your Micro, before you attempt to wall mount it. Press down on the clip on the top central part of the stand to remove it (if fitted).

1. Align the Micro in your chosen location and use a pencil to mark the drilling positions 120 mm apart.



2. Drill the holes as marked in point 1.

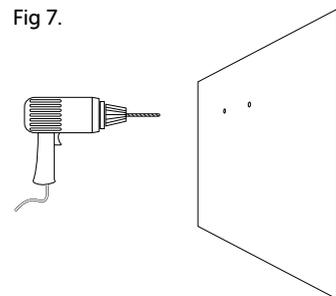

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**



Other information

Helpful technical information

3. Push 2 rawl plugs (not supplied) into the holes. Insert 2 screws (not supplied) into the holes and tighten. Take care to leave enough space between the screw heads and the wall.

Note: You will need to ensure that the screws heads can fit into the wall mount points on the back of your Micro and that they are long enough to sufficiently grip into the rawl plugs and wall. You must also leave enough space between the screw head and the wall for the screw head to fit into the mounts.

4. Hang the Micro onto the screws. For secure mounting ensure the screw heads slide firmly into the narrow part of the wall mount fixings on the back of the Micro.

Other information

Helpful technical information

Technical specification



Please use only the specified external adapter
Dongguan Yingna Electronic Technology Co.,Ltd. (Model name: YNQX09T059100BL)

Power adaptor:	Output DC 5.9V/1A Input AC 100-240V~50/60Hz
Remote control:	1 x 3V CR2025 battery (supplied)
Audio output:	2 x 1W RMS
Frequency range	
DAB:	Band III, 174 MHz to 240 MHz
FM:	87.5 MHz to 108 MHz
Bluetooth:	2.4GHz-2.480GHz Version: 4.1
Profiles:	A2DP/HFP/HSP/A2DPAVRCP
Pairing name:	BUSH DAB MICRO

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

This page is left intentionally blank




This page is left intentionally blank



Product support

5

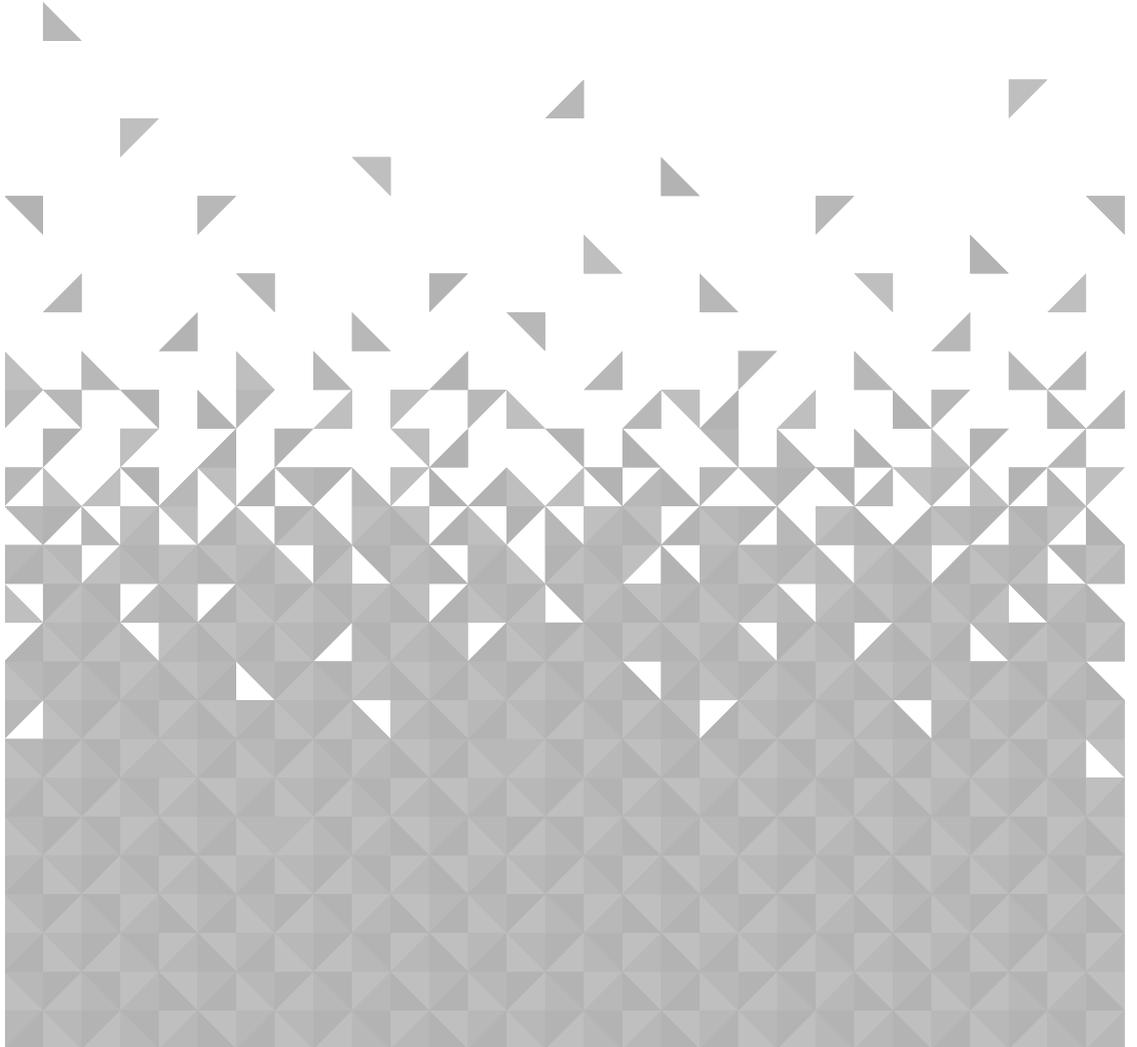

Product support

Help is always at hand

Troubleshooting

If you are experiencing problems with your Micro, there are some quick and easy checks that you can do, which may help to solve the problem.

CD Does not play:

- Check that you are in CD mode. Short press the Mode button on the Micro or on the remote control to change the mode (check the display).
- Take out the CD and check that it is not marked or scratched. Damaged CDs cannot be played in the Micro or may skip or not rotate correctly.
- Please check that you are using an original audio CD and not a copy. Often copied CDs will not play.

No sound / power:

- Adjust the volume using the Volume + on the Micro or the Vol + button on the remote control.
- Check that the sound is not muted. Short press the Mute button on the remote control.
- You may have headphones connected. Either use the headphones to listen to your Micro or unplug the headphones.
- If you are using a Bluetooth connected device or an external sound source via Aux in. Increase the volume on the secondary device and on the Micro.
- Check that the mains power wall socket is switched on and that the Micro is not in Standby mode.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Product support

Help is always at hand

Radio reception is poor:

- Fully extend the wire aerial to get the best reception and sound quality.
- Retune the radio station/s.
- Try moving your Micro to another location to see if reception improves.
- Check that you do not have other electrical equipment too close to your Micro, causing interference.
- Visit www.digitalradionow.com for information about DAB reception in your area.

Unable to pair with a Bluetooth device:

- Check that you are In Bluetooth (BT) Mode.
- Ensure that you are within range of the radio for Bluetooth functionality, 10 metres or less (33 feet or less).
- Move the Micro and Bluetooth device away from other Bluetooth devices/electrical equipment.
- If possible, turn off other nearby Bluetooth devices or disable their Bluetooth functionality.

The function buttons do not respond:

- Check that mains power wall socket is switched on and that the Micro is not in Standby mode.
- Check that you are trying to use the function buttons for the mode that you are in.

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 600 3021

Product support

Help is always at hand

Help and assistance

If you require any technical guidance or find that your Stereo Flat Micro System is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions or online at www.argos-support.co.uk

If you still require further assistance, call one of our experts on **0345 600 3021***. To help give us help you a fast and efficient service please have the following information ready:

Model Ref.

Serial number

You can find these on the rating plate - a small information panel (usually a sticker or metal plate) on the base or rear of your product.

Date of purchase

This will be shown on your receipt

Local call rates applies*

Lines open 8am-7pm Monday to Saturday and 10am-4pm Sunday.

*Calls to Argos enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see www.bt.com/pricing for details.

For security and training purposes, telephone calls to and from customer service centres may be recorded and monitored. Calls from Republic of Ireland will attract international call charges.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Product support

Help is always at hand

Disposal



- Disposal of your old product. Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.
- When this crossed out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2012/19/EC..
- Please make yourself aware of the local collection system for electrical and electronic products.
- Please act according to your local rules and do not dispose of your old products with your normal household waste.
- The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.
- Batteries contain substances that may be harmful to the environment and human health. Keep out of the reach of children and seek immediate medical help if swallowed.
- Batteries should not be disposed of in the normal household waste but taken to appropriate local recycling facilities, where and when these are available.
- Never throw batteries in a fire or attempt to open the outer casing.



This product is intended for use within the UK. This equipment complies with the essential requirements of the Radio Equipment Directive 2014/53/EU.

Declaration of Conformance

Hereby, Argos Ltd, declares that this Band II LPD device is in compliance with the essential requirements and other relevant provisions of the Radio Equipment Directive 2014/53/EU. The complete declaration of conformity can be obtained by contacting <http://www.argos-support.co.uk/>

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 600 3021

Product support

Help is always at hand

BUSH

Call us now and activate your 12 month guarantee

Thank you for choosing Bush. Your new product is guaranteed against faults and breakdowns for 12 months. Don't forget to register it with us today so we can provide you with our best possible after-sales service and useful updates.

www.bushregistration.co.uk

FREEPHONE*

0800 597 8548

Lines are open 8am - 8pm, 365 days a year. *Calls may be recorded and monitored.

Your Bush Guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from who your purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in the manual.
- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- Bush disclaim any liability for loss or damage arising from the breakdown of the product.
- This guarantee is in addition to and does not diminish your statutory or legal rights.

Important Data Protection Information

If you provide us with information about another person, you confirm that they have appointed you to act for them, to consent to the processing of their personal data including sensitive personal data and that you have informed them of our identity and the purposes (as set out in the Important Data Privacy notice displayed overleaf) for which their personal data will be processed.

You are entitled to ask for a copy of the information we hold about you (for which we may charge a small fee) and to have any inaccuracies in your information corrected.

For quality control and training purposes, we may monitor or record your communications with us.

If your personal details change, if you change your mind about any of your marketing preferences or if you have any queries about how we use your information, please let us know by contacting our Data Protection Officer, Domestic & General, Leicester House 17 Leicester Street, Bedworth, Warwickshire CV12 8JP.

Guarantor: Argos Limited - 489 - 499 Avebury Blvd. - Milton Keynes - MK9 2NW

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

This page is left intentionally blank

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 600 3021

BUSH



This page is left intentionally blank





This page is left intentionally blank



BUSH

Contact:

www.argos-support.co.uk

Helpline: 0345 600 3021

 DAB Digital
Radio