


# Assembly Instructions

## Fabric Toy Box 522079

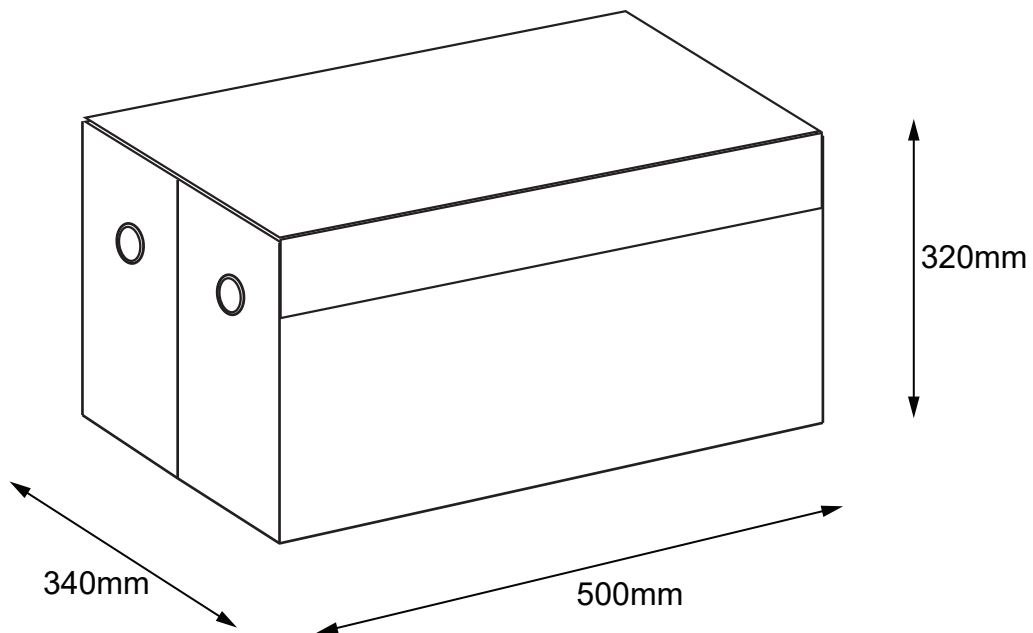

# IMPORTANT!

## READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

Assembly to be carried out by a competent adult only.

During assembly children should be kept away from the product due to possible risk of injury

We recommend furniture be assembled near where they will be placed, to avoid moving the product unnecessarily once assembled.

**WARNING** Be aware of the risk of open fires and other sources of strong heat in the vicinity of the product.

**WARNING** DO NOT use the product if any part is broken, torn or missing and use only spare parts approved by the manufacturer.

This product is suitable for children in the age range 3-12 years.

Maximum weight allowed on product: 3kg.

### Care and Maintenance of your Furniture

Do not expose upholstered furniture to direct sunlight for long periods.

Avoid excessive wear and tear on your upholstery.



Avoid allowing pets on the upholstery as their claws may cause damage to the cover.

### Cleaning Advise


For light daily cleaning, use a clean, damp cloth (not wet).

In case stronger cleaning is required, use only detergent specially recommended for your furniture.

## PARTS LIST

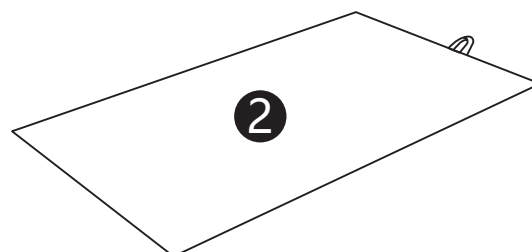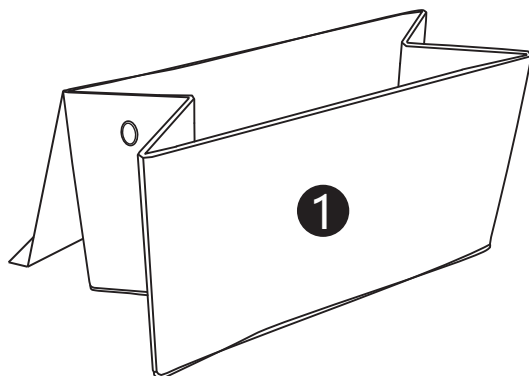

# 1

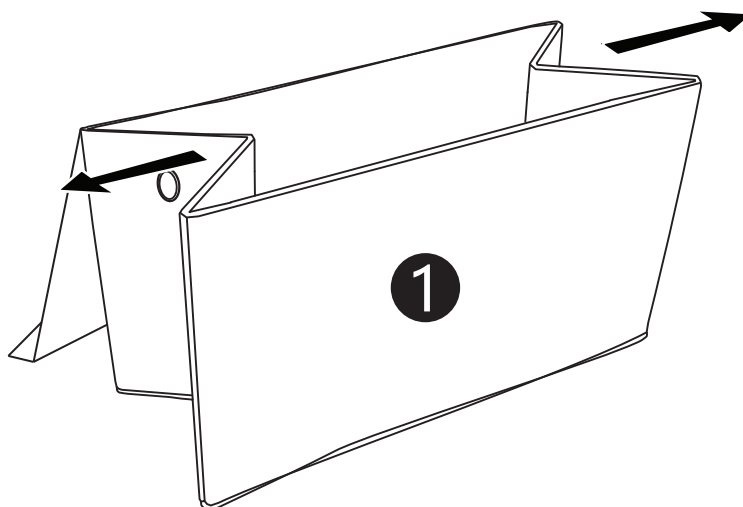

# 2

