




FIXING INSTRUCTIONS

For the Blade series featuring the Rota-Lock™ System

① Fix the bracket to the wall
1.73m (5ft 8ins) or
1.37m (4ft 6ins)
(for wheelchair based players)

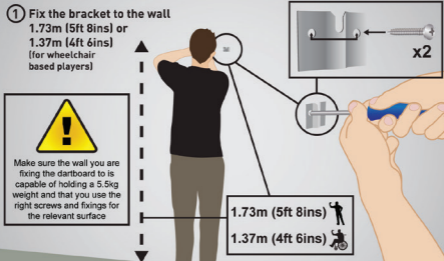


Make sure the wall you are fixing the dartboard to is capable of holding a 5.5kg weight and that you use the right screws and fixings for the relevant surface

1.73m (5ft 8ins) 
1.37m (4ft 6ins) 

x2

② Screw in the 3 adjusting jacks into the pre-drilled holes on the back of the dartboard

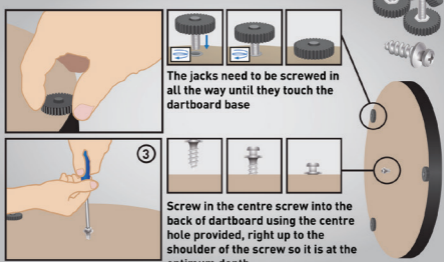

The jacks need to be screwed in all the way until they touch the dartboard base

③


Screw in the centre screw into the back of dartboard using the centre hole provided, right up to the shoulder of the screw so it is at the optimum depth

④ Lower the dartboard into the bracket keeping the number 20 at the top



⑤ Adjust all 3 of the jacks clockwise, a little bit each at a time, until the dartboard is tight against the wall

Fits to any surface



⑥ Check the dartboard is locked into position before commencing play



winmau
NAU
BLADE 5