

3+
Years



MISSION AIR PATROLLER™

 
INSTRUCTION GUIDE

CONTENTS

IMPORTANT INFORMATION: Remove all packaging before use. Retain this information, addresses and phone numbers for future reference. Content may vary from pictures. An adult should periodically check this toy to ensure no damage or hazards exist, if so, remove from use. Children should be supervised during play. Adult supervision advised.



Requires 3 x 1.5V AG13 (LR44) button cell batteries (included). Batteries or battery packs must be recycled or disposed of properly. When this product has reached the end of its useful life it should not be disposed of with other household waste. The Waste Electrical and Electronic Equipment Regulations require it to be separately collected so that it can be treated using the best available recovery and recycling techniques. This will minimize the impact on the environment and human health from soil and water contamination by any hazardous substances, decrease the resources required to make new products and avoid using up landfill space. Please do your part by keeping this product out of the municipal waste stream! The "wheelie bin" symbol means that it should be collected as "waste electrical and electronic equipment". You can return an old product to your retailer when you buy a similar new one. For other options, please contact your local council.

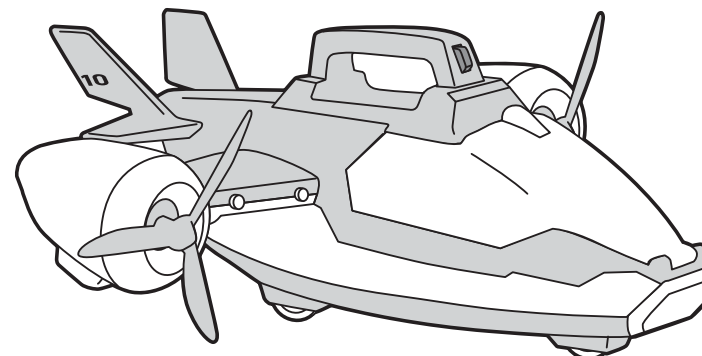

DO NOT RETURN TO THE STORE.



UK – 0800 206 1191, SERVICEUK@SPINMASTER.COM
IRELAND – 1800 992 249

WWW.SPINMASTER.COM

SPIN MASTER LTD., 450 FRONT STREET
WEST, TORONTO, ON M5V 1B6 CANADA.

Imported into EU by SPIN MASTER INTERNATIONAL,
S.A.R.L., 20 RUE DES PEUPLIERS, L-2328, Luxembourg
www.spinmaster.com



Meets CPSC safety requirements.

TM Spin Master Ltd. All rights reserved. ©2017 Spin Master PAW Productions Inc. Nickelodeon and all related titles and logos are trademarks of Viacom International Inc.

MADE IN CHINA

WARNING:
CHOKING HAZARD – Small parts.
Not for children under 3 years.
Do not aim at eyes or face.



 
3xAG13 (LR44) 1.5V
Included

Requires 3 AG13 (LR44) alkaline batteries. Batteries included are for in-store demonstration, and should be replaced to improve performance.



T16662_0009_20094074_EEN_IS_R1

BATTERY REMOVAL AND INSTALLATION INSTRUCTIONS

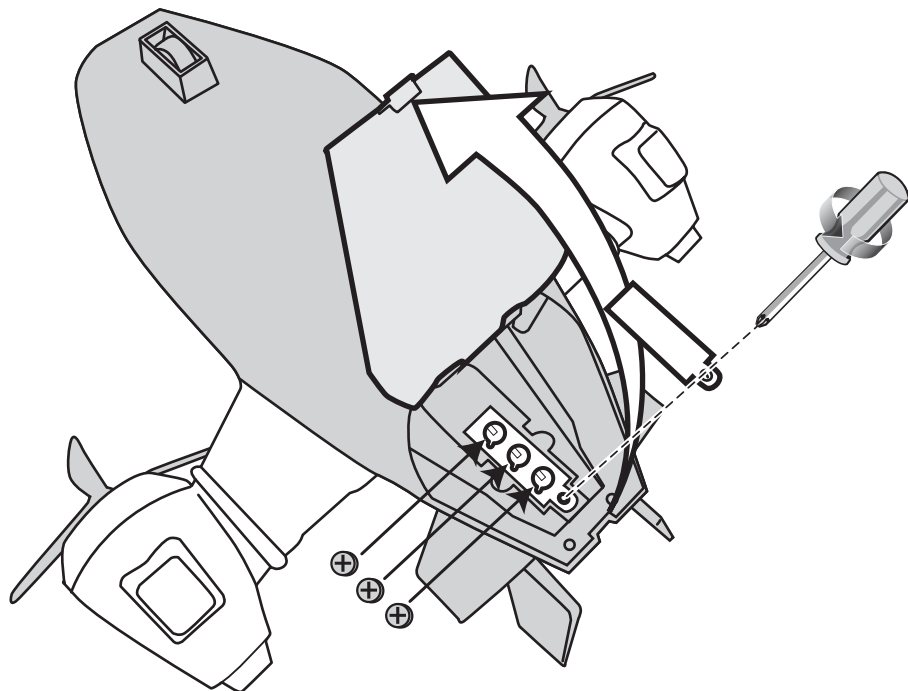


HOW TO INSTALL BATTERIES


1. Push latch and lift door on bottom of the Air Patroller™ to reveal battery door. 2. Open the battery door with a screwdriver (not included).
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery. DO NOT remove or install batteries using sharp or metal tools.
4. Install new batteries as shown in the polarity diagram (+/-) inside the battery compartment.
5. Replace battery door securely.
6. Check your local laws and regulations for correct recycling and/or battery disposal.

NOTE: Always use fresh, premium quality batteries.

 
⚠ WARNING: KEEP BATTERIES OUT OF REACH OF CHILDREN. This product contains a Button or Coin Cell Battery. A swallowed Button or Coin Cell Battery can cause internal chemical burns in as little as two hours and lead to death due to chemical burns and potential perforation of the esophagus. Dispose of used batteries immediately and safely. Used batteries can still be dangerous. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

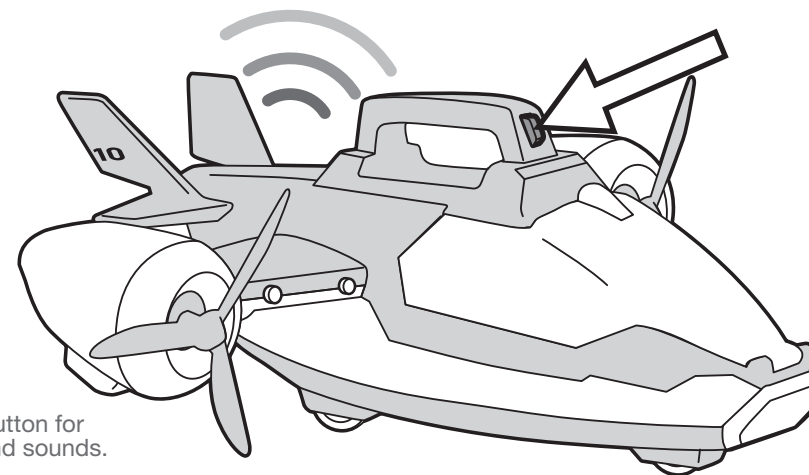

- 1 Press button for lights and sounds.

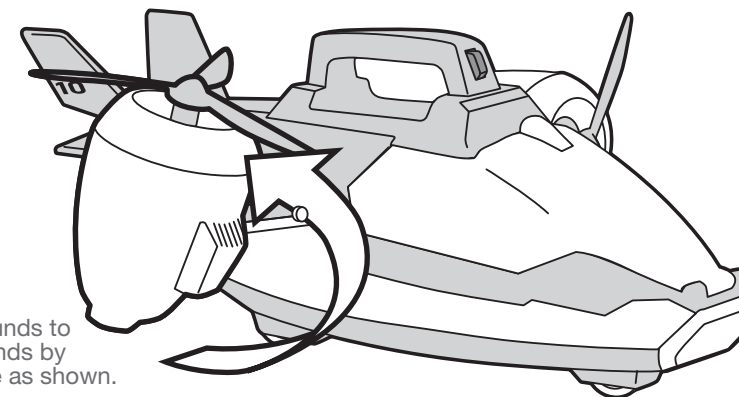 

 - 2 Change jet sounds to helicopter sounds by rotating engine as shown.

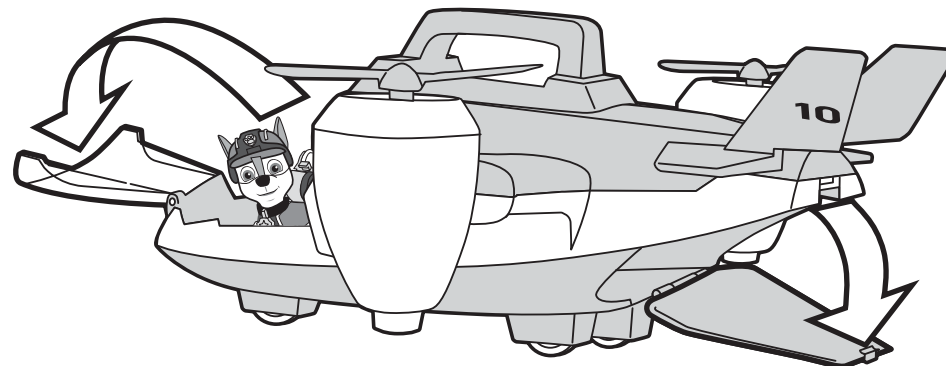

- 3 Cockpit and cargo bay door open.