



IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions are required to always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING (This Appliance)

DANGER- To reduce the risk of electrical shock:

- Do not reach for an appliance that has fallen into water. Unplug immediately from receptacle.
- Do not use while bathing or in a shower.
- Do not place or store appliance where it is able to fall or be pulled into a tub or sink.
- Do not place in or drop into water or other liquid.
- Except when charging, always unplug this appliance from the electrical outlet immediately after using.
- Unplug this appliance before cleaning.

WARNING- To reduce the risk of burns fire, electrical shock, or injury to persons:

- Do not crush, disassemble, heat above 100°C (212°F), or incinerate the appliance, due to risk of fire, explosion or burns.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction, by a person responsible for their safety, concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Keep the appliance dry. It is essential to prevent electrical equipment from coming in contact with water or other liquids.
- This appliance is to be used with the power supply unit provided with the appliance. If the power supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not specified by the manufacturer.
- Never drop or insert any object into any opening.
- Do not use this appliance with a damaged or broken blade or attachment, as it has the potential to result in facial injury.
- During use, do not place or leave the appliance where it is expected to be subject to damage by animal, or exposed to weather.

SAVE THESE INSTRUCTIONS

This appliance is intended for household use.

RECHARGING

1. This trimmer is conveniently designed for household use. It should be allowed to charge overnight before first use.
2. Connect the transformer to the trimmer. BE SURE TRIMMER IS IN THE "OFF - 0" POSITION WHEN CHARGING.


3. Plug the recharging transformer into any convenient electrical outlet at the correct voltage.
4. When trimmer is low in power, it should be connected to the transformer and plugged into an outlet to assure maximum power is available when it is next used. This transformer is designed to continuously charge the battery without overcharging.
5. This appliance is to be used with the power supply unit provided with the appliance.

TROUBLESHOOTING

If your Trimmer does not seem to take a charge, check the following before returning it for repair:

1. Check outlet voltage by plugging in another appliance.
2. Make sure the outlet simply is not connected to a light switch which turns the power at the outlet off when lights are turned off.
3. Be sure the trimmer is properly connected to the recharging transformer, all connections are secure and the switch on the trimmer is turned "OFF - 0."
4. If your electricity is connected to a master power switch, we suggest the trimmer be disconnected from the charger anytime the master switch is off. Leaving the unit plugged into a dead outlet or an unplugged charger will drain the battery.
5. If trimmer does not run and it is completely charged, turn the unit "ON - I" and pinch or push the blades manually. (Oil may have dried out between the blades, so they may be temporarily stuck together.)

Do not try to repair the unit yourself, instead please contact our dealer or an official WAHL service centre.

 This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling

LITHIUM BATTERY REPLACEMENT, REMOVAL AND DISPOSAL

For battery replacement the entire, intact clipper or trimmer should be sent to: Wahl (UK) Ltd Customer Services (the address can be found on the reverse of the instruction booklet) or taken to a suitably qualified professional.

The battery should only be replaced by the original manufacturers spare, for safety reasons a substitute should not be used.

Do not attempt to remove the battery. Lithium-Ion batteries can explode, catch fire, and/or cause burns if disassembled, damaged or exposed to water or high temperatures.

LITHIUM BATTERY DISPOSAL

Do not dispose of this product or the Lithium battery in the normal household waste. The product should be returned to Wahl Customer Services where we offer a take back service or taken to a local collection facility where they will be dealt with safely and sent for the appropriate recycling.