



Installation Guidelines for Rotary Drier

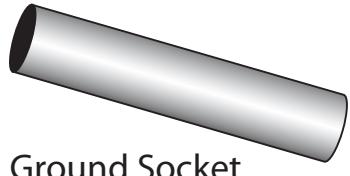


Ground Socket


1

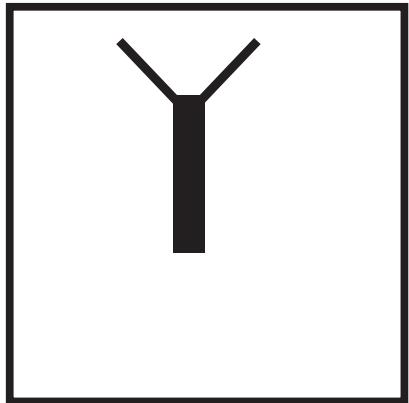

2

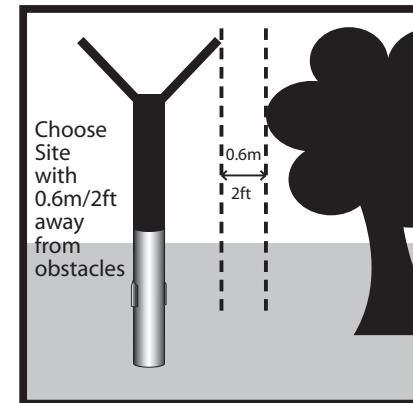


3

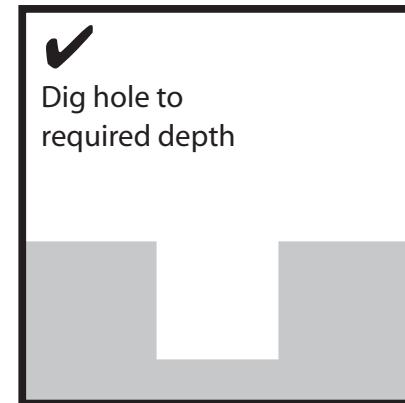


Dig hole to required depth

4

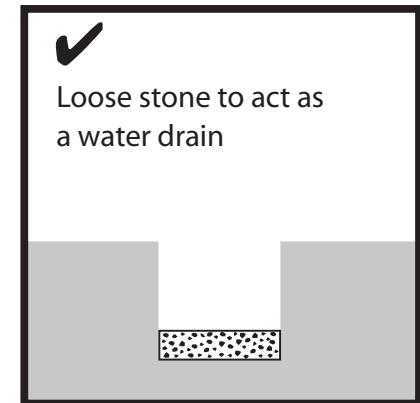


Loose stone to act as a water drain


5

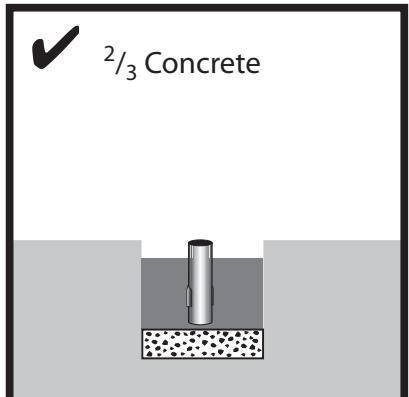


6

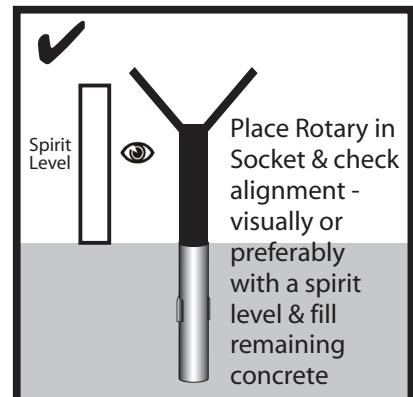

7


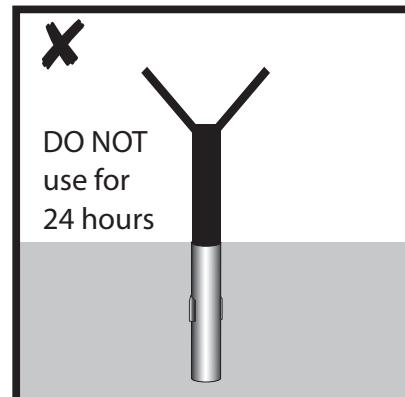


8

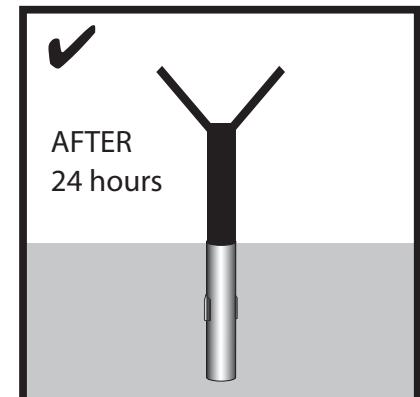



USER GUIDELINES FOR ROTARY DRIER

Component No. 109355
Artwork Ref.ISS/A

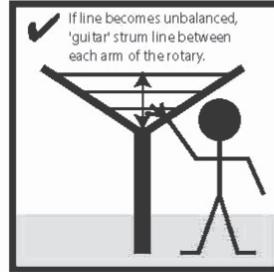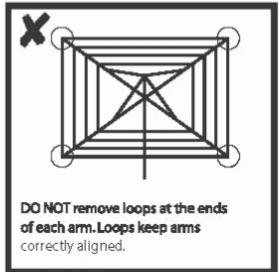

FOLD AND REMOVE AFTER USE

STORE SAFELY OUT OF THE REACH OF CHILDREN
CHILDREN SHOULD NOT PLAY WITH THIS PRODUCT
THIS DRYER IS **NOT** A CHILDRENS' TOY

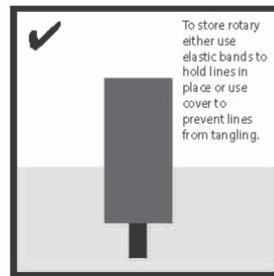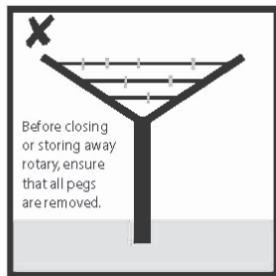


850/0258 (5 years guarantee against frame failure due to rust, against a dated proof of purchase)

850/0502 (4 years guarantee against frame failure due to rust, against a dated proof of purchase)




850/0416 (4 years guarantee against frame failure due to rust, against a dated proof of purchase)

**Customer Helpline
0845 7697356**

MECHANISM

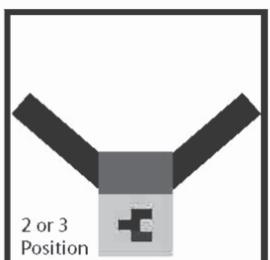

OPERATING

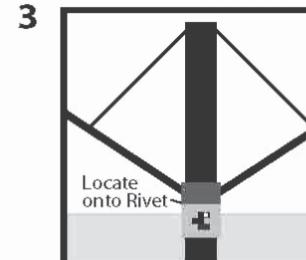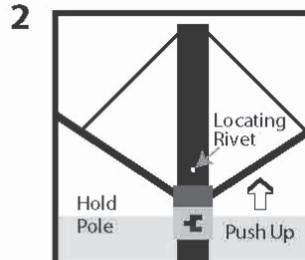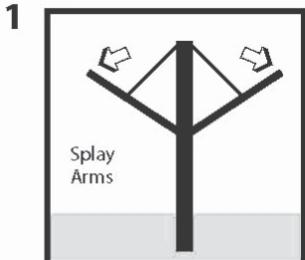

TENSIONING

