Instructions for Analog Watch

Date: 16/1/2007

FRONT

2"

 
Instructions for Analog Watch

Thank you for purchasing a Quartz watch. Your new watch is made with a high quality Quartz movement which provides accuracy within seconds per month. To ensure proper use, please read these instructions carefully and save them for future reference.

THE CARE OF YOUR WATCH
Avoid exposing your watch to violent shocks, extreme temperatures. Remove your watch before showering and washing. Do not expose your watch to any chemicals. If your bracelet has adjustable links, take your watch to a jeweler when you need to take out extra links for sizing.

SETTING THE WATCH

To change the time on your analog watch, simply follow the accompanying instructions.



BACK

SETTING TIME ON STANDARD ANALOG WATCH STYLES
Note: This "standard" style has no Calendar or Day/Dat "windows" on the dial and has only 2 Crown positions • Closed('A') and Open ('B').

To change the time, simply pull out the crown all the way until it stops (position 'B'). Rotate the crown in either direction until desired time is obtained. Push crown back in all the way (position 'A') to re-engage time keeping. (Second hand will begin to move, if your watch has a second hand).

BATTERY CHANGE

BAI IERY CHANGE
The miniature battery powering your watch should last over one (1) year. A dead battery should be changed right away so that the dead battery does not damage your watch. We hightly recommend that you take your watch to a jeweler to replace the battery.

2.815"