Winchester - Tall TV Unit

Assembly Instructions - Please keep for future reference

414/7990



Dimensions

Width - 119.9cm Depth - 39.4cm





Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, please visit www.argos-support.co.uk or email: Help@ClickSpares.co.uk (quoting your original order number) Alternatively, call the Spares Helpline on: 0370 112 1928. For any other queries please contact the Customer Helpline on: 0345 640 2020

A Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- *Warning:* This unit weighs approximately 36kgs. Please lift with care.
- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Parts of the assembly will be easier with 2 people.

- Make sure you have enough space to layout the parts before starting.
- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).



• We do not recommend the use of power drill/drivers *for inserting screws*,

as this could damage the unit. Only use hand screwdrivers.

- **Safety note:** It is recommended that this unit is secured to a wall using the overbalance protector kit supplied or, an alternative fixing method of your choice.
- Dispose of all packaging carefully and responsibly.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

Components - Panels

If you need help or have damaged or missing parts, please visit www.argos-support.co.uk or email: Help@ClickSpares.co.uk (quoting your original order number) Alternatively, call the Spares Helpline on: 0370 112 1928. For any other queries please contact the Customer Helpline on: 0345 640 2020

Please check you have all the panels listed below



Components - Fittings

If you need help or have damaged or missing parts, please visit www.argos-support.co.uk or email: Help@ClickSpares.co.uk (quoting your original order number) Alternatively, call the Spares Helpline on: 0370 112 1928. For any other queries please contact the Customer Helpline on: 0345 640 2020

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.





Step 1

Prepare the left divider

Tap 2 wooden dowels **D** into the left divider **3**.

Note: Wooden dowels **must not** stick out from the edge by more than 10mm or they may damage other panels.



Step 2

Prepare the right divider

Tap 2 wooden dowels **D** into the right divider **4**.



Step 3

Prepare the base

Insert 4 large locking nuts **B** into the base **6**.

Note: The arrow on the locking nut **must** point towards the hole in the edge of the panel.



Step 4

Fit the base

Attach the base **6** to the left divider **3** and right divider **4** with 4 screws **F**.



Step 5

Prepare the left side

Screw 6 metal dowels **A** into the left side **1**.

Insert 2 large locking nuts (B) into the left side [1].

Tap 2 wooden dowels **D** into the left side **1**.

Fit 2 hinge plates (K) onto the left side 1, making sure that the slot is facing towards the finished front edge.

Step 6

Prepare the right side

Screw 6 metal dowels **A** into the right side **2**.

Insert 2 large locking nuts **B** into the right side **2**.

Tap 2 wooden dowels **D** into the right side **2**.

Fit 2 hinge plates (onto the right side 2, making sure that the slot is facing towards the finished front edge.







Prepare the 4 long rails

Insert 2 large locking nuts **b** into each of the long rails **9**.

Tap 2 wooden dowels **D** into each of the long rails **9**.



Step 8

Fit 2 long rails

Push 2 long rails 9 onto the dividers 3 and 4 secure them with 4 screws **F**.



Step 9

Fit the right side

Push the right side **2** onto the assembly.

Use a screwdriver to tighten the 4 large locking nuts **B** fitted to the base **6** and the 2 long rails **9**.

Note: Turn the large locking nuts **B** as far as they will go - more than 1/2 a turn.



Step 10

Fit the other long rails

Push the 2 long rails **9** onto the right side **2**.

Use a screwdriver to tighten the 2 large locking nuts **B** fitted to the long rails **9**.



Note: Fit the long rail at the back last and support it until the left side has been fitted in the next step.

Step 11

Fit the left side

Push the left side **1** onto the assembly.

Use a screwdriver to tighten the 6 large locking nuts **B** fitted to the base **6** and the 4 long rails **9**.



Step 12

Prepare the top

Screw 4 metal dowels (A) into the top 5.



Step 13

Fit the top

Note: To make it easier to fit the top and plinths, place polystyrene blocks from the packaging underneath the side panels to raise the assembly.

Push the top **5** onto the assembly.

Use a screwdriver to tighten the 4 large locking nuts **B** fitted to the sides **1** and **2**.



Warning: The unit is heavy. Lift with care.



Step 14

Fit the 3 backs

a: Square up the unit by making sure that measurement **x to x** equals y to y.

b: Place the small back **13** in the centre of the unit and nail **(b)** along the top and bottom edges.

Place the 2 large backs **14** onto the unit as shown and nail **E** around the outside edges.

Note: Nails should be spaced about 150mm apart.

a: The measurement from top corner X to bottom corner X must be equal to the measurement from top corner Y to bottom corner Y



Step 15

Fit the 6 plastic nails

Tap 2 plastic nails **J** into the bottom edge of each of the sides **1** and **2**.

Tap a plastic nail **J** into the bottom edge of each of the long rails **9** fitted at the bottom of the unit.



Step 16

Prepare a side plinth

Insert a large locking nut (3) into 1 of the side plinths (10).

Tap a wooden dowel **D** into the side plinth **10**.

Step 17

Prepare the other side plinth

Insert a large locking nut (3) into the side plinth 10.

Tap a wooden dowel **D** into the side plinth **10**.

Step 18

Prepare the front plinth

Screw 2 metal dowels (A) into the front plinth [1].

Step 19

Fit the plinths together

Push the 2 side plinths **10** onto the front plinth **11**.

Use a screwdriver to tighten the large locking nuts (B) fitted to the side plinths 10.



Step 20

Fit the plinths

Position the 3 plinths onto the assembly ensuring that the bottom edge of the plinths are flush with the bottom edge of the sides, as shown.

Secure the 2 side plinths **10** through the left end **1** and right end **2** using 4 screws **H**



Step 21

Secure the front plinth

Secure the front plinth **11** through the long rail **9** using 2 screws **H**.

Carefully stand the unit up for the next step.



Warning: The unit is heavy. Lift with care.



Step 22

Fit the shelves

For each of the 4 shelves, insert 4 shelf studs **G**.

Lower the 4 shelves 7 and 8 down onto the shelf studs **G**.



Step 23

Prepare the 2 doors

Push fit 2 hinges **()** into each of the 2 doors **12**.

Secure each hinge with 2 screws **①**.

Note: Before securing with the screws, make sure that the hinges are positioned at 90 degrees with the edge of the door.





Step 24

Fit doors and handles

Note: The easiest way to attach each door **12** is to fit the top hinge first, then align and fit the other hinge.

a: Push the hinge **b** onto the front part of the hinge plate **b**. The recess at the bottom of screw B goes into the slot in the hinge plate.

b: Keep the hinge **b** FLAT against the hinge plate **()** as you slide it across as far as it will go. Tighten screw A.

C: The hinge **L** must be flat against the hinge plate **K** prior to any adjustment.

d: The hinge D must NOT be AT AN ANGLE to the hinge plate **(x**) when assembled. This would indicate that the recess at the bottom of screw B had not located in the slot in the hinge plate and the hinge would not be secure. Remove the hinge from the hinge plate and then re-assemble being careful to follow instructions a-c.

e: Attach a handle **(M)** to each door **12** using screws **G**.



Step 25

Adjust the doors if needed

a: Before adjusting the doors, use a spirit level to check the base (or top) of the unit is level, front-to-back and side-to-side in the 3 positions shown. Use suitable packing pieces (not supplied) to make the unit level BEFORE making any adjustment to the hinges, as shown.

b: Height adjustment.

Loosen screws A on hinge plates and move door up or down as required. Retighten screw A.

C: Forward and Back adjustment.

Loosen screw B on hinge plate and move door in or out as required. Retighten screw B.

d: Sideways adjustment.

To move door 'out' loosen screw C. To move door 'in' tighten screw C.



Step 26

Fit the overbalance protector kit

To prevent possible overbalancing we recommend that this unit is secured to a suitable wall by fitting of the overbalance protector kit to the unit, or an alternative fixing method of your choice.

Wall fixings are not supplied as they will need to suit the wall type.

Note: Take care when drilling the wall that you do not drill into any pipes, wires etc. If in doubt, consult an expert.

Assembly is complete



If you need help or have damaged or missing parts, please visit www.argos-support.co.uk or email: Help@ClickSpares.co.uk (quoting your original order number) Alternatively, call the Spares Helpline on: 0370 112 1928. For any other queries please contact the Customer Helpline on: 0345 640 2020