


| 工厂型号 | 客户型号 | 改稿日期 | 制稿人 |
|--|---------------|-----------|-----|
| PTC-907B | PTC-907B | 2025/5/22 | myl |
| 尺寸 | 材质 | 印刷颜色 | |
| 145x210mm | 双胶纸，具体以采购合同为准 | 单色 | |
| 备注 | / | / | |
| <p> 注：印刷前请与此文件仔细核对。如有疑问，请及时与我联系！ (如未发源文件，请对照“改稿日期”“版本”信息，对上再进行安排)</p> | | | |



This product is only suitable for well insulated spaces or occasional use.
Please read the instructions fully before use.



Safety information important- please read the instructions fully before operating.

For household and indoor use only.

This appliance must be used for its intended purpose only and operated as instructed in this user manual.

Use only the voltage specified on the rating plate of the heater.

WARNING: In order to avoid overheating do not cover the heater.

WARNING: To reduce the risk of fire, keep textiles, curtains, or other flammable materials at least 1 m away from the air outlet.

- Only use this heater on a horizontal and stable surface.
- Do not place the heater immediately below a socket outlet.
- Do not use this appliance with a programmer, timer, separate remote-control system, or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.
- To avoid risk of overloading your plug socket, the use of an extension lead with this heater is not recommended.
- Important- this heater is intended for floor use only. Do not mount on ceilings or walls.
- Do not use this heater in the immediate surrounding of a bath, a shower or a swimming pool.
- Do not leave the appliance unattended.

WARNING: Do not use this heater in small rooms, when they are occupied by people unable to leave the room alone, unless constant supervision is provided.

 
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Children should be supervised to ensure that they do not play with the appliance.
- Children less than 3 years should be kept away unless continuously supervised.
- Children aged from 3 years and less than 8 years shall only switch

on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

CAUTION- some parts of this product can become very hot and cause burns. Particular attention must be given where children and vulnerable people are present.

- Check the appliance before each use for signs of wear or damage. If damaged, discontinue from use immediately and do not use until the appliance has been inspected and approved for use by a qualified service person.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or a similarly qualified persons in order to avoid hazard.
- Always switch off the heater before removing the plug from the power socket.
- Do not remove the plug from the power socket by pulling on the cord, always grip the plug to remove.
- Always unplug the appliance when not in use, when moving the appliance or before cleaning.
- Do not immerse the appliance or its cord in water or any other liquids.
- Do not twist, kink, or wrap the cord around the appliance as this may cause the insulation to weaken and split.
- Do not run the power cord under carpets, rugs etc.
- Do not cover or restrict the airflow to the inlet or exhaust grilles, restricted airflow can cause the appliance to overheat and become a fire risk.
- Do not insert or allow any foreign objects to enter any ventilation or exhaust opening, as this may cause an electric shock, fire, or damage the appliance.
- Do not use this heater if it has been dropped.
- Do not use if there are visible signs of damage to the heater.
- Do not use the heater on deep pile carpets or long hair type rugs. Keep combustible materials such as drapes and other soft furnishings away from the heater.

Getting to know your heater.

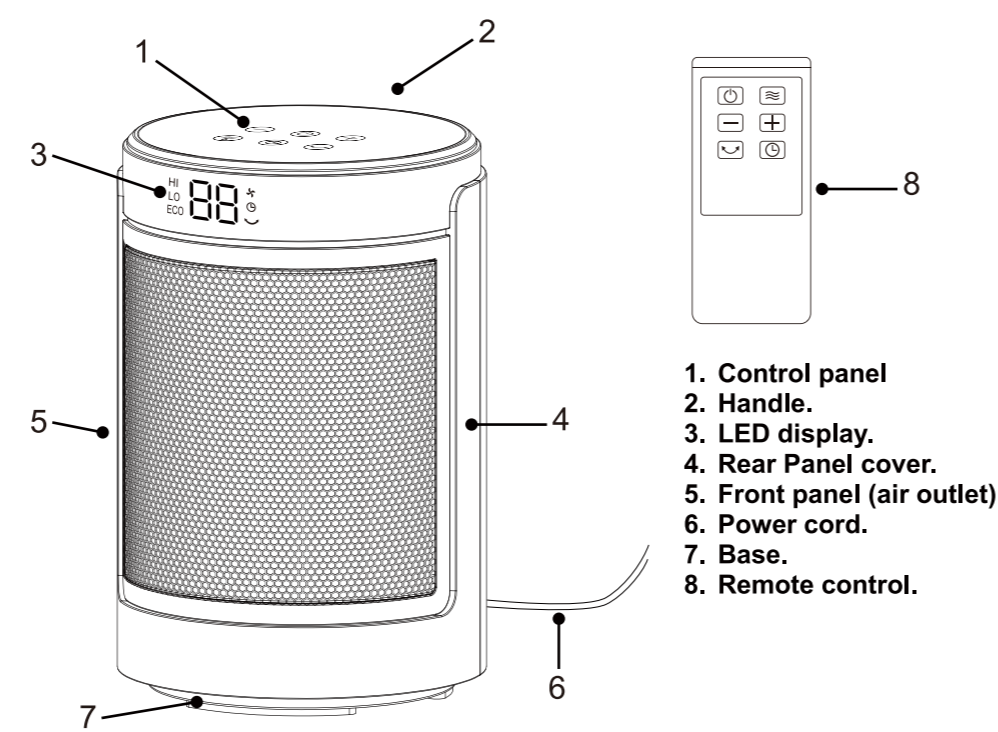


Remote control

- Follow the manufacturer's instructions when installing new batteries.
- Only use 'AAA' 1.5V batteries in this remote control.
- Be sure to insert correctly taking care to observe the correct polarity (+ and -).
- Do not mix old and new batteries.



WARNING: to avoid overheating do not cover the heater.

 Control Panel.

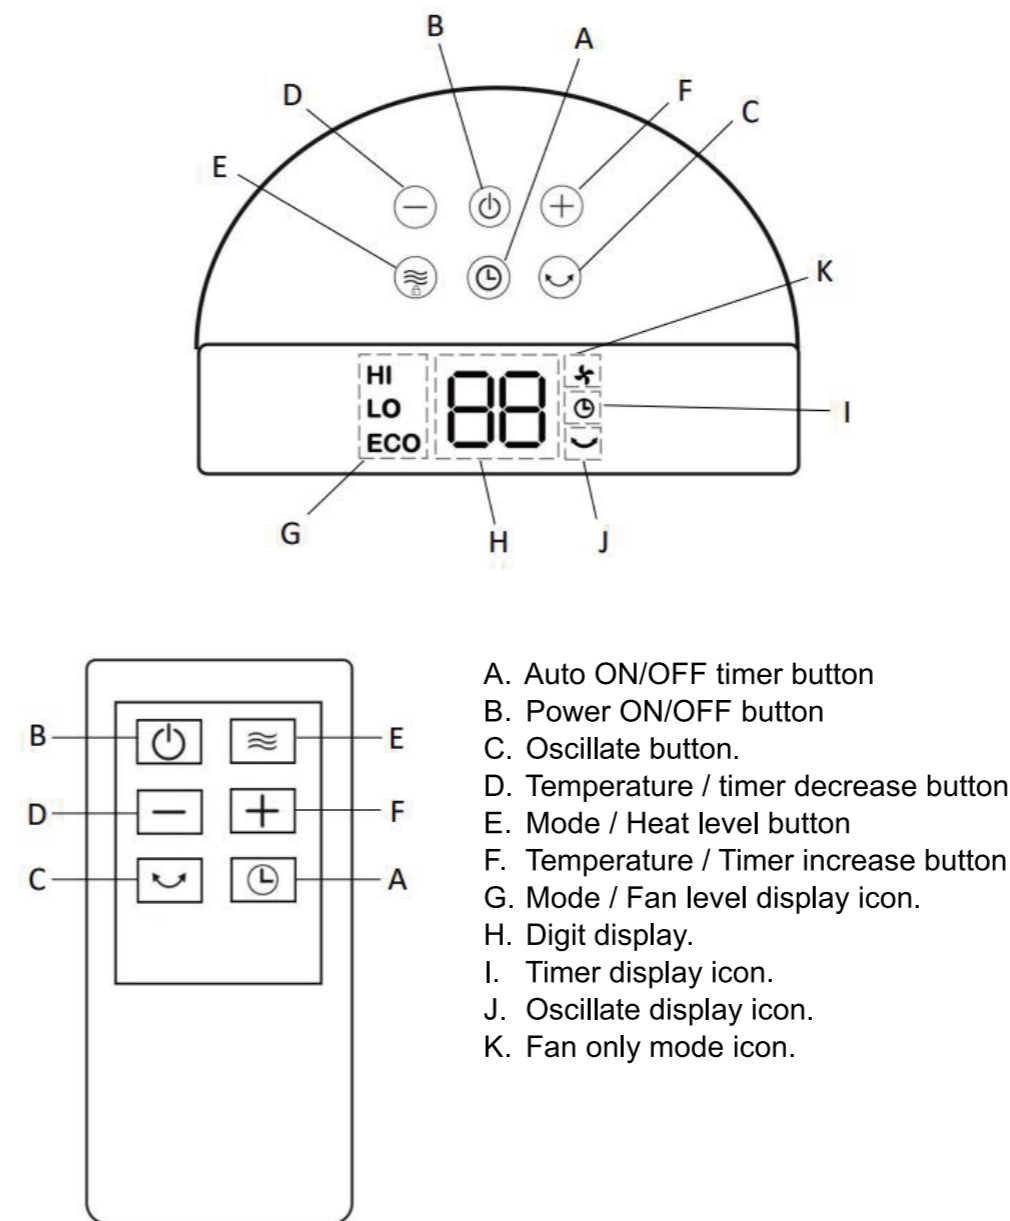

Before using your heater.

Make sure you have read and understood the instructions fully.

- Check the appliance before each use for signs of wear or damage. If damaged, discontinue from use immediately and do not use until the appliance has been inspected and approved for use by a qualified service person.
- Position the Heater on a dry, level, sturdy surface, where it is unlikely to get knocked or tripped over and making sure the inlet and outlet grilles are free from obstruction.
- Connect the plug to the appropriate mains supply, making sure the plug is fully inserted.
- When you have finished using the heater. Make sure you switch off and unplug the power cord.

NOTE: care should be taken with the positioning of the appliance due to the mains cable creating a trip hazard.



Power On/Off Button. Press this button to switch the heater ON. The heater will start with the default settings; High fan mode and temperature setting of 35°C.

Press this button again to switch the heater OFF. NOTE: it takes 30 seconds for the heater to shut off, with a countdown time shown on the display.



Mode/ Heat + Child lock (5 second press)

When the heater is on, repeatedly press this button to cycle through the different modes: Hi (HI) → Low (LO) → ECO (ECO) → FAN only (FAN).

In ECO mode the heater will adjust between the High and Low modes automatically based on the ambient temperature.

The temperature can be set on High / Low and ECO mode but not fan only mode.

When the set temperature is reached, the display will flash and the heater will stop working. When the ambient temperature is lower than the set temperature, the heater will start working again.

Child Lock – hold the mode button down for 5 seconds to activate/ deactivate the child lock. The heater will beep twice to confirm the lock is enabled/ disabled. When the child lock function is on 'LC' will show on the screen.

Adjustment buttons – when the unit is on, press the + or – buttons to adjust the temperature from 5 to 36°C in 1°C increments. If you rapidly press these buttons or hold them down the temperature will change rapidly.

The adjustment buttons can also be used to adjust the Timer (see below).

Auto ON/OFF Timer button.

To set the timer to automatically turn the heater OFF. When the unit is powered on, press the Timer button and then use the controls + or – to adjust the hours on the timer. The timer will cycle through 00, 01, 02... up to 24hrs, once the time has been selected, it will confirm this automatically.

When the selected number of hours has been reached, the heater will stop running.

To set the Heater to automatically turn ON. Plug the heater in and while its in standby mode, follow the instruction above to set the timer. When the time is up, the heater will automatically turn on.

The cancel the timer setting, press the Auto ON/OFF Timer button on the heater and the timer indicator will flash. Then press the Auto ON/OFF Timer button again or press + or – to adjust the timer setting to 00 hours.

Oscillate Button – when the heater is switched on press the Oscillate button. The heater will start to move side to side to generate a wider spread of heat.

Remote Control Buttons.

The button on the remote control work the same as the ones on the heater, except for the child-lock function.



WARNING: to avoid overheating do not cover the heater.

Other Functions

Memory Function. If the heater is turned off then on again, the heater will resume operation in the mode it was in before it was turned off. If the heater is unplugged then plugged back in again, it will default to the original settings.

Tip over switch. When tipped over, the heater will automatically shut off. To restart the heater, turn it off at the plug and unplug the heater. Place the heater on a flat level and stable surface, then reconnect the plug to the mains power supply and switch the heater on again.

Overheat protection. When the inner temperature of the heater is abnormally high, such as when the heater is covered in operation, the heater will cut-out and stop heating in order to avoid risk of fire.

Care and Maintenance.

The heater requires regular cleaning to ensure trouble free operation:

- Always turn off and unplug the heater from the mains supply before cleaning.
- Make sure the appliance has cooled down completely before cleaning.
- Use a slightly damp cloth to wipe the exterior of the heater to remove dust and dirt. Never immerse the heater, cord or plug in any liquid.
- Use a vacuum cleaner or compressed air to remove dust and fluff from the inlet and outlet grilles.
- Ensure the heater is fully dry before plugging back into the mains supply.
- If the heater has collected dust or dirt inside the unit or around the element, have it unit cleaned by a qualified service agent. Do not operate the heater in this condition.

Storage.

- Do not store the heater whilst it is still hot.
- When the heater is not in use, it is recommended that the heater is re-packed in its original packaging and stored in a cool, dry place.

Trouble Shooting.

| Problem | Potential reason | Potential solution |
|--------------------------------------|---|---|
| Malfunction codes on the LED display | E1 - Temperature sensor open circuit E2 - Temperature sensor short circuit | Unplug it from the power source and contact customer service Unplug it from the power source and contact customer service. |
| Heater does not start. | Power cord is not plugged in | Connect the plug to a powered electrical outlet |
| | Overheat protection has been activated | 1. Turn the heater off, unplug it and allow it to cool. 2. Check and remove any objects on or next to the heater 3. Wait 5-10 minutes before plugging the appliance back in |
| The heater suddenly stops working | No power is passing through the appliance | 1. Check that your circuit breaker or fuse is working properly 2. Check the heater is placed on a flat and even surface. |
| | The set temperature is lower than the ambient temperature. | Make sure the thermostat is set to a higher temperature than the ambient temperature. |
| The heater is not working | The heater is tipped over | Turn off the heater and unplug it from the power supply. Allow it to cool, then reconnect the plug. |
| | The heater is tipped over | Place the heater on a flat, level and stable surface. |
| The appliance is dirty | Inspect the heater. Clean the air inlet and outlet grilles with a vacuum cleaner if necessary. If there are any physical signs of damage (eg. Melting or burning on the case). Do not attempt to use the appliance. Leave all maintenance work to a qualified professional. | Customer helpline 0345 604 0105 |

WARNING: to reduce the risk of personal injury, always unplug the heater before performing maintenance or trouble shooting checks.

Technical Specifications.

| BUSH Digital Ceramic personal Heater | |
|--------------------------------------|---------------------------------|
| Model Number | PTC-907B |
| Input rated voltage | 220-240V 50-60Hz |
| Output rated voltage | 1500W |
| Weight | 1.5kg |
| Dimensions | 170x171x260mm |
| Oscillation | 60° |
| Recommended room size | 15m ² |
| Bush Careline | Customer helpline 0345 604 0105 |



Produced in China for Argos EC1M 6HA, UK.
Argos (N.L.) BT8 6FX, UK.

Recycling electrical products.

You should now recycle your waste electrical goods and in doing so help the environment. This symbol means an electrical product should not be disposed of with normal household waste. Please ensure it is taken to a suitable facility for disposal. Visit www.recycle-more.co.uk, click on "bank locator" and enter your postcode to find your nearest recycling site.

Information requirements for electric local space heaters

| Model identifier(s): PTC-907B | | | | | |
|---|---|-------|------|---|-------|
| Item | Symbol | Value | Unit | Item | Unit |
| Heat output | | | | | |
| Type of heat output/room temperature control (select one) | | | | | |
| Nominal heat output | P _{nom} | 1,500 | kW | Single stage heat output and no room temperature control | [no] |
| Minimum heat output (indicative) | P _{min} | 0,750 | kW | Two or more manual stages, no room temperature control | [no] |
| Maximum continuous heat output | P _{max,c} | 1,500 | kW | with mechanic thermostat room temperature control | [no] |
| Power consumption | | | | | |
| with electronic room temperature control | | | | | |
| In off mode | P _o | 0,00 | W | Electronic room temperature control plus day timer | [no] |
| In standby mode | P _{sm} | 0,41 | W | Electronic room temperature control plus week timer | [no] |
| In idle mode | P _{ide} | 0,52 | W | Other control options (multiple selections possible) | [no] |
| In network standby | P _{snm} | 0,00 | W | room temperature control, with presence detection | [no] |
| Standby mode with display information or status | NO | | | room temperature control, with open window detection | [no] |
| Seasonal space heating energy efficiency in active mode | η _{sp,act} | 91,5 | % | with distance control option | [no] |
| | | | | with adaptive start control | [no] |
| | | | | with working time limitation | [yes] |
| | | | | with black bulb sensor | [no] |
| | | | | Self-learning functionality | [no] |
| | | | | Control accuracy | [no] |
| Contact details | Argos EC1M 6HA, UK. Argos (N.L.) BT8 6FX, UK. | | | | |

Product support



Help and assistance
If you require any technical guidance or find that your appliance is not operating as intended, a simple solution can often be found online at www.bushsupport.com

If you still require further assistance, call one of our experts on 0345 604 0105*. To help give us you a fast and efficient service please have the following information ready:

Model Ref.

Serial number

Date of purchase

Local call rates apply*

Lines open 8am-7pm Monday to Saturday and 10am-4pm Sunday.

*Calls to Bush enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see www.bt.com/pricing for details.

For security and training purposes, telephone calls to and from customer service centres may be recorded and monitored. Calls from Republic of Ireland will attract international call charges.

section of these instructions, or online at www.bush-support.com If you still require further assistance, call one of our experts on 0345 604 0105

Plug and wiring advice.

The wires in this mains lead are coloured in accordance with the following UK electrical code:


| |
|------------------------|
| BLUE = NEUTRAL |
| BROWN = LIVE |
| GREEN + YELLOW = EARTH |

Non-rewireable plug

This appliance may be fitted with a "non-rewireable" plug. If you need to change the fuse in a "non-rewireable" plug, the fuse cover must be refitted. If the fuse cover is lost or damaged, the appliance must not be used.

Rewireable plug.

 The colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in a rewireable plug. **Rewireable plugs should only be replaced by a suitably competent person. If in doubt, consult a qualified electrician.**

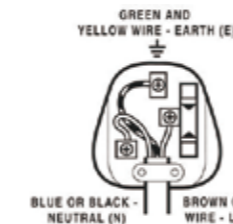

The BLUE wire must be connected to the terminal marked with the letter N
The BROWN wire must be connected to the terminal marked with the letter L
The GREEN & YELLOW wire must be connecting to the terminal marked with the letter E or the earth symbol (⏚)



BLUE OR BLACK (NEUTRAL IN) | BROWN OR RED (LIVE IN)

Product support

Help is always at hand



Call us now and register your 12 month guarantee

Thank you for choosing Bush. Your new product is guaranteed against faults and breakdowns for 12 months. Don't forget to register it with us today so we can provide you with our best possible after-sales service and useful updates.

www.bushregistration.co.uk

FREEPHONE*
0800 597 8548

Lines are open 8am - 8pm, 365 days a year. *Calls may be recorded and monitored.

Your Bush Guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from who you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in the manual.
- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- Bush disclaim any liability for loss or damage arising from the breakdown of the product.
- This guarantee is in addition to and does not diminish your statutory or legal rights.

Important Data Protection Information

To find out how we and Domestic & General Insurance Plc use your data please refer to the guarantee registration material or visit www.bushregistrations.co.uk.

Guarantor: Argos EC1M 6HA, UK. Argos (N.L.) BT8 6FX, UK.