




Instructions by Time4Sleep Products

Lucille Upholstered TV Bed Frame

Assembly instructions for Lucille Upholstered TV Bed Frame by Time4Sleep.

Product Information

Lucille Upholstered TV Bed Frame

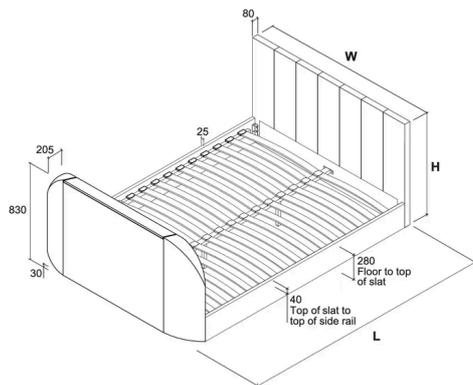

Description

Introducing our natural velvet TV bed with remote control TV lift and sprung slatted base - the ultimate in luxury and convenience. This bed is crafted with high-quality materials and features a sumptuous natural velvet finish that adds a touch of glamour to any bedroom.

The TV lift feature is operated by a remote control, making it easy to adjust the viewing angle and position of your TV from the comfort of your bed. The lift mechanism is quiet and smooth, ensuring that you can enjoy your favorite shows or movies without any distractions.

As a guide this model will accommodate an LED flat screen TV upto 42".

Product specifications

	Double	King
Width	145.6 cm	160.6 cm
Length	223.1 cm	223.1 cm
Height	115.8 cm	115.8 cm

SKU

Lucille46TVNatural, Lucille50TVNatural, Lucille46TVMidGrey, Lucille50TVMidGrey



Other information

Overall Dimensions (LWH mm)

- Double: 2200 x 1430 x 1155
- King: 2300 x 1580 x 1155
- Super King: 2300 x 1880 x 1155

Internal Dimensions (LW mm)

- Double: 1920 x 1380
- King: 2020 x 1530
- Super King: 2020 x 1830

Distance Between Slats (mm)

- Double: 75
- King & Super King: 73

Slat Dimension (mm)

- Double: 690 x 53 x 9
- King: 765x 53 x 9
- Super King: 610 x 53 x 9

Maximum TV Dims (WHD mm)

975 x 575 x 85

Before You Start

PLEASE READ this sheet prior to assembly to familiarise yourself with the various stages of construction.

- Carefully open the pack supplied and check the contents against the parts and fittings check list. Do not destroy any of the packaging until you are certain that you have all the necessary parts for the assembly.
- Please ensure that the packaging is disposed of in a safe and environmentally friendly way.

CAUTION:

- There are small components used in the construction of this unit.
- These loose items should be kept away from children during assembly, to avoid the danger of choking.

General Information

- It is very important not to place any vessel containing liquids, e.g. drinks or vase of flowers on top of the TV footboard that may accidentally spill and enter the TV compartment as this could cause damage to the TV and/or the TV lifting equipment. If this happens turn off the power and contact your retailer.



- Do not expose the bed to an undue level of heat - keep away from radiators.
- Never allow anyone to sit on the foot end of the bed - keep children well away from moving parts.
- To keep your bed clean, we recommend that it be wiped over with a slightly dampened cloth, or if fabric, use a light vacuum cleaner; disconnect power before cleaning.
- Supplied with the bed is a remote control to operate the TV Lift and there will be one to operate the television itself. Both these remotes will be supplied with batteries - there are no batteries in the rest of the equipment.
- When it is time to change the batteries there are strict controls for disposal of the old ones - your local council can advise on how to safely dispose of them. Never burn batteries on an open fire as they could explode.

Important Power Information

Before fixing the mattress baseboards to the bed, please follow the instructions below:

- Plug in the main power supply lead supplied with your bed; this is packed inside the TV footend pack
- It is essential that this power lead is connected to an earthed socket be it a wall socket or extension lead - otherwise there is risk of damage or even electric-shock.
- The wall socket providing the power must be accessible at all times in case you need to switch off the electric supply.
- Power cable supplied with this bed or other approved mains powered extension leads used to power your equipment must not be placed where they can be walked on - this is dangerous and could lead to accidents.
- Power outlets, extension leads or adapters must not be overloaded beyond their limit - this can result in fire or electric shock.
- During an electrical or lightning storm - disconnect the power completely as a precaution.
- Always un-plug the power when going on holiday or when the bed is not used for an extended period.
- If you have young children in the home always disconnect the power at the wall socket for extra safety.
- Do not interfere with or modify any cables already fitted and do not add any media cables unless they are routed through the ducts as shown. All leads must be tightly connected to back of TV, never hanging loose where they can get trapped.
- Never touch moving parts or any part of the equipment - if something needs to be checked, disconnect the power first.
- Do not insert anything into the footboard as this could seriously damage the TV and/or the TV lifting equipment and could, if done carelessly, cause serious damage or injury.
- If the equipment doesn't operate normally or if there is any unusual noises, disconnect the power and contact your retailer for advice.

Television Information

- Please follow the assembly steps for initial operation of the TV Lift, your TV and any media cables required.




- Push the television power plug (supplied with your own TV), into it's own special socket which is on the face of the footboard clearly shown in the instructions. For safety and to prevent overheating, this socket is only to be used for the television as it does not have a constant power supply.
- Raise the TV Lift by pressing the UP button of the remote control.
- If required you can connect media cables the television ports.
- Please use the cable clips & cable ties to make certain there are no loose wires to snag or get trapped.
- The television can now be operated following the TV User Guide.
- When finished viewing, lower the television back into the footboard by pressing the DOWN button of the remote control. For safety and to stop any overheating, power to the television is switched off when lift reaches the bottom rest position. When the UP button is pressed - the TV Lifting Column rises and power is turned back on automatically.

Tools

A - Bolts (M8x25mm)	32		B - Spring washers for M8 bolts	40	
C - Flat washers for M8 bolts	40		D - Allen key for M8 bolts	1	
Ea - Hook Bracket	2		Eb - Hook Bracket	2	
Counter-sunk screw (M4 x 12mm)	2		Counter-sunk screw (M6 x 12 mm)	2	
Bolt set (M8 x 25mm)	2		Allen key (2.5mm)	1	
Allen key (4mm)	1		Cross-head Screwdriver	1	
Tape Measure	1				



Parts

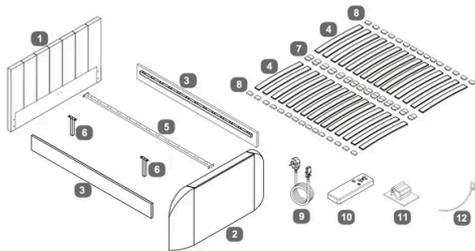


1	Headboard	1
2	Footboard	1
3	Side Rails	2
4	Wooden Slats	30
5	Centre Support Bar	1
6	Legs for Centre Support	2
7	Double Slat Caps	15
8	Single Slat Caps	28
9	Mains Power Lead - 3mt	1
10	Remote Control for TV Lift	1
11	Cable Clips	3
12	Cable Ties	3




Steps (10)

1. Attach Hook Brackets

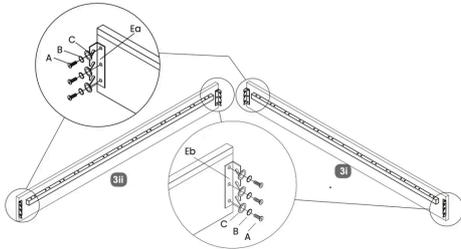


1. Position the hook brackets (Ea and Eb) as shown in the diagram.
2. Use screws labeled A, B, and C to attach the hook brackets to the side panels.
3. Ensure the screws are tightened securely to maintain stability.

2. Securing the Bed Frame

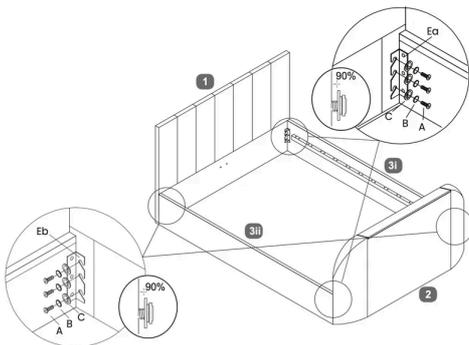

1. Align the side panels with the headboard and footboard.
2. Use the provided screws to secure them in place, ensuring a 90° tightness for initial alignment.
3. Once all panels are aligned, fully tighten all screws to ensure the frame is secure and stable.

3. Centre Support Bar




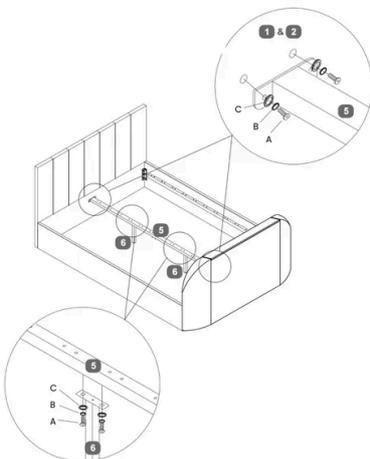


1. Secure the centre support bar to the headboard and footboard using screws labeled A, B, and C.
2. Attach the legs for centre support with the same screws (A, B, and C)




4. TV Lift Power Cable

1. Attach the power cable to the TV lift mechanism at the headboard.
2. Connect mains power lead (9) to your wall socket - for safety, this must be an earthed supply.
3. Use the handheld remote control to operate the TV lift. Press the "UP" button to raise the TV lift.

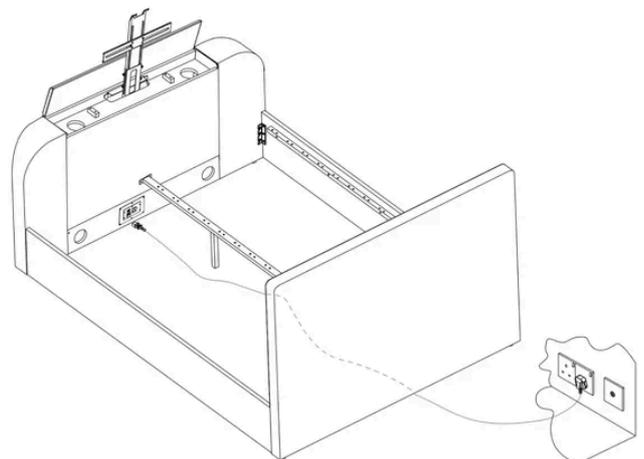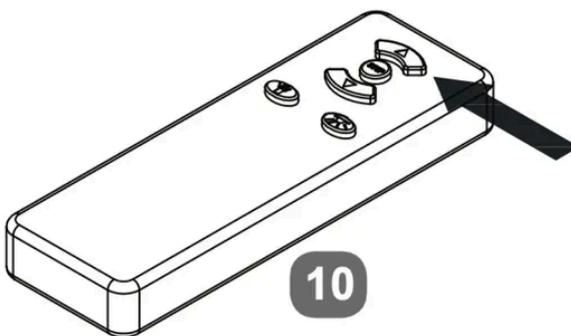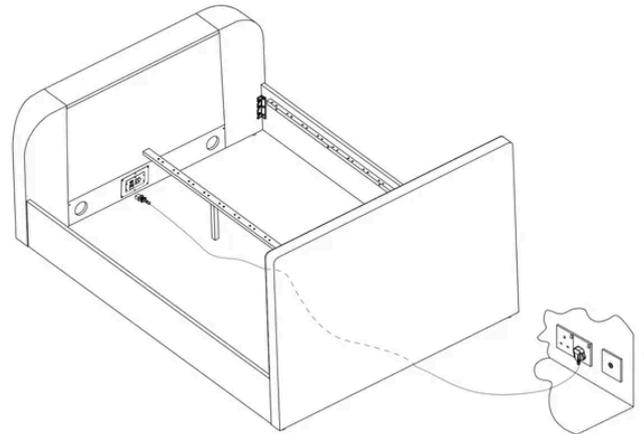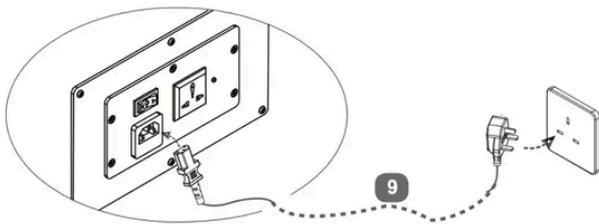

5. Media Cables






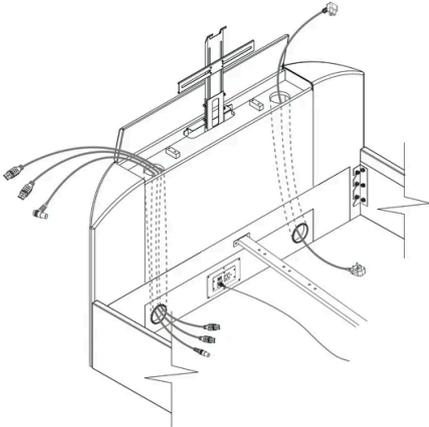


- Before fitting the tv, push cables through each duct from the top. Choose the best side to use depending on where the connection ports are on back of your tv. Never cross cables from one side to the other.
- TV Power Lead supplied with your own TV.
- Leads for HDMI or Aerial.
- If required, please purchase yourself - HDMI about 3mt long and length of aerial lead to suit the position of your wall socket.



6. TV Mechanism Assembly

  
1. Secure metal brackets to the lift mechanism with screws (a).
2. Align and secure the TV to the brackets.
3. Loosen knobs, set height, then tighten.
4. Ensure smooth movement, adjust if needed.

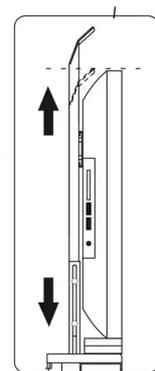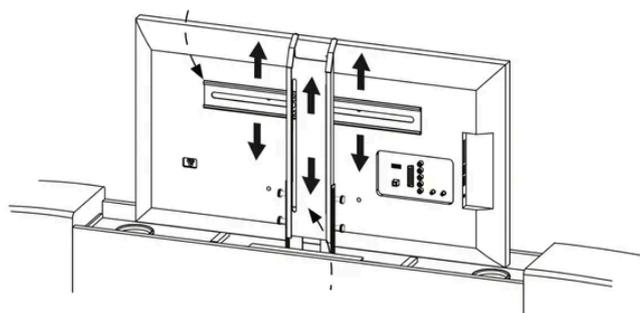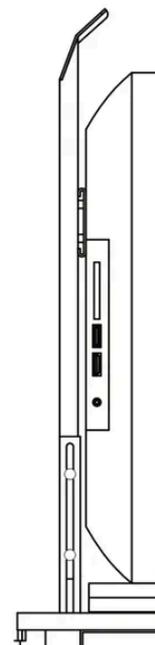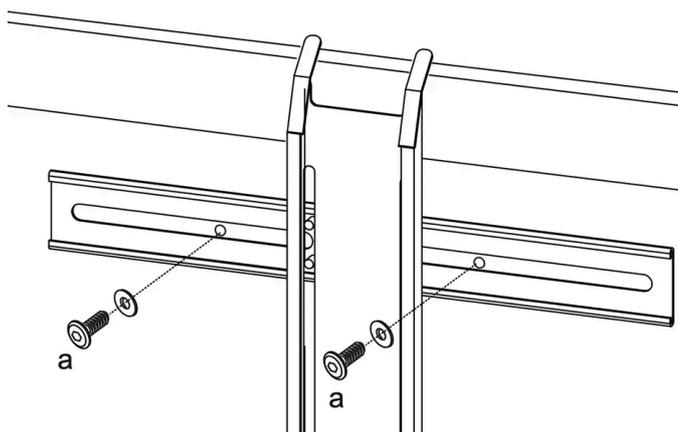

7. TV Cables



- Plug cables into the TV and antenna.
- Secure cables using clips (**11**) and fasteners (**12**).
- Plug the TV cable into the power socket inside the footboard.

TV power lead supplied with your own TV.

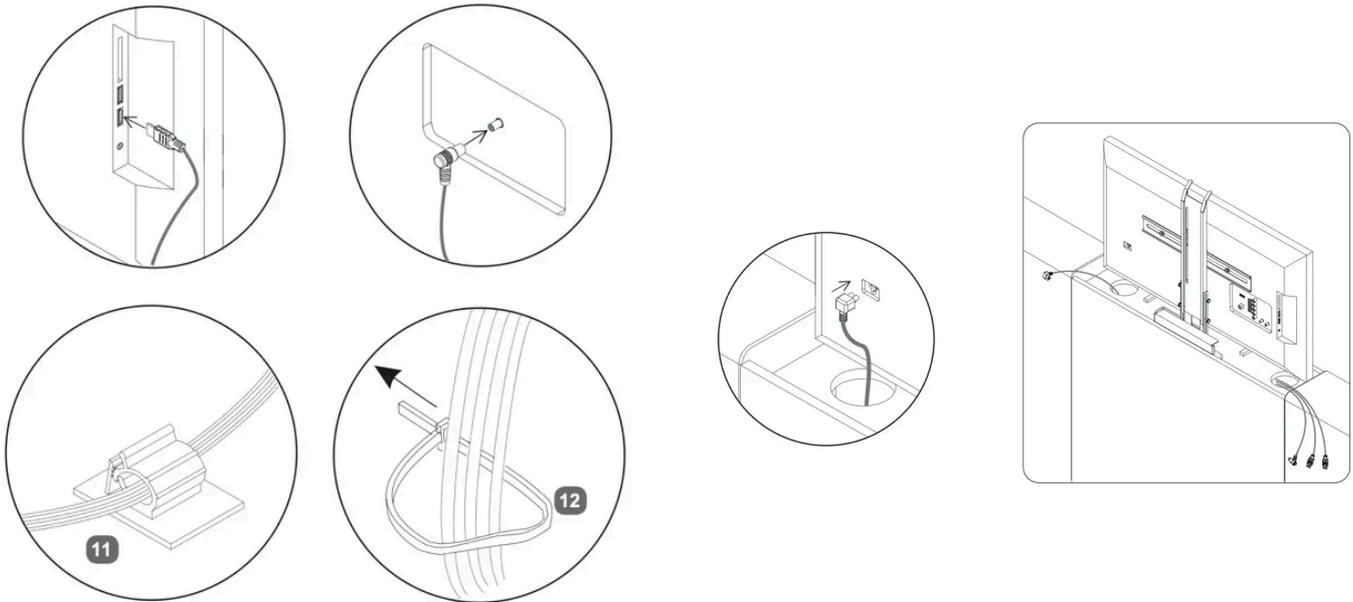

8. Power & Remote Setup



- Plug the bed's power cable into a wall outlet.
- Plug the TV antenna into the wall socket.
- Remove the safety tab (if any) and test the TV lift.

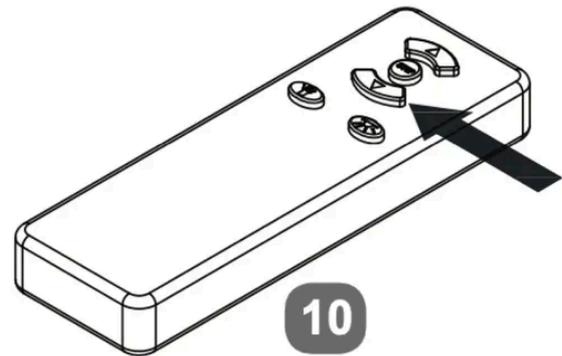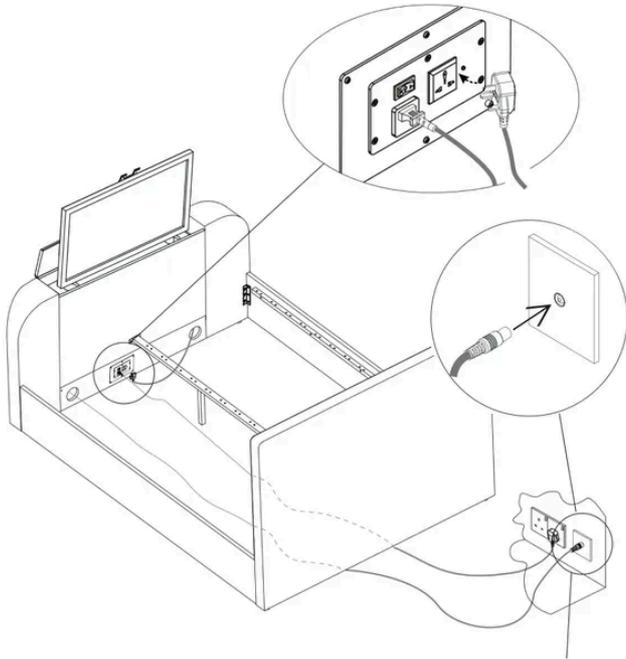


9. Fit the Slats

On either Double, King or Super King slat frames - fit the slats to the frame as follows:

1. Slide slats (4) into the double plastic caps (7).
2. Slide single plastic caps (8) onto each end.
3. Connect each set one by one onto the centre support bar(s) (5) & the metal support rail on each side rail (3) - align the lugs & tap gently with a light hammer.

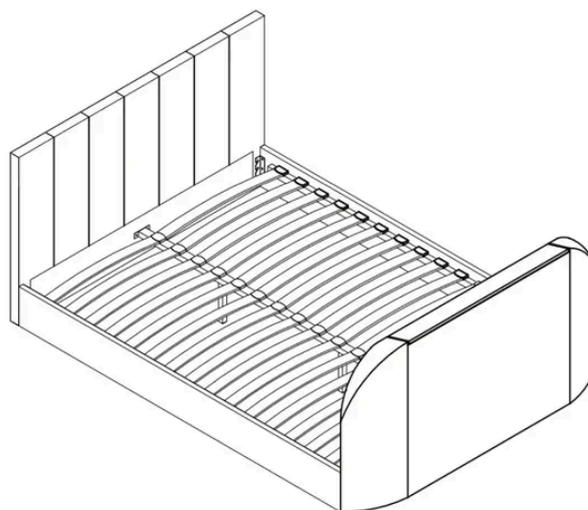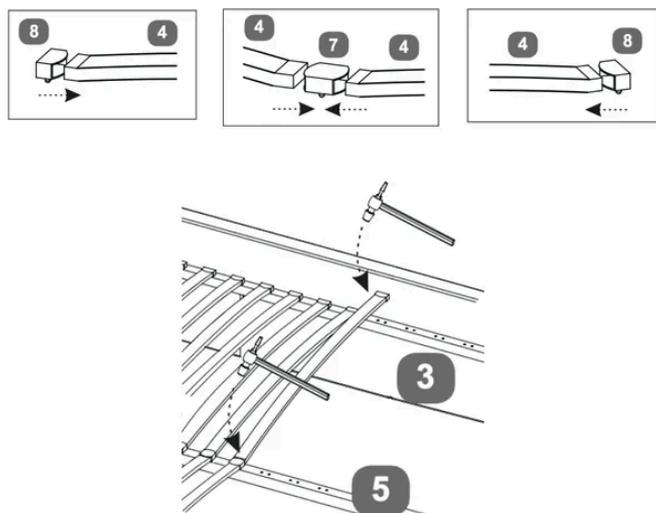

10. TV Remote

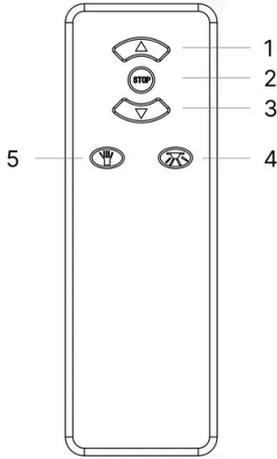

1. Press once and TV will rise to it's upper working position. Power to the TV will be connected automatically
2. Press once and TV Lift will stop.
3. Press once and TV will go down - as soon as the lower resting position is reached power to the TV is switched off to prevent it overheating.
4. Torch
5. Code Matching

Code Matching (pairing): occasionally pairing is lost, perhaps due to atmospheric conditions,

To re-pair - press and hold the code matching button whilst connecting the power by plugging the mains cable into the control box of the TV lift on the base of the footboard.

Continue to press the button for another 5 seconds then press the up or down button to successfully match the code.

Regularly check the batteries and if necessary re-place them - x3 pcs AAA size.

Need Help? Call 01484 500 560 or email hello@time4sleep.co.uk - please include your order number if you have one!



Instructions by Time4Sleep Products

Lucille Upholstered TV Bed Frame