

Hisense

life reimagined



USER'S OPERATION MANUAL

Before operating this unit, please read this manual thoroughly, and retain for future reference.

This is a short version of the User's Manual. For more information, please scan the QR code above to view the full version of the manual.

NOTE:

1. Please adjust your mobile or tablet device to portrait mode during the browsing of electronic manuals to achieve the best viewing experience.
2. To ensure a smooth experience with the download feature of the electronic manuals, we recommend using Google Chrome, Microsoft Edge, or the Safari browser.

EN

English

SAFETY AND WARNING INFORMATION

Before using the appliance for the first time

Before connecting the appliance to the power mains, please read carefully the instructions for use which describe the appliance and its correct and safe use. The instructions apply to several appliance types/models; thus, settings or equipment may be described herein which is not available in your appliance. We recommend saving this instruction manual for future reference and attach it to the appliance if it is sold in the future.

Check for any damage or irregularities on your appliance. If you find your appliance is damaged, notify the retailer from which you have purchased the appliance.

Before connecting the appliance to the power mains, let the appliance rest in a vertical position for a minimum of 2 hours. This will reduce the possibility of operation faults due to the effect of transport on the cooling system.

Important safety instructions



WARNING **Risk of fire/flammable materials**

The appliance must be connected to the power mains and grounded in compliance with the effective standards and regulations.

WARNING! Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.

Before cleaning the appliance, unplug it from the power mains (unplug the power cord from the wall outlet).

⚡ WARNING! If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

⚡ WARNING! When positioning the appliance, ensure the supply cord is not trapped or damaged.

⚡ WARNING! The LED light must not be replaced by the user! If the LED light is damaged, contact the customer helpline for assistance.

SAFETY AND WARNING INFORMATION

⚠ WARNING! Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

⚠ WARNING! Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

⚠ WARNING! To avoid any hazard resulting from poor stability of the appliance, make sure it is installed as instructed.

Freeze burn hazard

To avoid freeze burn, never put frozen food in your mouth and do not touch frozen food.

Safety of children and vulnerable persons

The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

Cleaning and user maintenance shall not be made by children without supervision.

Remove the packaging intended to protect the appliance or particular parts during transport and keep it outside the reach of children. It presents danger of injury or suffocation.

When removing a used appliance, disconnect the power cord, remove the door, and leave the shelves in the appliance. This will prevent children from locking themselves in the appliance.

For European markets only

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children shall not play with the appliance.

Cleaning and user maintenance shall not be made by children without supervision.

Children aged from 3 to 8 years are allowed to load and unload refrigerating appliances.

SAFETY AND WARNING INFORMATION

This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

In order to sense the temperature and humidity near the appliance and make the appliance run better, add temperature and humidity sensor outside the box of appliance.

The Wi-Fi module operates within a frequency range of 2400-2483.5 MHz and has a maximum transmission power of 20dBm.(This part is only available on models with Wi-Fi)

Warning regarding the refrigerant

The appliance contains a small amount of an environmentally friendly yet flammable gas R600a. Make sure that no parts of the cooling system are damaged. A gas leak is not hazardous to the environment, but it could cause eye injury or fire.

In case of a gas leak, ventilate the room thoroughly, disconnect the appliance from the power mains, and call a service technician.

Important information on the use of appliance

WARNING! This appliance is intended to be used in residential household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- farm houses and by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments;
- catering and similar non-retail applications.

⚠ WARNING! Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.

The appliance may not be used outdoors and it may not be exposed to rain. Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

If the appliance will be out of use for an extended period of time, switch it off using the relevant button, and unplug it from the power mains. Empty the appliance, defrost it, clean it, and leave the door ajar.

In case of an error or power supply failure, do not open the freezer compartment unless the freezer has not operated for over 16 hours. After this period, use the frozen food or provide sufficient cooling (e.g. a replacement appliance).

Technical information on the appliance

Rating plate can be found in the appliance interior. It indicates data on voltage, gross and net volume, type and amount of refrigerant, and information on the climate classes.

SAFETY AND WARNING INFORMATION

 
If the language on the rating plate is not the language of your choice or the language of your country, replace it with the one supplied.

⚠ WARNING! Do not damage the refrigerant circuit.


INSTALLING YOUR NEW APPLIANCE

- Stand your appliance in a dry and well ventilated place. Keep the appliance out of direct sunlight, rain or frost.
- The diagram shows the temperature range of each climate class. The climate class of this appliance is specified on the rating plate. Use beyond this range may result in poor performance.
- Sufficient clear space should be available around the appliance to facilitate ventilation and heat dissipation.
- Suggested space is indicated in the figure.

Climate class	Ambient temperature
SN	+10°C to +32°C
N	+16°C to +32°C
ST	+16°C to +38°C
T	+16°C to +43°C

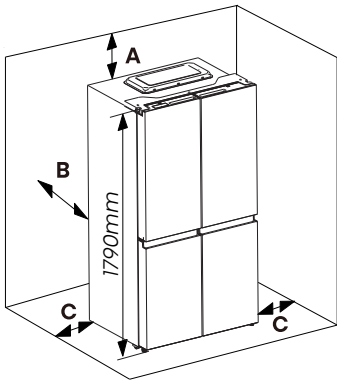


 A > 1/2"(12mm)
B > 2"(50mm)
C > 1/2"(12mm)

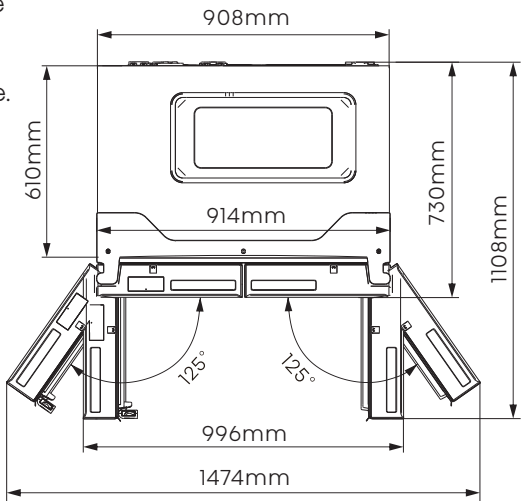

Leveling of appliance (if needed):

 
- The figure is for reference only.
- The appliance is fitted with adjustable feet that can be used to level the appliance.
- To allow the doors to self-close, tilt the top backwards by turning the adjustable feet.

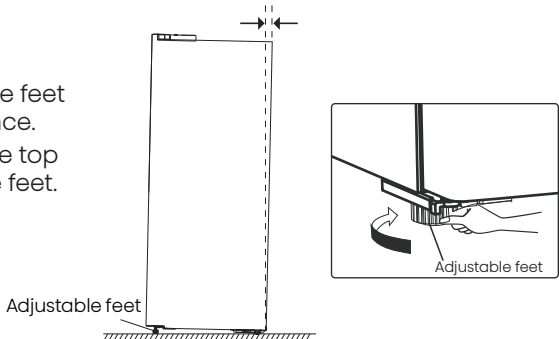

INSTALLING YOUR NEW APPLIANCE

WARNING

 - For proper installation, this refrigerator must be placed on a level surface of hard material that is the same height as the rest of the flooring. This surface should be strong enough to support a fully loaded refrigerator.
- The rollers should be only used for forward or backward movement. Moving the refrigerator sideways may damage your floor and the rollers.

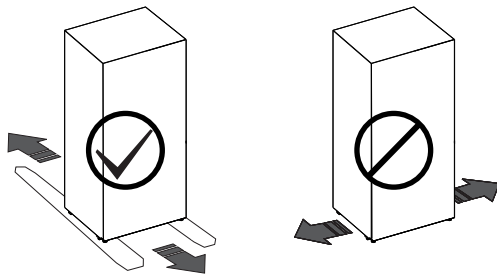

DESCRIPTION OF THE APPLIANCE

- Appliance interior equipment may change according to the appliance model.
- The diagram may slightly differ from the appliance you purchased, please get more information in the E-manual.

A: Fridge

 
1. Wi-Fi module
2. Door racks
3. Full-size glass shelf
4. Half-size glass shelf
5. Vertical Baffle Part
6. Crisper cover
7. Fruit & Vegetable crisper
8. Foldable glass shelf
9. Water tank **
10. Cool fresh box

B: Freezer

11. Auto ice makers *
12. Ice storage boxes *
13. Serving trays
14. Middle drawer
15. Lower drawers
16. Door racks

C: My Fresh Choice

17. Middle drawer

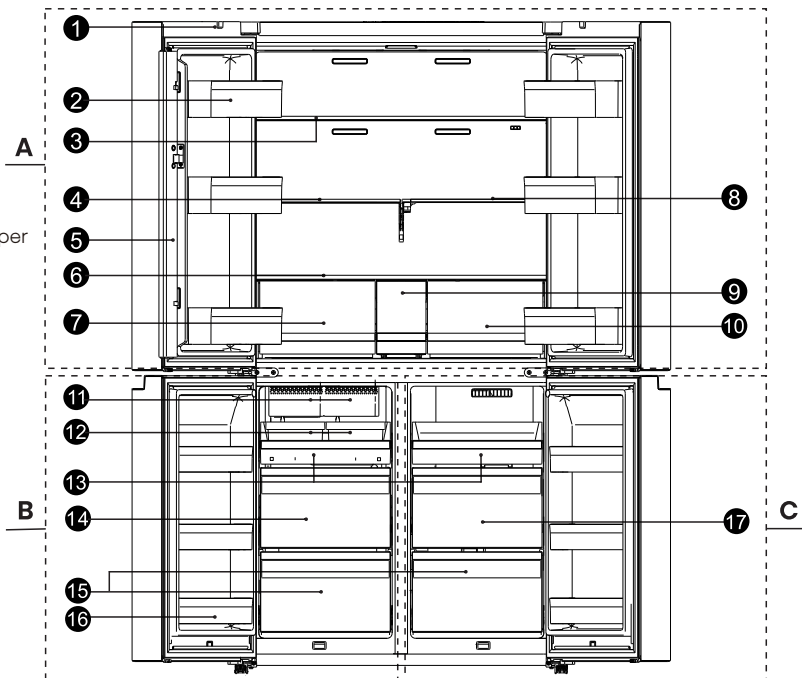


* : Only in some models.

** : If the model is without the Auto ice makers, the Water tank is replaced by a Middle storage drawer.


CONTROL PANEL

NOTE: The control panel may differ by model, so choose according to your appliance. Please refer to the E-manual for more information.

 
TYPE 1(located on the door):

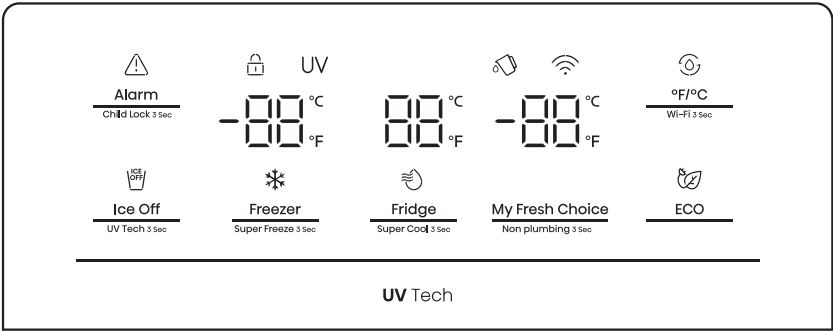

 TYPE 2(located at the top of the appliance):

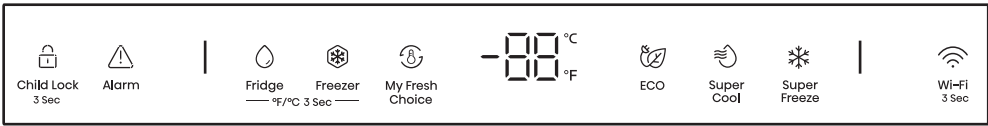


Child Lock

Press and hold the “Alarm”(TYPE 1) or “Child Lock”(TYPE 2) button for 3 seconds to lock all controls, the “ ” will be on. To unlock, press and hold the Alarm”(TYPE 1) or “Child Lock”(TYPE 2) button for 3 seconds again.




Door Alarm & Freezer high temperature alarm

1. Any door open for more than 1 minute will activate the door alarm. Press any buttons or close all doors to stop the alarm.
2. If the freezer temperature is too high for more than 4h, an alarm is sounded and the “ ” icon is lit. Press the “Alarm” button to stop it.



Ice Off(TYPE 1 only)

Touch the “Ice Off” button to turn off the ice maker, and the icon “ ” will be illuminated. Touch the “Ice Off” button again to turn on the ice maker.

UV UV Sterilization(TYPE 1 only)

The UV sterilization is default on with a lit “UV” icon. It sterilize the water for ice makers or water dispenser. Press and hold “Ice Off” button for 3 seconds to turn it off.

Fridge Temperature Control

Press “Fridge” button continuously to set temperature from 2°C(36°F) to 8°C(46°F).

Freezer Temperature Control

Press “Freezer” button continuously to set temperature from -14°C(7°F) to -24°C(-11°F).

My Fresh Choice Temperature Control

Press the “My Fresh Choice” button continuously to set the convertible compartment temperature from 5°C(41°F) to -20°C(-4°F).

CONTROL PANEL



Super Cool

Press and hold the "Fridge" button for 3 seconds (**TYPE 1**) or press the "Super Cool" button (**TYPE 2**) to activate Super Cool "❄️", the fridge temperature will display 2°C (36°F), which auto-turns off after 6 hours or when "Fridge" or "Super Cool" (**TYPE 2 only**) button is pressed.



Super Freeze

Press and hold the "Freezer" button for 3 seconds (**TYPE 1**) or press the "Super Freeze" button (**TYPE 2**) to activate Super Freeze "❄️", the freezer temperature will display -24°C (-11°F), which auto-turns off after 52 hours or when "Freezer" or "Super Freeze" (**TYPE 2 only**) button is pressed.

Note: Touch the "Eco" button will turn off Super Cool/ Super Freeze mode.



Eco

Press the "Eco" button to switch Eco mode, the icon "🌿" lights, which sets fridge to 6°C (43°F) and freezer to -17°C (1°F). Turning it off reverts to previous settings.

°F/°C

TYPE 1: When the child lock is off, press the "°F/°C" button to switch between Celsius (default) and Fahrenheit units, and the Fahrenheit indicated by the "°F" icon.

TYPE 2: Press and hold the "Fridge" and "Freezer" button for 3 seconds to switch between Celsius and Fahrenheit units.



Tank reset or Water shortage reminder (TYPE 1 only)

If the water tank is not installed in place or the water tank is short of water, the "💧" icon will flicker. To extinguish the "💧" icon, press the "My Fresh Choice" button for 3 seconds.

Demo Mode

This mode, indicated by "OF", stops making cool air but appears working. Cancel it by pressing "Alarm" + "°F/°C" (**TYPE 1**) or "Child Lock" + "Wi-Fi" (**TYPE 2**) for 3 seconds and the buzzer beeps 3 times.

CONTROL PANEL



WI-FI FUNCTION(This feature is only available on models with Wi-Fi)

This appliance may be controlled remotely with a smart phone. If the appliance is not connected to the home network, it will function like a regular appliance.

NOTE:

- The appliance automatically enables the Wi-Fi interface upon power-up, which is used for appliance networking configuration and connecting to the internet.



Install the ConnectLife App

1. Open the Apple App Store (iOS) or the Google Play Store (Android) on your smartphone.
2. Search for the "ConnectLife" app.
3. Download and install the ConnectLife app provided by ConnectLife, LLC.

Alternatively, you can scan the following QR code with your smartphone or tablet to find the ConnectLife app:



NOTE:

- The distance between your appliance and the Wi-Fi router can impact the performance. If they are too far apart, pairing your appliance might fail or take longer.
- The appliance supports 2.4 GHz Wi-Fi networks only. The Wi-Fi network SSID must be visible.
- The surrounding wireless environment (other connected devices) can affect the performance of your network.
- Your appliance Wi-Fi connection may experience interruptions due to external factors such as your home network environment or Internet service provider.

Connecting your refrigerator

After installing the app, sign in or create an account and follow these steps:

1. Press any button on appliance control panel to activate. You'll know it's ready when the control panel lights up.
2. Press and hold the "°F/°C" (**TYPE 1**) or "Wi-Fi" (**TYPE 2**) button for 3 seconds until you hear a beep and see the "📶" light blinks.
3. Ensure Bluetooth is enabled on your phone and open the ConnectLife app. Look for the pop-up indicating that a new appliance has been found. Tap the button on the pop-up and follow the instructions to proceed.
4. If a pop-up doesn't appear, tap the button called "Add appliance" or "+".
5. Locate "Refrigerator" in the device list and select it.
6. Follow the instructions in the app to connect your refrigerator. Once the setup is complete, your refrigerator will appear on your home screen.

NOTE:

- The appliance will remain in pairing mode for a maximum of 5 minutes.
- To factory reset your network settings, press and hold the "°F/°C" (**TYPE 1**) or "Wi-Fi" (**TYPE 2**) button for 6 seconds. You will hear two beeps once the appliance is reset.
- After resetting, the appliance will automatically go into pairing mode.
- A solid Wi-Fi light indicates the appliance is successfully connected to the home network.
- Due to the continuous iteration and upgrade of the ConnectLife App, the descriptions of App related functions may differ from the actual application interface. Please refer to the latest APP version downloaded from the Google or Apple Store.

 
USING THE APPLIANCE

NOTE: This feature is only available on models with auto ice makers.


Water Tank

To fill the water tank, follow the steps:


1. Lift the water tank slightly and pull it out.
2. Open the lid and add water into the water tank.
3. Close the lid and push the water tank back.
4. Once the water tank is pushed in, press it forward with palm again to make sure it is fully inserted.

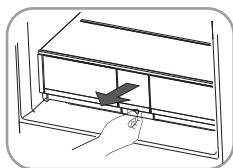


①

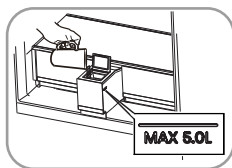 

②

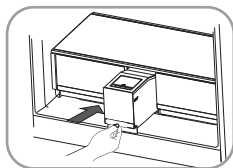 


③

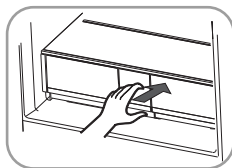 

④

 
NOTE:

- The water tank can hold max 5L of water.
- If the water tank is not in place or lack of water, the “” icon on the control panel flickers.

WARNING! Fill with portable water only.


Water Dispenser

The Water Dispenser is located at the left fridge door. Fetch water by pressing the dispenser lever.

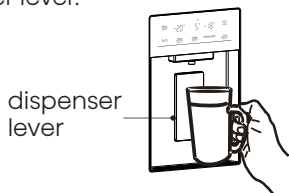


Automatic ice makers in Freezer

 
- This appliance contains two ice makers that can make ice cubes of two different sizes.

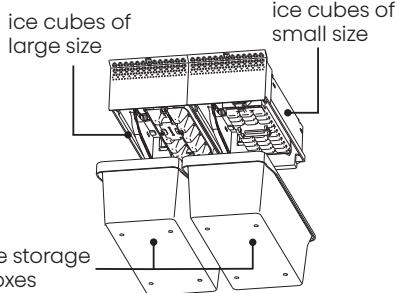

 - Remove any ice in the serving tray before assembling the ice storage boxes.

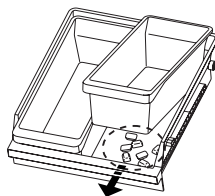

 
- The ice makers may produce linked cubes rather than individual pieces, and the cubes easily separate when added to beverages.

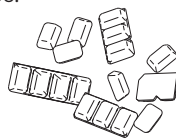

- The ice makers will not work when the freezer temperature is too high.
 - It's normal to hear any sounds when the ice cubes dump into the storage boxes.
 - Do not store any items other than ice in the ice storage boxes.
 - If you do not fetch ice cubes for a long time, ice cubes may clump in the ice storage boxes. Break up ice using a plastic utensil and discard instead of a sharp tool, which can cause damage to the ice storage boxes.
 - Following installation, allow 24 hours to produce the first batch of ice cubes. Discard the first three batches of ice cubes produced because it is unhealthy.
- WARNING!** Do not allow children to touch the ice makers. This could cause injury.

CLEANING AND CARE

 - For hygiene, clean the appliance (exterior and interior accessories) regularly at least every two months.
- Ensure the appliance is completely dry before switching back on and plugging back into the mains socket.
- Wipe the inside of the appliance with a weak solution of bicarbonate of soda, and then rinse with warm water using a wrung-out sponge or cloth.
- Take care to keep door seals clean. Sticky food and drinks can cause seals to stick to the cabinet. Wash the seals with a mild detergent and warm water. Rinse and dry them thoroughly after cleaning.
- This product contains a light source of energy efficiency class G in the Fridge.
- For more cleaning details, please refer to the E-manual.

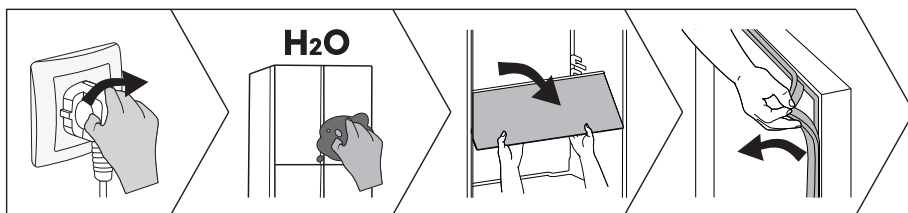

HELPFUL HINTS AND TIPS

Energy saving tips

We recommend that you follow the tips to save energy.

- Try to avoid keeping the door open for long periods.
- Ensure the appliance is away from any sources of heat.
- Don't set the temperature colder than necessary.
- Don't store warm food or evaporating liquid in the appliance.

Switching off your appliance

If the appliance needs to be switched off for an extended period, the following steps should be taken prevent mould on the appliance.

1. Remove all food.
2. Remove the power plug from the mains socket.
3. Clean and dry the interior thoroughly.
4. Ensure that all the doors are wedged open slightly to allow air to circulate.

- Please refer to the E-manual for more information.

TROUBLESHOOTING

- If you experience a problem with your appliance or are concerned that the appliance is not functioning correctly, you can carry out the following easy checks before calling for service.
- **NOTE:** You can find more relevant information in the E-manual.



WARNING

Don't try to repair the appliance yourself. If the problem persists after you have made the checks mentioned below, contact a qualified electrician, authorized service engineer or the shop where you purchased the product.



DANGER

Risk of child entrapment. Before you throw away your old refrigerator or freezer:

- Take off the doors.
- Leave the shelves in place so that children may not easily climb inside.

Problem	Possible cause & Solution
Appliance is not working correctly	Check whether the power cord is plugged into the power outlet properly.
	The ambient temperature is too low. Try setting the chamber temperature to a colder level to solve this problem.
A layer of frost occurs in the compartment	Check that the air outlets are not blocked by food and ensure food is placed within the appliance to allow sufficient ventilation. Ensure that the door can be fully closed.
Temperature inside is too warm	You may have left the doors open too long or too frequently; or the doors are kept open by some obstacle; or the appliance is located with insufficient clearance at the sides, back and top.
Unable to connect appliance to Wi-Fi network	The Wi-Fi password was entered incorrectly, or the network could not be found. For specific network configuration operations, please refer to the electronic manual.

DISPOSAL OF THE APPLIANCE

It is prohibited to dispose of this appliance as household waste.

Packaging materials


Packaging materials with the recycle symbol are recyclable. Dispose of the packaging into a suitable waste collection container to recycle it.

Before disposal of the appliance

1. Pull out the mains plug from the mains socket.
2. Cut off the power cord and discard with the mains plug.

WARNING

Refrigerators contain refrigerant and gases in the insulation. Refrigerant and gases must be disposed of professionally as they may cause eye injuries or ignition. Ensure that tubing of the refrigerant circuit is not damage prior to proper disposal.

	Correct Disposal of this product
	<p>This marking indicates that this product should no be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.</p>

SUGGESTION OF USING THE APPLIANCE

To avoid contamination of food, please respect the following instructions:

- Opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance.
- Clean regularly surfaces that can come in contact with food and accessible drainage systems.
- Clean water tanks if they have not been used for 48h; flush the water system connected to a water supply if water has not been drawn for 5 days.(Special for models with water tanks)
- Store raw meat and fish in suitable containers in the refrigerator, so that it is not in contact with or drip onto other food.
- Two-star frozen-food compartments are suitable for storing pre-frozen food, storing or making ice-cream and making ice cubes.
- One-, two- and three-star compartments are not suitable for the freezing of fresh food.

SUGGESTION OF USING THE APPLIANCE

- If the refrigerating appliance is left empty for long periods, switch off, defrost, clean, dry, and leave the door open to prevent mould developing within the appliance.
- **NOTE:** The information below is for reference only, as functions may vary by models. Please get more details in the E-manual.

Order	Compartments type	Target storage temp.[°C]	Appropriate food	Storage life
1	Fridge	+2~+8	Eggs, cooked food, packaged food, fruits and vegetables, dairy products, cakes, drinks and other foods which are not suitable for freezing.	/
2	Four-star	≤-18	Seafood, freshwater aquatic products and meats.	≤3 months
3	Three-star	≤-18		
4	Two-star	≤-12		≤2 months
5	One-star	≤-6		≤1 month
6	Zero-star	-6~0	Fresh pork, beef, fish, chicken, some packaged processed foods, etc.. Partially packed/wrapped up encapsulated processed foods (non-freezable foods)	≤3 days
7	Chill	-3~+3	Seafood, pork, beef, chicken, freshwater aquatic products, etc..	2~7 days
8	Fresh Food	0~+4	Fresh pork, beef, fish, chicken, cooked food, etc..	≤3 days
9	Wine	+5~+20	Red wine, white wine, sparkling wine etc.	/

Declaration of conformity

The company declares that the device with the function Connectlife complies with the essential requirements and other relevant provisions of Directive 2014/53/EU. The detailed Declaration of Conformity can be found at the web address <https://auid.connectlife.io> on the page of your device among the additional documents.



**Customer support line (for UK mainland and Northern Ireland only): 0191 387 0804,
Southern Ireland customers please contact your Retailer.**

Hisense UK Ltd

Ground floor Munroe Court

White Rose Office Park

Millshaw Park Lane

Leeds LS11 0EA