 


Assembly & Operation Instructions

HOME

AH 4 LINE RETRACTABLE AIRER (LYQ129-10M - 7787450)

Parts Included:

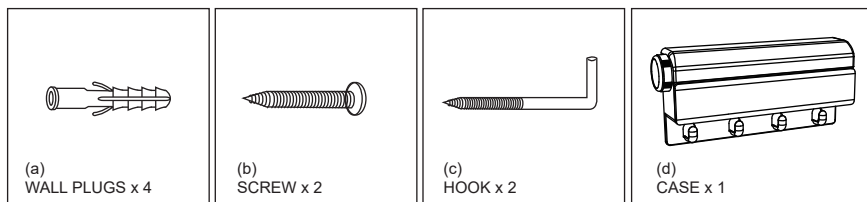

TOOLS REQUIRED (NOT SUPPLIED)

Description	Diagram
Pencil	
Drill with a 8mm drill bit	
Level ruler	
Screwdriver	

Installation

Note: It is recommended that a 8mm drill bit is used.

1. Drill 2 x holes into the wall ensuring these align correctly with the recesses on the back of the retractable indoor airer (a).
2. Mark, drill & plug (a) two small holes in a wall at the desired height.
3. Fix the integrated bracket of the retractable line case (d) at the desired height by using the screws (b).
4. Drill & plug (if required) and screw in the line hooks (c) into a opposite location.

Directions For Use

1. To release the washing line bar, pull the side locking wheel out and pull out the washing line bar.
2. Hook the washing line bar over the screw-in hooks (c) to secure.
3. Turn the side locking wheel clockwise to tighten the lines fully and then push the side locking wheel in to secure in place.
4. After using, release the side locking wheel and allow the lines to wind back in, ensuring they do not wind back at an uneven rate.

Storage

 
 
 
 
 
 
 
1. To close, using two hands, gently push the rails back towards the wall bar and close the inner metal support sections.
2. Close the doors.
3. Wipe clean with a damp cloth.

Warning

Warning – Do not use on stud walls.

Maximum loading capacity is 10kg (evenly spaced).

This is not a children's toy. Do not allow children to play with this product.

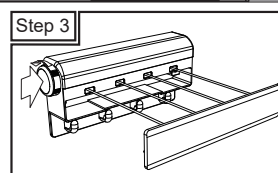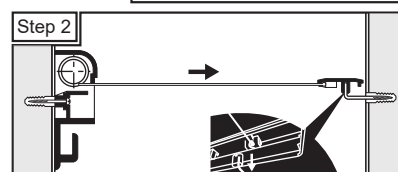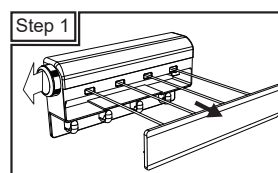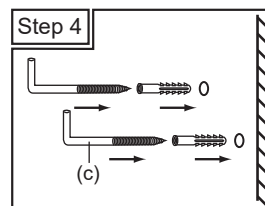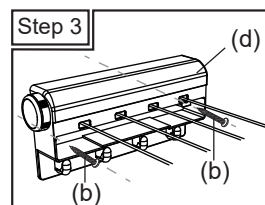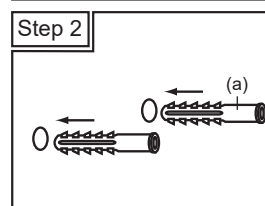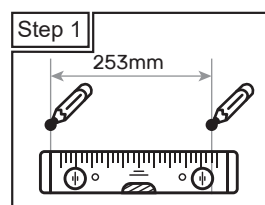

Customer Support

0345 640 2020

A GUIDE TO - WALL MOUNTING & FIXINGS

Important note:

If plastic wall plugs are supplied with your product:



these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fixings is the responsibility of the installer.



Important: When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.

 
Hints:

1. General rule: Always use a larger screw and wall plug if you are not sure.
2. Ensure you use the recommended drill bit to match the wall plug and hole size.
3. Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
4. Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
5. Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 "General purpose" wall plug

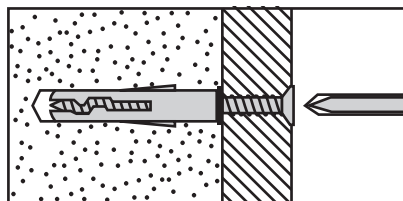


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

 No.2 "Plasterboard" wall plug

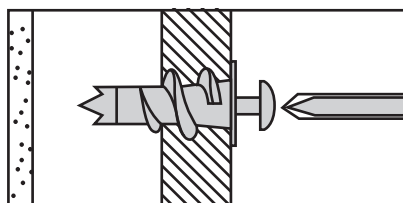


For use when attaching light loads on to plasterboard partitions.

 No.3 "Cavity fixing" wall plug

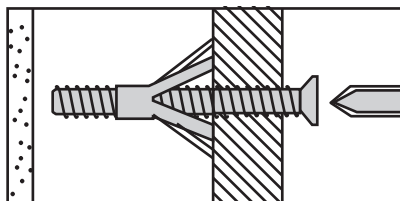


For use with plasterboard partitions or hollow wooden doors.

 No.4 "Cavity fixing-heavy duty" wall plug

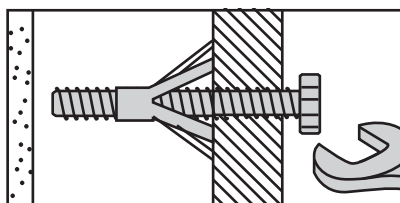


For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

 No.5 "Hammer fixing" wall plug

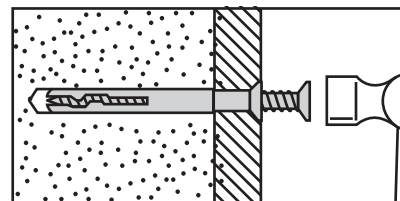

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

 No.6 "Shield anchor" wall plug heavy loads

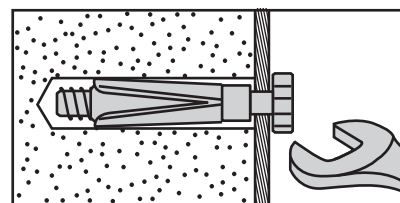

For use with heavier loads such as TV & HiFi speakers and satellite dishes etc.



Care & Maintenance

Safety: Always check the fitting and location to ensure your safety in and around the home.

Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.