

vtech®

Parent's Guide

SWITCH&GO® **DiNOS**

Riot the T-Rex



91-003835-001 

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle



Birth-36 months

Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops



3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school



4-10 years

To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Introducing **Riot the T-Rex** by **VTech®**! This wild **Switch & Go Dino** is an exciting 2-in-1 toy which switches between a tough T-Rex and a super race car! Use the remote control to race Riot in both dino and vehicle modes! Press the Talk Button to hear fun phrases and to learn cool dinosaur facts! Riot even responds with lively dinosaur and race car sound effects too! Let's Switch & Go!

**FORWARD / REVERSE
DIRECTION BUTTONS**

**CONNECTION
LIGHT**

 
**LEFT / RIGHT DIRECTION
BUTTONS**



**TALK
BUTTON**



OFF/VOLUME SWITCH

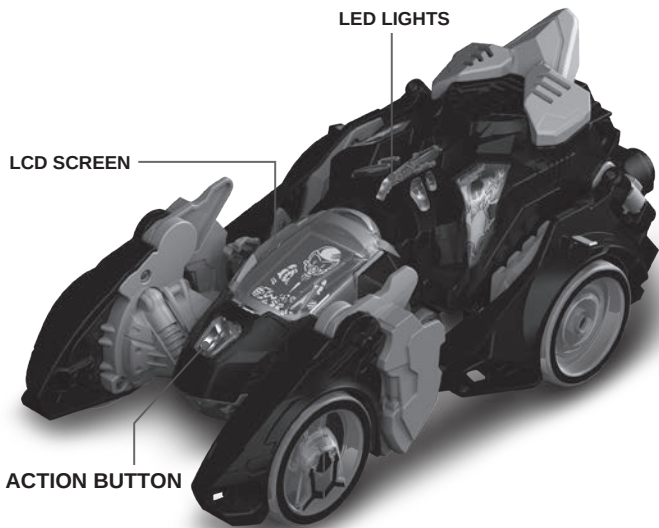

INCLUDED IN THIS PACKAGE


- One VTech® SWITCH & GO DINOS® Riot the T-Rex
- One Remote Control
- One Parent's Guide

WARNING: All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

NOTE: Please keep this parent's guide as it contains important information.


IMPORTANT NOTE:

1. For optimal performance, please play on a smooth surface.
2. When exposed to electrostatic discharge and radio interference, **Riot the T-Rex** may malfunction. Please turn both Riot and the remote control off and on again to reset them.
3. For your child's safety, do not put **Riot the T-Rex** in either configuration on your clothing, body or hair.

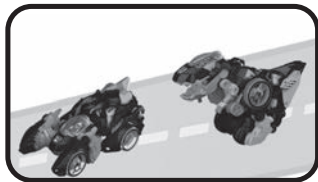

Removing the packaging locks:

- ① Turn the packaging lock anticlockwise several times.
- ② Pull out and discard the packaging lock.

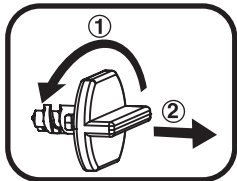


GETTING STARTED

BATTERY REMOVAL AND INSTALLATION


Riot the T-Rex

1. Make sure the unit is turned OFF.
2. Locate the battery cover on the bottom of the unit. Loosen the screw and remove the cover.
3. If used or spent batteries are present, remove them by pulling up on one end of each battery.
4. Install 4 new AA (LR6/AM-3) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance).
5. Replace the battery cover.

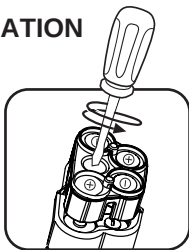

Remote Control

1. Make sure the unit is turned OFF.
2. Locate the battery cover on the back of the unit. Loosen the screw and remove the cover.
3. If used or spent batteries are present, remove them by pulling up on one end of each battery.
4. Install 2 new AAA batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance).
5. Replace the battery cover.

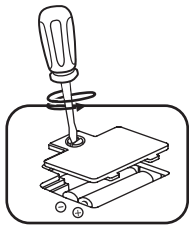

BATTERY NOTICE

- Alkaline Batteries are recommended. Rechargeable batteries are not guaranteed to provide the best performance for this product.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable, or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.

- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

Disposal of batteries and product



The crossed-out wheeled bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit:

www.recycle-more.co.uk

www.recyclenow.com

PRODUCT FEATURES

Riot the T-Rex:

1. POWER ON/OFF SWITCH


To switch Riot the T-Rex on, slide the **POWER ON/OFF SWITCH** to ON (☀ position).

To switch Riot the T-Rex off, slide the **POWER ON/OFF SWITCH** to OFF (☾ position).



2. ACTION BUTTON

Press the **ACTION BUTTON** to see Riot perform a cool move!

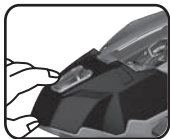

3. LCD SCREEN

The **LCD SCREEN** displays Dino eye animations in Dino Mode and displays driver animations in Vehicle Mode.



4. LED LIGHTS

The **LED LIGHTS** will flash with the sounds.



Remote Control:

1. OFF/VOLUME SWITCH

To turn on the Remote Control and adjust the volume, slide the switch to the Low Volume (🔊) or the High Volume position (🔊).

To turn off the Remote Control, slide the switch to the OFF (🔌) position.




2. DIRECTION BUTTONS

Press the **FORWARD/REVERSE BUTTONS** to make Riot the T-Rex move forwards and backwards.

Press the **LEFT/RIGHT BUTTONS** to make Riot the T-Rex turn left and right in Vehicle Mode.

Press the **FORWARD BUTTON** and the **LEFT** or **RIGHT BUTTON** together to make Riot the T-Rex move left/right and forwards.

Press the **REVERSE BUTTON** and the **LEFT** or **RIGHT BUTTON** together to make Riot the T-Rex move left/right and backwards.

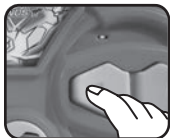

3. TALK BUTTON

Press the **TALK BUTTON** to hear cool Dino facts, phrases and sound effects in Dino Mode. Press the **TALK BUTTON** to hear cool Vehicle phrases and sound effects in Vehicle Mode.



4. CONNECTION LIGHT

The **CONNECTION LIGHT** will flash once when the Remote Control is turned on. The **CONNECTION LIGHT** will light up when pressing any button on the Remote Control. If the connection between the controller and Riot fails, the Remote Control will not control Riot, please switch the Remote Control and Riot the T-Rex off, then switch them both back on again.



Note: If the **CONNECTION LIGHT** is continually off when pressing any button on the Remote Control, please install brand new batteries and try switching it off and on again.


5. AUTOMATIC SHUT-OFF

To preserve battery life, Riot the T-Rex will automatically power off after several minutes without input. The Remote Control will not control Riot the T-Rex during this period. Riot the T-Rex can be powered on again by pressing the **ACTION BUTTON** or by sliding the **POWER ON/OFF SWITCH** from the Off position to the On position.


Note:

The **LED LIGHTS** will flash three times and then automatically power off when the battery power is too low. Please then install brand new batteries and try switching the units off and on again. To prevent motor overheating and to preserve motor life, **Riot the T-Rex** may pause motion after several seconds of continuous use. To continue moving **Riot the T-Rex**, release and do not press a **DIRECTION BUTTON** for at least 5 seconds. Then, press a **DIRECTION BUTTON** to see Riot move again.


SWITCHING RIOT

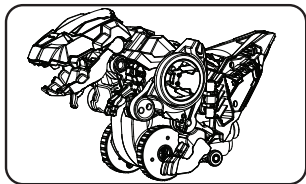


Dino mode

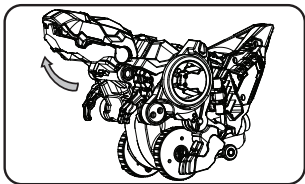


1. Flip the head up.

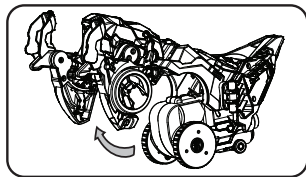


2. Turn the two hind legs up until they are perpendicular to the head.

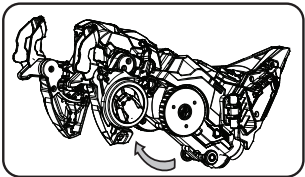


3. Push the battery box up close to the body.

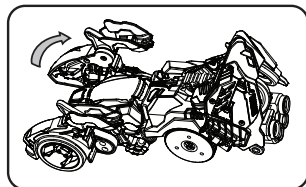


4. Rotate the part of two hind legs separately toward the head.

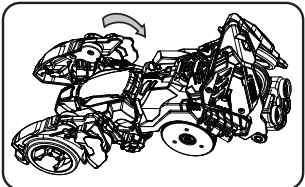

5. Flip the feet down.

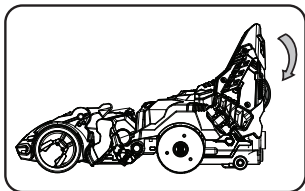

6. Swing the tail down.

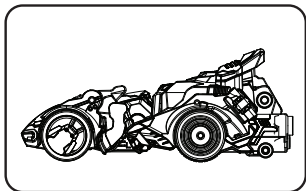

Vehicle mode.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play with again.
5. If the product still does not work, install a brand new set of batteries.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.

DECLARATION OF CONFORMITY

Hereby, VTech Electronics Europe BV declares that the radio equipment type 5272 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: www.vtech.com/re-directive

Frequency Band: 2414MHz – 2474MHz

Maximum RF power: 0.001 W (0 dBm)

CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

Website: www.vtech.co.uk/support



Australian Customers:

Phone: 1800 862 155

Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785

Website: support.vtech.com.au

Product Warranty/ Consumer Guarantees

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au

