



USER GUIDE



Cordless
**Swivel
Sweeper®**
G2

Contents

Intended Use	3
Safety Notices	3
Items Supplied and Device Overview	5
Before Initial Use	6
Charging Up the Battery	6
Assembling the Device	6
Use	7
Cleaning and Storage	7
Troubleshooting	9
Technical Data	10
Disposal	10
Guarantee	11

Symbols and Signal Words



Danger symbols: These symbols indicate a risk of injury. Read through the associated safety notices carefully and follow them.



Supplementary information



Read operating instructions before use!



Protection class II



Only use indoors!



Circuit symbol for DC voltage

DANGER

warns of serious injuries and danger to life

WARNING

warns of *possible* serious injuries and danger to life

CAUTION

warns of slight to moderate injuries

NOTICE

warns of material damage

Dear Customer,

We are delighted that you have chosen this **Swivel Sweeper G2 from JML**.

Before using the device for the first time, please read the operating instructions carefully and keep them for future reference. If the device is given to someone else, it should always be accompanied by these operating instructions. They are integral part of the device. The manufacturer does not accept any liability if the information in these instructions is not complied with.

If you have any questions about the device and about spare parts/accessories, please contact the customer service department via our website:

www.JMLdirect.com.

Intended Use

- The device is intended to be used for the dry cleaning of all smooth surfaces.



On no account should the device be used to suck up the following:

- liquids or wet substances (e.g. wet carpet shampoo)
- glowing ash, cigarette ends, matches, etc.
- inflammable or explosive substances
- pointed, hard objects such as large pieces of broken glass
- Do **not** use the device on deep-pile carpets and rough floors (e.g. made of concrete).
- The device is for personal use only and is not intended for commercial applications.
- The device should only be used as described in the operating instructions. Any other use is deemed to be improper.
- The warranty does not cover faults caused by incorrect handling, damage or attempted repairs. The same applies to normal wear and tear.

Safety Notices

- This device may be used by **children** aged 8 and over and by people with reduced physical, sensory or mental abilities or a lack of experience and / or knowledge if they are supervised or have received instruction on how to use the device safely and have understood the dangers resulting from failure to comply with the relevant safety precautions.
- Children must **not** play with the device.
- Cleaning and **user maintenance** may not be performed by children, unless they are older than 8 years of age and are supervised.
- Children younger than 8 years of age and animals must be kept away from the device, charger and battery.
- Children must be supervised to guarantee that they do not play with and / or injure themselves on the device.
- The device must always be switched off and if necessary disconnected from the mains power when it is left unattended and before assembling, disassembling and cleaning the device.
- Only ever charge up the battery with the charger supplied with it. Do not use the charger supplied with the device to charge up any other batteries.
- Never immerse the device, charger or battery in water or other liquids and ensure that they cannot fall into water or become wet.
- Do not take the device apart and do not make any modifications to the device. If the device, the charger or the battery are damaged, they must be replaced by the manufacturer, customer service department or a similarly qualified person (e.g. specialist workshop) in order to avoid any hazards.



DANGER – Risk of Electric Shock!

- Use and store the device only in enclosed areas. Do not operate the device in rooms with high humidity.
- Never touch the device, the charger or the battery with wet hands when these components are connected to the mains power.
- Check the device, the charger and the battery for damage every time before use. If the device, the charger, the battery or the battery compartment have visible damage, the device, the charging station and the battery may not be used.



WARNING – Danger of Injury!

- **Danger of suffocation!** Keep children and animals away from the packaging material.
- **Danger of injury due to rotating device parts!** Keep clothing, jewellery, hair and other body parts away from the device so that nothing can get caught in the rotating brushes.
- **Danger of burns from battery acid!**
 - Batteries can be deadly if swallowed. Therefore keep the battery and the device out of the reach of children and animals. If the battery is swallowed, seek medical assistance immediately.
 - If the battery has leaked, do not allow your skin, eyes and mucous membranes to come into contact with the battery acid. If you touch battery acid, rinse the affected areas with abundant clear water straight away and seek medical assistance immediately.



WARNING – Danger of Fire!

- Do not use the device in rooms containing easily ignitable substances or poisonous and explosive fumes.
- Do not charge the battery in the vicinity of highly flammable materials (curtains, textiles, etc.).
- Do not cover the device during operation in order to prevent it from catching fire. Do not insert anything into the ventilation openings of the device and make sure that these do not become clogged.

NOTICE – Risk of Damage to Material and Property from Batteries

- Use only the battery type specified in the technical data.
- Before inserting the battery into the battery compartment or charger, check whether the contacts in the battery compartment or the charger and on the battery are clean, and clean them if necessary.
- Remove a battery that has leaked from the device or charger immediately.
- The battery must not be taken apart, thrown into a fire, immersed in liquids or short-circuited.

NOTICE – Risk of Damage to Material and Property


- Only connect the charger to a plug socket with safety contacts that is properly installed and matches the technical data of the charger. The plug socket must also be

readily accessible after connection so that the connection to the mains can quickly be isolated.

- Remove the charger from the plug socket if a fault occurs during charging or before a thunderstorm.
- The device should only be used if it has been completely and correctly assembled.
- In the event of damage / faults, switch the device off immediately during operation.
- Protect the device, the charger and the battery from heat, naked flames, sub-zero temperatures, persistent moisture, wet conditions and impacts.
- Use only original spare parts from the manufacturer in order to guarantee that there is no interference that may prevent the device from working and to avoid damage.

Items Supplied and Device Overview

Check the items supplied for completeness and transport damage. If you find any damage to the components, do not use them, but contact our customer service department.

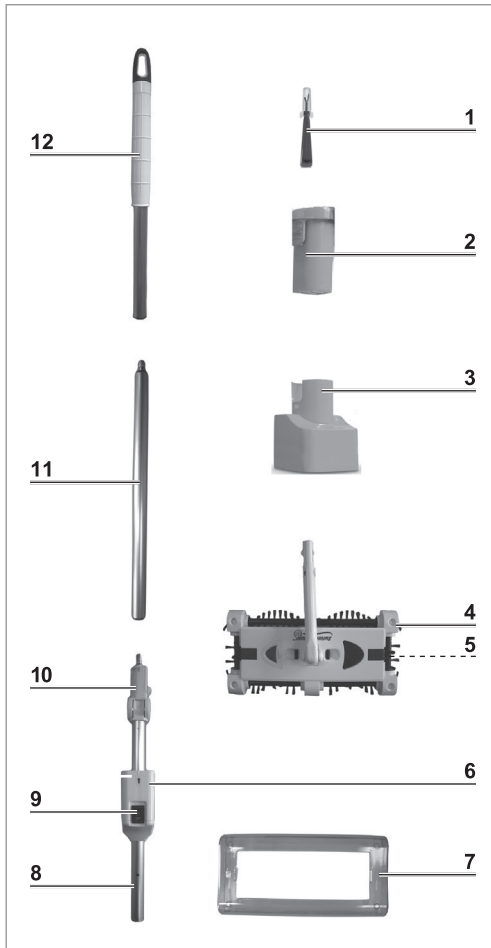

- 1 Cleaning tool
- 2 Battery
- 3 Charger
- 4 Cleaning foot
- 5 Dirt container (on the bottom of the cleaning foot)
- 6 Battery compartment
- 7 Cover of the cleaning foot
- 8 Bottom shaft piece
- 9 On / Off switch
- 10 Joint
- 11 Middle shaft piece
- 12 Top shaft piece

Not shown:

Operating instructions

Before Initial Use

- Before using the device, remove **all** packaging materials and any labels that may be on the device and are used for protection during transportation or for advertising.
Never remove the rating plate and any possible warnings!
- Charge up the battery (2) (see the “Charging Up the Battery” chapter).
- Assemble the device (see the “Assembling the Device” chapter).


Charging Up the Battery



PLEASE NOTE!


- It is essential that you charge up the battery fully before you first use the device in order to achieve the maximum charging capacity. If the battery is fully discharged during use, it must be fully charged up again before it is next used.

PLEASE NOTE: The battery needs approximately 2.5 hours to charge on a first charge. The length of time required for subsequent recharging depends on the charging status of the battery in each case; if the battery is flat, it is approximately 2 -2.5 hours.

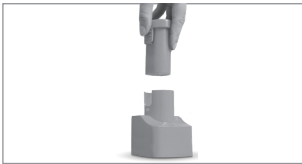

1. Insert the battery (2) into the charger (3) until you hear it engage. Make sure that two arrows are pointing towards each other.
2. Connect the charger to an easily accessible, properly installed plug socket.
3. When connected to charge, the indicator light on the front of the charger should be red. Once the battery has fully charged, this indicator will change to green.
4. Once the battery has fully charged, unplug the charger and remove it from the socket.
5. Remove the battery from the charger by pressing together the two release buttons on the side of the battery and pulling out the battery at the same time.

Assembling the Device

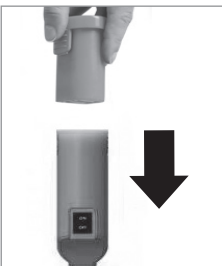

1. Plug the bottom shaft piece (8) onto the shaft piece of the cleaning foot (4). Make sure that the two arrows on the shaft pieces are pointing towards each other. When you push them together, press together the two locking lugs on the shaft piece of the cleaning foot. The locking lugs must then engage in the openings of the bottom shaft piece.
2. Screw the middle shaft piece (11) onto the bottom shaft piece and the top shaft piece (12) onto the middle shaft piece.
3. Insert the battery (2) into the battery compartment (7) on the bottom shaft piece. Make sure that the two arrows are pointing towards each other.

Use



PLEASE NOTE!

- Ensure that there are no larger, sharp objects on the surface which is to be cleaned.
- When you lift up the device, always keep the cleaning foot horizontal so that no dirt can fall out of the dirt container.
- Switch the device off after each surface has been cleaned as this will considerably increase the operating time on each battery charge. Charge up the battery after use (see the “Charging Up the Battery” chapter).

1. Move the On / Off switch (9) to the **ON** position to switch on the device. The brushes of the cleaning foot (4) start to rotate.
2. Move the cleaning foot over the surface which is to be cleaned. The dirt is picked up by the rotating brushes and collected in the dirt container (5) on the bottom of the cleaning foot.




If too much dirt blocks up the brushes, they may come to a standstill. In this case, move the On / Off switch to the **OFF** position, take the battery (2) out of the battery compartment (6) and clean the brushes (see the “Cleaning and Storage” chapter).

3. Move the On / Off switch to the **OFF** position to switch off the device.
4. Empty the dirt container after each use (see the “Cleaning and Storage” chapter – “Emptying the Dirt Container”).

Bending the Shaft

The shaft can be bent up to an angle of 90° to make it easier to handle.

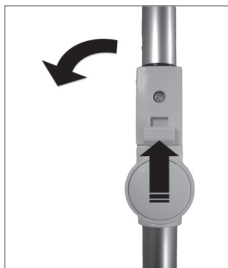

1. Slide up the button on the side of the joint (10) and at the same time move the shaft towards the battery compartment (6). The angle is infinitely adjustable.
2. Let go of the button to fix the shaft at the set angle.

Cleaning and Storage



PLEASE NOTE!

- Do not use any sharp or abrasive cleaning agents to clean the device. They could damage the surfaces.

1. Make sure that the device is switched off.
2. Remove the battery (2) by pressing together the two release buttons on the side of the battery and pulling out the battery at the same time.
3. Empty the dirt container (5) (see “Emptying the Dirt Container”).
4. Wipe down all parts of the device with a dry or damp, lint-free cloth.

5. Remove dirt, hair and threads from the brushes in the cleaning foot (4) on a regular basis (see "Cleaning Brushes").
6. Store the device, the charger (3) and the battery in a dry, frost-free place which is not accessible to children and animals.



To make it easier to store, fold the side of the cleaning foot on which the magnet is located up towards the shaft.

Emptying the Dirt Container


1. Hold the cleaning foot (4) over a dustbin.



2. Open the dirt container (5) by pressing together the two catches next to the shaft. The flap of the dirt container will flip open immediately and the dirt will drop into the dustbin.
3. Flip the dirt container shut. The catches must audibly engage.

Cleaning Brushes

As is the case with all cleaning equipment with rotating brushes, hair, threads and other small parts collect on the cleaning brushes over time. We recommend that the brushes are cleaned from time to time with the help of the cleaning tool (1) supplied.

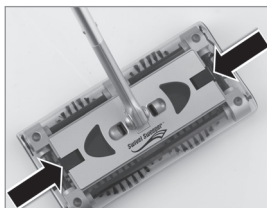

1. To make the brushes easier to access, remove the cover of the cleaning foot (4) by sliding the two catches on the cleaning foot towards one another and taking off the cover.
2. Remove any dust and dirt from the brushes with the help of the cleaning tool.
3. Place the cover on the cleaning foot and fix it in place with the catches by sliding them away from one another.

PLEASE NOTE: A small magnet is located on the bottom shaft piece (8) and the cover in each case. When you insert the cover, make sure that both magnets are pointing towards each other.

Troubleshooting

If the device does not work properly, first check whether you are able to rectify the problem yourself. If the problem cannot be solved with the steps that are listed, contact the customer service department.



Do not attempt to repair an electrical device yourself!

Problem	Possible cause	Solution
The device only works slowly or does not start.	The battery (2) is empty.	Charge up the battery.
	The battery is not placed in the battery compartment correctly.	Correct the fit of the battery.
	The bottom shaft piece (8) and the shaft piece of the cleaning foot (4) are not connected together correctly.	Correct the fit.
	The On / Off switch (9) is in the OFF position.	Move the On / Off switch to the ON position.
The battery is not charging up.	The battery is not placed in the charger (3) correctly.	Correct the fit of the battery.
	The charger is not inserted correctly in the plug socket.	Correct the fit of the charger.
	The plug socket is defective.	Try another socket.
	There is no mains voltage.	Check the fuse of the mains connection.
The device operates but does not pick up any dirt.	The dirt container (5) is full.	Empty the dirt container.
	Dirt particles will remain stuck to the carpet or will be too big / heavy to be picked up by the device.	Remove by hand.
During cleaning the device loses some of the dirt and waste.	The dirt container is full.	Empty the dirt container.
	The flap of the dirt container (5) is not shut correctly.	Correct the fit of the flap.
	Dirt has become trapped in the brushes.	Clean the brushes.

Technical Data



ID of instructions:

Device

Model number: TK21006G2
Voltage supply: 7.2 V DC
Power: 15 W
Battery charge duration: 2 - 2.5 hours, depending on the charging status



Charger

Model number: JF-DY095060B
Input voltage: 240V, ~ 50/60Hz, 0.2A max
Output voltage: 9.5 VDC 0.6A
Power: 5.7W
Protection class: II

Disposal



Dispose of the packaging material in an environmentally friendly manner so that it can be recycled.



The battery should be removed before the device is disposed of and should be disposed of separately from the device at suitable collection points.



This device is governed by the European Directive 2012/19/EU on waste electrical and electronic equipment (WEEE). Do not dispose of this device as normal domestic waste, but rather in an environmentally friendly manner via an officially approved waste disposal company.

Guarantee

This product is guaranteed for one year against all defects of workmanship and materials. This guarantee does not affect your statutory rights. For refunds and replacements, please return the item to the retailer where you initially made the purchase. You will be required to provide proof of purchase. If you have any problems or queries about this product, please contact JML customer services.



Distributed in the UK by: JML, Unit 1 Eastside, Port of Tyne, South Shields, NE33 5SP.

Distributed in the EU by: JML GmbH, Rheinstraße 3, 63225 Langen, Germany.

Customer Services: UK: 0800 031 9020 (Freephone). ROI: 041- 978 0003 (Local rate)

Email: info@JMLgroup.co.uk. Web: www.JMLdirect.com



©JohnMillsLtd/HL/10.23/421/F
Made in China