

# 4 Troubleshooting

Help is always at hand

## Help and assistance

If you require any technical guidance or find that your <enter product name> is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of the instruction manual or online at **[www.bush-support.com](http://www.bush-support.com)**

If you still require further assistance, call one of our experts on **0345 257 7271\***. To help us give you a fast and efficient service please have the following information ready:

**Model Ref.**

**Serial number**

You can find these on the rating plate - a small information panel (usually a sticker or metal plate) on the rear of your appliance

**Date of purchase**

This will be shown on your receipt

Local call rates applies\*

**Lines open 8am-7pm Monday to Saturday and 10am-4pm Sunday.**

\*Calls to Bush enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see [www.bt.com/pricing](http://www.bt.com/pricing) for details.

For security and training purposes, telephone calls to and from customer service centres may be recorded and monitored. Calls from Republic of Ireland will attract international call charges.

# **BUSH**

**Contact:**

[www.bush-support.com](http://www.bush-support.com)

Helpline: 0345 257 7271

52297327

# BUSH

## Quick start guide

Electric Cooker

BBISGLPYROBLK

BBISGLPYROSS

 


# 1 Unpacking


You'll soon be enjoying your new appliance

## Accessories

The Grill Pan and Handle Set X1

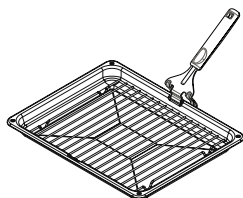

The Wire Grid X2

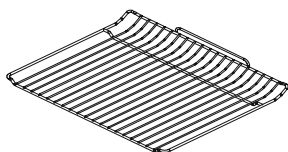 




# 2 Installing your cooker

## Bringing it all together


The appliances are supplied with installation kits and can be installed in a worktop with the appropriate dimensions. The dimensions for hob and oven installation are given below.

A (mm)	557	min./max. F (mm)	560/580
B (mm)	550	min. G (mm)	555
C (mm)	595	min. H (mm)	590
D (mm)	575	min. I (mm)	600
E (mm)	576	min. J/K (mm)	5/10

 
Installation under a worktop

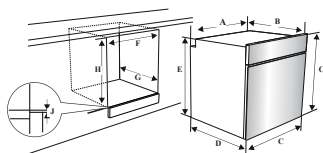

Installation in a wall unit

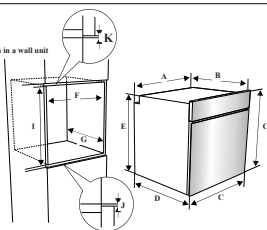 

 1. After making the electrical connections, insert the oven into the cabinet by pushing it forward. Open the oven door and insert 2 screws in the holes located on the oven frame. While the product frame touches the wooden surface of the cabinet, tighten the screws.

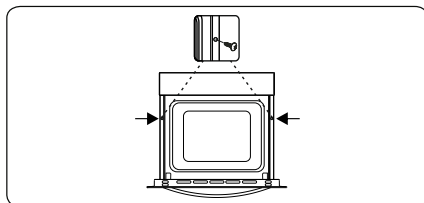

### Electrical Connection and Safety

 
The appliance is designed for a power supply of 220-240V ~ and 380-415V 3N~. If your supply is different, contact the authorised service person or a qualified electrician.

The power cable (H05VV-F) must be long enough to be connected to the appliance, even if the appliance stands on the front of its cabinet.

Ensure all connections are adequately tightened.

Fix the supply cable in the cable clamp and then close the cover.


The terminal box connection is placed on the terminal box.

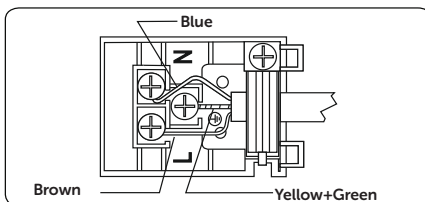

# 3 Using your cooker for the first time

## Let's get started

 
### Control panel

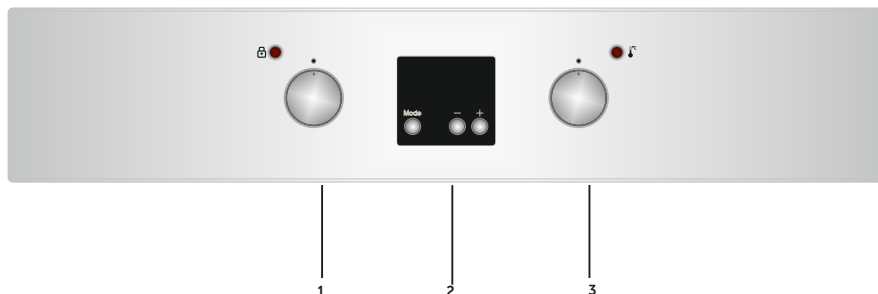

#### Use of the Digital Timer

##### Time adjustment

 
The time must be set before you start using the oven. Following the power connection, the symbol "A" and "000" will flash on the display screen.

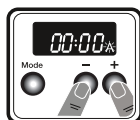

1. Press the "+" and "-" buttons simultaneously. The dots in the middle of the screen will start to flash.



 2. Adjust the time using the "+" and "-" buttons while the dots are flashing.

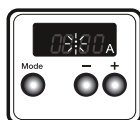

3. After a few seconds, the dots will stop flashing and will remain illuminated.

#### Function

1. Defrost Function
2. Turbo Function
3. Static Cooking Function
4. Fan Function
5. Grilling Function
6. Faster Grilling Function
7. Double Grill and Fan Function
8. Pyrolytic Cleaning Function

