

Breville®

Live more effortless



1.8L Rice Cooker

VTP209

Product Safety

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children shall not play with the appliance.

Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.

Keep the appliance and its cord out of reach of children less than 8 years old.

This product must be positioned on a stable surface with the handles positioned to avoid the spillage of hot liquids.

Surfaces of the product are liable to get hot during use.

Never operate the product by means of an external timer or separate remote-control system.

Never immerse any part of the appliance or power cord and plug in water or any other liquid.


If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Ensure the appliance is kept clean after use. For details see the Care and Cleaning section. Pay particular care regarding items that can be immersed in water and/or a dishwasher.

- ⚠ Never use this appliance for anything other than its intended use. This appliance is for household use only. Do not use this appliance outdoors.
- ⚠ Always ensure that hands are dry before handling the plug or switching on the appliance.
- ⚠ Always use the appliance on a stable, secure, dry and level surface.
- ⚠ Ensure the appliance is switched off and unplugged from the supply socket if it is left unattended, when it is not in use or before cleaning. Never leave the appliance unattended when it is in use.
- ⚠ Never use this appliance with an external timer or separate remote-control system.
- ⚠ Always allow the appliance to fully cool down before cleaning or storing.
- ⚠ Do not use the appliance if it has been dropped, if there are any visible signs of damage or if it is leaking.
- ⚠ Never let the power cord hang over the edge of a work top, touch hot surfaces or become knotted, trapped or pinched.
- ⚠ Do not touch the external surfaces of the appliance during use as they may become very hot.
- ⚠ Only use spares or accessories that are recommended by the manufacturer.
- ⚠ Allow adequate space above and on all sides for air circulation.

- ⚠ Do not allow the appliance to touch any flammable material during use (such as curtains or wall coverings).
- ⚠ Care is required when using the appliance on surfaces that may be damaged by heat. The use of an insulated pad is recommended.
- ⚠ WARNING: Misuse of this appliance can result in injury. Always follow the instructions carefully and use the appliance only as intended.
- ⚠ CAUTION: The heating element surface may remain hot after use. Avoid touching the heating element immediately after cooking to prevent burns.

Parts

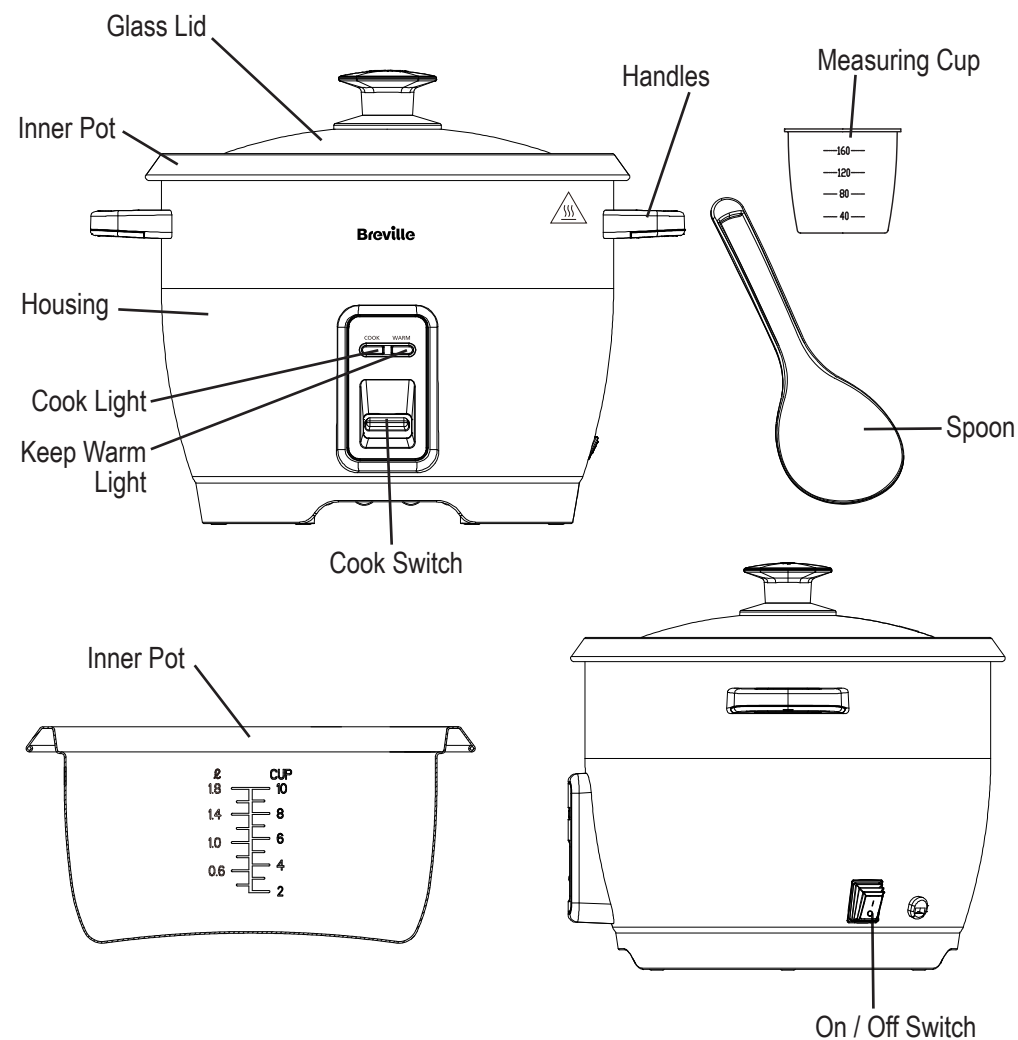

Preparing For First-Time Use

1. Clean the following parts with warm soapy water. Rinse and dry thoroughly.

- Glass Lid

CAUTION: HANDLE THE LID WITH EXTREME CARE, AS IT MAY BECOME SLIPPERY WHEN WET OR USE DISHWASHER.

- Inner Pot
- Spoon
- Measuring Cup

2. Clean the Heating Body by lightly wiping the exterior with a damp cloth or sponge. Dry thoroughly with a soft cloth.

CAUTION: DO NOT IMMERSE HEATING BODY INTO WATER OR ANY OTHER LIQUID.

Using Your Appliance

Rice quantities

To obtain the best results, please follow the measuring guide below with the Measuring Cup provided.

Measure uncooked white rice using the cup measure. Do not fill the measuring cup past the maximum fill line.

For best results, thoroughly wash the rice before cooking. Add the water to the corresponding marking on the inner bowl. For example, if you are making 2 cups of uncooked rice, add water after adding rice to the "2" mark on the Inner Pot. 10 cups of raw white rice is the maximum quantity for this product.

Due to the extra volume of water needed to cook brown rice, we recommend a maximum of 8 cups are used in your rice cooker.

Brown Rice (8 cups max.)	
Uncooked Rice Measures	Water Measures
1	1½
2	3
3	4½
4	6
5	7½
6	9
7	8¾
8	10

How to cook rice

1. Follow the measuring guide, measure uncooked rice and add corresponding measurement of water to the cooking bowl.

TIP: For stickier rice, add slightly more water. For fluffier rice, use slightly less water.

2. Set the Inner Pot (with water and rice) into the Rice Cooker. Ensure the bowl is positioned correctly.

TIP: For softer rice, we suggest preparing rice and water in the Inner Pot and letting it soak for 10 – 20 minutes before cooking.

3. Cover with Lid.

CAUTION: DO NOT OPERATE THIS APPLIANCE UNCOVERED. STEAM IS GENERATED DURING USE.

4. Make sure the Rice Cooker is plugged into a power socket.

5. Activate the Rice Cooker by pushing down the Cook Switch. Make sure the (Red) Cook Light is on.

Unless your recipe states otherwise, avoid removing the lid before the cooking time has elapsed. Removing the lid unnecessarily will result in a loss of steam and the cooking time will need to be extended.

6. Once the rice is cooked, the Rice Cooker automatically switches to the Keep Warm setting, and the yellow Keep Warm light turns on. The Rice Cooker will keep the rice warm until you unplug it from the electrical outlet or put the On / Off switch to Off position.

TIP: For best results, particularly when cooking large amounts of rice, please ensure that you allow the unit to remain on keep warm for 15 minutes after the cooking cycle.

7. After use, unplug your rice cooker from the electrical outlet. **Your rice cooker does not switch off automatically.**

Care And Cleaning

This appliance should be cleaned after every use.

1. Unplug the Rice Cooker from the electrical outlet when not in use or before cleaning. Never immerse the Heating Body in water or any other liquid. Allow the Rice Cooker to cool completely before cleaning.

2. **DO NOT** use abrasive cleaners, scouring pads, or steel wool to clean the Rice Cooker.

3. Heating Body: lightly wipe the exterior with a damp cloth or sponge. Dry thoroughly with a soft cloth.

CAUTION: DO NOT IMMERSE THE HEATING BODY IN WATER OR ANY OTHER LIQUID.

4. Inner Pot: If there is stubborn or burnt residue sticking to the non-stick bowl, soak in hot soapy water then wash with a sponge. Dry thoroughly with a cloth.

5. Wash Lid, Measuring Cup, and Spoon in warm soapy water. Rinse thoroughly and dry.

CAUTION: HANDLE THE LID WITH EXTREME CARE, AS IT MAY BECOME SLIPPERY WHEN WET OR USE DISHWASHER.

6. There are no user-serviceable parts inside this appliance. **DO NOT** attempt to repair this appliance yourself, as you could make it dangerous to use.

Fitting of a plug - for U.K. and Ireland only

⚠ This appliance must be earthed.


If the plug is not suitable for the socket outlets in your home, it can be removed and replaced by a plug of the correct type.

If the fuse in a moulded plug needs to be changed, the fuse cover must be refitted. The appliance must not be used without the fuse cover fitted.

If the plug fuse requires replacement, a fuse of the same rating as that fitted by the manufacturer must be used. In order to prevent a hazard do not fit a fuse of a lower or higher rating.

If the terminals in the plug are not marked or if you are unsure about the installation of the plug please contact a qualified electrician.

Plug should be ASTA approved to BS1363
Fuse should be ASTA approved to BS1362

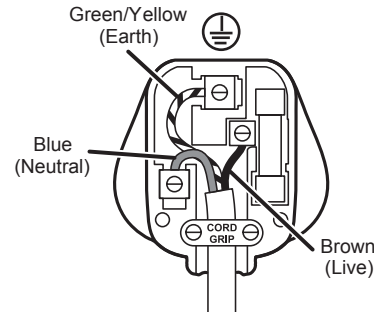

Ensure that the outer sheath of the cable is firmly held by the cord grip

After sales service & replacement parts

In the case the appliance does not operate but is under warranty, return the product to the place it was purchased for a replacement. Please be aware that a valid form of proof of purchase will be required. For additional support, please contact our Consumer Service Department at: **United Kingdom: 0800 028 7154 | Spain: 0900 81 65 10 | France: 0805 542 055**. For all other countries, please call **+44 800 028 7154**. International rates may apply. Alternatively, e-mail: **BrevilleEurope@newellco.com**.

Waste Disposal

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. E-mail us at BrevilleEurope@newellco.com for further recycling and WEEE information.



Breville®

Newell Brands UK Limited
Halifax Avenue, Fradley Park, Lichfield, Staffs, WS13 8SS, UK
Newell Poland Services Sp. z o.o.,
Plac Andersa 7, Poznan, 61-894, Poland.
e-mail: BrevilleEurope@newellco.com
Telephone: 0800 028 7154
Visit us at our websites breville.co.uk or breville.eu



© 2025 Sunbeam Products Inc. All rights reserved.
Made in China.