# **Assembly Instructions**

#### Step 1

a. fix seat frame and back frame 5 and screw caps 😑

b.put the cushion 4 onto the wooden


frame.


### Step 2


Fix the support bar 3 onto armrest 1 and 2 by using screwAand nutB

## Slep 3 Allching the cushion

Using screw © to fix the cushion onto the armrest, finally tighten all the screws by using Allen key **(F**).

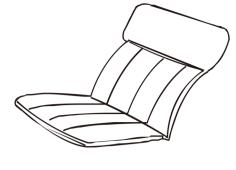

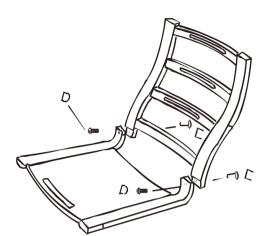


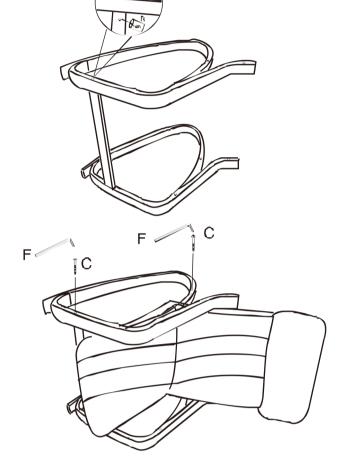

# **ROCKING CHAIR**

Assembly Instructions - Please keep for tuture reference

724/5538 792/2789 413/7735

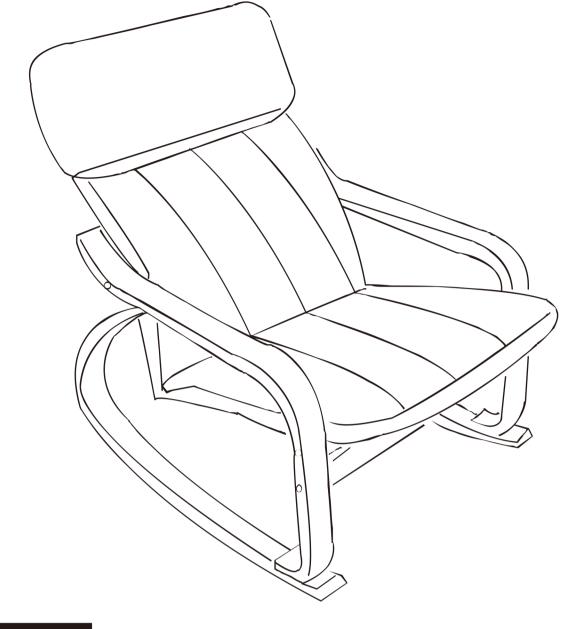

#### Dimensions

Widlh - 67 Depth -95 Height -83 Soat Height - 44.5

#### Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call zhe Argos Aftersales helpline 0345 640 0800 489-499 Avebury Boulevard Milton Keynes MK92NW, Argos Limited

ssue 2 - 10**/**04/14

# Safety and Care Advice

## Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- · Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



 We do not recommend the use of power drill/drivers for inserting screws,

as this could damage the unit. Only use hand screwdrivers.

• Dispose of all packaging carefully and responsibly.

## Care and maintenance


- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

# Notes:

1


- Maximum load for this chair is 150 kgs, personalinjury could result if the chair is subjected to higher load.
- Do not use this chair on uneven ground.
- · Adult assembly is required.
- The chair is suitable for children under 3-10 years old.
- Please retain the information relatin to this product for further reference.
- Always follow the instructions provided for the assembly, use and maintance of the product.
- To avoid puncturing place on a clean even surface free from stones and other sharp debris.

 Argos Co.,Ltd 489-499 Avebury Bovlevard Saxon Gate West, Central Milton Krynes, Bucks, Mk92NW

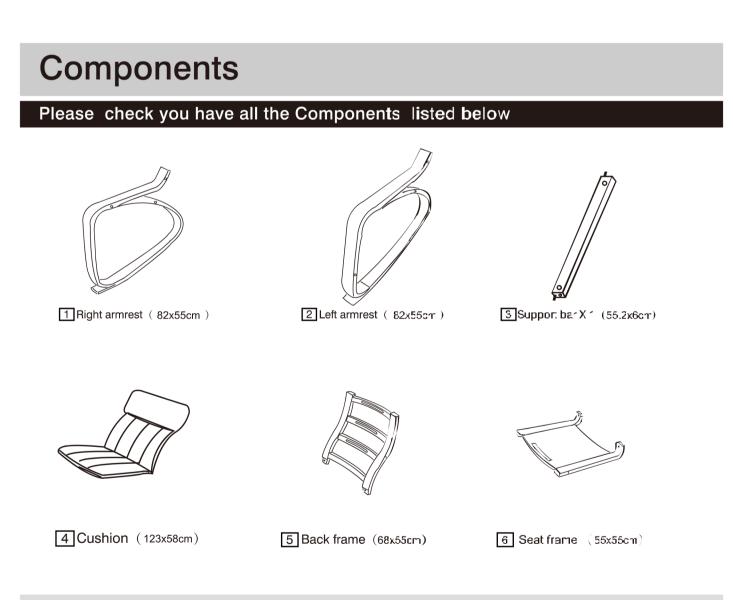

Components - Fittings If you have damaged or missing components, call the Customer Helpline: 0345 640 0800

Please check you have all the fittings listed below

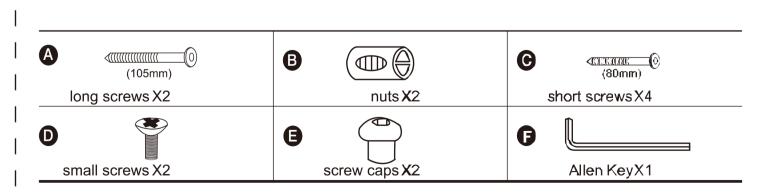

Ruler - Use this ruler to help correctly identify the screws