 
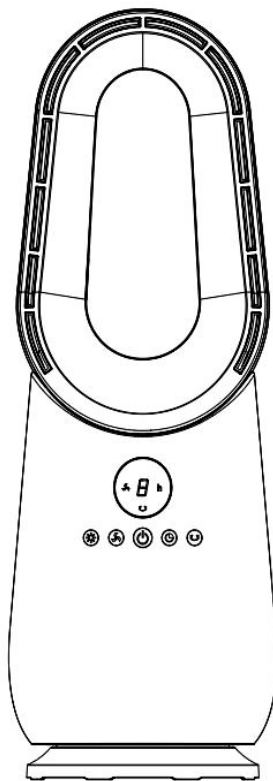 


BUSH

Instruction manual

23 INCH BLADELESS DESK
FAN

Model number TX-LF04



BUSH

210 mm

142 mm

Please read the instructions fully before use.



Safety information

Important- please read the instructions fully before operating.

For household and indoor use only.

- This appliance must be used for its intended purpose only and operated as instructed in this user manual.
- Use only the voltage specified on the rating plate of the appliance.
- Do not connect the appliance to the mains voltage until completely assembled and adjusted.
- **This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.**
- Children should be supervised to ensure they do not play with the appliance.
- To protect against electrical shock do not immerse cord, plugs, or the main body in water or other liquids.
- Check the appliance before each use for signs of wear or damage. If damaged, discontinue from use immediately and do not use until the appliance has been inspected and approved for use by a qualified service person.
- The product is not to be used if it has been dropped or there are visible signs of damage.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or a similarly qualified persons in order to avoid hazard.
- Never attempt repairs yourself. Repairs to electrical appliances should only be performed by a qualified electrician. Improper repairs may place the user at serious risk and will invalidate the guarantee, take the appliance to a qualified repair agent.
- This appliance is designed for indoor; household use only.
- Do not insert fingers or other objects into the fan during use, this can

 
cause personal injury and damage.

- Unplug the appliance when not in use, when moving the appliance and before cleaning.
- Do not place the appliance on an unsteady surface.
- Keep away from open flames such as lit candles, open fires, cooking, and other heating appliances.
- Do not operate the fan in the presence of explosive and/or flammable fumes.
- Do not place the fan or any parts near an open flame, cooking, or other heating appliance.
- Do not hang or mount fan on a wall or ceiling.
- Do not operate if the fan housing is damaged.
- Do not allow fan to be directed onto children, the elderly or infirm for a long period of time.
- Do not use the fan in areas of high humidity, very dusty, or in temperatures higher than 40°C.
- Do not use the fan near an open window as rain may cause an electric shock hazard.

BATTERY WARNING

- CAUTION – Danger of explosion if batteries are incorrectly fitted / replaced.
- Batteries should be installed by an adult. Keep new and used batteries away from children.
- Only use 'AAA' 1.5V batteries in this remote control.
- Be sure to insert correctly taking care to observe the correct polarity (+ and -).
- Use only batteries of the same or equivalent type as recommended.
- Do not recharge non-rechargeable batteries.
- Never mix old and new batteries (replace all batteries at the same time).
- Never try to crush. Puncture or dismantle batteries.
- Do not short-circuit the supply terminals.
- Always remove exhausted or dead batteries from the product.
- Remove batteries from the product before extended storage.
- Dispose of used batteries responsibly at local authority household waste recycling facility.
- DO NOT dispose of batteries in a fire as the batteries may explode.
- In the event of a battery pack leaking, do not allow the liquid to come in contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.

Getting to know your bladeless desk fan

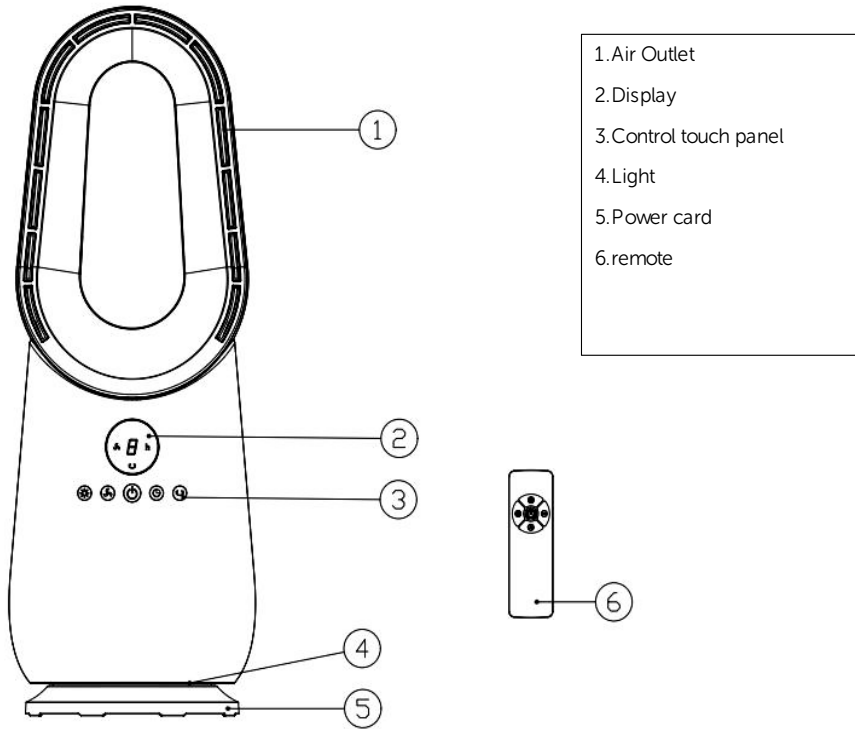

Note: 2 x AAA batteries for the Remote Control are not included.

INSTRUCTIONS FOR USE

 
Before using your fan.

Make sure you have read and fully understood the safety instructions before operating the fan.

- Choose a safe, horizontal, stable surface to place your desk fan and position the power cord so not to create a trip hazard.
- Plug the power cord into a suitable power socket.



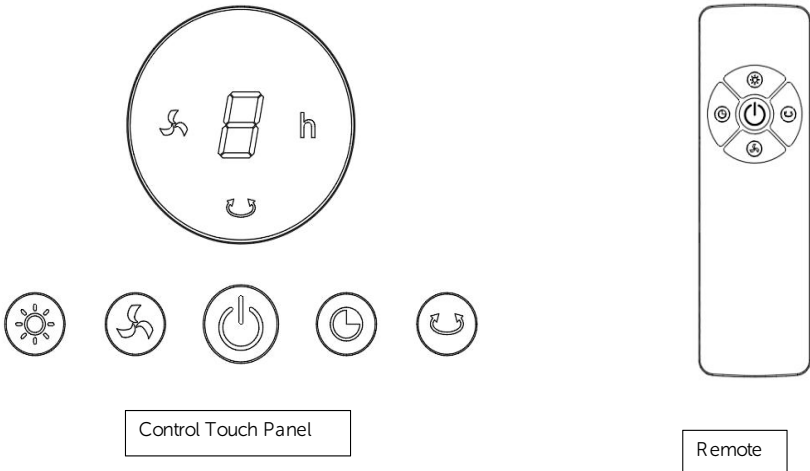


CAUTION: DO NOT COVER THE FAN HEAD

Using your fan



After connecting to the power supply, the fan is ready for operation.

On the initial connection to power, the buzzer emits a single "Bi" sound, and the unit enters standby mode. During standby, only the ON/OFF button is functional; other buttons remain inactive.

-  **ON/OFF button:** Press this button to switch the fan on, the fan will run at low speed. Press again to switch your fan off into standby mode.
-  **SPEED button:** Press the button to adjust the level of wind speed. Low / Middle / High. The selected speed will show on the fans display.
-  **OSCILLATION button:** Press the button, the unit will automatically rotate from left to right.
-  **LIGHT button:** Press the Light button to turn the LED on; press again to turn it off.
-  **TIMER button:** Press the timer button to set the fan to turn off after a specific duration. Each press increases the operating time by one hour, up to a maximum of 9 hours.

Screen Display:

 
During use, the screen display will automatically turn off after 36 seconds. The display will light back up when any button is pressed.

Remote Control


Note: Battery Type: "1.5V 2 x AAA" are not included.

The Fan comes with a remote control for your convenience.

The functions on the remote control are the same as the buttons on the Fan.



 - To install or remove the batteries, remove the back of the remote control by fixing the screw and pressing down on the Thumb Grip, then sliding the battery cover along and lifting it off as shown.

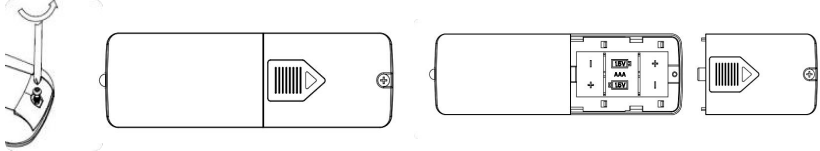

- Insert the batteries inside the battery compartment matching polarity icons (+ and -) with those marked inside the battery compartment.

Place the flat "-" end of the battery on the spring, push down on the spring and at the same time, push the top "+" end of the battery into the remote control. Repeat for the other battery and then refit the cover securely by sliding it back on until it clips shut.

- To remove the batteries, using your fingernail or a plastic tool, pry the batteries out by pushing from the top (+ end) of the battery and then swing out as shown.

IMPORTANT:

Do not mix new and old batteries or batteries of different types (e.g., Alkaline with Non-Alkaline) in the remote control.

To prevent corrosion, remove the batteries if the remote control will not be used over a lengthy period.

 
Non-rechargeable batteries are not to be recharged.

Exhausted batteries are to be removed from the remote control and safely disposed of.

The battery supply terminals are not to be short-circuited.

- Point the Remote Control at the front of the Fan control panel as this is the location of the receiver, then press your desired button.
- The remote control typically functions within approximately 5 meters from the front of the product, with an allowable deviation angle of up to 30 degrees.

Important: Always operate the product on a flat, level, steady, and stable surface to avoid it overturning.

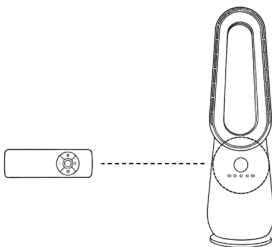

Care and Maintenance.

The fan requires little maintenance and contains no serviceable parts. Do not attempt to dismantle the fan motor body yourself. The fan is permanently lubricated and will not require additional lubrication.

- Always turn off and unplug the fan from the mains supply before cleaning.
- Use only a soft slightly damp cloth followed by a dry cloth, to gently wipe the outer surfaces on the fan to clean.
- Do not try to remove the fan grill. To clean between the bars, it is recommended using a vacuum cleaner or compressed air to gently remove the dust.

Storage.

- When not in use, clean the fan before storing away in the original or similar sized box.
- Store the fan in a safe, clean, and dry place, away from direct sunlight and out of reach of children.

Technical Specifications.

BUSH bladeless desk fan	Symbol	Value	Unit
Model number	--	TX-LF04	--
Voltage	--	220-240	VAC
Maximum flow rate	F	6,42	m ³ /min
Fan power input	P	57,7	W
Service value	SV	0,11	(m ³ /min)W
Standby consumption	P _{SB}	0,20	W
Fan sound power level	L _{WA}	52,57	dB(A)
Maximum air velocity	C	2,27	Meters/sec
Measurement standard for service value	EN IEC 60879:2019		
Bush Careline	Customer helpline 0345 604 0105		

Model: TX-LF04
 Wattage: 60W
 Voltage: AC 220-240V
 Frequency: 50-60Hz
 LED Supply current: 0.059 A
 LED PF: 0.5

Information for Separate Control Gear

Luminous flux:	530 lm
Correlated colour temperature:	6500K
The maximum output power of the light source:	6W
The type of light source:	LED
The efficiency in full-load:	63.2%
The no-load power:	0.5W
The outer dimensions in mm:	108mm (depth) x 102mm (width) x 30mm (height)
The mass in grams of the control gear, without packaging, and without lighting control parts and non-lighting parts:	52g
This product contains a light source of energy efficiency class F.	

Recycling electrical products.



You should now recycle your waste electrical goods and in doing so help the environment. This symbol means an electrical product should not be disposed of with normal household waste. Please ensure it is taken to a suitable facility for disposal. Visit www.recycle-more.co.uk, click on "bank locator" and enter your postcode to find your nearest recycling site.

Plug and wiring advice.

The wires in this mains lead are coloured in accordance with the following UK electrical code:

 
BLUE = NEUTRAL
BROWN = LIVE
GREEN + YELLOW = EARTH

Non-rewireable plug

This appliance may be fitted with a "non - rewireable" plug. If you need to change the fuse in a "non - rewireable" plug, the fuse cover must be refitted. If the fuse cover is lost or damaged, the appliance must not be used.

Rewireable plug.

The colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in a rewireable plug. **Rewireable plugs should only be replaced by a suitably competent person. If in doubt, consult a qualified electrician.**

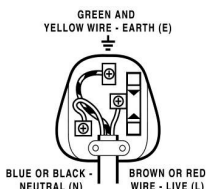

The BLUE wire must be connected to the terminal marked with the letter N

The BROWN wire must be connected to the terminal marked with the letter L

The GREEN & YELLOW wire must be connecting to the terminal marked with the letter E or the earth symbol



Help and assistance

If you require any technical guidance or find that your Fan is not operating as intended, a simple solution can often be found in these instructions or online at www.bush-support.com

If you still require further assistance, call one of our experts on 0345 604 0105*. To help give us give you a fast and efficient service please have the following information ready:

Model Ref.

Serial number

Date of purchase

You can find these on the rating plate - a small information panel (usually a sticker or metal plate) on the rear of your product.

This will be shown on your receipt

Local call rates apply*

Lines open 8am-7pm Monday to Saturday and 10am-4pm Sunday.

*Calls to Bush enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see www.bt.com/pricing for details.

Product support

Help is always at hand

BUSH

Call us now and register your 12 month guarantee

Thank you for choosing Bush. Your new product is guaranteed against faults and breakdowns for 12 months. Don't forget to register it with us today so we can provide you with our best possible after-sales service and useful updates.

www.bushregistration.co.uk

FREEPHONE *

0800 597 8548

Lines are open 8am - 8pm, 365 days a year. *Calls may be recorded and monitored.

Your Bush Guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from whom you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in the manual.
- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexperienced repair.
- Specifications are subject to change without notice.
- Bush disclaim any liability for loss or damage arising from the breakdown of the product.
- This guarantee is in addition to and does not diminish your statutory or legal rights.

Important Data Protection Information

To find out how we and Domestic & General Insurance Plc use your data please refer to the guarantee registration material or visit www.bushregistrations.co.uk

Guarantor: Argos Limited, Sainsbury's Supermarkets Ltd, London, EC1M 6HA, UK.
[Argos \(N.I.\) Ltd](http://www.argos.co.uk), and Sainsbury's (NI) Ltd, Forestside Shopping Centre, Upper Galwally, Belfast, BT8 6FX, UK.

BUSH

This page is left intentionally blank

