




Russell Hobbs

**80cm Wide 180cm High
4 Door Total No Frost Fridge Freezer
Instruction Manual**

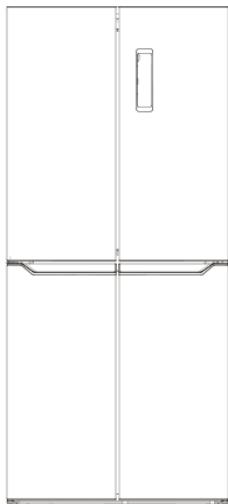

**Model number:
RH180A4FF802E1**

**IMPORTANT:
RETAIN FOR FUTURE REFERENCE**

Contents

Safety Instructions	3-5
Installing & Switching on your Appliance	6
Before Switching On	7
Product Overview	8
Positioning & Installation	9 - 10
Usage	11-15
Shelving & Racking Adjustment	16
Replacing the Bulb & Door Reversal	17
Freezer Storage Advice	18
Food Storage Advice	18
Energy Saving Advice	19
Power Failure	19
Maintenance & Cleaning	20-21
Trouble Shooting	22-23
Connection to the Mains Supply	24
Error Codes	25
Guarantee	27
Product Fiche	28
Notes	29-31



Russell Hobbs

Safety Instructions

Important note: Please read this booklet before installing and switching on this appliance. The manufacturer assumes no responsibility for incorrect installation and usage as described in this booklet.

Warning: When positioning the appliance, ensure the supply cord is not trapped or damaged.

Warning: Do not locate multiple portable socket-outlets or portable power suppliers at the rear of the appliance.

- This model uses natural refrigerant gas as part of its cooling system. This gas is known as R600a (Isobutene) and is environmentally friendly but can be combustible. Care should therefore be taken when handling or transporting the product to ensure that none of the refrigeration circuit components are damaged,
- Do not obstruct ventilation openings in the appliance
- The appliance must not be placed or rested on its power cord.
- Do not use mechanical devices or other artificial means to accelerate the defrosting process, such as a heater or a hair dryer.
- Do not use electrical appliances in the refrigerator compartment of the appliance.
- If this appliance is to replace an old refrigerator with a lock, the lock must be removed as a safety measure before storing it or disposing of it. This is to protect children from locking themselves inside the appliance.
- Old refrigerators and freezers contain insulation gases and refrigerant, they must be disposed of properly. Contact your local authority or your dealer if you have any questions. Please ensure that you do not damage the scrap unit prior to being picked-up by the relevant waste disposal service.
- Do not use adaptors or extension leads when connecting the appliance to the electrical power supply



- Do not plug in damaged plugs.
- Do not pull, twist or damage the power cable.
- Do not plug-in or un-plug the appliance with wet hands to prevent electrical shock.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children should not play with the appliance.
- Children aged from 3 to 8 years are allowed to load and unload this appliance.
- This appliance is designed to be used by adults, do not allow children to play with the appliance or let them hang over the door.
- Do not place explosive or flammable material in your appliance for your own safety.
- Bottles containing a high percentage of alcohol must be sealed well and placed vertically in the refrigerator.
- Do not cover the body or the top of the appliance
- Fix down the accessories in the appliance during transportation to prevent damage to them.
- To avoid contamination of food, please respect the following instructions
 - Opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance.
 - Clean regularly surfaces that can come in contact with food and accessible drainage systems.
 - Store raw meat and fish in suitable containers in the refrigerator, so that it is not in contact with or drip onto other food.
 - Two-star frozen-food compartments(if they are presented in the appliance) are suitable for storing pre-frozen food, storing or making ice-cream and making ice cubes.



- One-, two- and three -star compartments (if they are presented in the appliance) are not suitable for the freezing of fresh food.
- If the appliance is left empty for long periods, switch off, defrost, clean, dry and leave the door open to prevent mould developing within the appliance.

Electrical Safety

THIS APPLIANCE MUST BE PLUGGED INTO AN EARTHED SOCKET

- Before switching on, make sure that the voltage of your electricity supply is the same as that indicated on the rating plate. This product is designed to operate on 220 – 240V AC; 50Hz. Connection to any other power source may damage the unit.
- This product may be fitted with a non re-wireable plug. If it is necessary to change the fuse in the plug, the fuse cover must be refitted. If the fuse cover becomes lost or damaged, the plug must not be used until a suitable replacement is obtained.
- If the plug has to be changed because it is not suitable for your socket, or becomes damaged in any way, it should be cut off and an appropriate plug fitted following the wiring instructions. This should be carried out by a qualified electrician. The plug removed must be disposed of safely, as insertion into a 13 Amp socket is likely to cause an electrical hazard.

Transportation and Handling

For safe lifting, tilt the appliance backwards by no more than 45 degrees, hold the base and rear corners of cabinet. Lift the refrigerator carefully. Never use the door handles for lifting. To move the refrigerator on a flat level surface, tilt it slightly backwards and push backwards.

This unit is heavy and could cause injury – ensure there are adequate people present to move the appliance.



Installing and Switching on Your Appliance

- Operating voltage for your appliance is 220-240V at 50Hz.
- Before plugging in the power supply, ensure that the voltage on the rating label corresponds to the working voltage of your electrical system in your home.
- Insert the plug into an efficient Ground (Earth) connection. If the socket has no Ground (Earth) contact or the plug does not match, we suggest you call an authorised electrician for assistance.
- Place your appliance in an area that is not exposed to direct sunlight.
- Your appliance should be placed at least 10cm away from stoves, ovens and other heating cores.
- This appliance should never be used outdoors or left in the rain.
- When your appliance is placed next to a chest freezer or freezer, there should be at least 10cms between them to prevent humidity on the outer surface.
- Do not place anything on your appliance and install the unit in a suitable place so that there is at least 30cm clearance above the appliance.
- If placing your appliance next to kitchen cabinets, leave 5cm between them.
- The rear of the appliance should be at least 5cm away from the back wall.
- The appliance must be used in the vertical position and on a flat surface.
- To level the appliance, use the adjustable feet on the appliance.
- Do not place your appliance on a carpeted surface as this will prevent adequate ventilation.
- This appliance is not intended to be built-in to worktops or other units, unless specifically outlined in this instruction manual. All vents must remain clear of obstruction to ensure safety and performance.
- This appliance should only be placed on a flat, firm surface.
- Choose a dry and well-ventilated space.
- The appliance should be positioned so that the plug is easily accessible.



! WARNING! During use, service and disposal of the appliance, please pay attention to symbol similar to the one shown, which is located on rear of the appliance (rear panel or compressor) and with a yellow or orange colour. It's risk of fire warning symbol. There are flammable materials in refrigerant pipes and compressor. Please be far away from fire source during use, service and disposal.

 **Russell Hobbs**


Before Switching On

- Before using your appliance, add a teaspoon of bicarbonate of soda to warm water and with a damp cloth wipe down all parts of the new appliance, then repeat the process with a clean damp cloth and dry (**ensure the appliance is not connected to the power when performing this task**).
- Remove all transport tapes and foam protection pieces . Clean the interior with a cloth dampened in lukewarm soap and water. Wipe with clean water and wipe dry.
- There may be an odour when you first switch on the appliance, it will disappear when the appliance starts to cool.
- When the appliance has been positioned, adjust the feet to ensure the unit is stable. This is essential to ensure quiet running and proper door opening /closing.
- Connect to the electrical socket but do not switch the power to the refrigerator on for at least 3 hours. The coolant within the product needs time to settle after it has been transported and put in to position, failure to do this will affect the cooling performance of your appliance.
- Once the appliance has settled switch on the power, the compressor will begin to work. Locate the control panel and set the temperature of the fridge compartment to 4°C and the freezer compartment to -18°C. Close the door
- You may hear faint gurgling or bubbling sounds when the refrigerant is pumped to the cooling system and through the coils or tubing at the rear of the appliance. When the compressor is in operation you may hear a slight whirring sound or pulsating noise. The thermostat controls the operation of the compressor, and you may hear a slight click as it cycles in and out (this is normal).
- To save energy, you should minimize the frequency and duration of door opening.



Russell Hobbs

Your Appliance and the Compartments


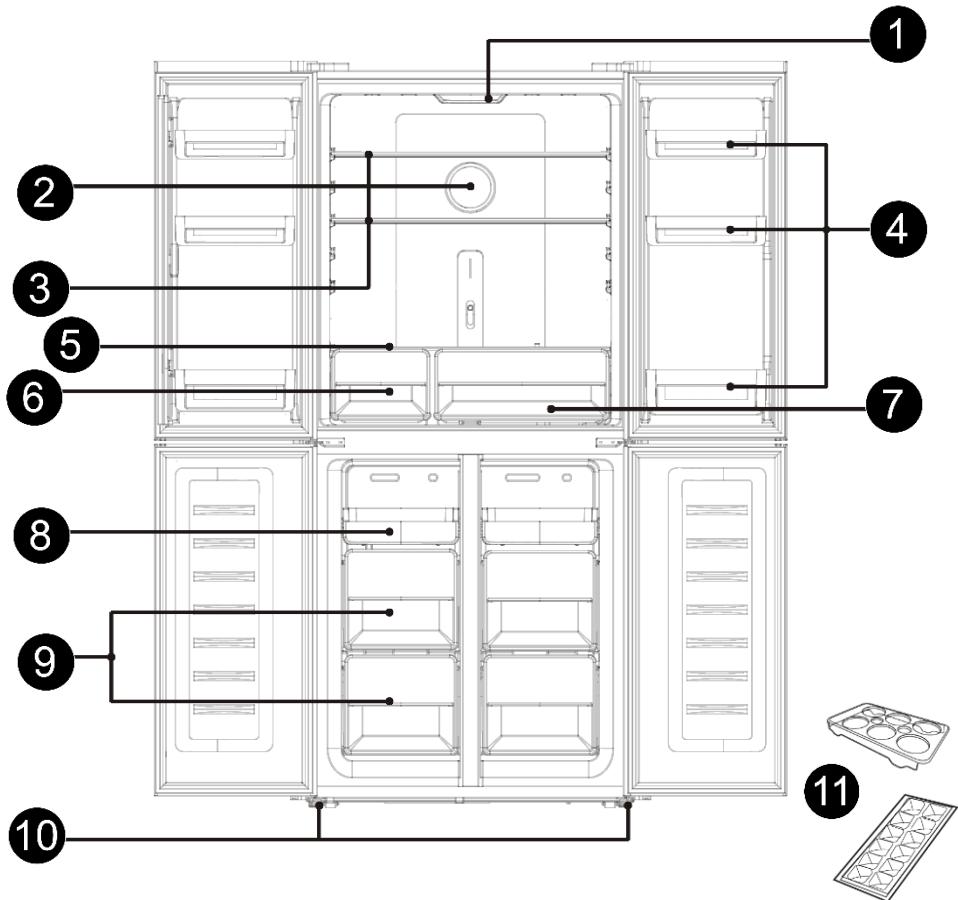


1. Internal LED Light	6. Fresh Zone
2. LED & Deodorization Module (not visible)	7. Crisper Zone
3. Fridge Shelves	8. Sliding Tray
4. Fridge Door Balconies	9. Freezer Drawers
5. Crisper Cover	10. Adjustable Feet
	11. Egg Tray & Ice Cube Tray

Positioning & Installation

This appliance should be installed well away from sources of heat such as radiators, boilers or direct sunlight. This appliance should have a minimum of 50mm from overhead cabinets. This appliance is not intended to be used as a built-in appliance.



IMPORTANT Ensure there is a minimum of 50mm gap around the sides and back of the appliance to provide adequate airflow.

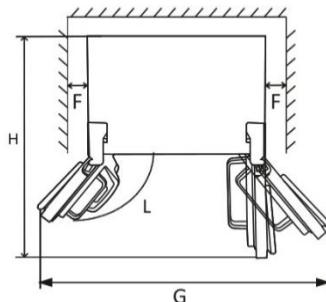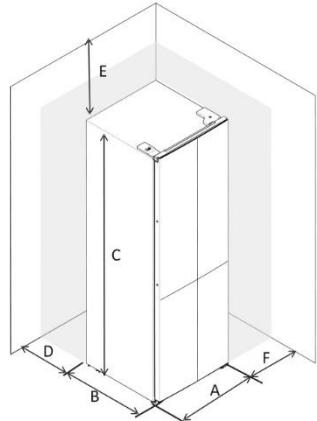

A	790mm
B	700mm
C	1800mm
D	Min. 50mm
E	Min. 50mm
F	Min. 50mm
G	1580mm
H	1490mm
L	135°

Levelling the Appliance

The two feet at the bottom of the appliance can be adjusted to level the appliance. A minimum of 2 people must adjust the feet of the appliance. Using a spirit level, turn the feet clockwise or counter-clockwise to raise/lower the front. Levelling the appliance will ensure the doors and magnetic seal operate correctly.

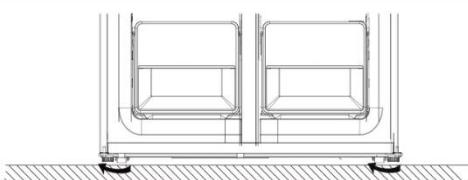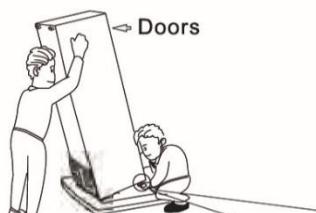

- Level and anchor the refrigerator by adjusting the feet.
- Rotate the feet clockwise by hand to heighten.
- Rotate the feet anticlockwise by hand to lower.



 **Russell Hobbs**

Levelling the Appliance

After transportation or once the door balconies are loaded with food or beverages, the upper two doors may not be aligned.

There are 3 C type washers which can be used to adjust the doors. Please follow the below process to level the doors:

1. Before you check the alignment of the doors, please ensure the appliance is level. If the top of the upper two doors are not inline, slightly lift the from the bottom of the door and insert one of the C type washers between the bottom of the door and the middle hinge, as shown below.

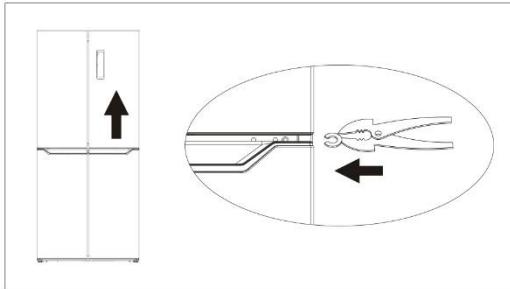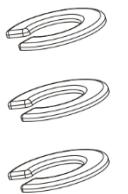


Warning: Be careful to avoid fingers being clipped by the door. Please use tools.

Warning: Keep C type washers far away children to avoid them being swallowed by children. They are small parts.

Rubber Blocks

There is one rubber block on each of the fridge doors. They function as a spring to relieve impact when a door closes. If they're absent, take them from the accessory bag and insert into the doors as shown below. They should be placed at the bottom of the fridge doors.

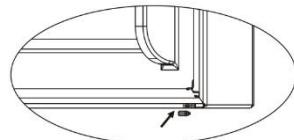

Russell Hobbs

Usage Information


Control panel

Display

1. Fridge compartment temperature
2. Freezer compartment temperature
3. ECO mode indicator
4. HOLIDAY mode indicator
5. SUPER FREEZING mode indicator
6. LOCK indicator

Buttons

7. Fridge compartment manual temperature adjustment
8. Freezer compartment manual temperature adjustment
9. Mode function/setting and lock/unlock controls (hold for 3s)

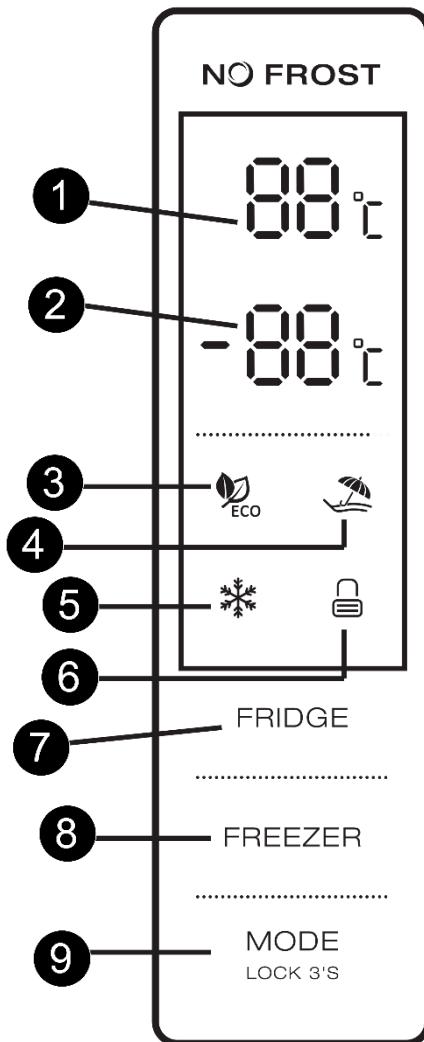

Usage Information

Functions

Mode	Indicator	Freezer Temp. Display	Fridge Temp. Display
ECO		Varies with ambient temperature	Varies with ambient temperature
HOLIDAY		Adjustable (Default: -18°C)	+17°C (Not adjustable)
SUPER FREEZING		-25°C (Not adjustable)	Adjustable (Default: +5°C)

Press the 'Mode' button to enter any of the above modes. Keep pressing until the indicator of the mode you would like to set (as shown above), is illuminated on the display.

Mode	Function
ECO	The appliance runs on the lowest power consumption
HOLIDAY	Designed to save energy when the appliance is not in regular use, such as during a holiday or extended absence. It prevents the fridge compartment from wasting energy cooling an empty space while still preventing odours and mould growth. Freezer remains at its normal temperature.
SUPER FREEZE	Cools the freezer compartment to the lowest temperature for 50hrs before reverting to the previous set temperature. Use to quickly freeze foods.
MANUAL	Temperatures are manually adjusted using the FREEZER/FRIDGE buttons as desired

 Russell Hobbs

Usage Information

When selecting ECO mode, the ECO icon will flash for 5 seconds and then remain lit; the appliance will then enter ECO mode. The 'Freezer' & 'Fridge' buttons will not work in ECO Mode. The temperature of Fridge and Freezer is set according the following ambient temperature:

Ambient temperature (T)	T≤13°C	13°C < T≤20°C	20°C < T≤27°C	27°C < T≤34°C	T>34°C
Fridge temperature	3°C	4°C	5°C	6°C	8°C
Freezer temperature	-18°C	-18°C	-18°C	-16°C	-15°C

To exit 'ECO' mode, press the 'Mode' button to change to any other mode, and after 5 seconds 'ECO' mode will be exited, and the new mode will be entered.

NOTE: The temperature in 'Holiday' and 'Super Freezing' mode will not change when the ambient temperature changes.

Lock/Unlock Controls

The control panel can be locked to prevent inadvertent adjustment of the internal temperatures, or to prevent children adjusting the temperatures.

The lock will automatically engage after 10 seconds of no activity on the control panel.

To manually activate the lock, press and hold the MODE button for 3 seconds. The lock icon will illuminate on the control panel.



To deactivate the lock, press and hold the MODE button for 3 seconds. The lock icon will no longer illuminate on the control panel.

Door Open Alarm

If a door is left open or ajar for 60 seconds, an alarm will sound in the appliance every 30 seconds. Closing the doors will silence the alarm.

If the doors are open for more than 10 minutes, the internal LED will switch off.

Usage Information

Temperature Settings

We recommend that the temperature of the appliance is adjusted based on usage and ambient environment temperature.

Recommended Temperature Setting

Ambient Temperature	Temperature Setting
Summer (Above 38°C)	 Fridge: 4°C Freezer: -18°C
Normal	Fridge: 4°C Freezer: -18°C
Winter (Below 16°C)	Fridge: 4°C Freezer: -18°C

Note: The standard operating temperature for the fridge compartment should be between 0° C and 4° C and the standard operating temperature for the freezer compartment should be between -18° C and -22° C. Super freeze operates at -25° C.

Note: The temperature of the freshly stored food and how often the door is opened affects the temperature in the refrigerator compartment. If required, change the temperature setting.

Usage Information

Fresh Converter Temperature Control

This appliance features a Fresh Converter, which allows for the temperature of this zone to function at a cooler temperature than the rest of the fridge. The fresh zone will keep food fresh not frozen, making it great for short-term storage of fish or other fresh food.

At the back of the fridge compartment there is a switch to adjust this. Push the switch upward from the bottom to decrease the temperature in the fresh zone.

When the switch is placed at the lower position, the fresh zone can then also be used as a crisper zone.

A crisper zone helps maintain the appropriate temperature and humidity to store fruits and vegetables.

TIP: When the switch is placed at the top position, it is recommended to set the fridge temperature below 4 ° C to keep the best freshness.



Crisper Zone Humidity Control


This appliance features a Humidity Control, which allows for the humidity of the crisper drawer to be adjusted.

When adjusted to high, the crisper is suitable for vegetables, and when adjusted to low, the crisper is more suitable for fruits.




Adjusting the Shelves

The shelves can be adjusted & positioned as desired. When the door is open, and the contents of the fridge have been removed, carefully lift the shelves from the side rails, and reposition on empty rails.

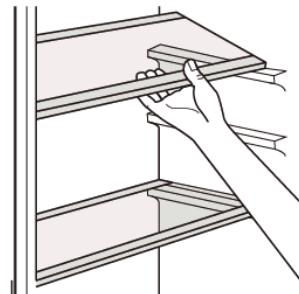


**Note your fridge freezer has been installed at factory in the optimal configuration for energy efficiency. Adjustment of the shelves may lead to performance decrease.*

The door balconies can be removed to store food of different sizes. Ensuring any transportation tape has been removed, and the balconies are empty, gently lift from the bottom of the balcony until it comes free. Reposition when required.

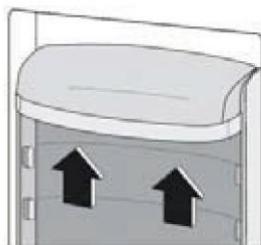

To remove the crisper drawer for cleaning, ensuring all items and foodstuffs have been removed, pull the crisper until it comes to a stop. Carefully tilt the drawer in the direction shown in the diagram below until it comes free. To replace, first tilt the drawer, then carefully slide back into the appliance.

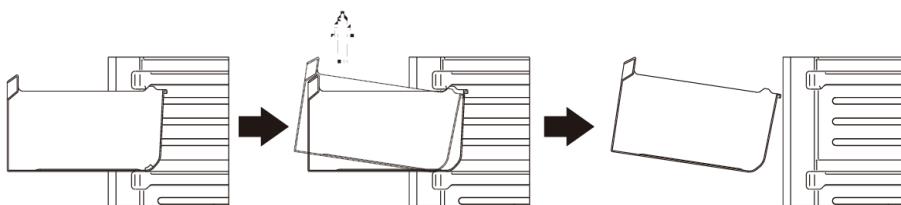

Bulb Replacement

The fridge lights are energy efficient, long life LEDs. Therefore, they should not need replacing throughout the life of the product.

The bulb is a direct current 12V LED module and in the unlikely event it does fail then it will need to be replaced by a qualified engineer.




Upper LED



Rear LED

The following symbol indicates that the light source in this appliance should only be replaced by a qualified engineer:

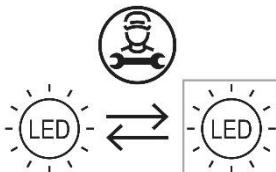

This product contains two lights of energy efficiency class G.

Reversing the Door

The doors cannot be reversed.

 **Russell Hobbs**

Freezer Storage Advice

- Store fresh food in airtight boxes or wrap in bags or foil which are suitable for freezing.
- Do not allow frozen food in to direct contact with food to be frozen.
- Pre-frozen food must be placed in the freezer as quickly as possible after purchasing.
- To prevent frost damage to fresh vegetables or fruits they must be processed appropriately before being placed into the freezer compartment.
- You must always follow the storage guidelines printed on all food packaging. However, below is some suggested maximum storage times at -18°C (4 star freezer rating) for a variety of foods:
 - Fresh meat & poultry – up to 12 months
 - Cooked meat – up to 2 months
 - Fresh fish – up to 6 months
 - Fruit & vegetables – up to 12 months
 - Bread & cakes – up to 6 months
- **CAUTION** – 2 Star Freezer balcony is not suitable for ice cream.

Food Storage Guidelines

Refrigerator compartments	Type of food
Door or balconies of fridge compartment	Foods with natural preservatives, such as jams, juices, drinks, condiments. Do not store perishable foods.
Crisper drawer (salad drawer)	Fruits, herbs and vegetables should be placed separately in the crisper bin. Do not store bananas, onions, potatoes, garlic in the refrigerator.
Fridge shelf – bottom Chiller (box/drawer)	Raw meat, poultry, fish (for short-term storage)
Fridge shelf – middle	Dairy products, eggs
Fridge shelf – top	Foods that do not need cooking, such as ready-to-eat foods, deli meats, leftovers.
Freezer drawer(s)/shelf	Foods for long-term storage. Bottom drawer/shelf for raw meat, poultry, fish. Middle drawer/shelf for frozen vegetables, chips. Top drawer/shelf for ice cream, frozen fruit, frozen baked goods.



Energy Saving Advice

- Do not install the appliance close to sources of heat, such as a cooker, dishwasher or radiator.
- Locate the appliance in a cool well-ventilated room and make sure that the air vents are clear.
- Try to avoid keeping the doors open for a long time, warm air will enter the cabinet and may cause a build-up of ice as well as affecting the energy consumption. Ensure there are no obstructions preventing the doors from closing properly.
- Ensure that the door seals are clean and there are no tears or splits.
- Keep the most perishable foods, (those with a short shelf-life, such as cooked meats), in the coldest part of the fridge. The Salad Crisper Box is the warmest part of your fridge and should be used for vegetables, salads and fruits etc.
- Do not overload the appliance: the cooling air that circulates to keep the appliance cold gets blocked and pockets of warm air form.
- Do not put hot food into the fridge or freezer – let it cool down first.
- The shelves are placed in factory mode this delivers the most energy efficient usage for this appliance.

Power Failure

If there is a power failure during the storage of frozen foods, keep the door closed. If the temperature within your freezer should rise, do not refreeze the food without checking it's condition.

- **Ice Cream:** Once thawed should be discarded.
- **Fruit and Vegetables:** If soft should be cooked and used up.
- **Bread and Cakes:** Can be refrozen without danger.
- **Shellfish:** Should be refrigerated and used up quickly.
- **Cooked Dishes:** i.e. casseroles should be refrigerated and used up.
- **Large Pieces of Meat:** Should be refrigerated and used up quickly
- **Small Joints:** Should be refrigerated and used up quickly
- **Chicken:** Should be refrigerated and used up quickly



Russell Hobbs

Maintenance & Cleaning

Disconnect the appliance from the power supply before cleaning.

Internal Cleaning

- Do not pour water over the appliance.
- The cavity should be cleaned periodically using a solution of bicarbonate of soda and lukewarm water (5ml to 0.5 litre of water)
- Clean the accessories separately with soap and water. Do not put them in the dishwasher.
- Do not use abrasive products, detergents or soaps.
- After washing, rinse with clean water and dry carefully.
- When you have finished cleaning reconnect the plug with **dry hands**.

External Cleaning

- Wash the outer cabinet with warm soapy water. Do NOT use abrasive products.
- There are sharp edges on the underside of the product so care should be taken when cleaning.
- Once or twice a year dust the rear of the appliance and the compressor at the back of the appliance, with a brush or vacuum cleaner, as an accumulation of dust will affect the performance of the appliance and cause increased energy consumption.

When the appliance is not in use

When the appliance is not in use for long periods, disconnect from the electricity supply, empty all of the food and clean the inside. Leave the door open to prevent the build-up of odours.

Maintenance & Cleaning

Defrosting

Note: Care must be taken when performing the following procedure.

- The appliance is frost free, so there shouldn't be any requirement to defrost the freezer. However, in the unlikely event the appliance does need defrosting please follow the below steps:
 - Try to use as much as possible of the food in the freezer, before defrosting. However, any food that is left, wrap in newspaper and place aside until ready to place back after cleaning.
 - Switch the appliance off at the wall socket and remove the plug.
 - Open the freezer door.
 - Place a suitable container to collect the water created from the defrosted ice.
 - After defrosting, clean and dry the interior.
 - Switch the appliance on and replace any frozen food.

Defrosting can be accelerated by putting bowls of hot (not boiling) water in the freezer and loosening the frost with a suitable plastic scraper.



Never use sharp metal tools as it may damage the appliance.

Never use an electrical heater, this may cause an electric shock.



Russell Hobbs

Trouble shooting

Problem	Solution
The fridge/freezer doesn't work	<p>Check that the appliance is switched on.</p> <p>Check that there has not been a power cut.</p> <p>Check that the plug is not faulty.</p> <p>Check that the fuse has not blown.</p> <p>Check that the voltage is correct for the appliance.</p> <p>Are there any faults with the socket? For this purpose, try the plug of your appliance by connecting it to a socket which you are sure is working.</p>
The temperature inside the appliance is not cold enough	<p>Check that there is not too much food in the appliance.</p> <p>Check that the temperature is set to a suitable temperature.</p> <p>Check that the appliance is not placed in direct sunlight, or too near to a heating source.</p> <p>Check that the ambient temperature is within the operation limits of the appliance.</p> <p>Are the doors of the appliance opened frequently? Once the door is opened, the humidity found in the air in the room enters the appliance, especially if the humidity levels in the room are very high. The more frequently the door is opened in humid conditions the more chance of the build up of moisture.</p>
The temperature within the appliance is too cold.	<p>Increase the working temperature by adjusting the temperature to a higher level.</p> <p>The lowest setting/temperature should only be used as a rapid cool setting and should only be set 2 hours before a large amount of food is placed in the fridge. If this is not done the temperature in the fridge compartment could fall below 0°C as the compressor will run continuously.</p>
The inner surfaces of the appliance are wet	Caused by condensation - dry the inside of the appliance.
The outer surfaces of the appliance are wet	Caused by condensation - dry the outer of the appliance carefully.



Russell Hobbs

Trouble shooting

Problem	Solution
Smell/odour	<p>Check all the food and drink that is in the fridge is in date and correctly packaged. If it isn't then it should be removed immediately or repackaged.</p> <p>Check for spillages on each shelf, rack and drawer. You may need to remove the drawers to check that no spillages have settled underneath them. As spillages that have not been cleaned and have been left can cause smells and unwanted odours.</p>
	<p>Check the drainage pipe is not clogged or the drip tray at the back of the appliance is full. The pipe can be cleared by pouring hot water through, but you must ensure the appliance is turned off, the plug is removed from the socket and a jug or bucket is in place to catch the flow of water.</p>
The doors do not close properly	<p>Ensure there are no obstructions preventing door closure.</p> <p>Check the door compartments and shelves are correctly in place.</p> <p>Check the door seal is not warped or torn.</p> <p>Check the appliance is level.</p>
Unusual noises	<p>Check that the appliance is on a flat, level surface and is stable.</p> <p>Check the spacing's around the appliance and ensure it is not touching other items.</p> <p>Bubbling and gurgling sound: • This noise is emitted as the coolant fluid flows through the pipes within the system. This is normal.</p> <p>Water flowing sound: • This is the normal sound of water flowing into the drain trough during the defrosting process.</p> <p>If the appliance is operating noisily (compressor noise): This is normal. This noise indicates that the compressor is operating normally. As the compressor is being energized, it might run a bit more noisily for a short period of time.</p>

Trouble shooting

Problem	Solution
Smell/odour	<p>Check all the food and drink that is in the fridge is in date and correctly packaged. If it isn't then it should be removed immediately or repackaged.</p> <p>Check for spillages on each shelf, rack and drawer. You may need to remove the drawers to check that no spillages have settled underneath them. As spillages that have not been cleaned and have been left can cause smells and unwanted odours.</p>
	<p>Check the drainage pipe is not clogged or the drip tray at the back of the appliance is full. The pipe can be cleared by pouring hot water through, but you must ensure the appliance is turned off, the plug is removed from the socket and a jug or bucket is in place to catch the flow of water.</p>
The doors do not close properly	<p>Ensure there are no obstructions preventing door closure.</p> <p>Check the door compartments and shelves are correctly in place.</p> <p>Check the door seal is not warped or torn.</p> <p>Check the appliance is level.</p>
Unusual noises	<p>Check that the appliance is on a flat, level surface and is stable.</p> <p>Check the spacing's around the appliance and ensure it is not touching other items.</p> <p>Bubbling and gurgling sound: • This noise is emitted as the coolant fluid flows through the pipes within the system. This is normal.</p> <p>Water flowing sound: • This is the normal sound of water flowing into the drain trough during the defrosting process.</p> <p>If the appliance is operating noisily (compressor noise): This is normal. This noise indicates that the compressor is operating normally. As the compressor is being energized, it might run a bit more noisily for a short period of time.</p>

Error Codes

Error Code	Fault	Resolution
E0	Display panel communication failure	Contact customer services
E1	Fridge temperature sensor failure	Contact customer services
E2	Freezer temperature sensor failure	Contact customer services
E3	Defrost temperature sensor failure	Contact customer services
E5	Defrost heater failuer	Contact customer services



Russell Hobbs

Connection to the mains supply

For UK use only – Plug fitting details (where applicable):

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The GREEN/YELLOW wire is the EARTH and must be connected to the terminal which is marked with the letter E or by the earth symbol or coloured GREEN or GREEN/YELLOW.


The BLUE wire is the NEUTRAL and must be connected to the terminal marked with the letter N or coloured BLACK. The BROWN wire is the LIVE wire and must be connected to the terminal marked with the letter L or coloured RED.

Always ensure that the plug cord grip is fastened correctly.

If a 13A (BS1363) fused plug is used it must be fitted with a 13amp fuse conforming to BS1362 and be BSI or ASTA approved.



DANGER
Electric
Shock Risk

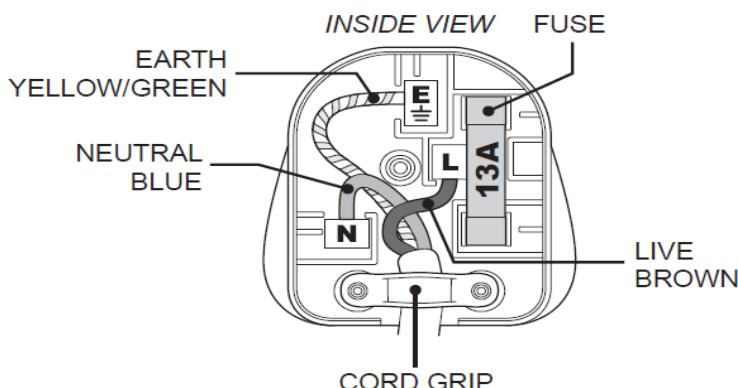

Russell Hobbs

Guarantee

This product is guaranteed for 12 months from the date of the original purchase. If any defect arises due to faulty materials or workmanship you must contact Product Care with the original proof of purchase so a replacement or refund can be arranged.

Refund or replacement is at the discretion of Product Care.

The following conditions apply:

- Product Care will require a valid proof of purchase at the point of replacement or refund.
- The product must be installed and used in accordance with the instructions contained in this instruction guide and any other instructions for use which has been supplied.
- It must be used for domestic purposes only and for its intended use.
- This guarantee does not cover wear and tear, damage, misuse or consumable parts.

This does not affect your statutory rights.

Region	Contact	Website
UK & Northern Ireland	0345 209 7461	mda.russellhobbs.com
Ireland	1 800 938982	ie.mda.russellhobbs.com
Rest of Europe	europe@productcaregroup.com	de.mda.russellhobbs.com fr.mda.russellhobbs.com es.mda.russellhobbs.com it.mda.russellhobbs.com nl.mda.russellhobbs.com



Russell Hobbs

Product Fiche

Supplier's name or Trade Mark:	Russell Hobbs							
Supplier's Address:	Product Care Trading Ltd, Unit 1, Green Bank Business Park, Swan Lane, Hindley Green, Wigan, WN2 4AY, United Kingdom / Product Care (Ireland) Ltd, Unit 3D North Point House, North Point Business Park, New Mallow Road, Cork, T23 AT2P, Ireland.							
Model Identifier:	RH180A4FF802E1 W/B/SS/DS/DI							
Product Type	Fridge Freezer							
	Value		Value					
Total Volume (L)	421	Overall Dimensions (mm)	Height 1800	Width 790	Depth 700			
Rated Voltage	AC220V-240V / 50Hz	Net Weight (kg)	75.0	Rated Current	1.5A			
EEI	100	Energy Efficiency Rating	E	Airborne acoustical noise emission class	C			
Airborne acoustical noise emissions (dB)	39							
Annual Energy Consumption (kWh/a)	280	Climate Class		SN/N/ST/T				
*Actual consumption may vary depending on how the appliance is used			Temperature Rise Time (H)	15				
Minimum ambient temperature (°C) for which the refrigerating appliance is suitable	10°C	Maximum ambient temperature (°C) for which the refrigerating appliance is suitable		43°C				
Winter Setting	No	Compartment Parameters and Values						
Compartment Type	Compartment Volume (L)	Recommended temperature setting for optimised food storage (°C) These settings shall not contradict the storage conditions set out in Annex IV, Table 3	Freezing capacity (kg/24 h)	Defrosting type (Automatic / Manual / Static)				
Pantry	N/A	N/A	N/A	N/A	N/A			
Wine Storage	N/A	N/A	N/A	N/A	N/A			
Cellar	N/A	N/A	N/A	N/A	N/A			
Fresh Food	Yes	271.0	+ 4	N/A	Automatic			
Chill	No	N/A	N/A	N/A	N/A			
0 Star or Ice Maker	No	N/A	N/A	N/A	N/A			
1 Star	No	N/A	N/A	N/A	N/A			
2 Star	No	N/A	N/A	N/A	N/A			
3 Star	No	N/A	N/A	N/A	N/A			
4 Star	Yes	150.0	- 18	10.0	Automatic			
2 Star Section	No	N/A	N/A	N/A	N/A			
Variable Temperature Compartment	No	N/A	N/A	N/A	N/A			
Light Source Parameters (for models with an LED lamp)								
Type of Light Source	LED	For 4-Star Compartments						
Energy Efficiency Class	G	Fast Freeze	Yes					
Low Noise Appliance	No	Design Type	Freestanding					
Wine Storage Appliance	No	Other Refrigerating Appliance	Yes					
Minimum duration of the guarantee offered by the supplier:	12 months							
Weblink to the manufacturer's website, where the information in point 4(a) Annex of Commission Regulation (EU) 2019/2019 (1) (b) is found:	mda.russellhobbs.com							



Russell Hobbs

Notes

Notes

Notes



Russell Hobbs

Made by Product Care Trading Limited under license from Spectrum Brands (UK) Limited. Product Care Trading Ltd, Unit 1, Green Bank Business Park, Swan Lane, Hindley Green, Wigan, WN2 4AY, United Kingdom

Product Care (Ireland) Ltd, Unit 3D North Point House, North Point Business Park, New Mallow Road, Cork, T23 AT2P, Ireland. Russell Hobbs is the registered trademark of Spectrum Brands (UK) Ltd.

UK **CA** **CE**



The 'wheelie bin' symbol is known as the 'Crossed-out wheelie bin Symbol'.

When this symbol is marked on a product/batteries, it means that the product/batteries should not be disposed of with your general household waste. Only discard electrical/electronic/battery items in separate collection schemes, which cater for the recovery and recycling of materials contained within. Your co-operation is vital to ensure the success of these schemes and for the protection of the environment. For your nearest disposal facility, visit www.recycle-more.co.uk or ask in store for details.

SEDEX – Connecting businesses and their global suppliers to share ethical data and enabling improvement in ethical performance. Visit www.sedex.org.uk for further information.

We reserve the right, due to possible changes to design, to alter the instruction manual without prior notice.