


BUSH

Instruction manual

8 INCH RECHARGEABLE
PEDESTAL FAN

Model number TX-804DC

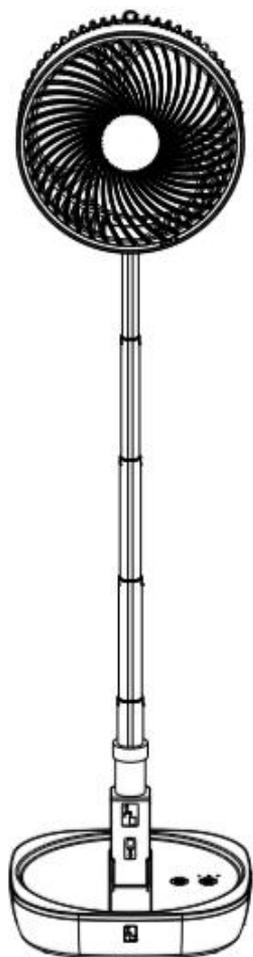

BUSH

210 mm

142 mm

Please read the instructions fully before use.



Safety information

Important- please read the instructions fully before operating.


For household and indoor use only.

- This appliance must be used for its intended purpose only and operated as instructed in this user manual.
- Use only the voltage specified on the rating plate of the appliance.
- Do not connect the appliance to the mains voltage until completely assembled and adjusted.
- **This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.**
- Children should be supervised to ensure they do not play with the appliance.
- To protect against electrical shock do not immerse cord, plugs, or the main body in water or other liquids.
- Check the appliance before each use for signs of wear or damage. If damaged, discontinue from use immediately and do not use until the appliance has been inspected and approved for use by a qualified service person.
- The product is not to be used if it has been dropped or there are visible signs of damage.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or a similarly qualified persons in order to avoid hazard.
- Never attempt repairs yourself. Repairs to electrical appliances should only be performed by a qualified electrician. Improper repairs may place the user at serious risk and will invalidate the guarantee, take the appliance to a qualified repair agent.
- This appliance is designed for indoor, household use only.

- Do not insert fingers or other objects into the fan during use, this can cause personal injury and damage.
- Unplug the appliance when not in use, when moving the appliance and before cleaning.
- Do not place the appliance on an unsteady surface.
- Keep away from open flames such as lit candles, open fires, cooking, and other heating appliances.
- Do not operate the fan in the presence of explosive and/or flammable fumes.
- Do not place the fan or any parts near an open flame, cooking, or other heating appliance.
- Do not hang or mount fan on a wall or ceiling.
- Do not operate if the fan housing is damaged.
- Do not allow fan to be directed onto children, the elderly or infirm for a long period of time.
- Do not use the fan in areas of high humidity, very dusty, or in temperatures higher than 40°C.
- Do not use the fan near an open window as rain may cause an electric shock hazard.

Getting to know your pedestal fan

- 1. Tilting Fan Head
- 2. Telescopic Post
- 3. Post Lock
- 4. Base
- 5. Switch button
- 6. Type C power cable

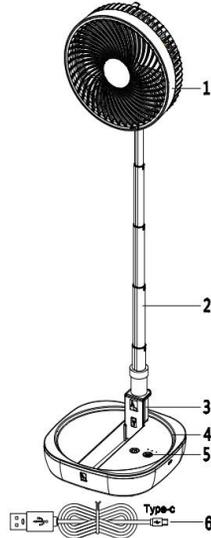

Instructions for Use

1. Charging the Appliance

Read the Safety Instruction first.

IMPORTANT: This Appliance contains a built-in (non-removable) lithium-ion battery which must only be charged using the supplied USB cable.

This unit is classified as a Class III product and is designed to be powered by a SELV (Safety Extra-Low Voltage) power source.

Use only a 5V 2A (equivalent 5V 2 000mA) charger for this product. Chargers with other ratings may cause damage or affect charging.

Only use a UKCA or CE marked USB wall adaptor from a reputable brand that matches the specified power output.

Connect Type-C plug of the USB cable to the USB connection terminal on the base.

Connect the Type-A side of the USB cable to a wall adaptor (sold separately) for 5V charging or to a USB port on an electronic device.

Only charge the battery between an ambient room temperature of 10°C – 40°C.

Always switch off and unplug the USB cable when charging is completed or when not in use.

NEVER LEAVE THE APPLIANCE UNATTENDED WHEN CHARGING.



If any abnormality occurs during charging, (such as a burning smell or excessive heat or even a strange sound) immediately turn off the charger and disconnect the USB cable, then contact our service department for assistance.

NOTE: The Appliance must be fully charged prior to first use.



Normal charging time will take between 4.5 to 5.5 hours using a 5Vd.c. 2A charger.

The appliance can be used during charging.


- Take the USB Cable and fully unravel it before using to charge the Appliance.
- Tilt the Fan Head forward and at the same time lift the head up and allow the post to swing backward as shown.

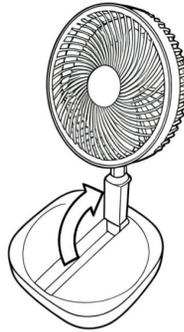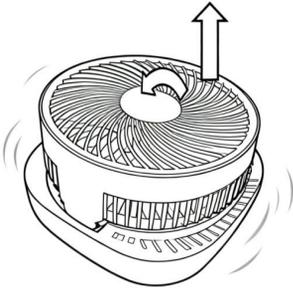


- Lock the post in place by sliding the lock down as shown.

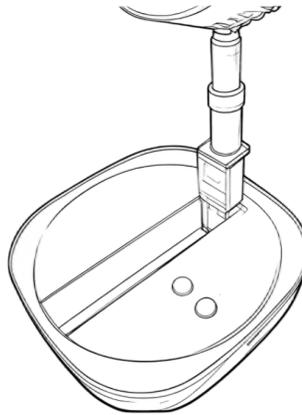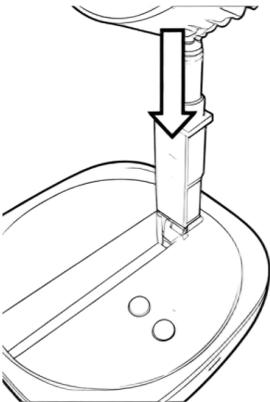

- Plug the small end of the USB cable directly into the Charging Port on the side of the fan base.

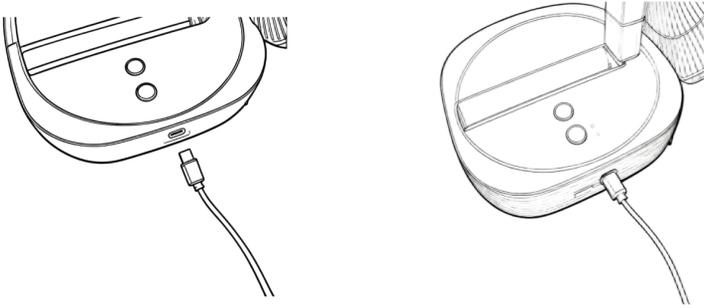

- Plug the large end of the USB cable into your 5Vd.c. charger, then switch on the charger.

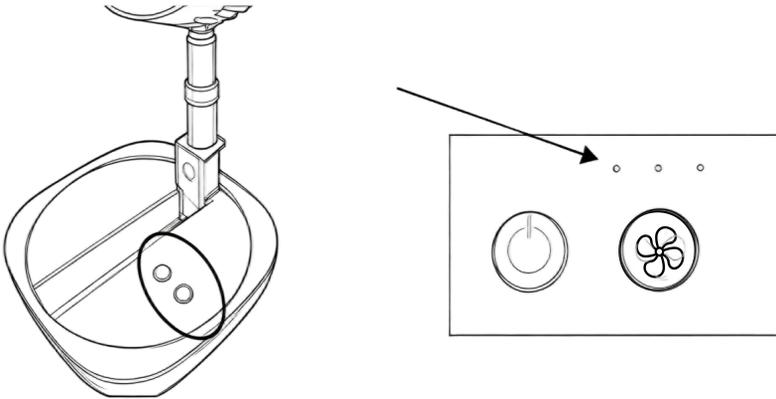

- The indicator lights just above the On/Off and Fan Speed Buttons, on top of the base will illuminate from left to right, turn off and then repeat continuously until the battery is fully charged.

- When fully charged, the lights will remain on permanently.
At this time, remove the USB charging cable and turn off & unplug the charger.


DO NOT leave the unit charging when the battery is full.

Note: The Fan can be used while charging.

2. Adjusting the Fan Head Angle


The Fan Head can be tilted back 180° and any position in between.

Just grasp the fan head and rotate it backwards to your desired position.

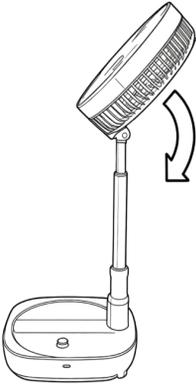


- Before Extending the telescopic post to its full height, pull out the two stabilising feet from underneath the base.

This helps prevent the fan from tipping over backwards should the fan be knocked.

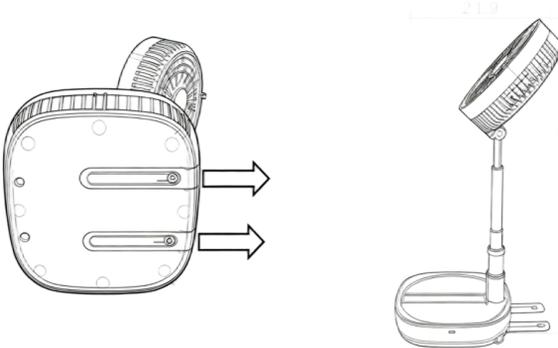

- Hold the base firmly down on the floor or table, grasp the top of the telescopic post and pull up extending the telescopic post to your desired height.

3. Control Panel

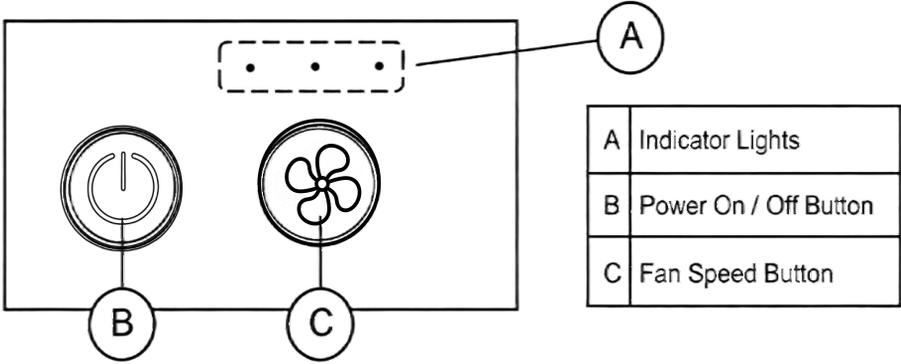

4. Using the Appliance


- Ensure the appliance is fully charged.
- Press the  button on the control panel to turn the fan on default Low Speed.
- The first indicator light will illuminate indication speed setting 1.
- To increase the fan speed, press the  button on the control panel and the fan will increase speed to speed setting 2 indicated by the middle indicator light illuminating.
- Press the  button on the control panel again and the fan will increase speed to speed setting 3 indicated by the right indicator light illuminating.
- Press the  button on the control panel again, and the speed will cycle back around to speed setting 1.
- To Turn Off, press the  button on the control panel.

Under normal use, the appliance will work for up to 300 minutes before requiring a recharge, however this can change depending on how the appliance is used, such as which fan speed is selected.

When the battery is running low, the three lights will flash before the unit turns off and requires recharging.

4. Storage

- Switch off and unplug the appliance.
- Coil the USB cable loosely. Do not kink or pull the cable tight.
- To fold up the fan for storage, collapse the telescopic post by pushing down on the post, push the two stabilising feet back in, unlock the Post Lock by pulling it up, let the post fall forward and at the same time, swing the head back so that the front of the fan grill is facing upward.

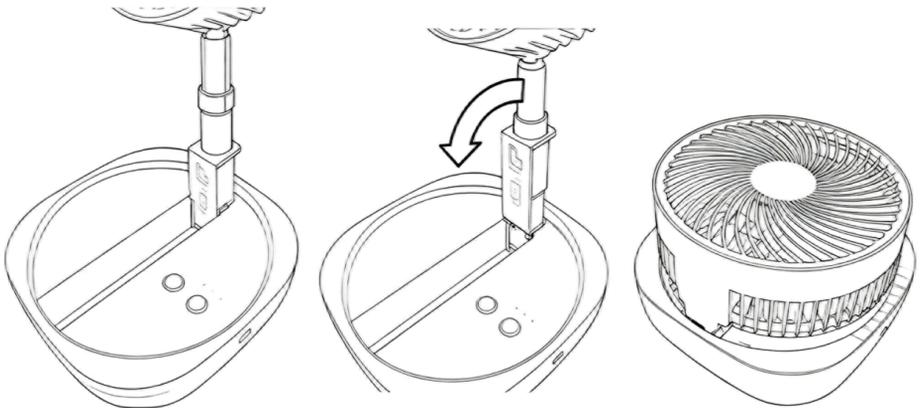

- Store your Appliance in a cool, dry location.

6. Troubleshooting

Will Not Switch On	<ol style="list-style-type: none"> 1. Check that the battery is fully charged. 2. If the USB cable is still plugged in to the unit, ensure the charger is turned on.
The appliance keeps turning off when in use.	<ol style="list-style-type: none"> 1. The battery is flat. 2. Recharge battery or plug in the USB cable and switch on the charger.

Care and Maintenance.

The fan requires little maintenance and contains no serviceable parts. Do not attempt to dismantle the fan motor body yourself. The fan is permanently lubricated and will not require additional lubrication.

- Always turn off and unplug the fan from the mains supply before cleaning.
- Use only a soft slightly damp cloth followed by a dry cloth, to gently wipe the outer surfaces on the fan to clean.
- Do not try to remove the fan grill. To clean between the bars, it is recommended using a vacuum cleaner or compressed air to gently remove the dust.

Storage.

- When not in use, clean the fan before storing away in the original or similar sized box.
- Store the fan in a safe, clean, and dry place, away from direct sunlight and out of reach of children.

Technical Specifications.

BUSH 8inch rechargeable pedestal fan	Symbol	Value	Unit
Model number	--	TX-804DC	--
Battery specification	--	18650 3600	mAH
Maximum flow rate	F	6,2	m ³ /min
Fan power input	P	6,7	W
Service value	SV	0,9	(m ³ /min)W
Standby consumption	P _{SB}	--	W
Fan sound power level	L _{WA}	47	dB(A)
Maximum air velocity	C	3,1	Meters/sec
Measurement standard for service value	EN IEC 60879:2019		
Bush Careline	Customer helpline 0345 604 0105		



Recycling electrical products.



You should now recycle your waste electrical goods and in doing so help the environment. This symbol means an electrical product should not be disposed of with normal household waste. Please ensure it is taken to a suitable facility for disposal. Visit www.recycle-more.co.uk, click on "bank locator" and enter your postcode to find your nearest recycling site.

Product support



Help and assistance

If you require any technical guidance or find that your Fan is not operating as intended, a simple solution can often be found in the Troubleshooting section of these instructions or online at www.bush-support.com

If you still require further assistance, call one of our experts on 0345 604 0105*. To help give us give you a fast and efficient service please have the following information ready:

You can find these on the rating plate - a small information panel (usually a sticker or metal plate) on the rear of your product.

Model Ref.	<input type="text" value="TX-804DC"/>	This will be shown on your receipt
Serial number	<input type="text" value="N/A"/>	
Date of purchase	<input type="text"/>	

Local call rates apply*

Lines open 8am-7pm Monday to Saturday and 10am-4pm Sunday.

*Calls to Bush enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see www.bt.com/pricing for details.

For security and training purposes, telephone calls to and from customer service centres may be recorded and monitored. Calls from Republic of Ireland will attract international call charges.

Product support

Help is always at hand



Call us now and register your 12 month guarantee

Thank you for choosing Bush. Your new product is guaranteed against faults and breakdowns for 12 months. Don't forget to register it with us today so we can provide you with our best possible after-sales service and useful updates.

www.bushregistration.co.uk

FREEPHONE *

0800 597 8548

Lines are open 8am - 8pm, 365 days a year. *Calls may be recorded and monitored.

Your Bush Guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from who your purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in the manual.
- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- Bush disclaim any liability for loss or damage arising from the breakdown of the product.
- This guarantee is in addition to and does not diminish your statutory or legal rights.

Important Data Protection Information

To find out how we and Domestic & General Insurance Plc use your data please refer to the guarantee registration material or visit www.bushregistrations.co.uk

Guarantor: Argos Limited, Sainsbury's Supermarkets Ltd, London, EC1M 6HA, UK.
[Argos \(N.I.\) Ltd](http://www.argos.co.uk), and Sainsbury's (NI) Ltd, Forestside Shopping Centre, Upper Galwally, Belfast, BT8 6FX, UK.



This page is left intentionally blank

This page is left intentionally blank

This page is left intentionally blank

