

# BUSH

## Instruction manual

BUSH  
Tumble Dryer  
BVTD3W  
BVTD3B



You'll soon be enjoying your new 'Tumble Dryer'.

It all begins here, with your instructions. Don't worry, there's nothing too technical coming up. Just simple, step-by-step guidance to get you up and running quickly. Sound good? Then let's get started.

## Help and Guidance

We're here to help you get the most from your 'Tumble Dryer'. Should you require any guidance, a simple solution can often be found online at:

**[www.bush-support.com](http://www.bush-support.com)**

If you still require further assistance, call one of our experts on **0345 257 7271**.

# Contents

 
|          |                                                 |    |    |
|----------|-------------------------------------------------|----|----|
| <b>1</b> | <b>Safety information</b>                       |    |    |
|          | Safety information                              | 6  |    |
| <b>2</b> | <b>Getting to know your 'Tumble Dryer'</b>      |    |    |
|          | Ready? Let's begin                              | 10 |    |
|          | Accessories                                     | 12 |    |
| <b>3</b> | <b>Installing your 'Tumble Dryer'</b>           |    |    |
|          | Installation requirements                       | 14 |    |
|          | Connections                                     | 15 |    |
|          | Electrical connection                           | 16 |    |
| <b>4</b> | <b>Functions</b>                                |    |    |
|          | Functions                                       | 18 |    |
| <b>5</b> | <b>Using your 'Tumble Dryer'</b>                |    |    |
|          | Using your 'Tumble Dryer'                       | 22 |    |
| <b>6</b> | <b>Care and Maintenance</b>                     |    |    |
|          | Cleaning                                        | 26 |    |
|          | Technical specifications                        | 27 |    |
|          | Product fiche                                   | 28 |    |
| <b>7</b> | <b>Product support</b>                          |    |    |
|          | Troubleshooting                                 |    | 30 |
|          | Help and assistance                             |    | 31 |
|          | Declaration of conformance to product standards |    | 32 |
|          | Disposal                                        |    | 33 |



If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions.

# Safety information

1

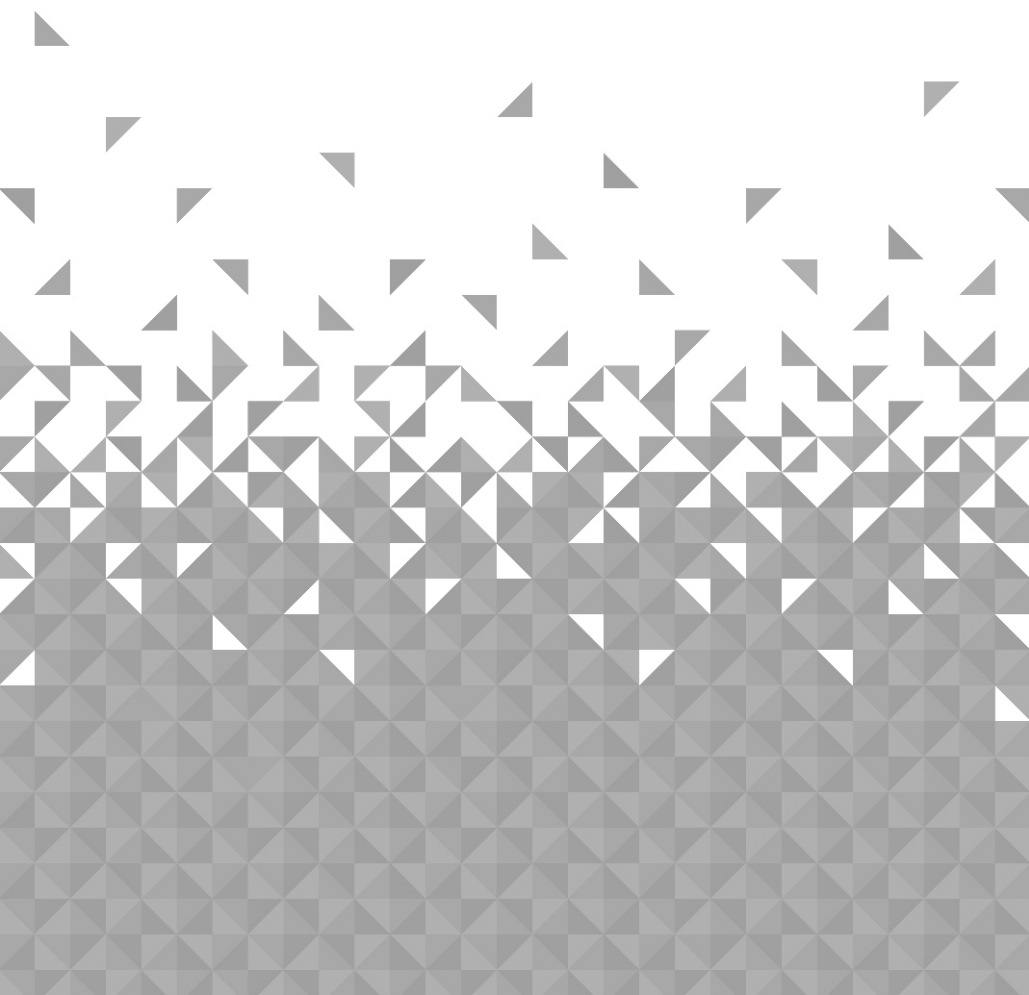



## Safety information

**Important** - Please read these instructions fully before installing or operating

### Before use

- The installation of this appliance is best carried out by 2 people.
- Dispose of all packaging carefully and responsibly.
- The appliance is designed for **indoor use only** and must be protected from rain, moisture and extreme temperature variations.
- This appliance is designed for household use.  
**Do not** use the appliance for Industrial and commercial use, or any other purpose.
- The appliance **MUST** be positioned on a firm level base.
- **Do not** splash water on the appliance. It may cause electrical parts to fail and result in an electric shock.
- For appliance with ventilation openings in the base, the carpet **must not** obstruct the openings.
- The appliance **must not** be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the tumble dryer, in such a way that a full opening of the Tumble Dryer door is restricted.
- **Do not** sit, stand or place any other heavy objects on top of the appliance. This could result in injury or damage to the appliance.
- **Do not** allow children to play with the appliance to avoid the risk of entrapment and suffocation.
- Keep ventilation opening, in the appliance enclosure or in the built-in structure, clear of obstruction.
- The lint trap has to be cleaned frequently, if applicable.
- Clean lint screen before or after each load.
- Never use the dryer without the lint filter.
- Important – Fabric Care Notice  
This appliance does not provide a low-temperature drying function. Do not use this tumble dryer for delicate or temperature-sensitive fabrics, including silk, wool, lace, or garments labelled “Do Not Tumble Dry”. Reducing the drying time or selecting “Low Heat” does not reduce the maximum drying temperature.

### During use

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- The Tumble Dryer is not to be used if industrial chemicals have been used for cleaning.
- Do not allow lint to build up in and around the Tumble Dryer.
- Do not dry unwashed items in the tumble dryer.
- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the Tumble Dryer.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions.



## Safety information

**Important** - Please read these instructions fully before installing or operating

- Items such as foam rubber(latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the Tumble Dryer.
- Fabrics softeners, or similar products, should be used as specified by the fabric softener instructions.
- The final part of a Tumble Dryer cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensure that the items will not be damaged.
- Remove all objects from pockets such as lighters and matches.
- **WARNING:** Never stop a Tumble Dryer before the end of drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.
- Children of less than 3 years should be kept away unless continuously supervised.
- Do not attempt to repair the appliance yourself.  
Contact the Customer Helpline: 0345 257 7271.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as in a Tumble Dryer. The items become warm, causing an oxidation reaction in the oil. Oxidation creates heat. If the heat cannot escape, the items can become hot enough to catch fire. Piling, stacking or storing oil-affected items can prevent heat from escaping and so create a fire hazard.
- If it is unavoidable that fabrics that contain vegetable or cooking oil or have been contaminated by hair care products be placed in a Tumble Dryer they should first be washed in hot water with extra detergent - this will reduce, but not eliminate, the hazard.
- The maximum mass of dry textile material is 3kg
- That adequate ventilation has to be provided to avoid the back flow of gases into the room from appliances burning other fuels, including open fires.
- **WARNING:** Never stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.
- **WARNING-** if high temperature cut-out operates remove the blockage after cool down:when the temperature drops down the dryer will not automatically run again. Only after the user presses the power button and the start button the dryer will run again.



**CAUTION: HOT SURFACE!**



**CAUTION: RISK OF FIRE!**

 


If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions.



## Getting to know your 'Tumble Dryer'

2

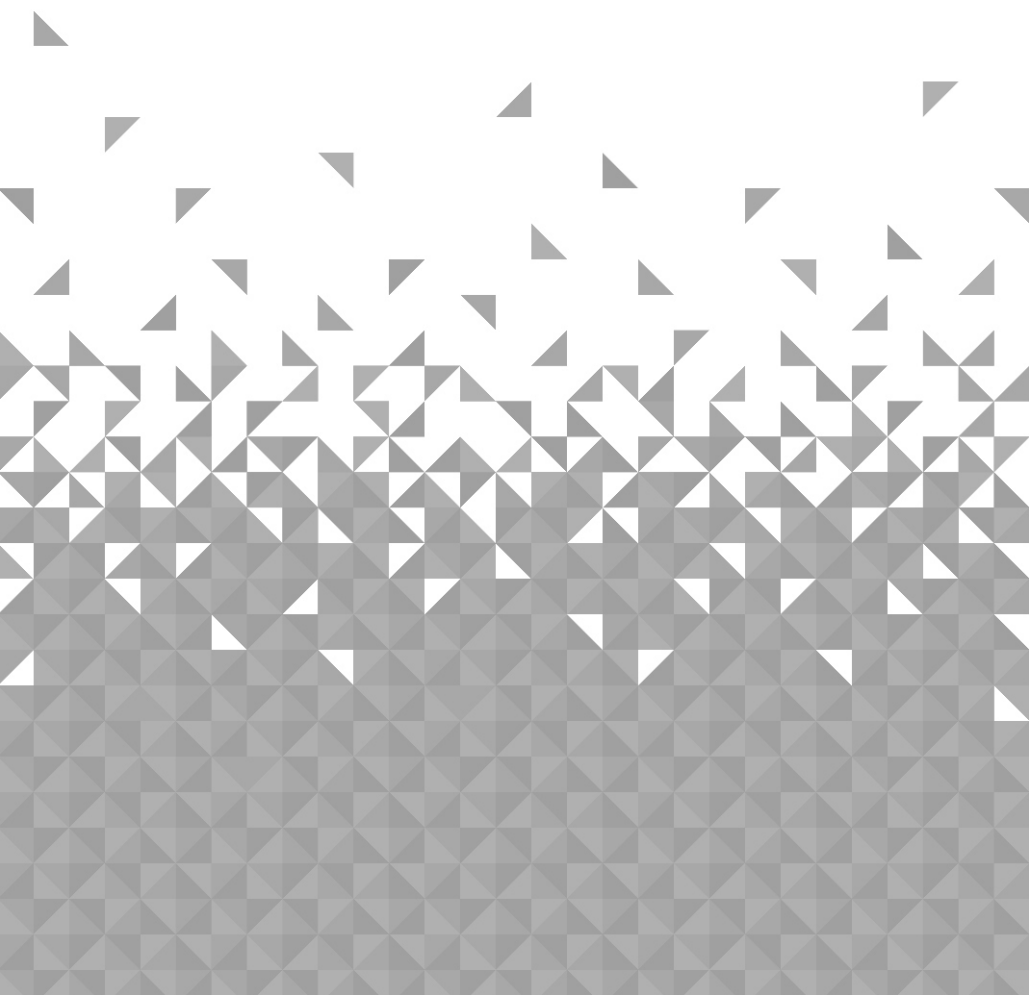

# Getting to know your 'Tumble Dryer'

You'll be up and running in no time

## Ready? Let's begin...

 
Please read these instructions carefully. They contain important information which will help you get the best from your 'Tumble Dryer' and ensure safe and correct installation and operation.

If you require any further assistance, our technical experts are happy to help. For full details, refer to the product support section at the end of these instructions.

# Getting to know your 'Tumble Dryer'

You'll be up and running in no time

## Component

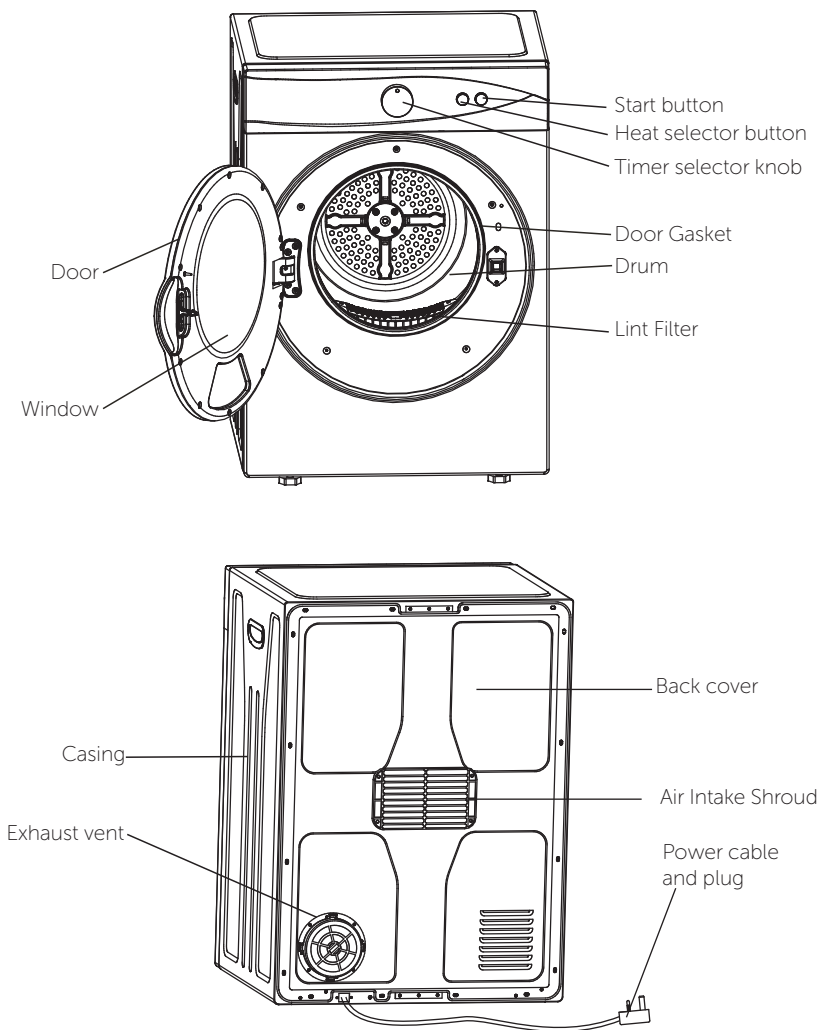

or online at [www.argos-support.co.uk](http://www.argos-support.co.uk) If you still require further assistance, call one of our experts on 0345 257 7271.


# Getting to know your 'Tumble Dryer'
 
## You'll be up and running in no time

| Model  | Capacity | Energy class | Color |
|--------|----------|--------------|-------|
| BVTD3W | 3kg      | G            | White |
| BVTD3B | 3kg      | G            | Black |

### Accessories


- Instructions X 1
- Exhaust Connector X 1
- Metal ring X 1
- Hose (Φ100mmx1.5m) X 1

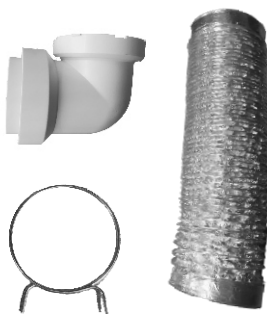

### Tools

You may use these tools (not supplied) to help install above parts.

 
- Glove

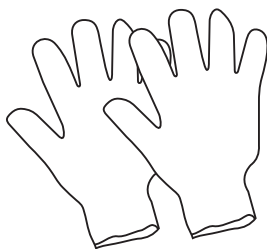

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions.

Installing your 'Tumble Dryer'

 3

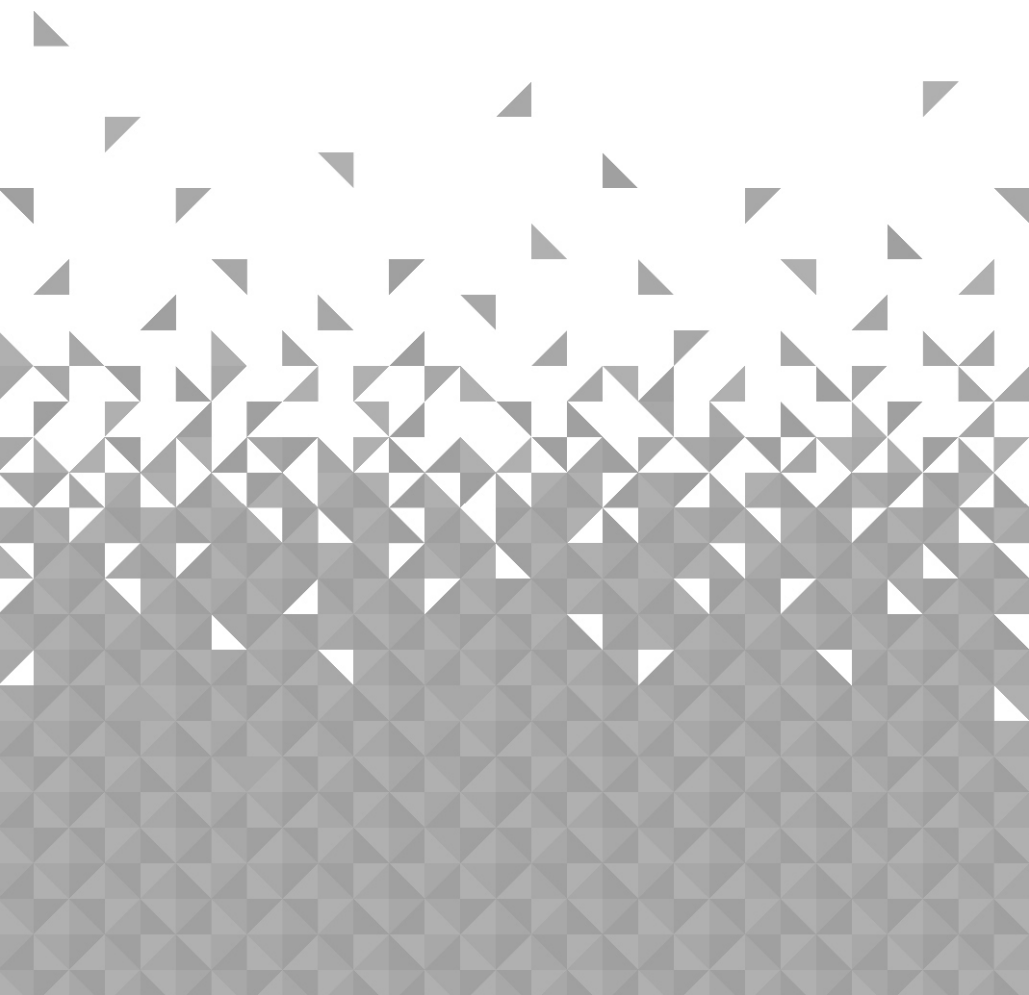

# Installing your 'Tumble Dryer'

## Bringing it all together

### Installation requirements

#### Transportation

-  **Caution:** 2 people are required to unpack and handle the appliance, it is recommended that gloves are worn.
- The appliance should be transported only in an upright position. Do not tilt the appliance greater than 45°. The packaging as supplied must be intact during transportation.
- Do not move the appliance by pulling the door or handle as it may damage your flooring and wall coverings etc.
- Ensure the supply cable is not caught under the appliance during and after moving.
- Carefully remove all package materials including the foam base, dispose of correctly.

#### Unpacking Tumble Dryer

**Caution:** 2 people are required to unpack the Tumble Dryer, it is recommended that gloves are worn.

Carefully remove all packaging materials Including the foam base, dispose of correctly.

#### Installation

- Ensure sufficient spacing is provided for the appliance to be installed. Leave space on back (15cm) to ensure proper ventilation.(Fig1)
- Install the Tumble Dryer in a well ventilated room.
- Make sure that your machine is not placed on the power cord.
- Do not place the appliance near a heat source or in direct sunlight.
- Do not put any heavy objects on top of the appliance. It will damage the appliance.
- Do not install the appliance in moist and wet place.(Fig2)
- Adjust the feet at front to level the appliance. It should be installed on a smooth surface to avoid excessive vibration and noise.
- Never unscrew the adjustable feet from their housings.
- Refer to section "User instructions" to prepare your appliance for use.

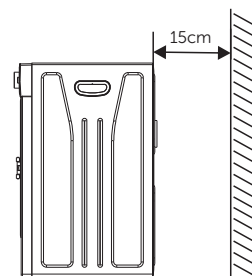 


Fig1

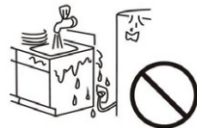 


Fig2

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions.

# Installing your 'Tumble Dryer'

## Bringing it all together

### Levelling feet

**1:** For your machine to work efficiently with minimum vibration it should be settled on flat, nonslippery, firm ground.

**2:** You can adjust the balance of your machine by changing the positioning of its feet. Two adjustable feet are located at the front of the unit.

**3:** First, loosen the plastic adjustment nut. (Fig 3)

**4:** Adjust by rotating the feet upwards or downwards. (Fig 4)

**5:** After the desired position has been reached, tighten the plastic adjustment nut again by rotating it upwards.

**Note:** Never put cartons, wooden blocks or similar materials under the machine to balance irregularities in the level of the ground.

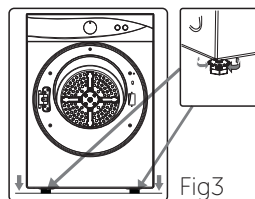 


Fig3

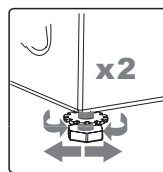 


Fig4

### Connections

#### Hose connection



**Warning:** 1 people may be required to install the hose. It is recommended to wear the gloves

**NOTE:** Ventilation hose assures exhausting of the air from the inside of the Tumble Dryer.

- Carefully remove all packing materials including from the foam, dispose of correctly.
- Before installation, ensure that the unit is power off and unplug from the mains.
  1. According to the order of arrows shown in Fig 5, three parts are combined into exhaust hose assembly.
  2. Put the exhaust hose assembly on the Connector Base in the desired direction (upper, lower, left, and right), as shown in Fig 6.
  3. Turn the exhaust hose assembly clockwise until it is clamped firmly, as shown in Figure 7.
- The air outlet hose must be extended directly to the outdoors. Keep bends to a minimum to ensure adequate ventilation.
- To prevent water accumulation in the hose, make sure the hose is not folded on the floor.
- In winter, the room temperature may be cold. The water may condense inside the hose. Periodical check is required to avoid hose damaged by the water.



**Warning:** Do not connect the hose to the chimney of a stove or fireplace.

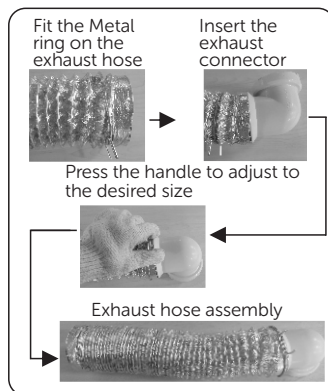 


Fig5

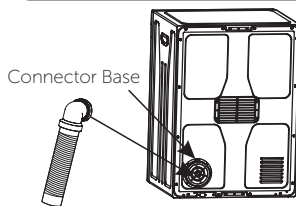 


Fig6

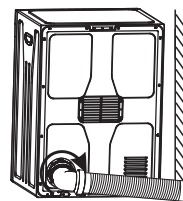 


Fig7

# Installing your 'Tumble Dryer'

## Bringing it all together

### Electrical connection



Any electrical work that is required to install this appliance **MUST** be carried out by a qualified electrician.



**Warning: THIS APPLIANCE MUST BE EARTHED**

Before making any electrical connections, ensure that:

- Electrical safety is only guaranteed when the earth system of your house in accordance with the related local regulations.
- Do not bend, stretch or pull the supply cable to avoid electric shock.
- Ensure the power socket is suitable for the Maximum power of the machine (fuses in the power circuit must be 13 amp).
- The supply voltage should be the same as that indicated in the technical specifications and the appliance rating plate.
- The appliance should be earthed and in compliance with the applicable law.
- When installed, the power socket must be within easy reach.
- If the socket outlets in your home are not suitable for the plug supplied with this unit check with a qualified electrician for replacement.
- To avoid the risk of overloading your plug socket, do not use adapters, multiple connectors or extension cables.

 
The appliance must be connected to a 220-240 volt 50Hz AC supply by means of a three pin socket, suitably earthed and protected by a 13 amp fuse.

- Should the fuse need to be replaced, a 13 amp fuse approved to BS1362/A must be used.
- The plug contains a removable fuse cover that must be refitted when the fuse is replaced. If the fuse cover is lost or damaged, the plug must not be used until a replacement cover has been fitted or the plug is replaced.
- A damaged plug should be cut off as close to the plug body as possible, the fuse should be removed and the plug disposed of safely.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions.



# Functions 4

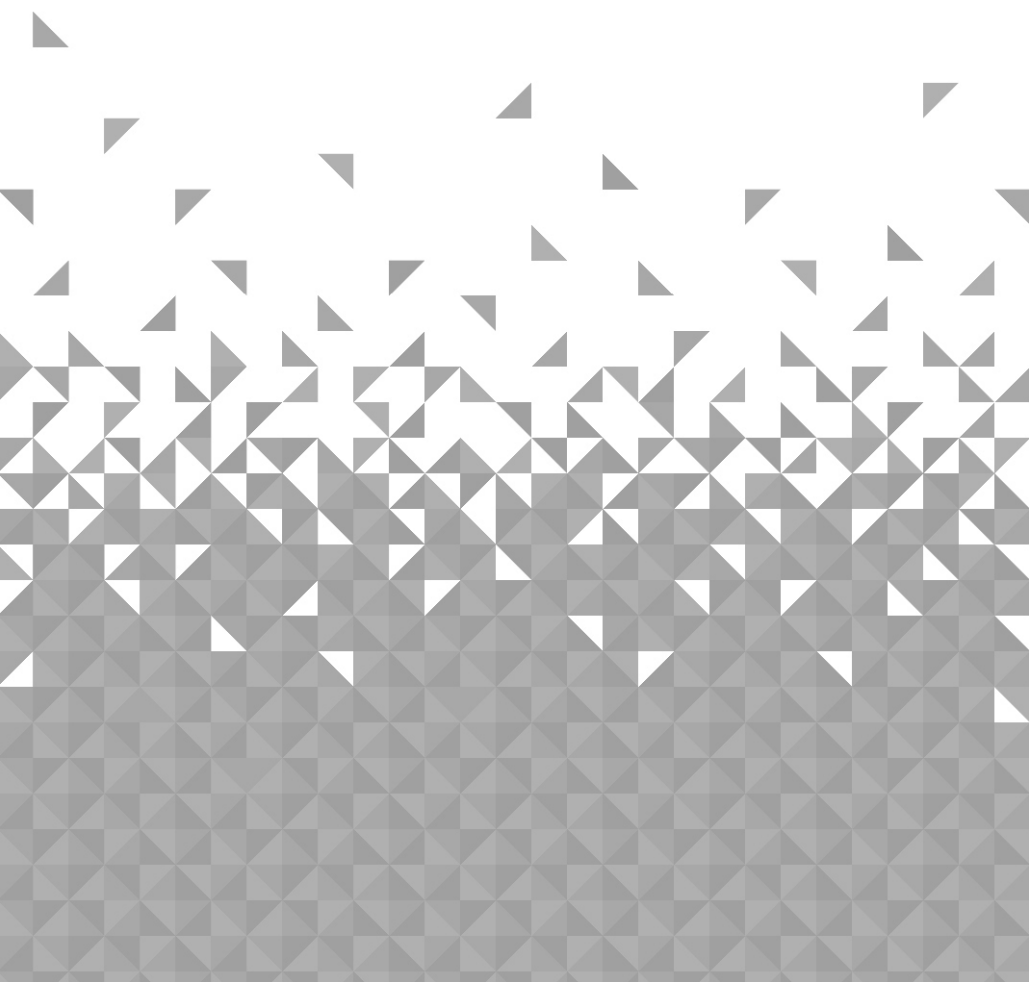

# Functions

 
## Heat Selector button

The Heat Selector controls the heating speed, not the maximum drying temperature.

High Heat: Uses a higher heating rate to dry robust items or larger loads more quickly.

Low Heat: Uses a lower heating rate to dry smaller or less robust loads more gradually.

In all heat settings, the drying temperature is regulated by a thermostat with a maximum operating temperature of approximately 65°C.



## Drying Program Selector

There are five drying combinations available: Cool, Anti-wrinkle, Warm, Hot and Air dry.

**Air Dry:** This function runs with cool air, primarily to air items that require freshening. i.e.: clothes that have been stored for a long period of time.

**OFF:** When the 'Drying Timer' dial is in the 'OFF' position no power is supplied to the unit. As soon as the dial is turned clockwise to the desired program, the dryer will start.

**Cool:** This function is generally used to cool the items that have just been dried. This helps to prevent creasing. Instead of the motor pushing heat into the drum of the dryer it will generate cool air.

**OFF:** When the 'Drying Timer' dial is in the 'OFF' position no power is supplied to the unit. As soon as the dial is turned clockwise to the desired program, the dryer will start.

**Anti-wrinkle:** This is used for items that are difficult to iron i.e.: cotton shirts and linen. Using the heat selector knob, choose 'Low'. Set the drying timer knob between 30-60 minutes depending on the amount of items in the dryer. Once the timer stops (including the cool program) the items will still contain moisture, making the ironing process easier.

**Hot:** For drying large quantities or bulky items. Select the 'High' heat option and set the timer for more than 120 minutes.

**ECO:** green area is in energy-saving mode.

**Warm:** This function will dry and cool items and in most cases leave items wrinkle free (depending on material). Select the 'High' heat option and set the timer for more than 60-120 minutes.

## Start button

After having set up the Heat Selector and Timer Dial, press the Start button. The dryer will start and work until the program is finished. If the during this process the door is opened or power is switched off, the dryer will stop working. In order to start the dryer again after the door is closed or power is switched back on, you will need to push the Start button, then the dryer will start working again.



**NOTE:** This Start button is only designed to start the dryer working. If you press this button during the drying process, the dryer will not pause. In order to stop the dryer, you must turn the timer dial to OFF position.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions.

# Functions

Drying time reference table

| Drying Capacity | Clothes   | Dry time      |               |
|-----------------|-----------|---------------|---------------|
|                 |           | High          | Low           |
| Approx 1kg      | Cotton    | Approx 70min  | Approx 110min |
|                 | Synthetic | Approx 50min  | Approx 80min  |
|                 | Mixed     | Approx 60min  | Approx 95min  |
| Approx 2kg      | Cotton    | Approx 120min | Approx 170min |
|                 | Synthetic | Approx 90min  | Approx 130min |
|                 | Mixed     | Approx 105min | Approx 150min |
| Approx 3kg      | Cotton    | Approx 180min | -             |
|                 | Synthetic | Approx 140min | -             |
|                 | Mixed     | Approx 160min | -             |

These values may deviate from the table according to the laundry type, laundry spin speed, environment condition and voltage fluctuation.

# Functions

## Simple everyday use

### Ending the program – Cancelled by customer

To cancel the program:

1. Open the door, the machine will stop immediately and wait for five minutes to let the temperature inside cool down.
2. Remove the clothes



 
**Warning:** The temperature inside the dry drum may still be high. Take extra care when removing the clothes.

- Clean the drum and lint filter after each drying.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions.

Using your 'Tumble Dryer'

5

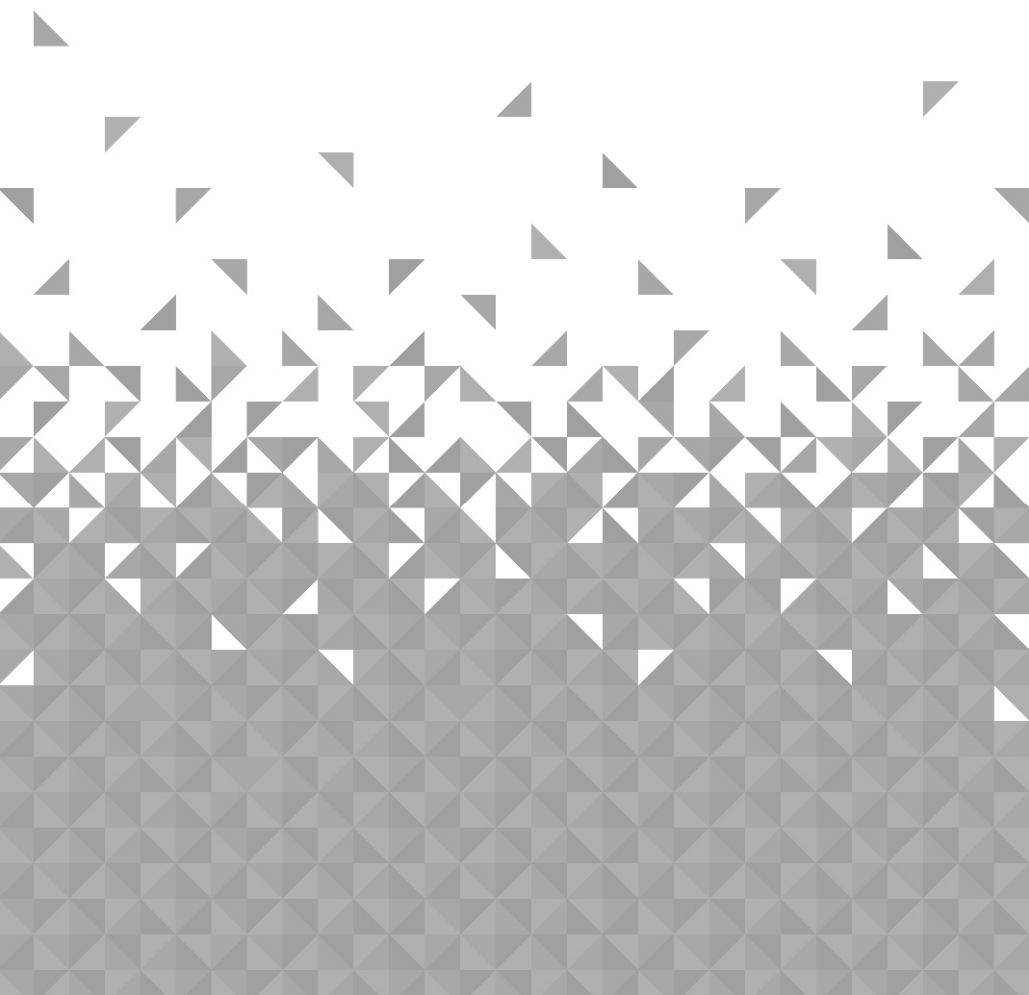

# Using your 'Tumble Dryer'

## Getting the most from your appliance

### Before first use

Final checks before operating the appliance

1. Good air circulation around the appliance positioned appliance.
2. The feet have been adjusted for perfect leveling.
3. Check the hose has been extended to the outdoors.
4. Plug in the appliance.

### Garments suitable for drying in Tumble Dryer

Before using the Tumble Dryer, you have to ensure the laundry is suitable to dry in the Tumble Dryer. Always follow the advice on the garment labels. Dry only laundry with a label stating they are suitable for drying in the dryer and select the appropriate program.



Dry



Do not dry



Do not tumble dry



Tumble dry, high  
heat



Tumble dry, middle  
heat



Dry horizontally



Hang without spinning



Dry on a hanger



Tumble dry, low  
heat

### Garment NOT suitable for drying in Tumble Dryer

- Do not dry articles that have been previously cleaned in, washed in, soaked in or spotted with
- Petrol,/gasoline, dry-cleaning solvents or other flammable or explosive substances as they give off vapors that could ignite or explode.
- Do not dry the articles containing rubber, plastic or similar elastic materials such as padded bras, tennis shoes, galoshes, bath mats, rugs, bibs, baby pants, raincoat plastic bags or pillows that may melt or burn. Some rubber materials, when heated, can under certain circumstances produce fire by spontaneous combustion.
- Do not dry clothes / articles made of foam or rubber as they may be deformed.
- Clothes / articles made of containing meal, hard plastic and similar materials, such as belt buckles, jeans, bra wires, buttons and similar accessories will damage the machine and may cause breakdown.
- Do not place such items in the Tumble Dryer.
- Do not dry items such as woolen, silk articles and nylon stockings, delicate embroidered fabrics, garments with metal accessories and items such as sleeping bags.
- Too wet laundry or laundry with dripping water must not be put into the Tumble Dryer.

### Preparation for the clothes to be dried

- Thoroughly spin the laundry in washing machine. High spin speed can reduce the drying time and save energy consumption.
- Separate your laundry before placing them into the Tumble Dryer.
- Sort the laundry according to their types thickness. Put the same type of laundry together.

# Using your 'Tumble Dryer'

## Getting the most from your appliance

### Load capacity



**Caution :** Overload is not recommended. The drying performance will be degraded when it is overloaded. The machine and your clothes may get damaged. Please refer to the program table to select the desire loading for each setting. Do not overloaded the machine.

- Following table can provide you the idea of the weight for different kind of clothes.

 
| Articles / Clothes                 | Approx. Weight(g) |
|------------------------------------|-------------------|
| Cotton quilt covers(single/double) | 900/1500          |
| Bed sheets (single/double)         | 600/900           |
| Work clothes                       | 1120              |
| Large tablecloths                  | 700               |
| Small tablecloths                  | 350               |
| Tea napkins                        | 100               |
| Bath towels                        | 700               |
| Hand towels                        | 300               |
| Blouses                            | 150               |
| Cotton shirts                      | 300               |
| Shirts                             | 180               |
| Cotton dressed                     | 500               |
| Jeans                              | 800               |
| Jacket                             | 800               |
| Handkerchiefs                      | 100               |
| T-shirts                           | 150               |
| Shorts                             | 70                |
| Socks                              | 50                |

- Place your clothes into dryer loosely so that they have enough room during and will not get tangled.

# Using your 'Tumble Dryer'

## Getting the most from your appliance

### Quick start

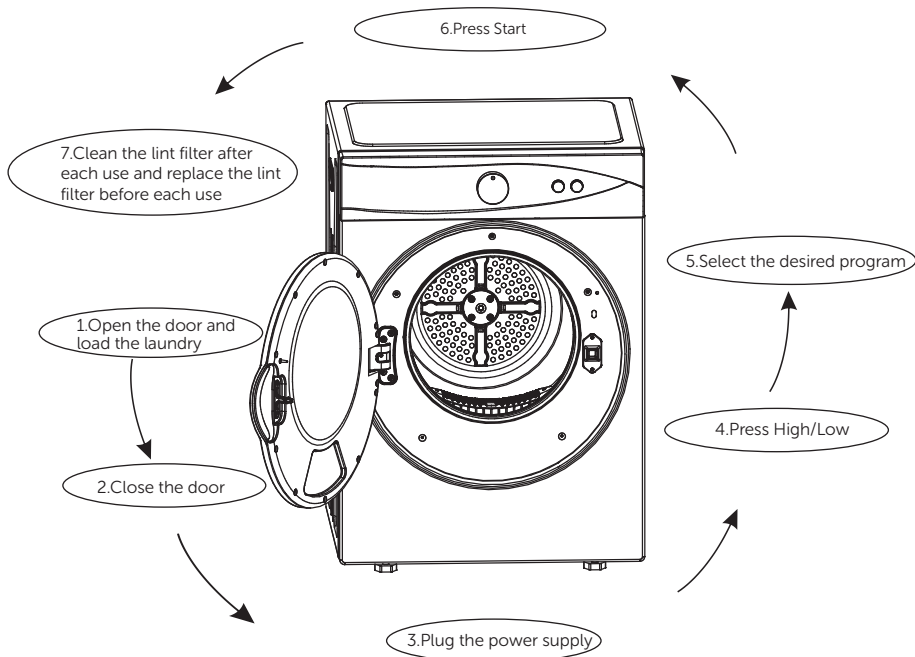


If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions.



## Care and maintenance

 6

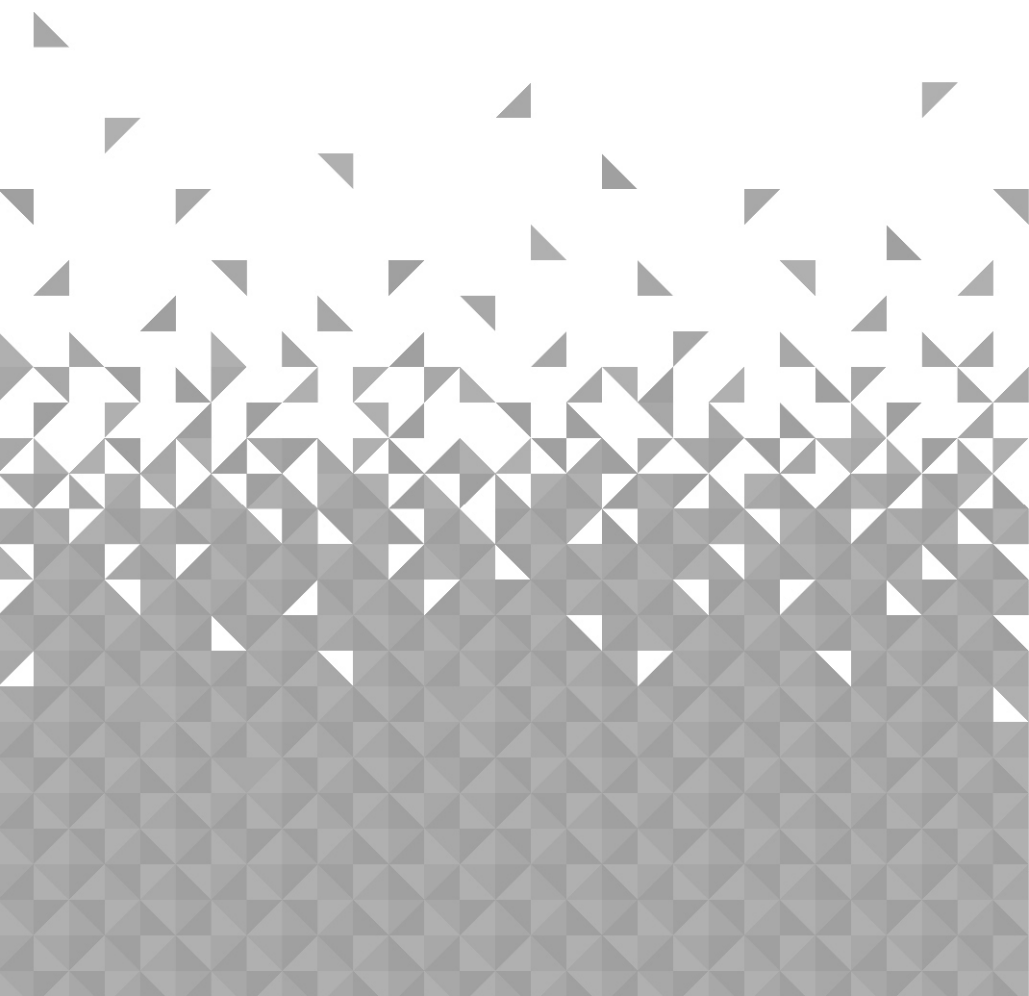

# Care and maintenance

## Looking after your appliance

### General



**Important:** Always unplug the appliance from the power socket during cleaning and maintenance.

- Never use any sharp instruments or abrasive substance, soap, household cleaner, detergent or wax polish for cleaning.
- Use luke warm water to clean the cabinet of the appliance and wipe it dry.
- Never clean the appliance with flammable fluids. It could cause a damage and fire hazard.
- Clean the exterior of the appliance, inner tube and door seal with a damp cloth. Open the door for aeration to dry the inner tube through.
- Avoid water going in the control panel. Clean with a dry cloth only.
- Clean the lint filter after each use.

 
### Clean the lint filter



**Note:** The filter must be installed before operating the clothes dryer, and it needs to be cleaned promptly after each use. Before cleaning, please unplug the power cord from the socket.


#### 1. Removing the filter

Insert your finger into the hole in the center of the filter mesh cover and pull it up (as shown in Fig8).




#### 2. Cleaning the lint

 Open the filter and use a brush or vacuum cleaner to clean the filter mesh (as shown in Fig9).



#### 3. Reinstalling the filter

 After merging the filters, align them with the filter mounting holes on the machine body and install them (as shown in Fig10).




### Cleaning of the Air Inlet Shroud



**Important:** Always unplug the appliance from the power socket during cleaning and maintenance.

 There is no need to remove the filter mesh, simply use a soft-bristled brush or vacuum cleaner to remove dust and other foreign matter adhering to its surface.

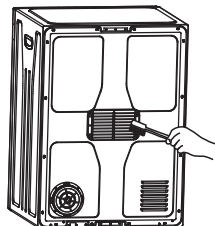

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions.

# Care and maintenance

## Looking after your appliance

### Technical specification

|                               |                |
|-------------------------------|----------------|
| Model                         | BVTD3W/BVTD3B  |
| Energy efficiency class       | G              |
| Energy consumption - per year | 148kWh         |
| Rated capacity (max.)         | 3kg            |
| Operating noise level dB(A)   | 66             |
| Product dimension             | H690xW490xD475 |
| Net Weight                    | 20kg           |
| Rated power input             | 1020W          |
| Rated voltage/Frequency       | 220-240V~ 50Hz |

We apologise for any inconvenience caused by any minor inconsistencies in these instructions, which may occur as a result of product improvements and development.

# Care and maintenance

## Looking after your appliance

### Product fiche

|                                                                                                                                                                                                                                                                                                                                                                           |               |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------|
| Brand                                                                                                                                                                                                                                                                                                                                                                     | BUSH          |
| Model                                                                                                                                                                                                                                                                                                                                                                     | BVTD3W/BVTD3B |
| Dryer Type                                                                                                                                                                                                                                                                                                                                                                | Air-Vented    |
| Rated capacity                                                                                                                                                                                                                                                                                                                                                            | 3 kg          |
| Energy efficiency class                                                                                                                                                                                                                                                                                                                                                   | G             |
| Energy consumption                                                                                                                                                                                                                                                                                                                                                        | 148 kWh       |
| Automatic or non-automatic                                                                                                                                                                                                                                                                                                                                                | Non-automatic |
| Energy consumption of the standard cotton programme at full load                                                                                                                                                                                                                                                                                                          | 2.28 kWh      |
| Energy consumption of the standard cotton programme and partial load                                                                                                                                                                                                                                                                                                      | 1.13kWh       |
| Power consumption of the off-mode (Po)                                                                                                                                                                                                                                                                                                                                    | 0 W           |
| Power consumption of the left-on mode (PI)                                                                                                                                                                                                                                                                                                                                | 0 W           |
| Duration of the left-on mode                                                                                                                                                                                                                                                                                                                                              | N/A           |
| Weighted programme time of the standard cotton programme at full and partial load                                                                                                                                                                                                                                                                                         | 92 min        |
| Programme time of the standard cotton programme at full load                                                                                                                                                                                                                                                                                                              | 151 min       |
| Programme time of the standard cotton programme at partial load                                                                                                                                                                                                                                                                                                           | 74 min        |
| Sound power level for the standard cotton programme at full load                                                                                                                                                                                                                                                                                                          | 66 dB         |
| Cotton + Standard programme, which is the “standard cotton programme”<br>Used at full and partial load is the standard drying programme to which the<br>Information in the label and the fiche relates, that this programme is suitable for<br>Drying normal wet cotton laundry and that it is the most efficient programme in<br>Terms of energy consumption for cotton. |               |

#### NOTE:

 
1 A (most efficiency) to G (least efficiency)

2 Energy consumption 237 kWh-per year, based on 160 drying cycles of the standard cotton programme at full and partial load, and the consumption of the low-power modes/ Actual energy consumption per cycle will depend on how the appliance is used.

We apologise for any inconvenience caused by any minor inconsistencies in these instructions, which may occur as a result of product improvements and development.

Product support

7

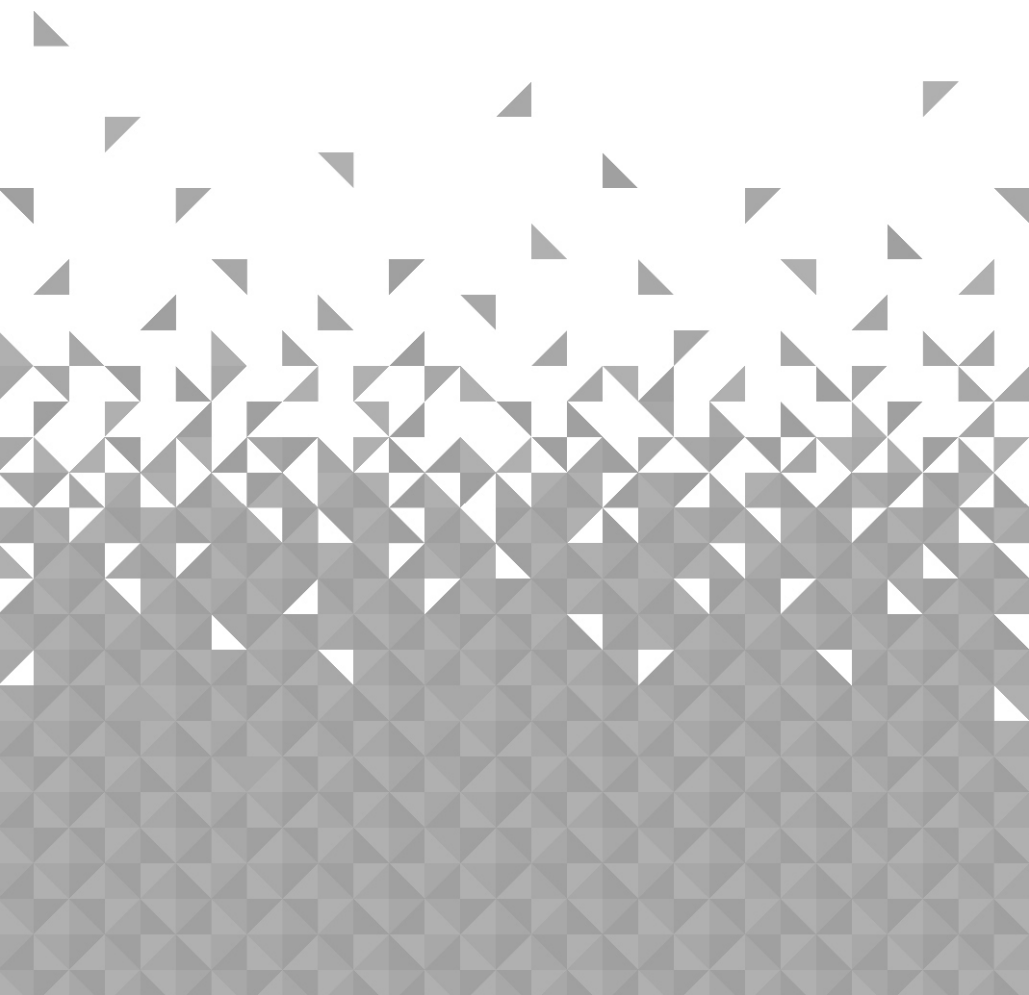

# Product support

## Help is always at hand

### Troubleshooting

#### 1. Tumble dryer doesn't operate?

Please make sure the power plug was inserted well and check the protection devices and fuses.

#### 2. Laundry has shrunk?

Please review the advice on the garments label to select the suitable program setting.

#### 3. Laundry not dry enough at the end of drying?

Please reduce the quantity of clothes for drying each time and clean the lint filter after each use.

#### 4. Laundry too dry?

Please take out the clothes immediately while the drying cycle is finished and review the advice on the garments label to select the suitable program setting.

#### 5. The Tumble Dryer is noisy?

Please make sure the Tumble Dryer was installed on an even and leveled surface. The Tumble Dryer feet can be adjusted.

#### 6. Where to buy the lint filter?

If you wish to replace any of the lint filter assembly, please contact the customer care number: 0345 257 7271.

#### 7. Drum stops rotating?

When the machine stops halfway and the clothes cannot be dried, it may not necessarily be the cause of the fault. Before commissioning repairs, please check and confirm according to the following list.

- Open the door, clean the front and rear filters, cool the machine for 30 minutes, and restart the machine.

- Open the door, loosen the clothing section, reposition it evenly, cool the machine for 30 minutes and restart the machine.

- Open the door to reduce the amount of clothing, refill the bucket with 2/3 of its capacity, cool the machine for 30 minutes, and restart the machine.

- Select the appropriate heating mode and drying time based on the clothing capacity.

- Large items (e.g. bed sheets) may twist together and become unbalanced, which can block the drum and cause motor noise. Open the door, untangle the items, and reduce the load if necessary.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions.

# Product support

## Help is always at hand

### Help and assistance

If you require any technical guidance or find that your 'Tumble Dryer' is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions or online at [www.bush-support.com](http://www.bush-support.com)

If you still require further assistance, call one of our experts on **0345 257 7271**. To help give us give you a fast and efficient service please have the following information ready:

Model Ref.

You can find these on the rating plate - a small information panel (usually a sticker or metal plate) on the rear of your appliance

Serial number

Date of purchase

This will be shown on your receipt

Local call rates applies\*

Line opens 9am-6pm Monday to Saturday and 10am-6pm Sunday.

\*Calls to Bush enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tarif. Mobile and other providers costs may vary, see [www.bt.com/pricing](http://www.bt.com/pricing) for details.

For Security and training purposes, telephone calls to and from customer service centres maybe recorded and monitored. Calls from Republic of Ireland will attract international call charges.

or online at [www.argos-support.co.uk](http://www.argos-support.co.uk) If you still require further assistance, call one of our experts on **0345 257 7271**.

## Product support

Help is always at hand



The appliance complies with the following EEC directives:  
2014/35/EU Low voltage directive  
2014/30/EU EMC directive



The appliance complies with the following UK legislation:  
Electromagnetic Compatibility Regulations 2016  
Electrical Equipment (Safety) Regulations 2016

### Notes on disposal:



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the collection systems or contact the retailer where the product was purchased. They return and can take this product for environmental safe recycling.

**Remember: Old machine must be disposed of carefully – Cut off the mains plug and /or remove the door to be unusable before disposed – if in doubt, contact your local council for details on how to dispose of an old dryer.**

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions.



# Product support

Help is always at hand

# BUSH

**Call us now and activate your 12 month guarantee**

Thank you for choosing Bush. Your new product is guaranteed against faults and breakdowns for 12 months. Don't forget to register it with us today so we can provide you with our best possible after-sales service and useful updates.

**[www.bushregistration.co.uk](http://www.bushregistration.co.uk)**

**FREEPHONE\***

**0800 597 8548**

Lines are open 8am - 8pm, 365 days a year. \*Calls may be recorded and monitored.

## **Your Bush Guarantee**

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from who you purchased the unit.

**The guarantee is subject to the following provisions:**

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in the manual.
- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- Bush disclaim any liability for loss or damage arising from the breakdown of the product.
- This guarantee is in addition to and does not diminish your statutory or legal rights.

## **Important Data Protection Information**

To find out how we and Domestic & General Insurance Plc use your data please refer to the guarantee registration material or visit [www.bushregistration.co.uk](http://www.bushregistration.co.uk)

Guarantor: Argos Limited, London, EC1N 6HA.

or online at [www.argos-support.co.uk](http://www.argos-support.co.uk) If you still require further assistance, call one of our experts on **0345 257 7271**.



If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions.



# BUSH

Produced in China for

Argos Limited, London, EC1M 6HA, UK.

Argos (N.I.) Ltd., Forestside Shopping Centre,

Upper Galwally, Belfast, BT8 6FX, UK.

## Contact:

[www.argos-support.co.uk](http://www.argos-support.co.uk)

[www.bush-support.com](http://www.bush-support.com)

Helpline: 0345 257 7271