

A	1	2		3			4		A	
	C	版本	N6020026837	台	图					
B	后附图纸48页									B
	技术要求									
C	1.材料: 70g胶版纸, 正反面印刷; 2.印刷为黑白色单色印刷; 3.所有印刷内容正确、清晰, 不得有漏印、误印, 无印刷缺陷; 4.幅面: A4, (297±3) X (210±3), (单位: mm); 5.未注公差按照GB/T 1804-m; 6.颜色及整体效果必须经过研发部确认后方能生产, 产品检验以封样件为准; 7.有害化学物质含量参照《Q/HKX J16001》执行;									C
D										
借(通)用件登记										E
	1	20255982				DHMY80-DEW012-000				
旧底图总号	序号	零件号	材料	颜色	表面处理	首次使用产品型号			备注	
									Hisense	
底图总号			OCA-XY260350			更正P3目录页码,更新P2日期				
			OCA-XY260274			修正P22, 28, 45页型号名错误, 更新P2日期			细类名称	
出图审查	标记	处数	更改单编号			更改说明			订单说明书	
	设计	全业辉	2026.03.11	通用化	侯昌漾	2026.03.11	比例	1:1	功能位置	
	审核	高洁	2026.03.11	品质	金文兵	2026.03.11	共 49 张	第 1 张		
日期	工艺	冯超	2026.03.11	制图	黄佳欣	2026.03.11			图号	
	标准化	程木聪	2026.03.11	批准	崔维明	2026.03.11	投影符号		版本	
								N6020026837	C	
	1			2			3		4	

BUSH

Instruction manual

Heat Pump Tumble Dryer

BHPTD7W

BHPTD8W

BHPTD8B



You'll soon be enjoying your new tumble dryer.

It all begins here, with your instructions. Don't worry, there's nothing too technical coming up. Just simple, step-by-step guidance to get you up and running quickly. Sound good? Then let's get started.

Help and Guidance

We're here to help you get the most from your tumble dryer. Should you require any guidance, a simple solution can often be found online at:

www.bush-support.com

If you still require further assistance, call one of our experts on 0345 257 7271.

ISSUE-2 16/04/2026

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the Troubleshooting section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 257 7271.

Contents

1	Safety Information		
	Safety information	6	
2	Getting to know your tumble dryer		
	Ready? Let's begin	10	
	Overview	11	
3	Installing your tumble dryer		
	Correct Use	14	
	Installing on top of a washing machine	15	
	Installation	16	
	Connect drain hose	16	
	Electrical Connection	17	
4	Functions		
	Functions	20	
	Introduction of control panel	20	
	(Control Panel - Programme Selection		
	Knob-Electronic Indicator and Additional		
	Functions)		
	Programme Selection and Consumption		
	Table	21	
	Additional settings and functions	23	
	Function selection table	26	
5	Using your tumble dryer		
	Preparing The Laundry	30	
	Sorting the Laundry to be Dried	30	
	Preparing the Laundry to be Dried	31	
	Load Capacity	31	
6	Care and Maintenance		
	Cleaning and Care	34	
	Cleaning the Lint Filter	34	
	Cleaning the condensed water container	34	
	Cleaning the Heat Exchanger	35	
	Cleaning the Humidity Sensor	35	
	Cleaning the Inner Surface of the Loading		
	Door	35	
7	Product support		
	Troubleshooting	38	
	Automatic Fault Warnings and What To Do	40	
	Technical Specifications	41	
	Environmental Protection and Packing		
	Information	42	
	Describing The Energy Label And Saving		
	Energy	42	
	Energy Efficiency	43	
	Consumption Data	44	
	Help And Assistance	46	
	Disposal	47	
	Guarantee	48	



Safety information **1**





Safety information

Important - Please read these instructions fully before installing or operating your tumble dryer

PRIMARY CONSIDERATIONS

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children must not play with the appliance. Cleaning and user maintenance must not be made by children without supervision.

- Children of less than 3 years of age should be kept away from the appliance unless constantly supervised.
 - This tumble dryer is intended only for household and indoor use. The warranty will be void in case of commercial use.
 - Use this product only for laundry with a label that indicates it is suitable for drying.
 - The manufacturer will not accept responsibility for damages resulting from incorrect use or transport.
 - The service life time of your tumble dryer is 10 years. This is the period during which the spare parts required for the tumble dryer to operate properly will be commercially available.
 - Do not allow floor coverings to obstruct the ventilation openings.
 - Installation and repair of the machine should only be made by an authorised repair agent. The manufacturer cannot be held responsible for damages resulting from un-authorized repairs.
 - The operating temperature of the dryer is +5°C to +35°C. If operated outside of this range, the performance of the dryer will be affected and the product may become damaged.
- ! WARNING:** Never spray or pour water onto the dryer to wash it! There is risk of electric shock!
- Leave at least 2.5cm of space on each side and at the top, and 5cm at the rear, if you plan to place your dryer under a worktop.
 - Assembly / disassembly for under-counter installation if necessary must be done by an authorised service agent.
- Before installation, check the product for visible damage. Never install or operate a damaged product. Damaged products may endanger your health.
 - Keep pets away from the dryer.
 - Fabric softeners, or similar products, should be used in accordance with the manufacturers instructions.
 - Remove all objects from pockets such as lighters and matches.
 - The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the tumble dryer, if it prevents the door from being fully opened.
- ! WARNING:** In the appliance enclosure or in the built in structure, keep ventilation openings clear of obstructions.
- Before contacting the local Authorised service Provider for the installation of the dryer, check the information in this user manual to make sure that the electrical installation and water outlet is suitable. If they are not, call a qualified electrician and plumber to have the adjustments made.
 - It is the customer's responsibility to prepare the dryer's installation place as well as the electrical and waste water installation. Before installation, check the dryer for damage. If damaged, do not have it installed.
 - Install the dryer on a flat and stable surface.
 - Run the dryer in a dust free environment where the air ventilation is good.
 - The clearance between the dryer and the floor **should not be** reduced with objects such as carpets, wood or tape.
 - **Do not block the ventilation grills** found on the plinth of the dryer.
 - Once the dryer has been installed, the connections must remain stable. When installing the dryer, make sure that the rear surface is not leaning on anything such as a tap or socket.
 - Be careful when carrying the product as it is heavy. Always wear protective gloves.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the Troubleshooting section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 257 7271.



Safety information


Important - Please read these instructions fully before installing or operating your tumble dryer


SAFETY INSTRUCTIONS

This section contains safety instructions that will help protect you from risk of personal injury or property damage. Failure to follow these instructions will void any warranty.

ELECTRICAL SAFETY


- The appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by a utility.
- Do not touch the power plug with wet hands. Always pull the plug to unplug the product, otherwise, there will be risk of an electric shock.
- Connect the dryer to a grounded socket with fuse protection. Have the earth connection installed by a qualified electrician. Our company cannot be held responsible for damages/losses resulting from using the dryer without an earth connection as required by local regulations.
- Cord entanglement hazard. The cable of the appliance can give rise to risks of entanglement, strangulation or tripping if not correctly placed. You must make sure that the electric cable is positioned safely.
- Voltage and frequency values indicated on the rating plate must be equal to the mains voltage and frequency value in your house.
- Unplug the dryer when it is not used for an extended period and before installation, maintenance, cleaning and repair, otherwise, the dryer may become damaged.
- The plug socket must be freely accessible at all times after installation.
- Do not place the dryer onto the power cable.

 **A damaged power cord/plug can cause fire or give you an electric shock. When damaged, it must be replaced by qualified personnel only.**

 **To avoid the risk of fire or electric shock, do not use extension cords, multi sockets or adapters to connect the dryer to mains power.**

CHILDREN'S SAFETY

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children must not play with the appliance. Cleaning and user maintenance must not be made by children without supervision.
- Children less than 3 years old should be kept away from the machine unless continuously supervised.
- Do not leave children unattended near the machine.
- Children might lock themselves in the machine resulting in risk of serious injury or possible death.
- Do not allow children to touch the door during operation. The surface becomes extremely hot and may cause serious injury.
- Keep packaging material away from children.
- Poisoning and irritation may occur if detergent and cleaning materials are consumed or come into contact with the skin and eyes.
- Keep cleaning materials out of the reach of children. Electrical products are dangerous for children.
- Keep children away from the product while it is running.
- To prevent children from interrupting the dryer cycle, you can use the child lock to avoid any changes in the running programme.
- Do not allow children to sit/climb on or climb inside the product.

 **WARNING:** The appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by a utility.



Safety information

Important - Please read these instructions fully before installing or operating your tumble dryer

PRODUCT SAFETY



Due to risk of fire, the following laundry items and products should NEVER be dried in the dryer:

- Do not dry unwashed items in the tumble dryer.
- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.
- Cleaning cloths and mats that have residues of flammable cleaning agents or acetone, gas, petrol, stain remover, turpentine, candle, wax, wax remover or chemicals.
- Laundry that has residues of hair sprays, nail polish remover and similar substances.
- Laundry on which industrial chemicals have been used for cleaning (such as chemical cleaning).
- Laundry that has any kind of foam, sponge, rubber or rubber-like parts or accessories. These include latex foam sponge, shower caps, waterproof fabrics, fitted clothes and foam pillows.
- Items with filling and damaged items (pillows or jackets). Foam protruding from these items might catch fire during the drying process.
- Operating the dryer in environments that contain flour or coal dust may cause explosion.



ATTENTION: Underwear that contain metal reinforcements should not be put in the dryer. The dryer may be damaged if metal reinforcements come loose and break off during drying.

Do not attempt to repair the appliance yourself. Contact the manufacturer, their approved service agent or the Customer Helpline: 0345 257 7271.

WARNING: Never stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.

- The lint trap has to be cleaned frequently.
- Lint must not be allowed to accumulate around the tumble dryer.



WARNING!

Risk of fire/flammable materials.

This appliance is environmentally friendly and uses a non-CFC/HFC refrigerant (R290) in its heat pump system. Please note that R290 is potentially flammable if exposed to fire. Therefore, take extra care not to damage the refrigerant circuit during transportation or use. Dispose of the appliance properly.

If the refrigerant circuit should be damaged:

- Avoid opening flames and sources of ignition.
- Immediately and thoroughly ventilate the room in which the appliance is situated.

It is dangerous to alter the specifications or modify this product in any way.

Any damage to the cord may cause a short circuit, fire, and/or electric shock.



Read operator's manual

Getting to know your tumble dryer

2



Getting to know your tumble dryer

You'll be up and running in no time

Ready? Let's begin...

Please read these instructions carefully. They contain important information which will help you get the best from your tumble dryer and ensure safe and correct installation and operation.

If you require any further assistance, our technical experts are happy to help. For full details, refer to the product support section at the end of these instructions.



Getting to know your tumble dryer

You'll be up and running in no time

OVERVIEW


Front

1. Condensed water container
2. Programme Selection Knob
3. Control panel
4. Door
5. Lint filter
6. Cooling air grille
7. Heat exchanger door cover

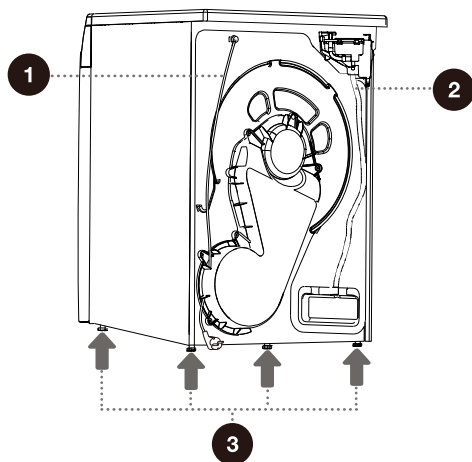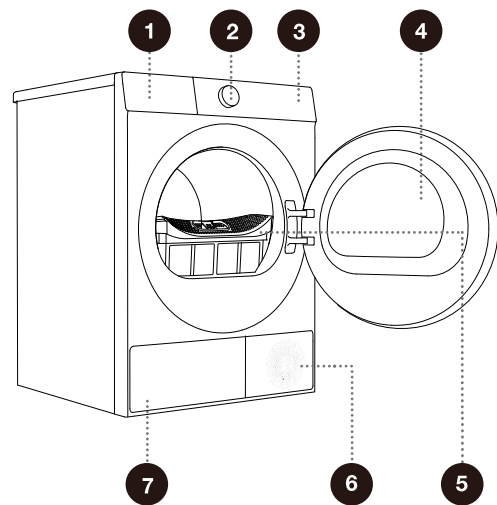

Back (BHPTD7W)

1. Mains connection cable
2. Discharge hose for condensed water
3. 4 height-adjustable feet

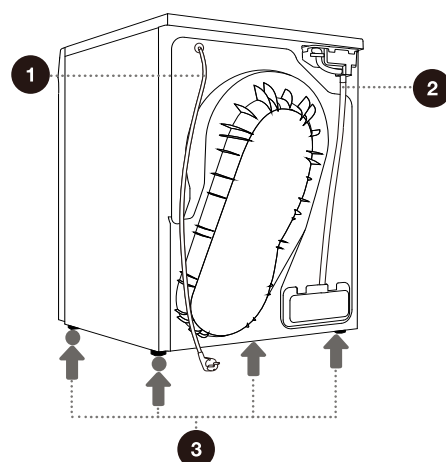


Back (BHPTD8W, BHPTD8B)

1. Mains connection cable
2. Discharge hose for condensed water
3. 4 height-adjustable feet

Accessories included



Instruction Book

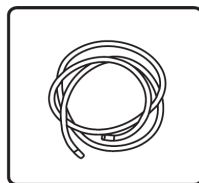

Discharge hose


If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the Troubleshooting section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 257 7271.

Getting to know your tumble dryer

You'll be up and running in no time

Model	Capacity	Energy class
BHPTD7W	7kg	D
BHPTD8W BHPTD8B	8kg	D

Dimensions(mm)

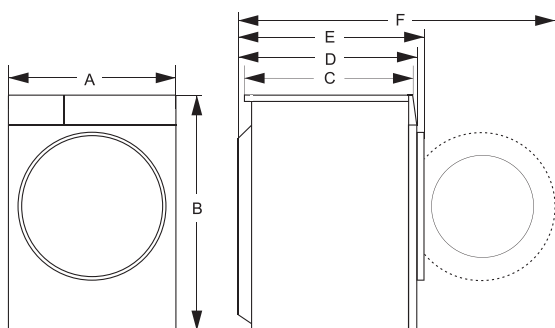

Index	Dimensions (mm)	
	BHPTD7W	BHPTD8W BHPTD8B
A	595	595
B	845	845
C	470	520
D	510	550
E	540	580
F	1030	1060

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the Troubleshooting section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 257 7271.

Installing your tumble dryer


3




Installing your tumble dryer

Bringing it all together

CORRECT USE

 **ATTENTION:** Never stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.


 **ATTENTION:** Make sure that pets do not enter the dryer. Check the inside of the dryer before using it.

 **ATTENTION:** Superheating of clothes inside of the dryer can occur if you cancel the programme or in the event of a power failure whilst the dryer is running. This concentration of heat can cause self-combustion so always activate the Refresh programme to cool down or quickly remove all laundry from the dryer in order to hang them up and dissipate the heat.

- Use the dryer only for household drying and to dry fabrics with a label that indicates they are suitable for drying. All other uses are out of the scope of intended use and are prohibited.
- The warranty will be void in case of any commercial use.
- This appliance is designed to be used inside domestic residences only, and should be placed on a straight and stable surface.
- Do not lean against or sit on the door of the dryer. The dryer may tip over.
- To maintain a temperature that will not harm the laundry (e.g. to prevent the laundry from catching fire), a cooling process starts after the heating process. After this, the programme ends. At the end of the programme, always remove the laundry promptly.


 **ATTENTION:** Never use the dryer without a lint filter or with a damaged lint filter.

- Lint filters must be cleaned after each use as indicated in **Cleaning the Lint Filter** Section.
- Lint filters must be dried after wet cleaning. Wet filters might cause malfunction during the drying process.
- Lint accumulation must not to be allowed around the tumble dryer (not applicable for appliances intended to be vented to the exterior of the building)

 **IMPORTANT:** The clearance between the dryer and the floor should not be reduced with objects such as carpets, wood or panels. In these instances, sufficient air intake cannot be ensured for the machine.

- Do not install the dryer in rooms where there is a risk of freezing. Freezing temperatures negatively affect the dryers performance. Condensed water that freezes in the pump and hose may cause damage.

INSTALLING ON TOP OF A WASHING MACHINE

 **ATTENTION:** A washing machine cannot be placed on the dryer. Pay attention to the warnings below when installing the dryer on a washing machine.

 **ATTENTION:** The dryer can only be placed on washing machines that have the same capacity and above..

- To use the dryer on the washing machine, a fixing part must be used between the two products. The fixing part must be attached by an Authorised Service Provider.
- When the dryer is placed on the washing machine, the total weight of these products may reach almost 150 kilograms (when loaded). **Place the products on a solid floor that has a load bearing capacity!**

Appropriate Installation Table for Washing Machine and Tumble Dryer							
Tumble Dryer (Depth)	Washing Machine						
	41-42cm	43-45.5cm	46-49cm	50-53cm	54-57cm	54-57cm	54-57cm
51 cm	X	✓	✓	✓	✓	✓	✓
55 cm	X	X	✓	✓	✓	✓	✓
59 cm	X	X	X	✓	✓	✓	✓
64 cm	X	X	X	X	✓	✓	✓


(For the depth information, please see 7. Technical Specifications)

In order to put the washing machine onto the dryer, a special stacking kit is required as an optional extra. Please contact customer service to acquire. The assembly instruction will be served together with the stacking kit

EU & UK Declaration of conformity

We declare that our products meet the applicable European / British Directives, Legislations, Decisions and Regulations and the requirements listed in the standards referenced.

Disposing the Old Product

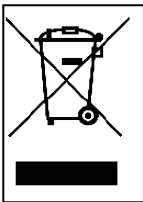

This product complies with EU WEEE Directive (2012/19/EU). This product bears a classification symbol for waste electrical and electronic equipment (WEEE).

This symbol, which is found on the product or information label, indicates that this product must not be disposed together with other household waste at the end of its service life. To prevent the potential harm of uncontrolled waste disposal on the environment and human health, please keep this product separate from other types of waste, and to prevent sustainable reuse of material resources, make sure that it is recycled responsibly.

Contact your dealer or local authorities to get information on how and where you can take the product for environmentally-safe recycling. This product cannot be mixed with other commercial wastes for recycling.

Installing your tumble dryer

Bringing it all together


INSTALLATION

- Before contacting the local Authorised Service Provider for the installation of the dryer, check the information in the user manual to make sure that the electrical installation and water outlet is suitable. If they are not, call a qualified electrician and a plumber to have the necessary adjustments made.
- It is the customer's responsibility to prepare the dryer's installation place, as well as the electricity and waste water installation. Before installation, check the dryer for damage. If damaged, do not have it installed. Damaged products may endanger your health.
- Install the dryer on a stable and flat surface.
- Run the dryer in a dust-free environment where the air ventilation is good.
- The clearance between the dryer and the floor should not be reduced with objects such as carpets, wood or tape.
- Do not block the ventilation grills found on the plinth of the tumble dryer.
- Do not block the gap between the bottom of the tumble dryer and the floor with plinth facings, deep pile carpet etc. This would hinder a sufficient flow of air to the tumble dryer.
- The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side of the tumble dryer, in such a way that blocks the full opening of the tumble dryer door.
- Once the dryer has been installed, the connections must remain stable. When installing the dryer, make sure that the rear surface is not leaning on anything (e.g. tap, socket).
- The operating temperature of the dryer is +5°C to +35°C. If operated out of this temperature range, the performance of the dryer will be affected negatively and the product will be damaged.
- Be careful when carrying the product since it is heavy. Always wear safety gloves.
- The rear surface of the product should be placed against the wall.
- When the product is placed on a stable surface, use the water level to check if it is fully stable. If not, adjust the feet until it becomes steady. Repeat this process every time you relocate the product.
- Do not place the dryer onto the power cable.

CONNECT DRAIN HOSE

If the appliance is not connected to a drain hose, the water extracted from the clothes by the condenser will accumulate in the Condensed water container, which needs to be emptied after each program. If the installation location of the appliance is close to the drain outlet, or if the dryer is stacked on top of the washing machine, you can install the drain hose included in the package to drain the water directly into the drain outlet.

1. Unplug the connecting tube at the back of the appliance's Condensed water container and hang it on the back of the appliance.
2. Install the drain hose in the accessories to this position (as shown in the figure), please confirm that the installation connector is firmly inserted, and insert the other end of the drain hose into the drain outlet.

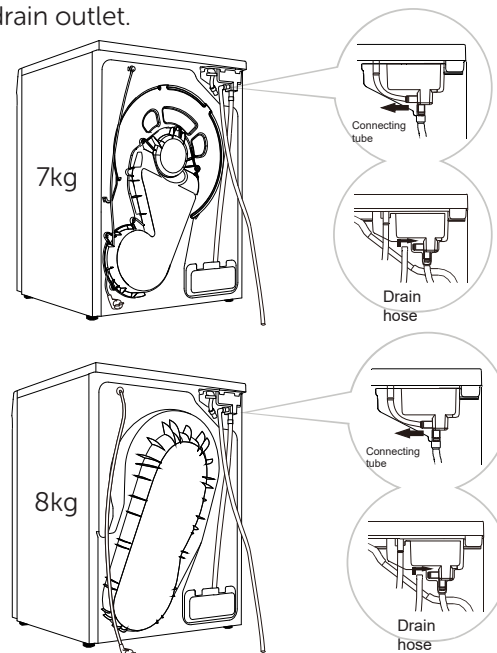

! ATTENTION: The hose must be connected in a manner that it cannot be displaced. If the hose comes out during water discharge, flooding in your home may occur.

! IMPORTANT: The water discharge hose must be installed at a height of 80 cm maximum.

! IMPORTANT: The water discharge hose must not be bent between the outlet and the product, folded or stepped over.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the Troubleshooting section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 257 7271.

Installing your tumble dryer


Bringing it all together

ADJUSTING THE FEET

- For the dryer to work with less noise and vibration, it must be stable and balanced on its feet. Adjust the feet to ensure that the product is balanced.
- Rotate the feet to the right and to the left until the dryer is even and stable.



IMPORTANT: Never remove the adjustable feet.

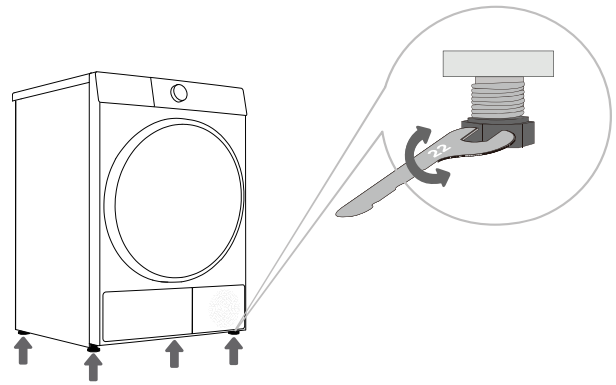

ELECTRICAL CONNECTION



ATTENTION: There is risk of fire and electric shock.

- Your dryer is set to 220-240 V and 50 Hz.
- The mains cable of the dryer is equipped with a special plug. This plug must be connected to an earthed socket protected by a fuse of 13 Amperes as indicated on the type plate. The fuse current rating of the power line where the outlet is connected must also be 13 amperes. Consult a qualified electrician if you do not have such an outlet or fuse.
- Our company cannot be held responsible for damages resulting from usage without earthing.




IMPORTANT: Operating your machine at low voltage values will shorten the service life and decrease the performance of your machine.

- After installation, the dryer should stand for 2 hours before it is connected to the power mains; this allows the dryer to stabilize.
- We recommend using over-voltage protection to protect the appliance in case of lightning strike.
- The dryer must not be connected to the power mains using extension cord.
- Do not connect the tumble dryer to an electrical outlet intended for an electric shaver or a hair dryer.
- Any repair and maintenance pertaining to safety or performance should be done by trained experts.
- A damaged power cord may only be replaced by a person authorized by the manufacturer.

UNDER COUNTER INSTALLATION

- Leave at least 2.5cm of space on each side and at the top, and 5cm at the rear, if you plan to place your dryer under a worktop.
- Assembly / disassembly under the counter if necessary must be done by authorised service.

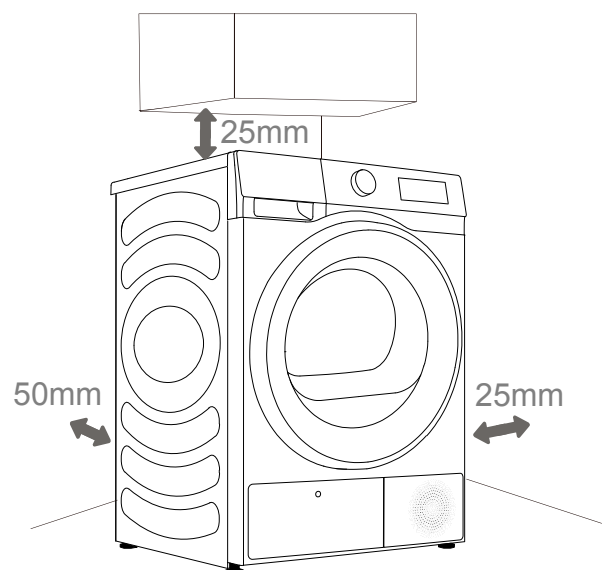




Functions 4



Functions

Simple everyday use


INTRODUCTION OF CONTROL PANEL

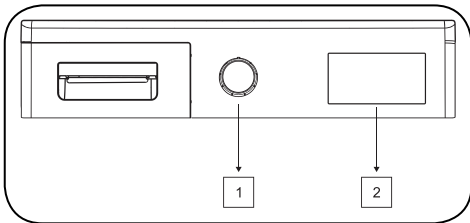


1. Programme Selection Knob
2. Electronic indicator and additional functions



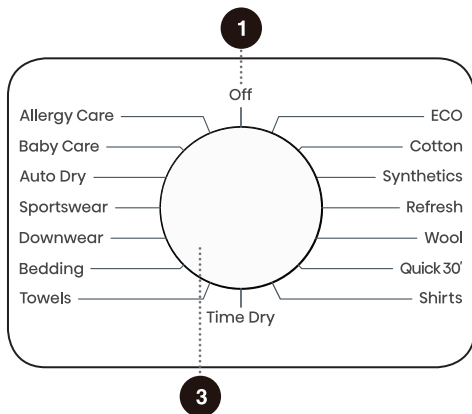

PROGRAMME SELECTION KNOB

Use the programme selection knob to select the desired drying programme

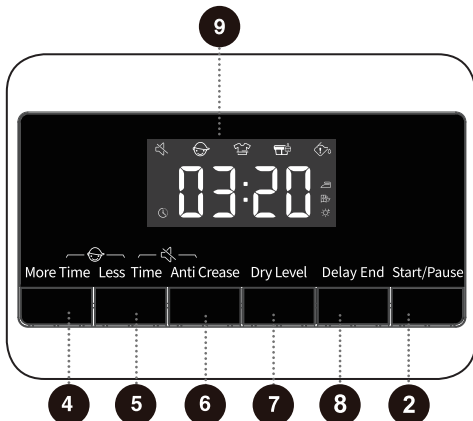

ELECTRONIC INDICATOR AND ADDITIONAL FUNCTIONS



- 1 Power**
Used to turn on/off the device.
 - 2 Start/Pause**
Used to start/pause a program.
 - 3 Cycle Selector**
Turn the knob to select the program.
 - 4 More Time**
This function increases the drying time of the program.
 - 5 Less Time**
This function shortens the drying time of the program.
 - 6 Anti Crease** 
It turns the anti-crease function on/off.
 - 7 Dry Level**
This function selects the drying effect of the program.
 - 8 Delay End** 
This function allows you to schedule drying clothes at your convenience.
 - 9 Display**
Used to display the remaining time of the program, reservation time, fault code, and other related information.
- 4+5 Child Lock** 
Press and hold these two buttons at the same time to turn on/off the child lock function.
- 5+6 Mute** 
Press and hold these two buttons simultaneously to turn on/off the mute function.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the Troubleshooting section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 257 7271.

Functions

Simple everyday use

PROGRAMME SELECTION AND CONSUMPTION TABLE (Model BHPTD7W)

The tables show the power consumption and drying time for different laundry loads after the washing machine's spin cycle.

Programme	Load (kg)	Washing machine spin speed	Approximate amount of remaining humidity (after spinning)	Duration (minutes)
ECO	7	1000	60%	178
Cotton	7	1000	60%	170
Synthetics	3.5	1000	40%	10
Refresh	-	-	-	-
Wool	1	-	-	-
Quick30'	0.5	1400	35%	30
Shirts	2	1000	60%	63
Time Dry	-	-	-	-
Towels	3.5	1400	60%	103
Bedding	2.5	1400	50%	173
Downwear	2	600	75%	158
Sportswear	2	1000	60%	93
Auto Dry	3.5	1200	55%	163
Baby Care	2	1000	60%	74
Allergy Care	2	-	-	-

Energy consumption values				
Programme	Load (kg)	Washing machine spin speed	Approximate amount of remaining humidity (after spinning)	Energy consumption values (kWh)
ECO	7	1000	60%	1.65
Cotton Cupboard Dry	7	1000	60%	1.55
Cotton Iron Dry	4	1000	60%	1.12
Synthetics Cupboard Dry	3,5	1000	40%	0.67
Power consumption in the "off mode" P_o (W)				0.50
Power consumption in the "on mode" P_L (W)				0.57

The ECO programme is the standard drying programme that can be run with a full or half load and for which the information is given on the label and product receipt. This programme is the most energy efficient programme to dry normal wet cotton clothes.

*Energy labelling standard programme (EN 61121:2013)

All values in the table were determined in accordance with the EN 61121:2013 standard. Consumption values may vary from the values in the table depending on the fabric type, spin speed, environment conditions and voltage values.

Functions

Simple everyday use

PROGRAMME SELECTION AND CONSUMPTION TABLE (Model BHPTD8W / BHPTD8B)

The tables show the power consumption and drying time for different laundry loads after the washing machine's spin cycle.

Programme	Load (kg)	Washing machine spin speed	Approximate amount of remaining humidity (after spinning)	Duration (minutes)
ECO	8	1000	60%	200
Cotton	8	1000	60%	208
Synthetics	4	1000	40%	68
Refresh	-	-	-	-
Wool	1	-	-	-
Quick30'	0.5	1400	35%	30
Shirts	2	1000	60%	63
Time Dry	-	-	-	-
Towels	4	1400	60%	150
Bedding	2.5	1400	50%	176
Downwear	2	600	75%	158
Sportswear	2	1000	60%	97
Auto Dry	4	1200	55%	113
Baby Care	2	1000	60%	89
Allergy Care	2	-	-	-

Energy consumption values				
Programme	Load (kg)	Washing machine spin speed	Approximate amount of remaining humidity (after spinning)	Energy consumption values (kWh)
ECO	8	1000	60%	1.80
Cotton Cupboard Dry	8	1000	60%	1.92
Cotton Iron Dry	8	1000	60%	1.59
Synthetics Cupboard Dry	4	1000	40%	0.63
Power consumption in the "off mode" P_o (W)				0.50
Power consumption in the "on mode" P_L (W)				0.57

The ECO programme is the standard drying programme that can be run with a full or half load and for which the information is given on the label and product receipt. This programme is the most energy efficient programme to dry normal wet cotton clothes.

*Energy labelling standard programme (EN 61121:2013)


All values in the table were determined in accordance with the EN 61121:2013 standard. Consumption values may vary from the values in the table depending on the fabric type, spin speed, environment conditions and voltage values.

ADDITIONAL SETTINGS AND FUNCTIONS

The program comes with default settings, and some functions can be changed by user. You can adjust the settings by pressing the corresponding function button (before pressing the "Start/Pause" button).

Some settings cannot be selected or changed in some programs. These settings will not light up, and an acoustic signal sounds when the corresponding button is pressed (see "FUNCTION SELECTION TABLE").

Most functions can only be set in standby mode, i.e., before a program starts. After starting the program, most functions cannot be adjusted anymore.

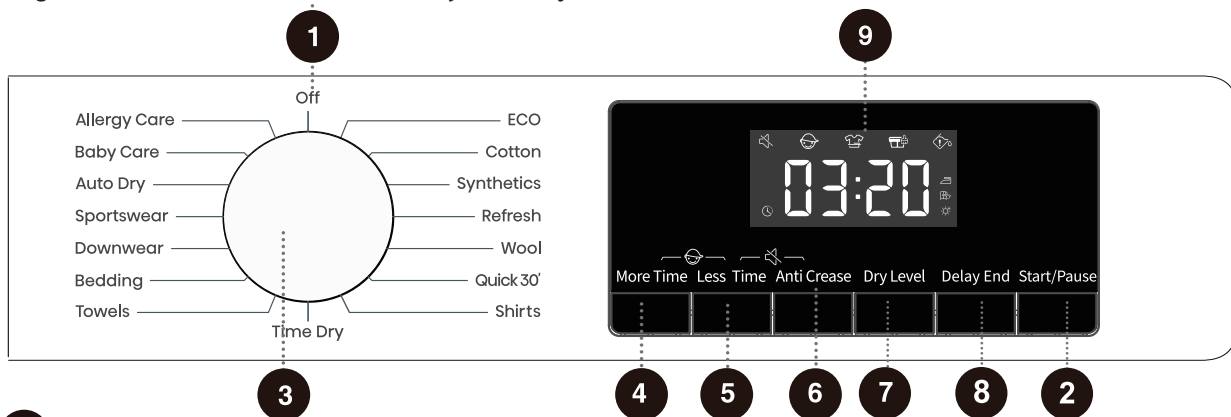

1

Power

Used to turn the device's power on or off.

During the program running, if you need to turn off, turn the program knob to point to "off" to shut down.

2

Start/Pause

Used to start/pause a program.

The device cannot be started if the door is not closed or the door lock is not locked.

4

More Time

This function increases the drying time of the program.

It is only applicable to timed drying programs. Stop-on-dry programs cannot be selected.

Different programs have different drying time levels.

Please select a suitable drying time. If the drying time is too short, the clothes may not be completely dried.

5

Less Time

This function can reduce the drying time of the program.

It is only applicable to timed drying programs. Stop-on-dry programs cannot be selected.


Different programs have different drying time levels.

Please select a suitable drying time. If the drying time is too short, the clothes may not be completely dried.

6

Anti Crease

This function adds an anti-crease mode. After the program ends, the inner drum rotates intermittently to prevent creases from forming when clothes are not taken out for a long time.

After selecting a program, press this key. "" icon lights up and the program automatically enters the anti-crease mode after the program ends. The same operation can be used to turn off this function.


During the anti-crease mode, pressing any key, turning the knob or opening the door can end this function. If no operation is performed, the program will automatically end after a maximum of 12 hours by default.

7

Dry Level

This function is used to select the drying effect of the program.

It displays the current drying effect for the first time. Press this button to cycle through the set gears. The drying effect can be selected in the following gears:

 The drying effect gears that can be set for each program are different.

"" Extra: After drying, the clothes are ready for storage.

"👕" Cupboard: After drying, the clothes can be worn immediately.

"a" Iron: After drying, the clothes contain a small amount of moisture and can be ironed again.

8

Delay End

This function allows you to schedule drying clothes at your convenience.

After selecting the program and function, make a reservation. Press this button to start the reservation, and press it again to make a selection in the cycle of the set time gears. Each time

you press it, the time changes by 1 hour. The longest time you can select is 24h.

The reservation time is the end time of the program, including the entire program running time, so

the reservation time must be greater than the program running time.

After selecting the appointment time, press the Start/Pause button to start the appointment process. When the reservation process is in progress, the icon "🕒" on the display will light up or flash.

When the reservation process finishes, the icon will go off.

If the reservation function has been selected before the program starts, it can be canceled by selecting another program or function button.

After the program is started, if you need to cancel the reservation function, you need to shut down and restart.

4

+

5

Child Lock

To prevent children from operating the device accidentally and protect their safety, this device is equipped with a child lock function.

Long press "More Time" and "Less Time" buttons at the same time, the Child Lock icon lights

up and the Child Lock function is turned on. The same operation can be used to remove the

child lock. After the Child Lock function is set, all buttons except the power knob on/off are locked. When the program ends or the device is turned off and restarted, the Child Lock function setting remains unchanged and requires manually deactivated.

5

+

6

Mute

This function shields other sounds except the alarm sound and reduces noise.

When the device is in standby, pause, or running state, long press "Less Time + Anti Crease" buttons at the same time, mute icon "🔇" lights up and the mute function is turned on. The same operation

can be used to turn off the mute function, and all sounds will be turned back on.

When the program ends or the device is turned off and restarted, the Mute function setting remains unchanged and requires manually deactivated.




9

Display

Used to display the remaining time of the program, reservation time, fault code, and other related information.

The remaining time indicated by the program may differ from the actual running time. Due to factors such as clothing type and quantity, drying grade, and ambient temperature, the device will automatically adjust the actual drying time.

Icon description

	Anti crease icon. When the icon is lit up, it indicates that the anti crease function is enabled.
	Lint and debris cleaning icon. The flashing icon indicates that the lint and debris needs to be cleaned.
	Water box cleaning icon. The flashing icon indicates that the water box needs to be emptied.

Functions

Simple everyday use

USING THE TUMBLE DRYER

Getting Started

- Plug the dryer into a power outlet.
- Load your laundry into the drum and **close the door securely**.
- Turn the **Programme Selection Knob** to choose your desired drying cycle.
- **Adjust settings** such as **Dry Level** and **Time**, if needed.
- **Select any additional options** you prefer, such as **Anti-Crease** and **Delay End**.
- **Press the Start/Pause button** to begin. The dryer will start, and the estimated cycle time will appear on the display.

Note: Available settings and options may vary depending on the selected cycle.

Changing the Cycle During Operation

- Press **Start/Pause** to pause the dryer.
- Turn the Programme Selection Knob back to its Off position, and then turn the knob again to choose a new cycle.
- Press **Start/Pause** again to begin the new cycle.

End of the Drying Process

- When the cycle finishes, the dryer emits an audible signal and **"End"** appears on the display.
- Turn the **Programme Selection Knob** to the **Off** position to switch off the appliance.
- Open the door and remove the laundry from the drum.
- If no action is taken after the cycle ends, the dryer will automatically shut down after a period of inactivity in standby mode.
- If your clothes are not as dry as expected, try selecting a different function or choose a more appropriate drying program.

Sorting and Loading Tips

- Dry **one load at a time** for optimal results.
- **Avoid mixing** heavy and lightweight fabrics in the same load.
- When **drying just one or two items**, add a **dry towel** to improve drying efficiency.
- **Untangle garments** before placing them in the dryer.
- **Do not overload** the drum—this can lead to uneven drying and wrinkling.
- Only dry **wool or fiberglass items** if recommended on the care label.
- **Do not dry unwashed items**.
- **Never dry items** that have been soiled with oil, alcohol, gasoline, or other flammable substances.

Functions

Simple everyday use

FUNCTION SELECTION TABLE

	Program	More Time	Less Time	Anti Crease	Dry Level	Delay End	Child Lock	Mute
SENSOR DRY	ECO	-	-	•	-	•	•	•
	Cotton	-	-	•	•	•	•	•
	Synthetics	-	-	•	•	•	•	•
	Quick30'	-	-	•	-	•	•	•
	Shirts	-	-	•	•	•	•	•
	Towels	-	-	•	•	•	•	•
	Bedding	-	-	•	•	•	•	•
	Downwear	-	-	•	•	•	•	•
	Sportswear	-	-	•	•	•	•	•
	Auto Dry	-	-	•	•	•	•	•
	Baby Care	-	-	•	•	•	•	•
MANUAL DRY	Refresh	•	•	•	-	•	•	•
	Wool	•	•	•	-	•	•	•
	Time Dry	•	•	•	-	•	•	•
	Allergy Care	•	•	•	-	•	•	•

- The function is optional.
- The Function is not optional.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the Troubleshooting section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 257 7271.

Functions

Simple everyday use

PROGRAMME SELECTION TABLE (Model BHPTD7W)

Programme	Maximum capacity (kg)	Duration (minutes)	Laundries
ECO	7	178	Casual cotton textiles(sheets, pillowcase, t-shirts, shirts, trousers, towels, etc).
Cotton	7	170	Casual cotton textiles(sheets, pillowcase, t-shirts, shirts, trousers, towels, etc).
Synthetics	3.5	10	Casual synthetic textiles(t-shirts, shirts, blouses, covers, skirts, dresses, etc).
Refresh	-	-	1-2 pieces of clothing that need to be fresh and deodorized, you can change the time.
Wool	1	-	Machine-washable wool or containing wool.
Quick30'	0.5	30	Everday clothes made of cotton, cotton-synthetic blends and synthetic. ideal for light items, You can get drying clothes ready around 30 min.
Shirts	2	63	Shirts/blouses made of cotton, linen, or synthetic or blended fabrics.
Time Dry	-	-	It is the program where you can dry in any time between 1h-4.5h, suitable for drying individual items of laundry or thin fabrics.
Towels	3.5	103	Hard-wearing towels and dressing gowns made of cotton.
Bedding	2.5	173	1-2 set of Bed linen such as single and double sheets.
Downwear	2	158	Textiles stuffed or padded with down, for pillow, downwear, jackets.
Sportswear	2	93	Sportswear made of mixed materials and breathable fabrics.
Auto Dry	3.5	163	Everday clothes made of cotton, cotton-synthetic blends and synthetic. suggested for routine drying what you wash without sorting.
Baby Care	2	74	Baby clothes.
Allergy Care	2	-	Dries and sanitizes your garments and other items via high heat effect.

Functions

Simple everyday use

PROGRAMME SELECTION TABLE (Model BHPTD8W / BHPTD8B)

Programme	Maximum capacity (kg)	Duration (minutes)	Laundries
ECO	8	200	Casual cotton textiles(sheets, pillowcasea, t-shirts, shirts, trousers, towels, etc).
Cotton	8	208	Casual cotton textiles(sheets, pillowcasea, t-shirts, shirts, trousers, towels, etc).
Synthetics	4	68	Casual synthetic textiles(t-shirts, shirts, blouses, covers, skirts, dresses, etc).
Refresh	-	-	1-2 pieces of clothing that need to be fresh and deodorized, you can change the time.
Wool	1	-	Machine-washable wool or containing wool.
Quick30'	0.5	30	Everday clothes made of cotton, cotton-synthetic blends and synthetic. ideal for light iteams, You can get drying clothes ready around 30 min.
Shirts	2	63	Shirts/blouses made of cotton, linen, or synthetic or blended fabrics.
Time Dry	-	-	It is the program where you can dry in any time between 1h-4.5h, suitable for drying individual iteams of laundry or thin fabrics.
Towels	4	150	Hard-wearing towels and dressing gowns made of cotton.
Bedding	2.5	176	1-2 set of Bed linen such as single and double sheets.
Downwear	2	158	Textiles stuffed or padded with down, for pillow, downwear, jackets.
Sportswear	2	97	Sportswear made of mixed materials and breathable fabrics.
Auto Dry	4	113	Everday clothes made of cotton, cotton-synthetic blends and synthetic. suggested for routine drying what you wash without sorting.
Baby Care	2	89	Baby clothes.
Allergy Care	2	-	Dries and sanitizes your garments and other items via high heat effect.

Using your tumble dryer

5



Using your tumble dryer

















Getting the most from your appliance

PREPARING THE LAUNDRY

SORTING THE LAUNDRY TO BE DRIED


Follow the instructions on the labels of the laundry to be dried. Only dry items that have a statement/symbol that indicates "they can be dried in a dryer".

- Do not operate the product with load amounts and laundry types other than those given in this instruction manual.

 Suitable for drying in a dryer	 Does not need ironing	 Sensitive/Delicate drying	 Not suitable for drying in a dryer
 No drying	 Do not dry-clean	 At any temperature	 At high temperatures
 At medium temperatures	 At low temperatures	 Heatless	 Hang to dry
 Spread to dry	 Hang wet to dry	 Spread in shadow to dry	 Suitable for dry cleaning

Do not dry thin, multi-layer or thick-layer fabrics together as they dry at different levels. For this reason, dry clothes together that have the same structure and fabric type. This way, you can get an even drying result. If you think that the laundry is still wet, you can select a time programme for additional drying.

Please dry your big (like duvets) and small pieces of laundry separately in order to not to have damp laundry.

 **IMPORTANT:** Delicate fabrics, embroidered fabrics, woolen/silk fabrics, clothes made of delicate and expensive fabrics, airtight clothes and tulle curtains are not suitable for drying in the dryer.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the Troubleshooting section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 257 7271.

Using your tumble dryer

Getting the most from your appliance

PREPARING THE LAUNDRY TO BE DRIED

⚠ Risk of explosion and fire!

Remove all objects from pockets such as lighters and matches.

⚠ ATTENTION: The drum of the dryer and the fabrics may become damaged.

- The clothes may have become entangled during the washing process. Separate them from each other before placing them in the dryer.
- Remove all objects in the pockets of the clothes and apply the following:

Tie fabric belts, apron laces etc. to each other or use a laundry bag.

Lock the zips, clasps and fasteners, do up the buttons of covers.


- To get the best drying result, sort the laundry according to the textile type and drying programme.
- Remove clips and similar metal parts from the clothes.
- Woven goods such as t-shirts and knit clothes generally shrink in the first drying. Use a protective programme.
- Do not over-dry synthetics. This will cause creases.
- When washing the laundry to be dried, adjust the amount of softener according to the data from the manufacturer of the washing machine.

Drying laundry made of particularly delicate fabrics that may be deformed is not recommended, The following types of laundry may not be dried in the dryer as this may cause your garments to deform:

- leather garments and other leather products;
- garments that are waxed or treated in any other way;
- garments with major wooden, plastic, or metal parts;
- garments with spangles;
- garments with metal parts subject to rusting.

LOAD CAPACITY

Follow the instructions in the "Programme selection and consumption table". (See Section 4 Programme selection and consumption table). Do not load the product with more laundry than the capacity values specified in the table.

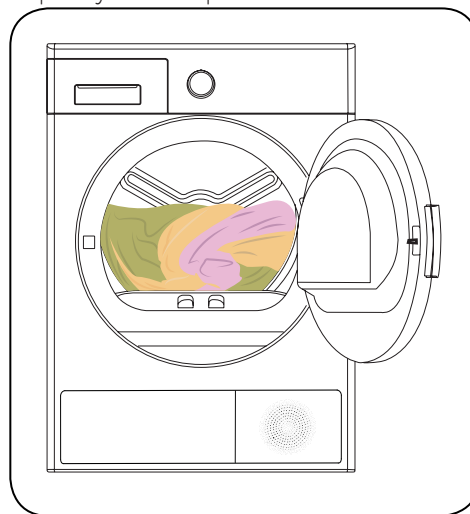

During the operation of the dryer, you can directly open the door to add or take out clothes, and press the Start/Pause to continue running after closing the door.

Do not insert laundry into the dryer if it has not been wrung or spun (recommended minimum spinning cycle 800rpm).

⚠ IMPORTANT: It is not recommended to load the dryer with more laundry than the amount shown in the figure. When overloaded, the drying performance of the dryer will decrease and the dryer and laundry might become damaged.

Laundry	Dry load weight (gr)
Bedsheet (double)	725
Pillowcase	240
Bath Towel	700
Hand Towel	225
Shirt	190
Cotton Shirt	200
Jean	650
Fabric - Gabardine Trousers	400
T-shirt	120

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the Troubleshooting section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 257 7271.



Care and maintenance

6



Care and maintenance

Looking after your appliance


CLEANING AND CARE

IMPORTANT: Always disconnect the dryer from the power mains before cleaning or maintenance.

IMPORTANT: Do not use industrial chemicals to clean your dryer. Do not use a dryer that has been cleaned with industrial chemicals.

IMPORTANT: DO NOT FORGET TO CLEAN THE LINT FILTER AFTER EACH USE.


CLEANING THE LINT FILTER

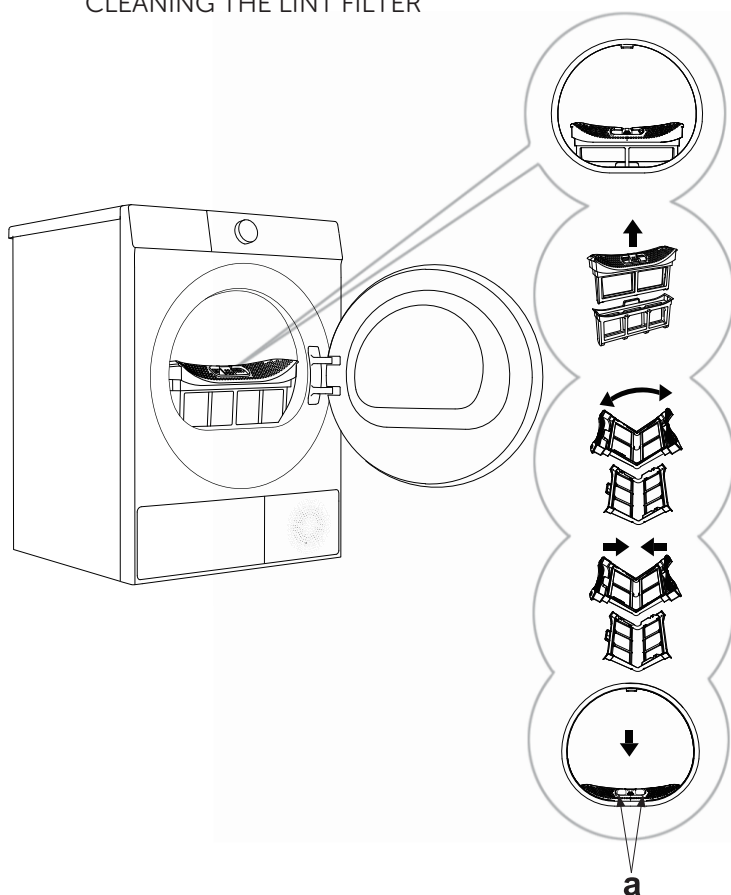

1. Take out filter.
2. Open filter.
3. Open and gently scrape off the lint, fibers and threads on the two filters (if the filter debris is difficult to clean manually, you can rinse it with warm water and dry it).
4. Reassemble the filter and clean the debris on the door seal if necessary.
5. Reinstall the filter (please install it with hole "a" facing you.).

After the dryer has been used for a certain period of time, if you encounter a layer which will obstruct the filter surface, wash the filter with warm water to clean. Dry the filter thoroughly before reinstalling it again.

CLEANING THE CONDENSED WATER CONTAINER

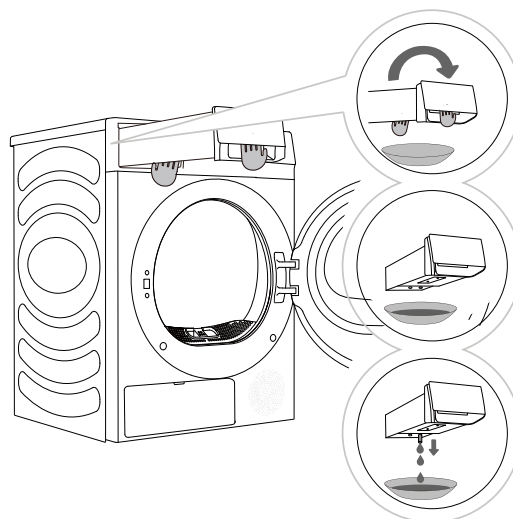

1. Pull out the condensed water container (using both hands, as shown in the figure).
2. Turn the condensed water container upside down over a basin, sink, or any suitable container.
3. Empty condensed water container.
4. Reinstall the condensed water container back to its original position.

IMPORTANT: Never remove the water container when the programme is running. The water condensed in the water container is not suitable for human consumption.

IMPORTANT: DO NOT FORGET TO EMPTY THE WATER CONTAINER AFTER EACH USE.

If the condensed water container is full, the drying program will automatically pause. Please follow the steps below to empty the condensed water container.

- IMPORTANT:** Empty the condensed water container after each drying cycle.
- IMPORTANT:** The water discharged from the condensed water container is not for drinking. After sufficient filtering, it can be used for ironing.
- IMPORTANT:** Do not add chemicals or fragrances to the condensed water container.


Care and maintenance

Looking after your appliance

CLEANING THE HEAT EXCHANGER

👉 THE HEAT EXCHANGER MUST BE CLEANED AFTER EVERY 5 DRYING CYCLES OR ONCE A MONTH.


If the drying process has completed, open the loading door and wait for it to cool down.

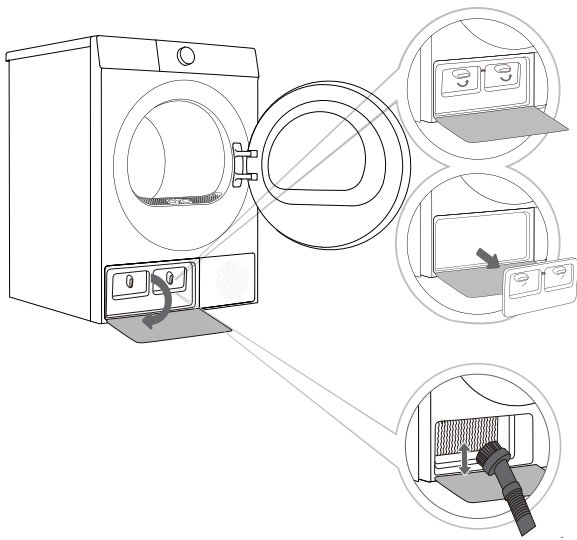

1. Press the heat exchanger door cover buckle on the lower left to open the door cover.
2. Turn the locking knob on the inner door cover to the unlocked position.
3. If after using for a period of time, there is dust on the heat exchanger, please use a vacuum cleaner, soft brush, or other tools to remove the dust. The heat exchanger can be seen after removing the inner door cover. Lightly brush the metal pieces with the brush, and the brush can only be moved from top to bottom. Excessive force may damage or bend the metal sheet. Do not touch the heat exchanger directly with your hands to avoid injury.
4. Install the inner door cover to its original position and lock the knob, close the heat exchanger door cover.

⚠ WARNING: DO NOT CLEAN THE EXCHANGER WITH BARE HANDS AS THE FINS ARE SHARP WHICH MAY INJURE OR CUT YOUR HANDS.

CLEANING THE HUMIDITY SENSOR

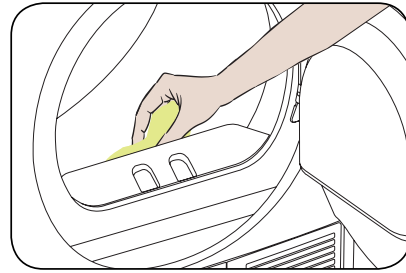

Inside the machine, there are humidity sensors that detect whether the laundry is dry or not.

To clean the sensors:

1. Open the loading door of the machine.
2. If the machine is still hot due to the drying process, wait for it to cool down.
3. Using a soft cloth soaked in vinegar, wipe the metal surfaces of the sensor and dry them.

👉 IMPORTANT: CLEAN THE METAL SURFACES OF THE SENSOR 4 TIMES A YEAR.


👉 IMPORTANT: Do not use metal tools to clean the metal surfaces of the sensor.

⚠ WARNING: Due to the risk of fire and explosion, do not use solution agents, cleaning agents or similar products when cleaning the sensors.

CLEANING THE INNER SURFACE OF THE LOADING DOOR

⚠ IMPORTANT: DO NOT FORGET TO CLEAN THE INNER SURFACE OF THE LOADING DOOR AFTER EACH DRYING PROCESS.


Open the loading door of the dryer and clean all of the inner surfaces and the gasket with a soft, damp cloth.

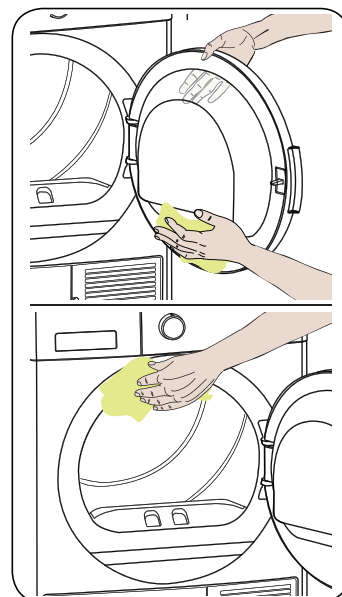


Care and maintenance


Looking after your appliance


CLEANING THE EXTERIOR SURFACES OF THE DRYER

 Before cleaning the enclosure, please be sure to disconnect the device from the power supply. Clean the device outer shell and panel with a soft damp cloth. Then wipe them dry with a soft dry cloth.

 Do not use solvents, abrasive cleaners, or cleaning agents that may damage the device (please follow the recommendations and warnings provided by the cleaning agent manufacturer).

Wipe the drum door with a damp cloth, and then wipe dry with a soft dry cloth.

 Do not use too much water to clean the device.

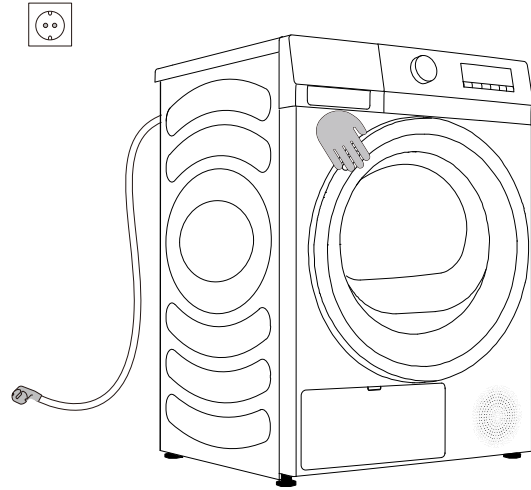

Product support

7



Product support

Help is always at hand

TROUBLESHOOTING

Your dryer is fitted with systems that continuously perform checks during the drying process. This enables it to take the necessary measures and warn you in the case of any malfunction(s).

⚠ WARNING: If the problem persists even if you have applied the steps in this section, please contact the your dealer or an Authorised Service Provider. Never try to repair a nonfunctional product.

Disturbances from the environment (e.g. the power grid) may result in various error reports (see TROUBLESHOOTING TABLE). In such case:

- Switch off the dryer and wait at least one minute.
- Switch on the dryer and repeat the drying programme.
- Most errors during operation can be resolved by the user (see TROUBLESHOOTING TABLE).
- If the error persists, call an authorized service unit.
- Repairs may only be carried out by an adequately trained person.
- Repair or any warranty claim resulting from incorrect connection or use of the dryer shall not be covered by the warranty. In such cases, the costs of repair shall be charged to the user.

Fault phenomenon	Recommended handling methods
The device cannot be powered on	<ul style="list-style-type: none">◇ Check the power connection.◇ Check whether the Start/Pause button is pressed.◇ Check whether the door is closed correctly.◇ Check whether a fuse has blown, a circuit breaker has tripped, or a power outage has occurred.
The device cannot start	<ul style="list-style-type: none">◇ Check whether the program settings are correct.◇ Check whether there are any clothing items in the drum.
Drying time is too long	<ul style="list-style-type: none">◇ Check whether the program settings are correct.◇ Check whether there is too much clothing tangled into a bunch.◇ Check the filter for cleanliness.◇ Some programs have a cooling process after drying.
Poor drying effect	<ul style="list-style-type: none">◇ Check whether the clothes have been washed and spinned.◇ Check whether the program settings are correct.◇ Check whether the amount of clothing is too much.◇ Check whether the clothing is sorted correctly and whether the clothing that dries easily is mixed with the clothing that dries slowly.◇ Check whether there are too many heavy garments.◇ Check whether the filter is clean.
The remaining time on the display stops or jumps	<ul style="list-style-type: none">◇ The remaining time may vary depending on the type of clothing, weight, moisture, and surrounding environment; this is a normal phenomenon.
Wrinkled clothing	<ul style="list-style-type: none">◇ The drying time of the clothes is too long; try shortening the drying time.◇ Leaving clothing in the dryer for too long after the program has ended.
The program running time displayed on the device is different from the actual program running time	<ul style="list-style-type: none">◇ For programs that stop automatically when clothes are dry, the drying duration displayed is calculated according to standard environment, initial laundry moisture, load mass and type. The drying time is automatically adjusted for any change in conditions. The difference between the actual time and the display time is normal, which ensures the best drying effect.

Faults or problems caused by external factors (such as lightning strikes, power grid failures, natural disasters, etc.) are not covered by the warranty.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the Troubleshooting section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 257 7271.

Product support

Help is always at hand

TROUBLESHOOTING

Fault phenomenon	Recommended handling methods
The appliance is too loud	<ul style="list-style-type: none"> ◇ Look for coins, loose buttons, nails, and other objects and remove them immediately. ◇ Check the lint filter. Remove any items stuck inside the lint filter. ◇ Make sure the dryer is level and standing firmly on the floor. ◇ The dryer may hum due to air moving through the drum and fan. This is normal.
Clothes are shrinking	<ul style="list-style-type: none"> ◇ Garment care instructions are not being followed. Use a low or no heat setting.
Lint is left on clothes	<ul style="list-style-type: none"> ◇ Lint filter has not been cleaned properly. ◇ Clothes have not been sorted properly. ◇ Some fabrics cause more lint and should be dried separately from fabrics that lint attaches easily. ◇ Tissue, paper, etc., has been left in pockets.
The appliance has an odour	<ul style="list-style-type: none"> ◇ The smell is caused by rubber material that is attached to the appliance inside. This kind of smell is a rubber's own smell and disappears automatically after using the appliance several times. ◇ When washing the clothes, use the detergent in accordance with the manufacturers recommendations. If you use the detergent excessively not according to the recommendations, undissolved detergent may accumulate on the clothes and cause an odour. ◇ You can smell odours from the clothes if the clothes were left in the appliance after drying or in the washing machine after washing. Unload the clothes promptly at the end of the drying or washing cycle. ◇ Ensure you can smell same odour in the washing machine. If so, clean the tub of the washing machine referring to the washing machine user manual. ◇ Always take care of both lint filters clean. If any residues were left in the lint filter after drying, it may cause odours. And also dry the lint filter completely after cleaning.
The appliance is powered on and started directly after power failure, but does not work	<ul style="list-style-type: none"> ◇ When the program is suspended, the set functions cannot be changed, If the program or function needs to be changed during operation, or the power is off during operation and the power needs to be powered on again, select the required program and function, and finally start it.

⚠ In case of a failure, only use approved spare parts by authorized manufacturers.

⚠ Repair or any warranty claim resulting from incorrect connection or use of the dryer shall not be covered by the warranty. In such cases, the costs of repair shall be charged to the user.

Product support

Help is always at hand

AUTOMATIC FAULT WARNINGS AND WHAT TO DO

Your tumble dryer is equipped with a built-in fault detection system, indicated by a combination of flashing operation lights. The most common failure codes are shown below.

Problem / Fault	Description	Solution
F50/F51	Abnormal sensor	Please contact after-sales service.
F21	Abnormal display panel and the power board	Switch off the appliance, and restart it. Press the "start/pause" button again If the abnormality is not removed, please contact after-sales service.
F22	Abnormal display the motor control board and the power board	Switch off the appliance, and restart it. Press the "start/pause" button again If the abnormality is not removed, please contact after-sales service.

Product support


Help is always at hand


TECHNICAL SPECIFICATIONS

Brand	BUSH	
Model name	BHPTD7W	BHPTD8W, BHPTD8B
Height	Min: 845 mm / Max: 855 mm*	Min: 845 mm / Max: 855 mm*
Width	595 mm	595 mm
Depth	540mm	580mm
Capacity (max.)	7 kg**	8 kg**
Net weight	41kg	43kg
Voltage	220-240 V~ 50Hz	220-240 V~ 50Hz
Power	650 W	650 W

*Min. height: Height with the adjustable feet not used. Max. height: Height with the adjustable feet extended to the maximum.

**Dry laundry weight before washing.

 **IMPORTANT:** To improve the quality of the dryer, technical specifications are subject to change without prior notice.

 **IMPORTANT:** The values declared have been obtained in a laboratory environment according to the relevant standards. These values may change depending on the environmental conditions and use of the dryer.

ATTENTION:

1. Due to safety reasons, legislation requires a room size of 1m^3 per 8g of refrigerant for such equipment. For 110g propane, the minimum allowed room size of 13.75 m^3 .

2. Coolant: Risk of fire/Risk of poisoning/Risk of material damage and damage to the appliance.

The appliance contains refrigerant which, although environmentally friendly, is flammable R290. Failure to dispose of it properly may result in fire or poisoning.

Dispose of the appliance properly and do not damage the pipes in the refrigerant circuit.

- Type of Refrigerant: R290
- Quantity of gas: 125 g (for 7kg dryer) / 130 g (for 8kg dryer)
- ODP (Ozone Depleting Potential): 0
- GWP (Global Warming Potential): 3

3. Risk of explosion or fire - Remove any cigarette lighters and matches from pockets before using appliance.

4. Do not place the dryer near open fires or ignition sources.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the Troubleshooting section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 257 7271.

Product support

Help is always at hand


ENVIRONMENTAL PROTECTION AND PACKAGING INFORMATION

PACKAGING INFORMATION


The packaging of this product is made of recyclable materials. Do not dispose of the packaging, waste together with household or other waste. Instead, take it to a packaging collection point defined by your local authority.

DESCRIBING THE ENERGY LABEL AND SAVING ENERGY

ENERGY LABELLING

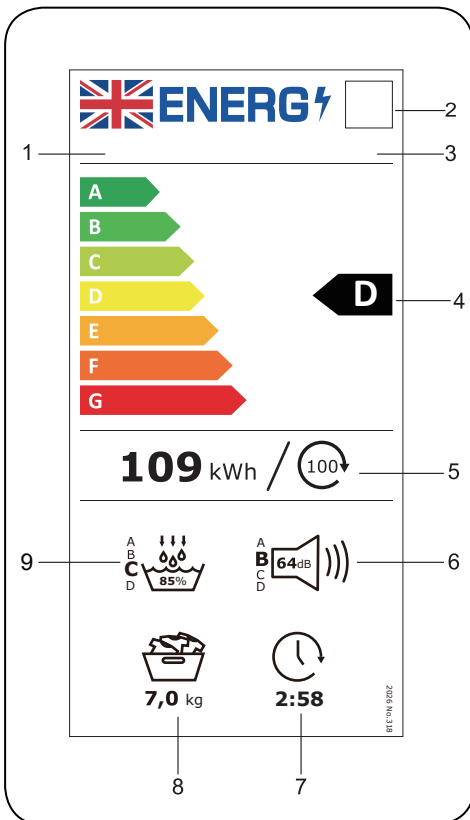

1. Trademark
2. QR Code recognition model
3. Model
4. Energy Class
5. Energy consumption per 100 cycles
6. Noise During Drying
7. ECO Dry Cycle Time
8. Dry Laundry Capacity
9. Condensing Efficiency Class

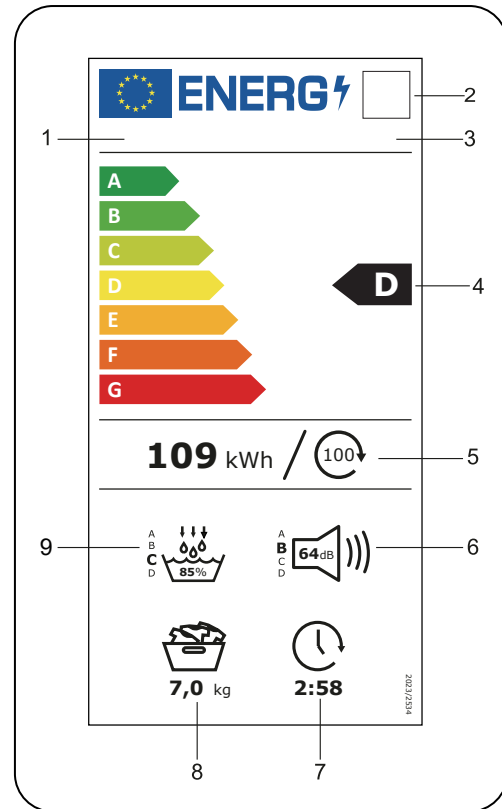

1. Trademark
2. QR Code recognition model
3. Model
4. Energy Class
5. Energy consumption per 100 cycles
6. Noise During Drying
7. ECO Dry Cycle Time
8. Dry Laundry Capacity
9. Condensing Efficiency Class

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the Troubleshooting section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 257 7271.

Product support

Help is always at hand

Energy Efficiency

- You should operate the dryer to full capacity, but make sure that it is not overloaded.
- When the laundry is being washed, the spin speed should be at the highest level possible. This will shorten the drying time and reduce energy consumption.
- Make sure that the same kinds of laundry are dried together.
- Please follow the recommendations in the user manual for programme selection.
- Load the dryer with the recommended amount of laundry for the selected program. This ensures optimal energy efficiency for the load size.
- For air circulation, leave an appropriate clearance on the front and back sides of the Dryer. Do not cover the grills on the front side of the machine.
- Ensure the room temperature is not too high. If there are other heat-producing appliances in the same room as the dryer, make sure the area is well ventilated and, if possible, turn off those appliances.
- Unless necessary, do not open the door of the machine when drying. If you have to open it, do not keep it open for a long time.
- Do not add new (wet) laundry during the drying process.
- Hairs and lint that detach from the laundry and merge in the air are collected by the "Lint Filters". Please make sure that the filters are cleaned before and after each use.
- This appliance is with a heat pump system, make sure that the heat exchanger is cleaned at least once a month or after each 30 uses.
- During the drying process, the environment where the dryer is installed must be well ventilated.

Consumption Data (BHPTD7W)


The table indicates the power consumption and time values for drying of a test batch of laundry with various loads and after washing machine spinning.

The following requirements apply to the consumption values specified below.

Inlet air temperature	room temperature
Inlet air humidity	50–60%
Drying temperature	Normal

Program	Rated Capacity (kg)	Spinning (rpm)	Program consumption approximately (kWh)*	Program duration approximately (h:min)*	Final Moisture Content (%)
ECO	7	/	1.65	2:58	0.50
Synthetics extra	3.5	1000	0.67	1:18	0.50
Synthetics iron	3.5	1000	0.46	0:56	8.00
Cotton extra	7	1000	1.55	2:50	0.50
	3.5	1000	0.93	1:40	0.00
Cotton iron	7	1000	1.12	2:04	10.00
	3.5	1000	0.64	1:14	10.00
Wool	1	/	0.63	1:30	0.50

1. All values in the table were determined in accordance with the EN 61121:2013 standard. The values given for programs other than the ECO program are indicative only.
2. Results of wool program is based on wool load with 5% initial moisture content.
3. "ECO" program is the "standard cotton programme" according to Commission Regulation (EU) No 2023/2533 and Statutory Instrument 2026 No. 318.
4. The eco program is suitable to dry wet cotton laundry, and that this program is used to assess the compliance with the EU ecodesign legislation.
5. The eco program is the most efficient program in terms of energy consumption for drying wet cotton laundry.
6. Loading the household tumble dryer up to the maximum capacity indicated in this instruction manual for the respective programs will contribute to energy savings.
7. At full load of eco program, acoustic airborne noise emission of the drying cycle: 64dB.
8. The product information and QR code are reflected in the energy consumption label the product registration information can be obtained by scanning the QR code.
9. The power consumption of the off-mode is 0.5W. Time on switching automatically to off-mode: 10min.

 Due to deviations in terms of type and amount of laundry, spinning, power supply oscillation, and environment temperature and humidity, the values measured at the user may differ from the one stated in the table.

We reserve the right to any changes and errors in the instructions for use.

Consumption Data (BHPTD8W / BHPTD8B)


The table indicates the power consumption and time values for drying of a test batch of laundry with various loads and after washing machine spinning.

The following requirements apply to the consumption values specified below.

Inlet air temperature	room temperature
Inlet air humidity	50–60%
Drying temperature	Normal

Program	Rated Capacity (kg)	Spinning (rpm)	Program consumption approximately (kWh)*	Program duration approximately (h:min)*	Final Moisture Content (%)
ECO	8	/	1.80	3:28	1.50
Synthetics extra	4	1000	0.75	1:24	0.50
Synthetics iron	4	1000	0.51	0:58	10.00
Cotton extra	8	1000	2.27	3:52	0.50
	4	1000	1.31	2:18	0.50
Cotton iron	8	1000	1.58	2:44	10.00
	4	1000	0.86	1:33	10.00
Wool	1	/	0.22	0:30	1.00

1. All values in the table were determined in accordance with the EN 61121:2013 standard. The values given for programs other than the ECO program are indicative only.
2. Results of wool program is based on wool load with 5% initial moisture content.
3. "ECO" program is the "standard cotton programme" according to Commission Regulation (EU) No 2023/2533 and Statutory Instrument 2026 No. 318.
4. The eco program is suitable to dry wet cotton laundry, and that this program is used to assess the compliance with the EU ecodesign legislation.
5. The eco program is the most efficient program in terms of energy consumption for drying wet cotton laundry.
6. Loading the household tumble dryer up to the maximum capacity indicated in this instruction manual for the respective programs will contribute to energy savings.
7. At full load of eco program, acoustic airborne noise emission of the drying cycle: 64dB.
8. The product information and QR code are reflected in the energy consumption label the product registration information can be obtained by scanning the QR code.
9. The power consumption of the off-mode is 0.5W. Time on switching automatically to off-mode: 10min.

 Due to deviations in terms of type and amount of laundry, spinning, power supply oscillation, and environment temperature and humidity, the values measured at the user may differ from the one stated in the table.

We reserve the right to any changes and errors in the instructions for use.

Product support

Help is always at hand

Help and assistance

If you require any technical guidance or find that your washing machine is not operating as intended, a simple solution can often be found in the Troubleshooting section of these instructions or online at www.bush-support.com

If you still require further assistance, call one of our experts on 0345 257 7271*. To help give us give you a fast and efficient service please have the following information ready:

Model Ref.	<input type="text"/>	You can find these on the rating plate - a small information panel (usually a sticker or metal plate) on the rear of your appliance
Serial number	<input type="text"/>	
Date of purchase	<input type="text"/>	This will be shown on your receipt

Local call rate applies*

Line opens 9am-6pm Monday to Saturday and 10am-6pm Sunday.

*Calls to Bush enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see www.bt.com/pricing for details.

For Security and training purposes, telephone calls to and from customer service centres maybe recorded and monitored. Calls from Republic of Ireland will attract international call charges.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the Troubleshooting section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 257 7271.

Product support

Help is always at hand

Spare Parts Supply

To order spare parts, please contact our customer helpline: **0345 257 7271**. The original spare parts for some specific components are available for a period of 10 years, based on the type of component from the placing on the market of the last unit of the model.




The appliance complies with the following EEC directives:
2014/35/EU Low voltage directive
2014/30/EU EMC directive



The appliance complies with the following UK legislation:
Electromagnetic Compatibility Regulations 2016
Electrical Equipment (Safety) Regulations 2016

Notes on disposal :

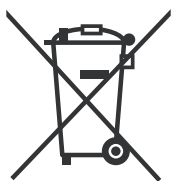

The symbol on the product or its packaging indicates that this product may not be treated as household waste. Instead it should be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling this product, please contact your local council office, your household waste disposal service or the shop where the product was purchased.



Call us now and activate your 12 month guarantee

Thank you for choosing Bush. Your new product is guaranteed against faults and breakdowns for 12 months. Don't forget to register it with us today so we can provide you with our best possible after-sales service and useful updates.

www.bushregistration.co.uk

FREEPHONE*

0800 597 8548

Lines are open 8am - 8pm, 365 days a year. *Calls may be recorded and monitored.

Your Bush Guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from who your purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in the manual.
- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- Bush disclaim any liability for loss or damage arising from the breakdown of the product.
- This guarantee is in addition to and does not diminish your statutory or legal rights.

Important Data Protection Information

To find out how we and Domestic & General Insurance Plc use your data please refer to the guarantee registration material or visit www.bushregistration.co.uk.

Guarantor: Argos Limited, 33 Charterhouse Street, London, EC1M 6HA.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the Troubleshooting section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 257 7271.



BUSH

Produced in China for Argos
Limited, London, EC1M 6HA, UK.
Argos (N.I.) Ltd, Forestside
Shopping Centre, Upper
Galwally, Belfast, BT8 6FX, UK.

Contact:

www.bush-support.com

www.argos-support.co.uk

Helpline: 0345 257 7271