


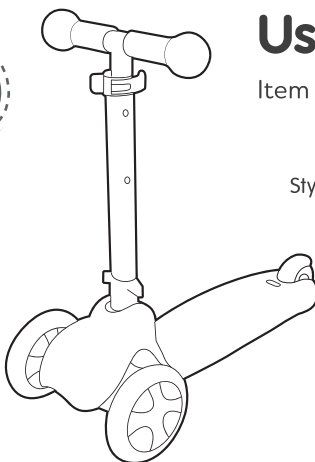

User Guide

Item No. 8560/8561




Style and colours
may vary.



WARNING!

ADULT ASSEMBLY
REQUIRED


UNFOLDING SCOOTIEBUG™

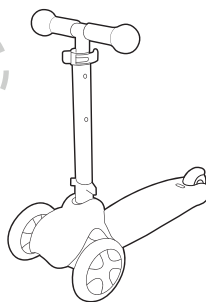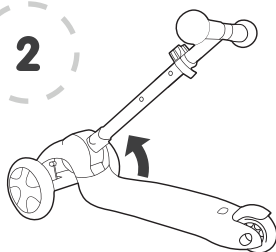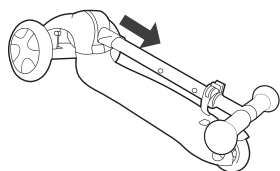


The ScootieBug™ is packaged in the folded position.

Unfold the stem by pulling the sleeve towards the back wheel (shown by the arrow above) to release it from the locked position. Pull forwards until it locks into place, vertically.


FOLDING SCOOTIEBUG™

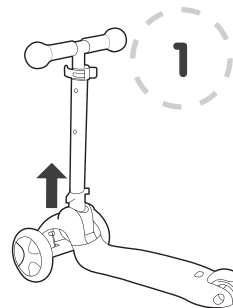


Pull the sleeve upwards

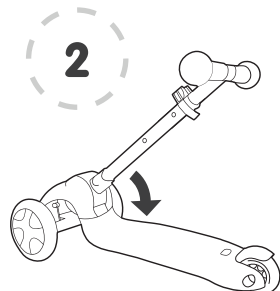

Pull the handle down until it locks into place

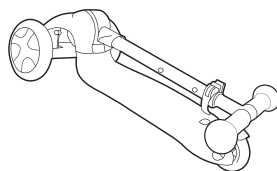

EXTENDING THE HANDLE

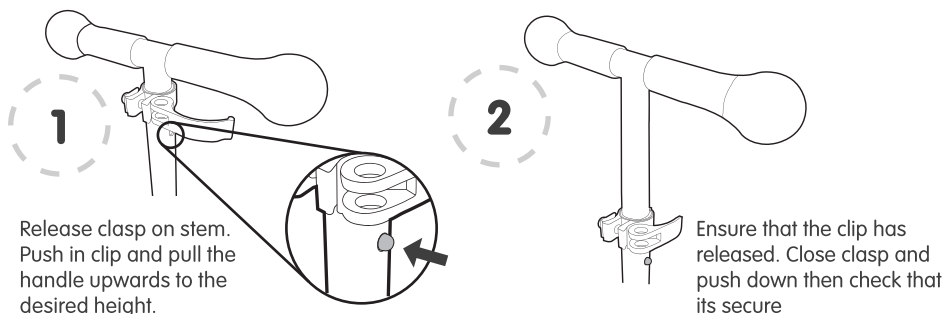

WARNING!

Not to be used by children under 24 months. Not to be used by a child over 50kg.

Safety Information

- Using this product could result in injury unless proper safety precautions are taken.
- Read and understand the enclosed owners manual before letting children use this product.
- Safety equipment such as a helmet is recommended.
- Direct adult supervision required at all times.
- Use only in controlled environments free of potential traffic hazards and not on public streets.
- **WARNING!** Protective equipment should be worn. Not to be used in traffic. 50kg max
- Child must maintain a hold on the handlebars at all times.
- NEVER allow more than one child at a time to ride the product.
- NEVER use near steps, sloped driveways, hills, roadways, alleys, or swimming pool areas.
- Keep fingers and other body parts away from the product when folding or unfolding. Adult must not allow children to assist in folding or unfolding of the product.
- The product is not to be used by children under 24 months. Intended for children 24 months to 5 years.
- Parents to ensure that all locking positions are engaged.
- The scooter should be used with caution, since skill is required to avoid falls or collisions causing injury to the user or third parties.
- Failure to use common sense and heed the above warnings presents and enhances risks or serious injury.

One Year Limited Warranty

Mookie Toys warrants this product to the original retail purchaser as follows:

This product is warranted against defective materials or workmanship for one year from the date of original purchase. An original receipt is required to validate your warranty.

To the extent permitted by law, Mookie Toys will, as its option, provide replacement parts or replace this product. Mookie Toys reserves the right to substitute if the part or model has been discontinued.

To make a claim under this warranty you may contact your distributor as indicated on the box. Proof of purchase is required.

Warranty Limitations

This warranty does not include damages which arise from misuse or abuse of this product. This one year warranty is in addition to consumer protection conditions and warranties implied by Australian and European laws.

Mookie

Mookie, Flitwick, Bedfordshire, MK45 5BX, U.K.

Please email: help@mookie.co.uk
or contact our helpline on 01525 722 769

(9am-5pm Mon-Fri)

Made in China. © Mookie 2017

www.mookie.co.uk



Item No. 8560/8561

INXXX-A_0517