
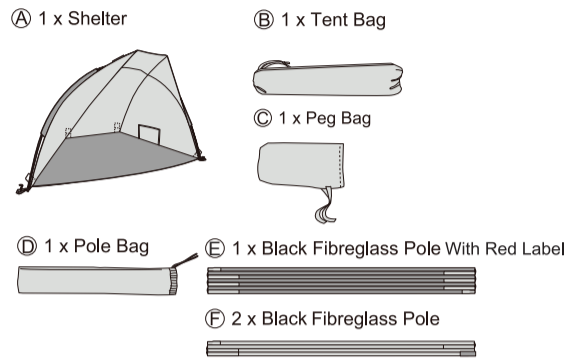


210MM

15MM

front

Components

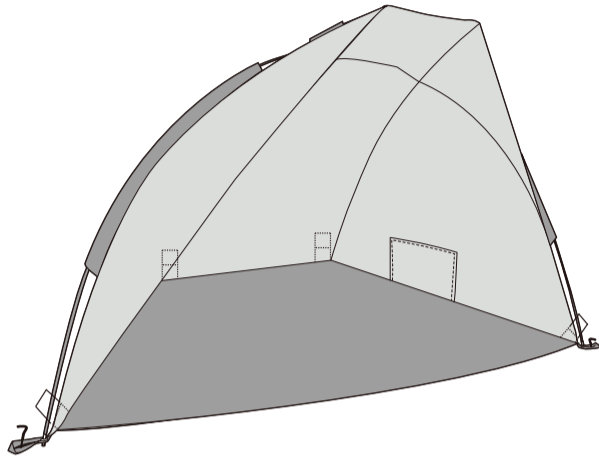


Fittings

A 4 x Peg



1. Open the Tent Bag (B), take out and separate the components.
2. Assemble the Black Fibreglass Pole (E) and the two Black Fibreglass Poles (F). See fig. 1.
3. Lay the Shelter (A) flat on the ground, with the top side uppermost.

4. Slide the Black Fibreglass Poles (F) through the sleeves of the Shelter and insert the ends into the pockets at the top. Slide the Black Fibreglass Pole (E) through the sleeves of the Shelter. Pls kindly note slide the black fibreglass pole (F) put on the black fibreglass pole (E) See fig. 2.

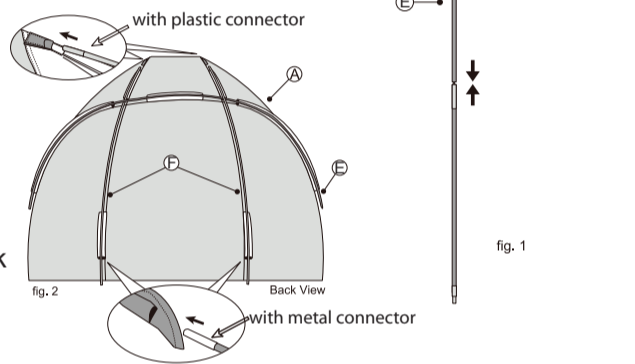


150MM




5. Bend the Black Fibreglass Poles (E) so that the ends fit into the rings in the corners of the Shelter (A). See fig. 3.



6. Bend the Black Fibreglass Poles (F) so that the ends fit into the rings at the near of the Shelter (A). See fig. 4.

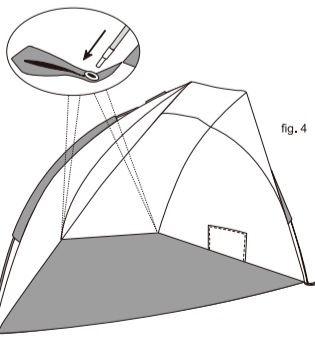

7. Secure the Shelter by pegging the corners into the ground using Pegs (A). Care must be taken not to bend the Pegs. Use a rubber mallet if the ground is hard. See fig. 5.

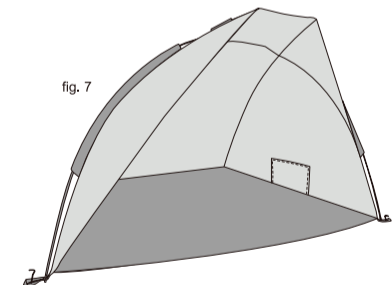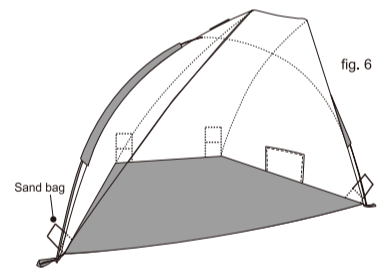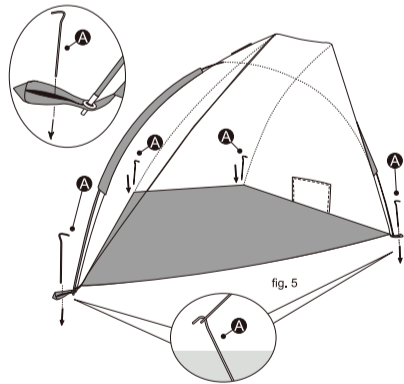

YOUR TENT IS NOW READY FOR USE.

8. If the you are using the Shelter on sandy ground, use the Sand bags to weigh it down.
9. Fill the Sand Bags and tie to each corner of the Shelter. See fig. 6.

back

150MM

IMPORTANT

For Expert advice, please Phone Argos Helpline On:
0345 640 0800
 Address: 489-499 Avebury Boulevard Saxon Gate West,
 Central Milton Keynes Bucks, MK9, 2NW