

BUSH

Instruction manual

17891S



You'll soon be enjoying your new Side-by-side Fridge Freezer. It all begins here, with your instructions. Don't worry, there's nothing too technical coming up. Just simple, step-by-step guidance to get you up and running quickly. Sound good? Then let's get started.

Help and Guidance

We're here to help you get the most from your Fridge-Freezer. Should you require any guidance, a simple solution can often be found online at:

www.bush-support.com

If you still require further assistance, call one of our experts on 0345 257 7271.

ISSUE-1 30/3/2026

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the Troubleshooting section of these instructions.

Contents

1 Safety information

Safety information	6
Food storage	11

2 Getting to know your Fridge - Freezer

Parts	15
Dimensions	16

3 Installing your Fridge - Freezer

Transportation	18
Installation warnings	18
Installing your new appliance	19
Electrical connection	24

4 Functions

Display controls	26
------------------	----

5 Using your Fridge - Freezer

Opening and Closing Doors	30
Helpful hints and tips	33

6 Care and maintenance

Cleaning	38
Defrosting	38
Light bulb replacement	38
Power failure	39
Moving your appliance	39
Technical specification	40
Disposal of the appliance	41

7 Product support

Troubleshooting	44
Help and assistance	46
Guarantee	47

 


Icon	Type	Meaning
	WARNING	Serious injury or death risk
	RISK OF ELECTRIC SHOCK	Dangerous voltage risk
	FIRE	Warning; Risk of fire / flammable materials
	CAUTION	Injury or property damage risk
	IMPORTANT	Operating the system correctly

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the Troubleshooting section of these instructions.

Safety Information

1

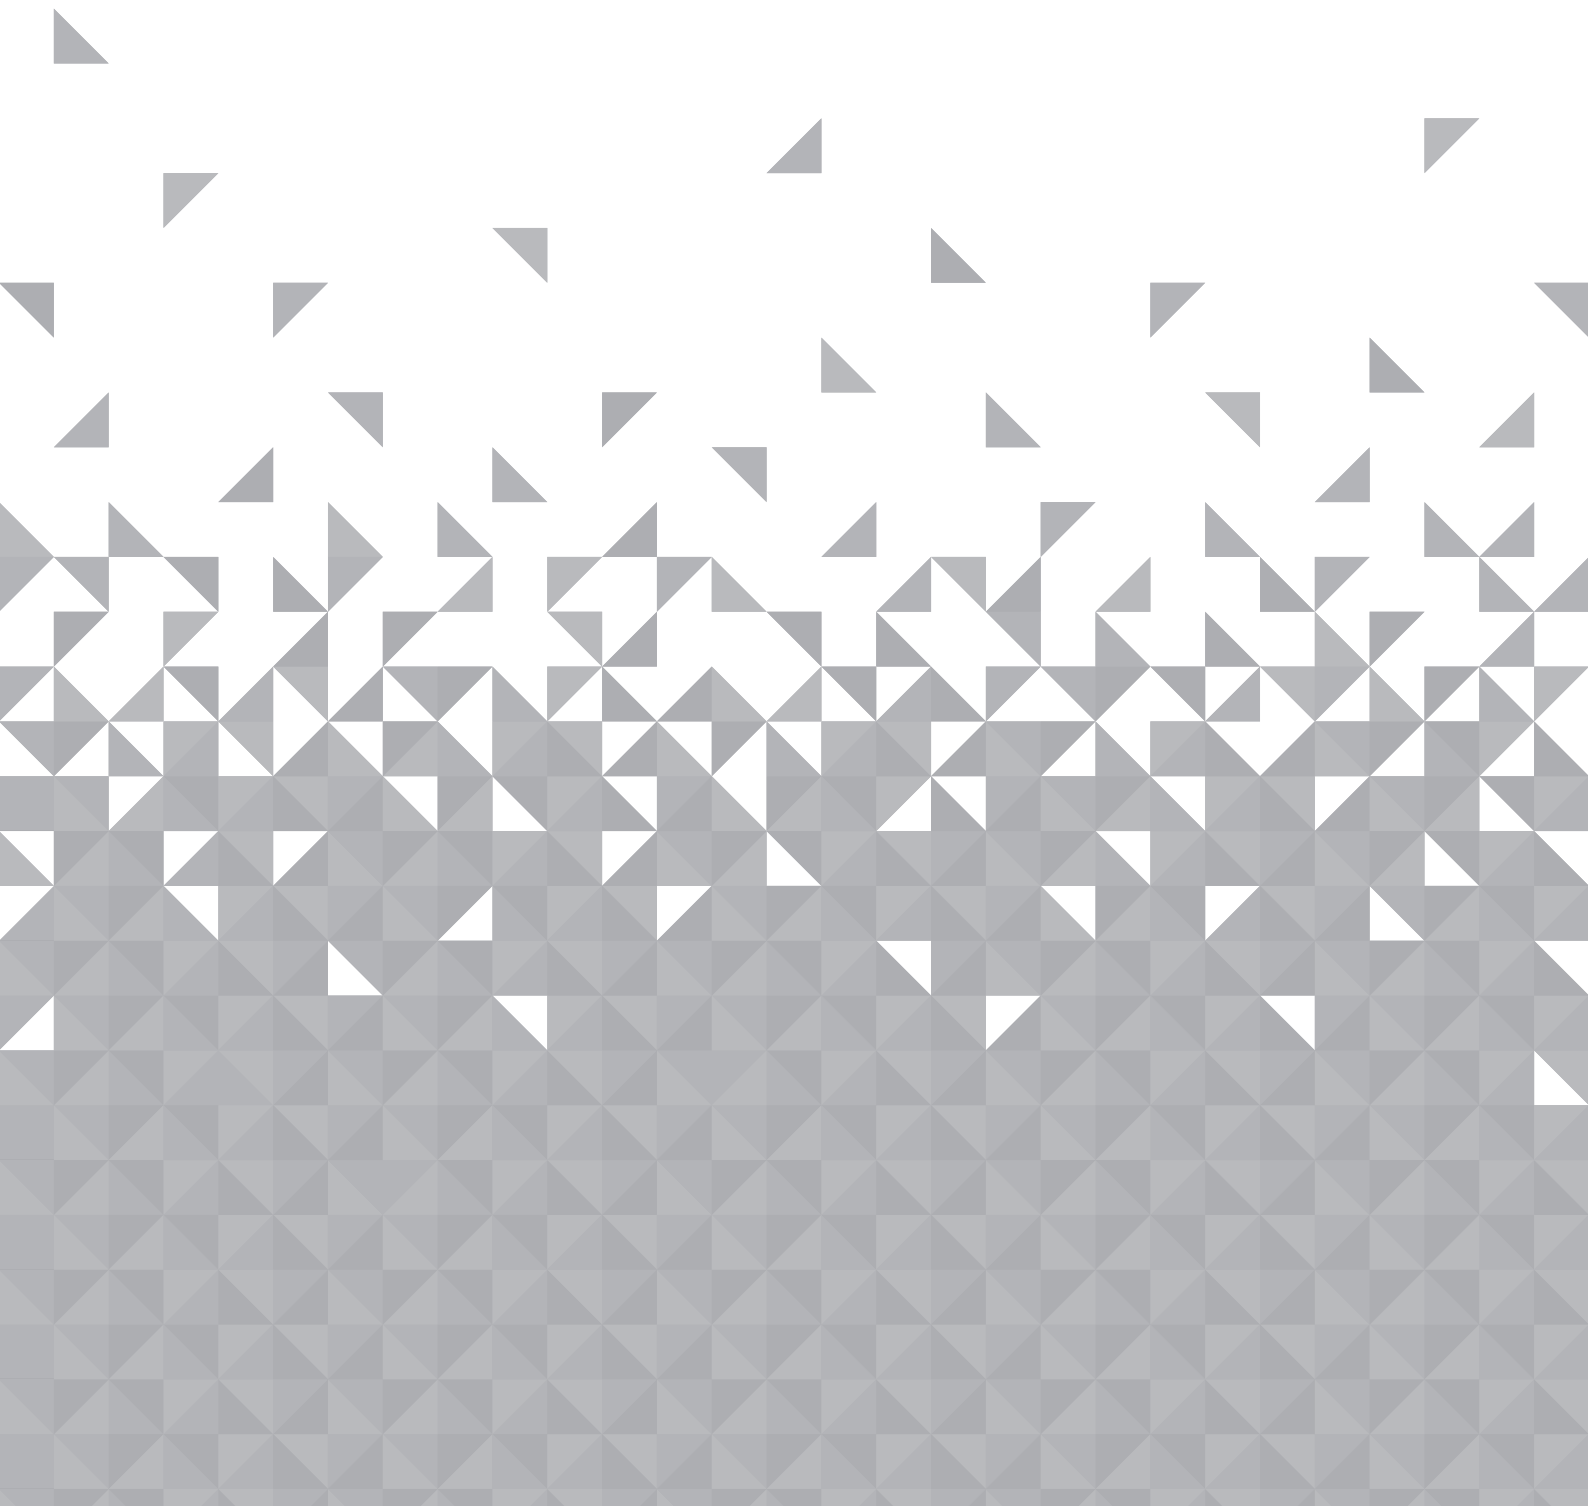



Safety information

Important - Please read these instructions fully before installing or operating

For your safety and correct usage, before installing and first using the appliance, read this user manual carefully, including its hints and warnings. To avoid unnecessary mistakes and accidents, it is important to make sure that all people using the appliance are thoroughly familiar with its operation and safety features. Save these instructions and be sure that they remain with the appliance if it is moved or sold, so that anyone using it throughout its life, will be properly informed on its usage and safety notices.

For the safety of life and property, keep the precautions of these user's instructions as the manufacturer is not responsible for damages caused by omission.



The installation of this appliance is best carried out by 2 people.

Safety for children and others who are vulnerable people



This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Children aged from 3 to 8 years are allowed to load and unload refrigerating appliances.

- Keep all packaging away from children as there is risk of suffocation. Dispose of all packaging carefully and responsibly.
- If you are discarding the appliance, pull the plug out of the socket, cut the connection cable (as close to the appliance as you can) and remove the door to prevent children playing from suffering an electric shock or from closing themselves inside it.
- If this appliance, featuring a magnetic door seals, is to replace an older appliance having a spring lock (latch) on the door or lid, be sure to make the spring lock unusable before you discard the old appliance. This will prevent it from becoming a death trap for a child.
- To avoid the risk of entrapment and suffocation, do not allow children to play with the appliance.



General safety

- **WARNING** — This appliance is for domestic use only, do not use it for other purposes. Industrial or commercial use will void the guarantee. This appliance is designed for indoor use only and must be protected from rain, moisture and extreme temperature variations.
- **WARNING** — Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- **WARNING** — If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- **WARNING** — Keep ventilation openings, in the appliance enclosure or in the built-in



Safety information

Important - Please read these instructions fully before installing or operating

structure, clear of obstruction.

- **WARNING** — This appliance must be positioned on a firm level base.
- **WARNING** — Do not sit, stand or place any other heavy objects on top of the appliance. This could result in injury or damage to the appliance.
- **WARNING** — Cord entanglement hazard. The cable of the appliance can give rise to risks of entanglement, strangulation or tripping if not correctly placed. You must make sure that the electric cable is positioned safely.
- **WARNING** — Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- **WARNING** — Do not damage the refrigerant circuit.
- **WARNING** — Do not use electrical appliances inside the food storage compartments of the appliance.
- **WARNING** — The refrigerant and insulation blowing gas are flammable. When disposing of the appliance, do so only at an authorized waste disposal centre. Do not expose to flame.
- **WARNING** — Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.
- **WARNING** - Do not store liquids in glass containers in the freezer compartment as these may shatter.
- **WARNING** - This refrigerating appliance is not intended to be used as a built-in appliance.
- **WARNING** - In case there is an inflammable gas leaking, open the window for air

circulation and do not pull out the plug or turn the temperature knob. Do not touch the appliance until the valve of gas is turned off. Otherwise, sparks may happen.

Replacing the LED

- **WARNING**—The LED light must not be replaced by the user! If the LED light is damaged, contact the customer helpline for assistance.

Refrigerant

Your appliance is an environmental friendly product and it contains non CFC/HFC gas substances in the cooling system (Called R600a) and in the insulation (Called cyclopentane) which are potentially flammable if exposed to fire. Therefore, take care not to damage the cooling circuit/pipes of the appliance in transportation and in use.

- **WARNING** — Refrigerators contain refrigerant and gas in the insulation. Refrigerant and gas must be disposed of professionally as they may cause eye injuries or ignition. Ensure that tubing of the refrigerant circuit is not damaged prior to proper disposal.



WARNING!

Risk of fire/flammable materials.

- **WARNING** — During use, service and disposal the appliance, please pay attention to the symbol which is located on rear of appliance (rear panel or compressor) and with yellow or orange colour. It's risk of fire warning symbol. There are flammable



Safety information

Important - Please read these instructions fully before installing or operating

materials in refrigerant pipes and compressor. Please be far away from fire source during use, service and disposal.

If the refrigerant circuit should be damaged:

- Avoid opening flames and sources of ignition.
- Immediately and thoroughly ventilate the room in which the appliance is situated.

It is dangerous to alter the specifications or modify this product in any way.

Any damage to the cord may cause a short circuit, fire, and/or electric shock.



Electrical safety

- The power cord must not be lengthened.
- Make sure that the power plug is not crushed or damaged. A crushed or damaged power plug may overheat and cause a fire.
- Make sure that you can access the main plug after the appliance is installed.
- Do not pull the main cable.
- If the power plug socket is loose, do not insert the power plug. There is a risk of electric shock or fire.
- You must not operate the appliance without the interior lighting lamp cover.
- The fridge is only applied with power supply of single phase alternating current of 220~240V/50Hz. If fluctuation of voltage in the district of user is so large that the voltage exceeds the above scope, for safety sake, be sure to apply A.C. Automatic voltage regulator of more than 350W to

the fridge. The fridge must employ a special power socket instead of common one with other electric appliances. Its plug must match the socket with ground wire.

- Never use an extension cord or a multiple socket connection.
- Do not splash water on the appliance. It may cause electrical parts to fail and result in an electric shock.

Daily use

- Do not store flammable gas or liquids in the appliance. There is a risk of an explosion.
- Do not operate any electrical appliances in the appliance (e.g. electric ice cream makers, mixers etc.).
- When unplugging always pull the plug from the mains socket, do not pull on the cable.
- Do not place hot items near the plastic components of this appliance.
- Do not place food products directly against the air outlet on the rear wall.
- Store pre-packed frozen food in accordance with the frozen food manufacturer's instructions.
- The appliance manufacturer's storage recommendations should be strictly adhered to. Refer to relevant instructions for storage.
- Do not place carbonated or fizzy drinks in the freeze compartment as it creates pressure on the container, which may cause it to explode, resulting in damage to the appliance.
- Frozen food can cause frost burns if



Safety information

Important - Please read these instructions fully before installing or operating

consumed straight from the freezer compartment.

- Do not place the appliance in direct sunlight.
- Keep burning candles, lamps and other items with naked flames away from the appliance so that do not set the appliance on fire.
- The appliance is intended for keeping food stuff and/or beverages in normal household as explained in this instruction booklet. The appliance is heavy, care should be taken when moving it.
- Do not remove nor touch items from the freezer compartment if your hands are damp/wet, as this could cause skin abrasions or frost/freezer burns.
- Never use the base, drawers, doors etc. to stand on or as supports.
- Frozen food must not be refrozen once it has been thawed out.
- Do not consume ice popsicles or ice cubes straight from the freezer as this can cause freezer burn to the mouth and lips.
- To avoid items falling and causing injury or damage to the appliance, do not overload the door racks or put too much food in the crisper drawers.
- **WARNING** - Food needs to be packed into bags before it is put into the refrigerator. Liquids need to be stored in bottles or capped containers in order to avoid a spill, as the design structure of the product is not easy to clean.
- To avoid contamination of food, pay attention to the following instructions:
 - Opening the door for long periods can cause a significant increase of the tem-

perature in the compartments of the appliance.

- Clean regularly surfaces that can come in contact with food and accessible drainage systems.
- Clean water tanks if they have not been used for 48 h; flush the water system connected to a water supply if water has not been drawn for 5 days.
- Store raw meat and fish in suitable containers in the refrigerator, so that it is not in contact with or drip onto other food.
- Two-star frozen-food compartments are suitable for storing pre-frozen food, storing or making ice-cream and making ice cubes.
- One-, two- and three-star compartments are not suitable for the freezing of fresh food.
- If the refrigerating appliance is left empty for long periods, switch off, defrost, clean, dry, and leave the door open to prevent mould developing within the appliance.



Caution! **Care and cleaning**

- Before maintenance, switch off the appliance and disconnect the mains plug from the mains socket.
- Do not clean the appliance with metal objects, steam cleaner, ethereal oils, organic solvents or abrasive cleansers.
- Do not use sharp objects to remove frost from the appliance. Use a plastic scraper.



Safety information

Important - Please read these instructions fully before installing or operating

Installation Important!

- For electrical connection carefully, follow the instructions given in this manual.
- Unpack the appliance and check if there are damages on it. Do not connect the appliance if it is damaged. Report possible damages immediately to the place you bought it. In this case retain packing.
- It is advisable to wait at least four hours before connecting the appliance to allow the cooling system to settle before first use or after any transportation.
- Adequate air circulation should be around the appliance, lacking this leads to overheating. To achieve sufficient ventilation, follow the instructions relevant to installation. Wherever possible the back of the product should not be too close to a wall to avoid touching or catching warm parts (compressor, condenser) to prevent the risk of a fire, follow the instructions relevant to installation.
- The appliance must not be located close to radiators or cookers.
- Make sure that the mains plug is accessible after the installation of the appliance.

Service

- Any electrical work required to do the servicing of the appliance should be carried out by qualified electrician or competent person.
- This product must be serviced by an authorized Service agent, and only genuine spare parts must be used. Installation by anyone other than an authorized agent may cause your warranty to be void.
- Do not attempt to repair the appliance yourself. Contact the Customer Helpline: 0345 247 7271.



Safety information

Important - Please read these instructions fully before installing or operating

Food storage

Getting the most from your appliance storing food.

The table below contains general guidelines on the storage of food in the refrigerator.

Compartment	Type of food
Fridge door rack	• Foods with natural preservatives, such as jams, juice, drinks, condiments. • Do not store perishable foods.
Fridge shelf - top	• Foods that do not need cooking, such as ready-to-eat foods, deli meats, leftovers.
Fridge shelf - middle	• Dairy products, eggs.
Vegetable drawer / Crisper bin	• Fruits, herbs and vegetables should be placed separately in the crisper bin. • Do not store bananas, onions, potatoes, garlic in the refrigerator.
Freezer drawer / shelf	• Foods for long-term storage. • Top compartment for ice cream, frozen fruit, frozen baked goods. • Middle compartment for frozen vegetables, chips. • Bottom compartment for raw meat, poultry, fish.

Note:

Please store different foods according to the compartments or target storage temperature of your purchased products.

If the refrigerating appliance is left empty for long periods, switch off, defrost, clean, dry, and leave the door open to prevent mould developing within the appliance.

 


Safety information

Important - Please read these instructions fully before installing or operating

Getting to know your Fridge - Freezer

2

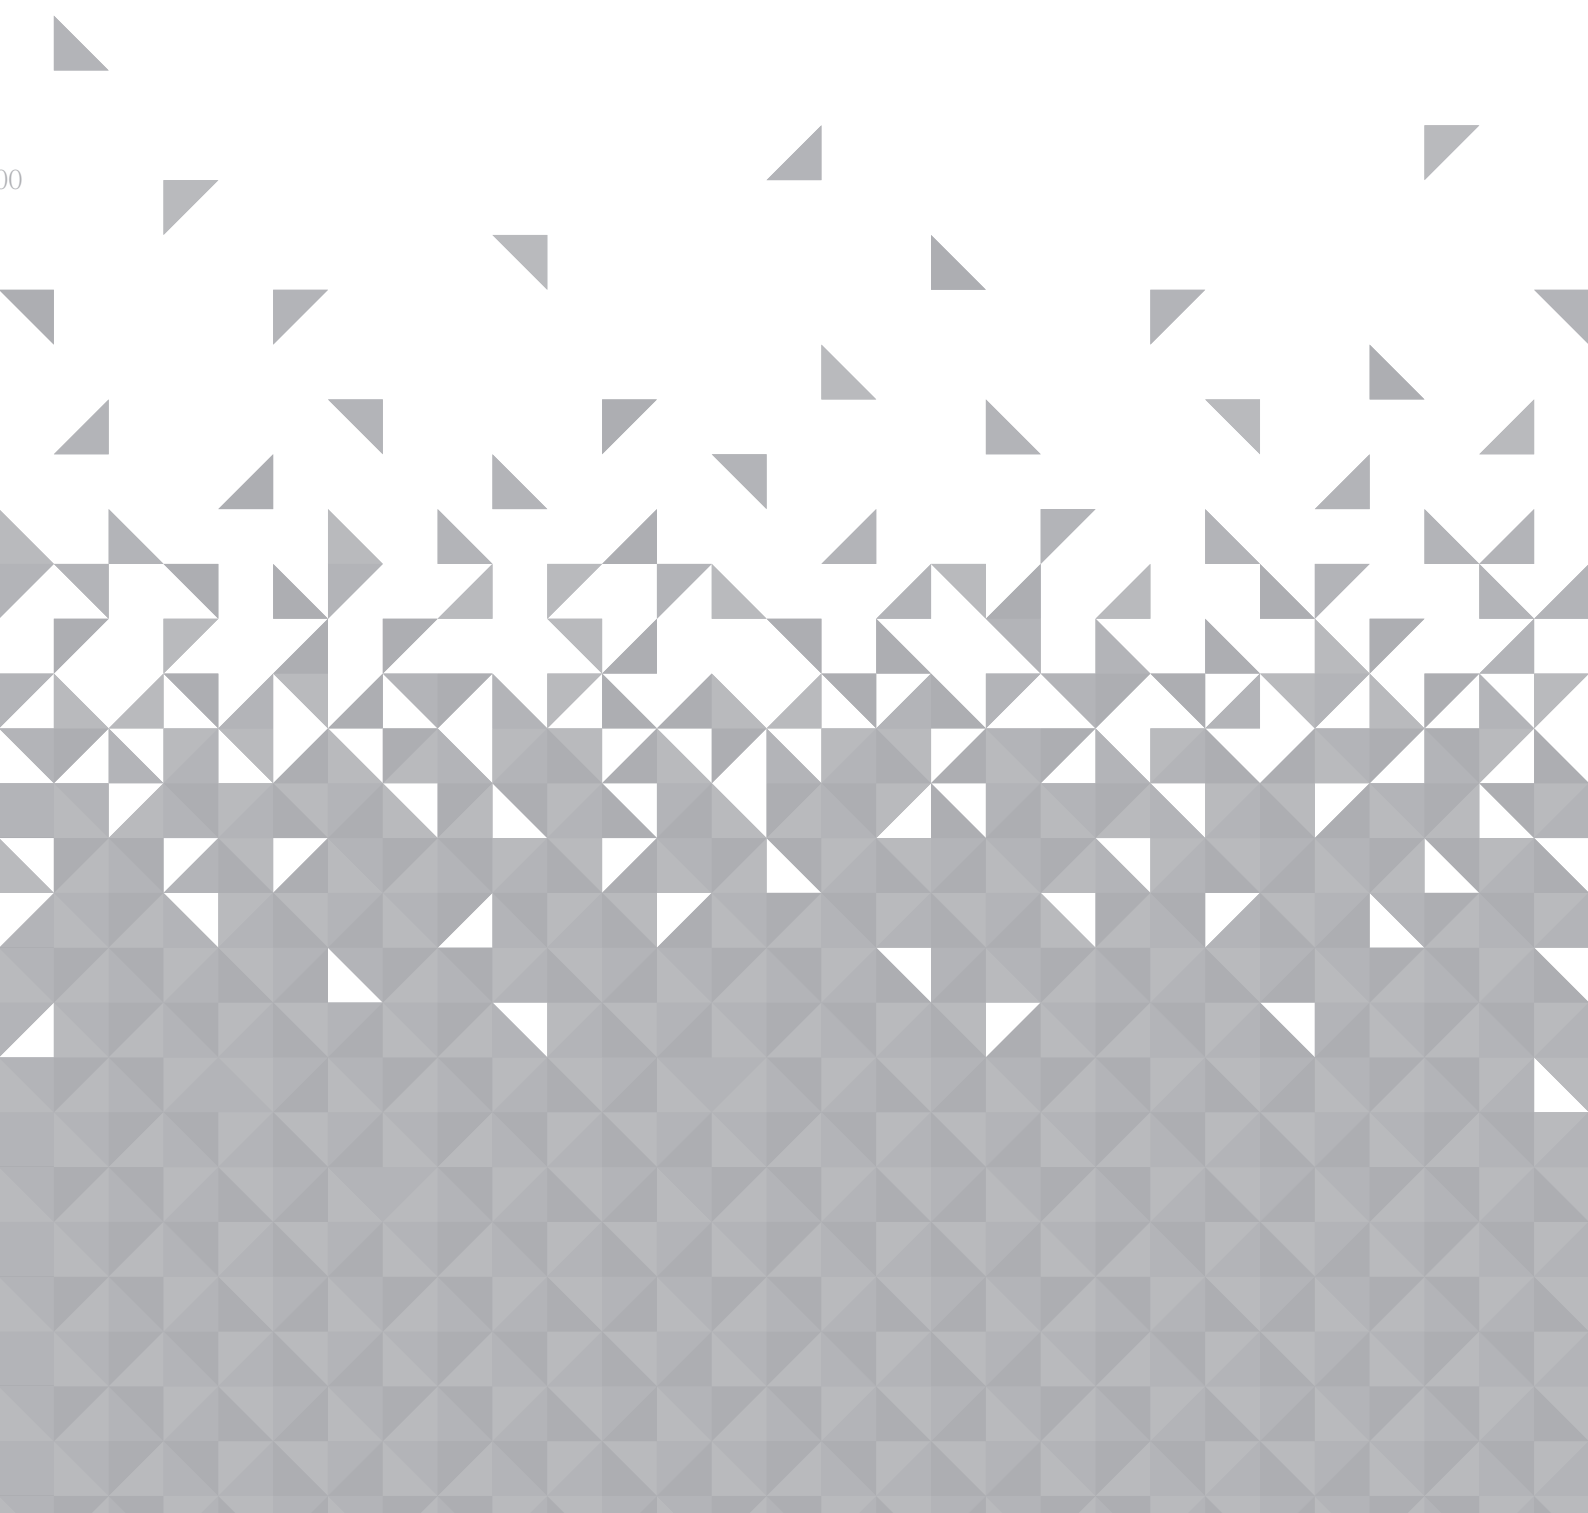

Getting to know your Fridge-Freezer

You'll be up and running in no time

Ready? Let's begin...

Please read these instructions carefully. They contain important information which will help you get the best from your Fridge Freezer and ensure safe and correct installation and operation.

If you require any further assistance, our technical experts are happy to help. For full details, refer to the product support section at the end of these instructions.

Getting to know your Fridge-Freezer

You'll be up and running in no time

Parts

 


- 1. Freezer zone LED light
- 2. Ice-Maker Front Cover Assembly
- 3. Ice Bucket Assembly
- 4. Wind channel cover in freezer
- 5. Freezer shelf
- 6. Freezer door Rack

- 7. Freezer drawer
- 8. Left adjustable bottom feet
- 9. Fridge zone LED light
- 10. Fridge door Rack
- 11. Fridge shelf
- 12. Wind channel cover in fridge

- 13. Water storage box part
- 14. Fridge drawer
- 15. Right adjustable bottom feet

Accessories included



Instruction Manual



Egg Tray x 2



"C" type gasket X4

 
 
Note: Due to unceasing modification of our products, your refrigerator may be slightly different from this instruction manual, but its functions and using methods remain the same. To get more space in freezer, you can remove drawers (except the bottom freezer drawer), ice tray.

Note: To get the best energy efficiency of this product, please place all shelves, drawers on their original position as the illustration above.

Getting to know your American Fridge-Freezer

You'll be up and running in no time


Dimensions

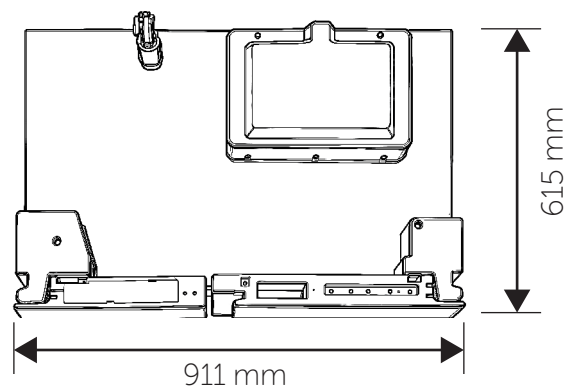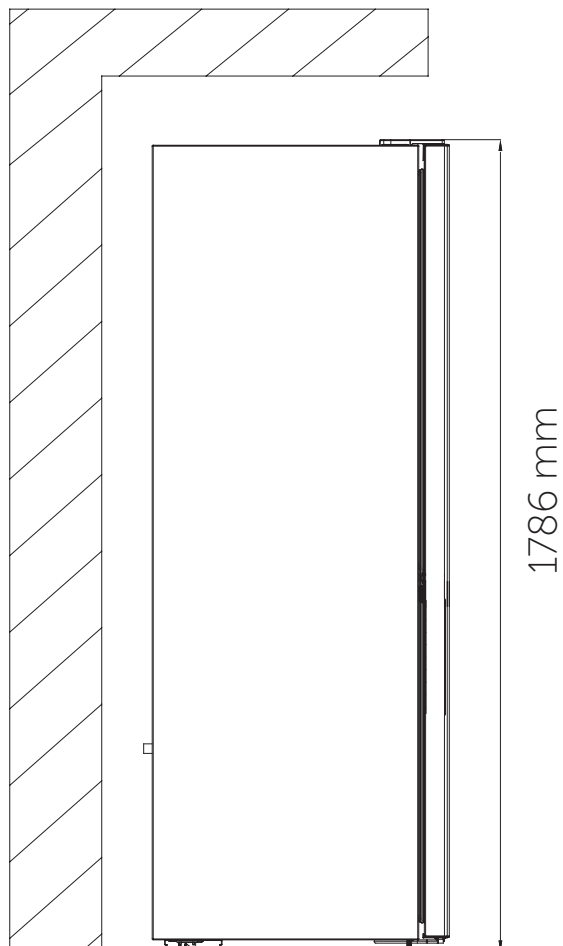

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the Troubleshooting section of these instructions.

Installing your Fridge - Freezer

 3

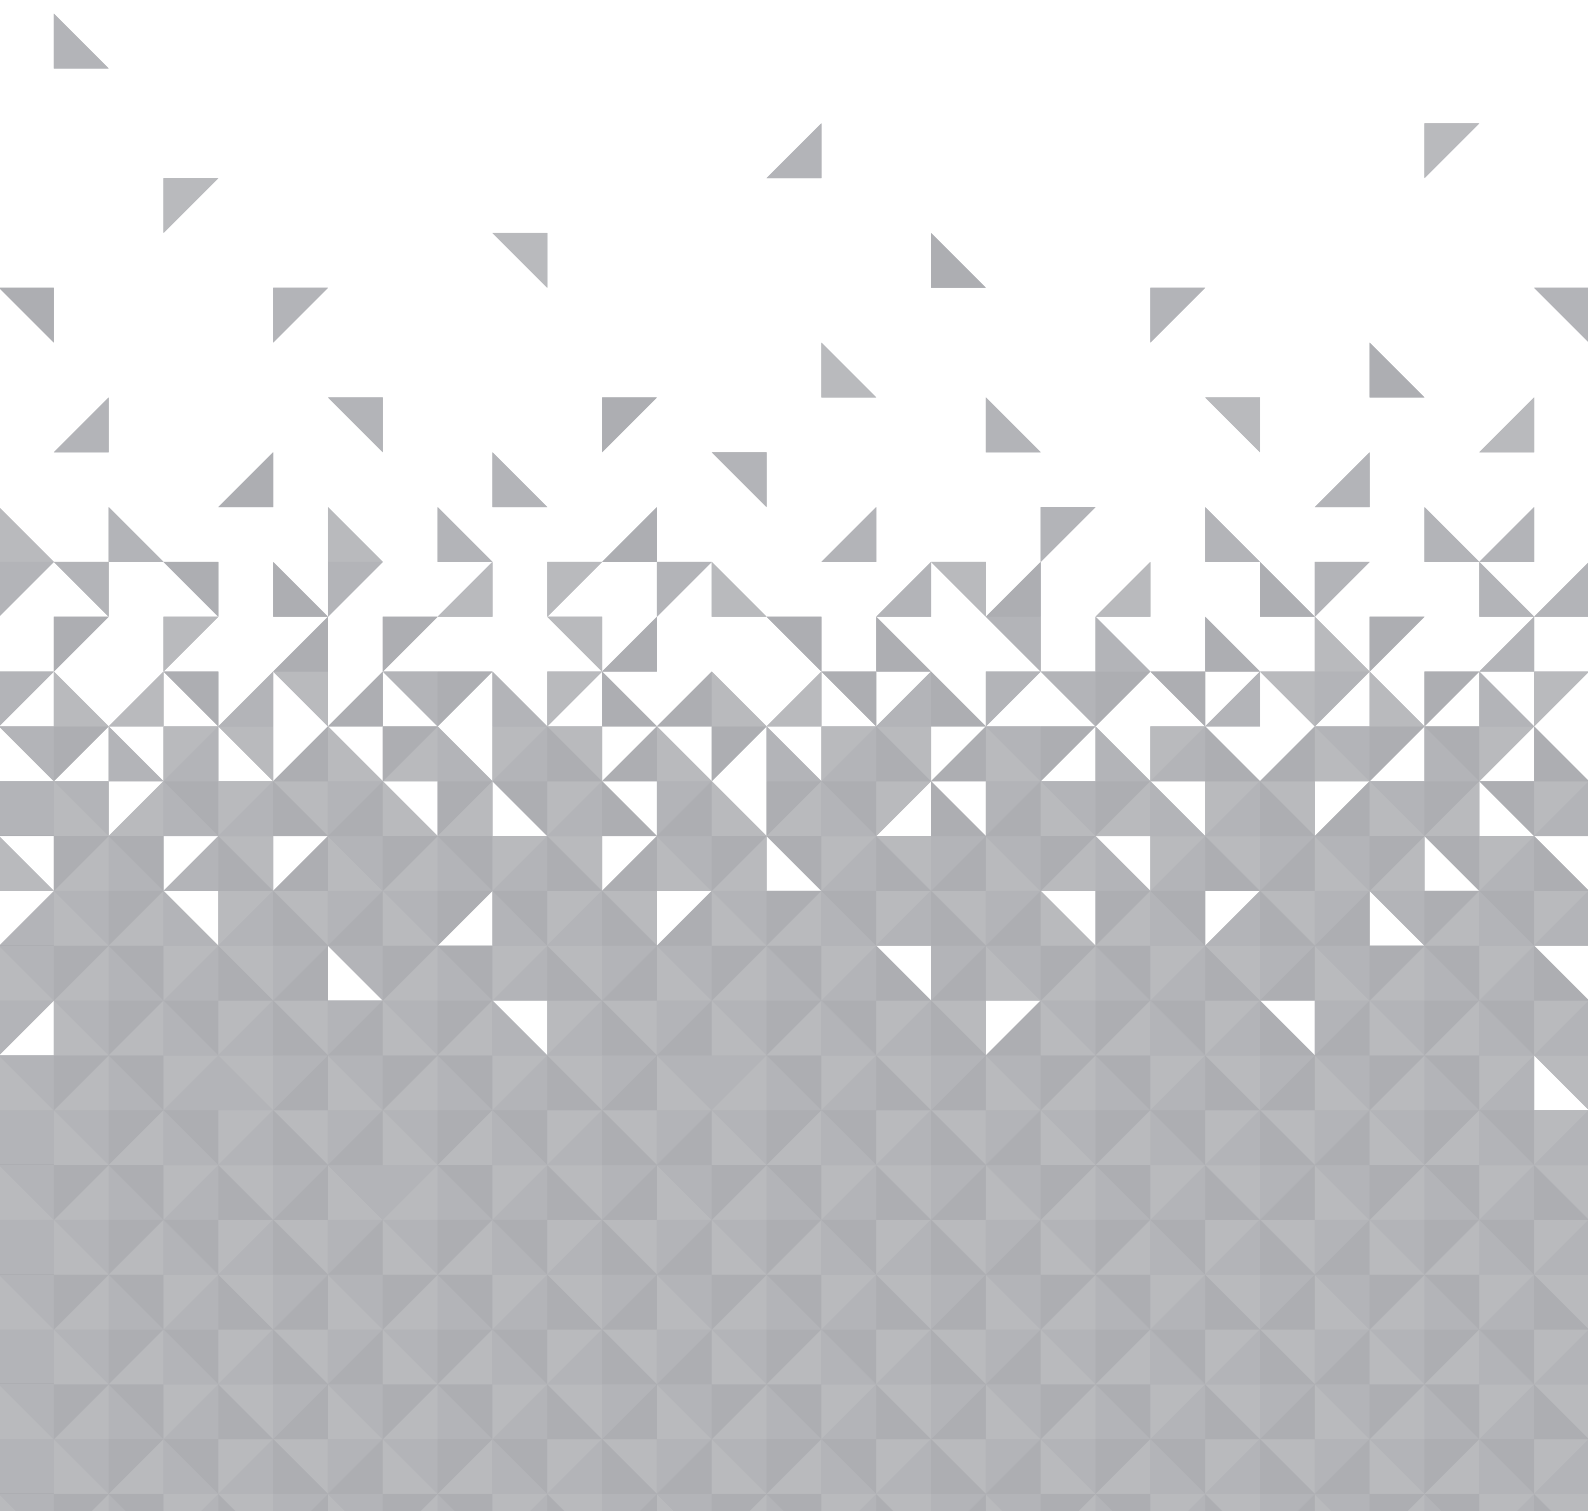

Installing your Fridge - Freezer

Bringing it all together

Transportation



Caution: 3 people are required to unpack and handle the appliance, it is recommended that gloves are worn.

- The appliance is equipped with four rollers on the bottom side for easy movement. Move the appliance to the desired location and adjust the two front leveling feet to fix the appliance.
- The appliance should be transported only in an upright position. Do not tilt the appliance greater than 45 degrees. The packaging as supplied must be intact during transportation.
- After transporting the appliance, leave it for at least 4 hours before switching on to allow the cooling system to settle. Failure to comply could result in damage to the appliance.
- Do not move the appliance by pulling the door or handle as it may damage your flooring and wall coverings etc.
- Empty any water in the drain tray before moving.
- Make sure that the defrost water pipe at the back of the appliance is fixed to be plastic evaporating pan which is situated next to the compressor, to avoid defrost water spillage on the floor.
- Ensure the supply cord is not caught under the appliance during and after moving.
- Carefully remove all packaging materials, dispose of correctly.

- The original packaging and foam may be kept for re-transportation (optional).
- Fasten your appliance with thick packaging, bands or strong cords and follow the instructions for transportation on the packaging.
- Remove all movable parts (shelves, accessories, vegetable bins, and so on) or fix them into the appliance against shocks using bands when re-positioning or transporting.



Always carry your appliance in the upright position.

Installation warnings

Before using your fridge freezer for the first time, please pay attention to the following points:

- The operating voltage for your fridge freezer is 220-240 V at 50Hz.
- The plug must be accessible after installation.
- Your fridge freezer may have an odour when it is operated for the first time. This is normal and the odour will fade when your fridge freezer starts to cool.
- Do not install the appliance in a moist or wet place. It should be installed on a smooth surface to avoid excessive vibration and noise.
- Before connecting your fridge freezer, ensure that the information on the data plate (voltage and connected load) matches that of the mains electricity supply. If in doubt, consult a qualified electrician.

Installing your Fridge - Freezer

Bringing it all together

- Insert the plug into a socket with an efficient ground connection. If the socket has no ground contact or the plug does not match, we recommend you consult a qualified electrician for assistance.
- The appliance must be connected with a properly installed fused socket. The power supply (AC) and voltage at the operating point must match with the details on the name plate of the appliance (the name plate is located on the inside left of the appliance).
- We do not accept responsibility for any damages that occur due to ungrounded usage.
- Place your fridge freezer where it will not be exposed to direct sunlight.
- Your fridge freezer must never be used outdoors or exposed to rain.
- Your appliance must be at least 50 cm away from stoves, gas ovens and heater cores, and at least 5 cm away from electrical ovens.
- If your fridge freezer is placed next to a deep freezer, there must be at least 2 cm between them to prevent humidity forming on the outer surface.
- Do not cover the body or top of your fridge freezer.
- Clearance of at least 100 mm is required at the top of your appliance. Do not place anything on top of your appliance.
- Do not place heavy items on the appliance.
- Clean the appliance thoroughly before use (see Cleaning and Maintenance).

Installing your new appliance

Before using the appliance for the first time, you should be aware of the following tips.



 
Ventilation of appliance

In order to improve efficiency of the cooling system and save energy, it is necessary to maintain good ventilation around the appliance for the dissipation of heat. For this reason, sufficient clear space should be available around the refrigerator.

Suggestion:


Ensure at least 50 mm of space at the rear, 100 mm at the top, and 100 mm on each side of the appliance. Leave sufficient space at the front to allow both the freezer and refrigerator doors to open to 135°.

Please refer to the diagrams below.

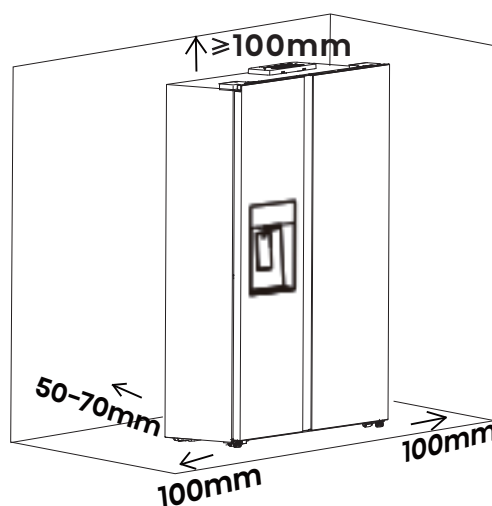

Installing your Fridge - Freezer

 Bringing it all together

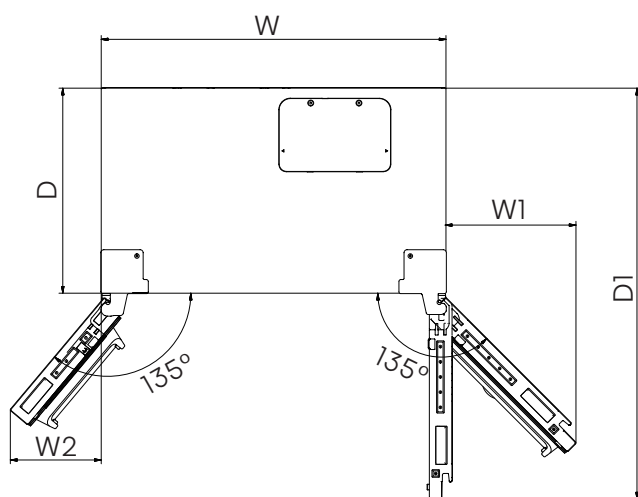

Relevant information (mm)

W	W1	W2	D	D1
908	344	261	540	1096

NOTE:

This appliance performs well in the climate class, please refer to nameplate. It may not work properly if being left at a temperature above or below the indicated range for a long period.

Climate class	Ambient temperature
SN	+10°C to +32°C
N	+16°C to +32°C
ST	+16°C to +38°C
T	+16°C to +43°C

- Stand your appliance in a dry place to avoid high moisture damage.
- Keep the appliance out of direct sunlight, rain or frost. Stand the appliance away from heat sources such as stoves, fires or heaters.

Location Requirements

⚠ WARNING



Explosion and Fire Hazard

- Keep flammable materials and vapors, such as gasoline, away from appliance.
- Failure to do so can result in death, explosion or fire.

IMPORTANT: This refrigerator is designed for indoor, household use only.

Temperature

This refrigerator is intended for use in a location where the temperature refers to nameplate. The preferred room temperature range for optimum performance, which reduces electricity usage and provides superior cooling, is between 16°C and 32°C. It is recommended that you do not install the refrigerator near a heat source, such as an oven or radiator.

Electrical Requirements

⚠ WARNING



Electrical Shock Hazard

- Plug into a grounded 3 prong outlet.
- Do not remove the ground prong from the power cord plug.
- Do not use an adapter.
- Do not use an extension cord.
- Failure to do so can result in death, fire or electrical shock.

Before you move your refrigerator into its final location, it is important to make sure you have the proper electrical connection.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the Troubleshooting section of these instructions.

Installing your Fridge - Freezer

Bringing it all together

Recommended Grounding Method

A 220-240V, 50/60Hz (please refer to nameplate), AC only 15- or 20-amp fused, grounded electrical supply is required. It is recommended that a separate circuit serving only your refrigerator be provided. Use an outlet that cannot be turned off by a switch. Do not use an extension cord.

NOTE:

Before performing any type of installation or cleaning, disconnect the refrigerator from the electrical source. When you are finished, reconnect the refrigerator to the electrical source and reset the temperature controls to the desired setting.

Unpack the Refrigerator

WARNING



Fire or Explosion Hazard

- Do not puncture refrigerant tubing.
- Follow handling instructions carefully.
- Flammable refrigerant used.
- Failure to do so can result in death, explosion or fire.

IMPORTANT: Handle with care when moving refrigerator to avoid either damaging the refrigerant tubing or increasing the risk of a leak.

WARNING

Excessive Weight Hazard

- Use two or more people to move and install refrigerator.
- Failure to do so can result in back or other injury.

Remove the Packaging

Remove tape and glue residue from surfaces before turning on the refrigerator. Rub a small amount of liquid dish soap over the adhesive with your fingers. Wipe with warm water and dry.

NOTE:

Do not use sharp instruments, rubbing alcohol, flammable fluids, or abrasive cleaners to remove tape or glue. These products can damage the surface of your refrigerator. For more information, see "Refrigerator Safety".
Dispose of/recycle all packaging materials. If the refrigerator has been placed in a horizontal or tilted position for any period of time wait 4 hours before plugging it in to allow the oil to settle into the compressor.

When Moving Your Refrigerator:

Your refrigerator is heavy. When moving the refrigerator for cleaning or service, be sure to cover the floor with cardboard or hardwood to avoid floor damage. Always pull the refrigerator straight out when moving it. Do not wiggle or "walk" the refrigerator when trying to move it, as floor damage could occur.

Installing your Fridge - Freezer

Bringing it all together

Clean Before Using

After you remove all of the packaging materials, clean the inside of the refrigerator before using it. See the cleaning instructions in "Care and Maintenance" section of this manual.

Level Refrigerator (if needed)

The refrigerator must be level to maintain optimal performance and appearance.

1. Turn the leveling feet on the bottom, front of the cabinet to raise or lower that side of the refrigerator until the refrigerator is level side-to-side.
2. Turn both feet, by the same amount, to slightly raise the front of the refrigerator. This will make it easier for the doors to close.

 
 
NOTE:

Having someone push against the top of the refrigerator takes some weight off the leveling feet. This makes it easier to turn the feet.

Rotate the adjustable feet clockwise to raise or counter-clockwise to lower your refrigerator. To make sure that the doors close automatically, tilt the top of your refrigerator backward about 10mm to 15mm. If necessary, use a spanner wrench to adjust the feet.

Align Doors (if needed)

Whenever you want to move the appliance, remember to turn the feet back up, so that the appliance can roll freely. Reinstall the appliance when relocating.

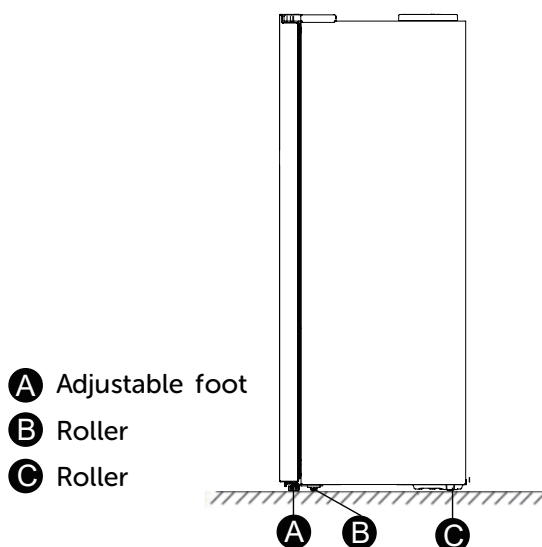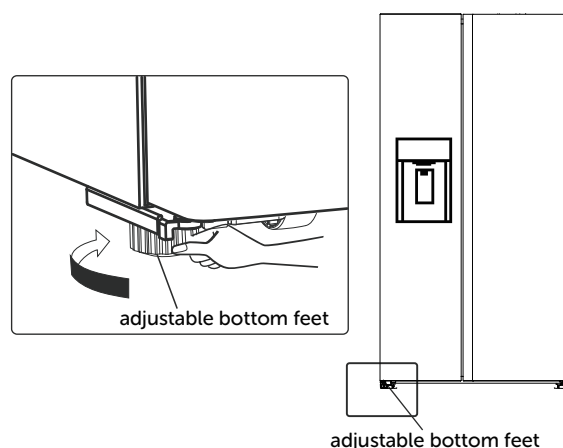

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the Troubleshooting section of these instructions.

 
Installing your Fridge - Freezer

Bringing it all together

Door height adjustment(if needed)

When the left and right sides of the door uneven:


1. The height of the refrigerator door can be inserted into the corresponding height of the "C" type gasket at the lower end of the corresponding door shaft.
2. After confirming the height difference between the left and right doors, select the appropriate gasket, and only 1 piece can be placed on each door.
3. When assembling, please open the lower side of the door and gently lift it, and insert the gasket directly into the gap between the door and the rotating shaft.

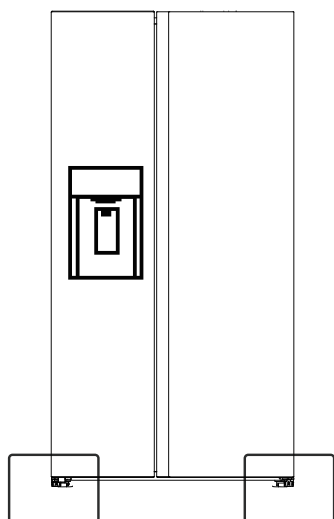

The position of the "C" type gasket



 Installation tool (not supplied)

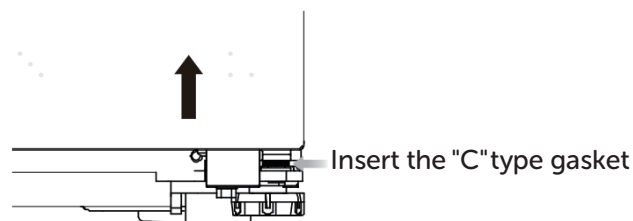

4. 'C' type gasket specification:
1.0mm/1.5mm, thickness mark is engraved on the gasket.
5. The door may have a certain run-in when fitted with a loaded door. After a period of use, it will stabilize to a stable state, which belongs to the normal site. If the left and right doors are uneven and need to be adjusted, it is recommended that the user use the appropriate "C" type gasket to adjust after a period of use.

NOTE:

1. To avoid hand clamping when inserting or disassembling the "C" gasket, please use a cool tool.
2. Please take care of the "C" type gasket to avoid children playing with the "C" type gasket, or putting it into the mouth.
3. When more than 1 piece of gasket is used for a single door, there may be a risk of gasket falling off or abnormal opening and closing noise.
4. Disconnect the power supply of the refrigerator before installation or disassembly. Neglect of this may result in serious injury or death.

Installing your Fridge - Freezer

Bringing it all together

Electrical connection



Any electrical work required to install this appliance **MUST** be carried out by a qualified electrician.



Warning: this appliance must be earthed.


Before making any electrical connections, ensure that:

- Electrical safety is only guaranteed when the earth system of your house is in accordance with the related local regulations.
- Do not damage the refrigerant circuit.
- Do not bend, stretch or pull the supply cable to avoid electric shock.
- Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- Ensure the power socket is suitable for the maximum power of the fridge (fuses in the power circuit must be 13 amp).
- The supply voltage should be the same as that indicated in the rating label.
- The appliance should be earthed and in compliance with the applicable law.
- When installed, the power socket must be within easy reach.
- If the socket outlets in your home are not suitable for the plug supplied with this unit check with a qualified electrician for replacement.
- Do not use an extension cord, an adapter or a multiple socket connection.
- The appliance must be connected to a 220-240 volt 50Hz AC supply by means of a three pin socket, suitably earthed and protected by a 13 amp fuse.

- Should the fuse need to be replaced, a 13 amp fuse approved to BS1362 must be used.
- The plug contains a removable fuse cover that must be refitted when the fuse is replaced. If the fuse cover is lost or damaged, the plug must not be used until a replacement cover has been fitted or used until a replacement cover has been fitted. the plug is replaced.
- A damaged plug should be cut off as close to the plug body as possible, the fuse should be removed and the plug disposed of safely.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the Troubleshooting section of these instructions.

 Functions 4

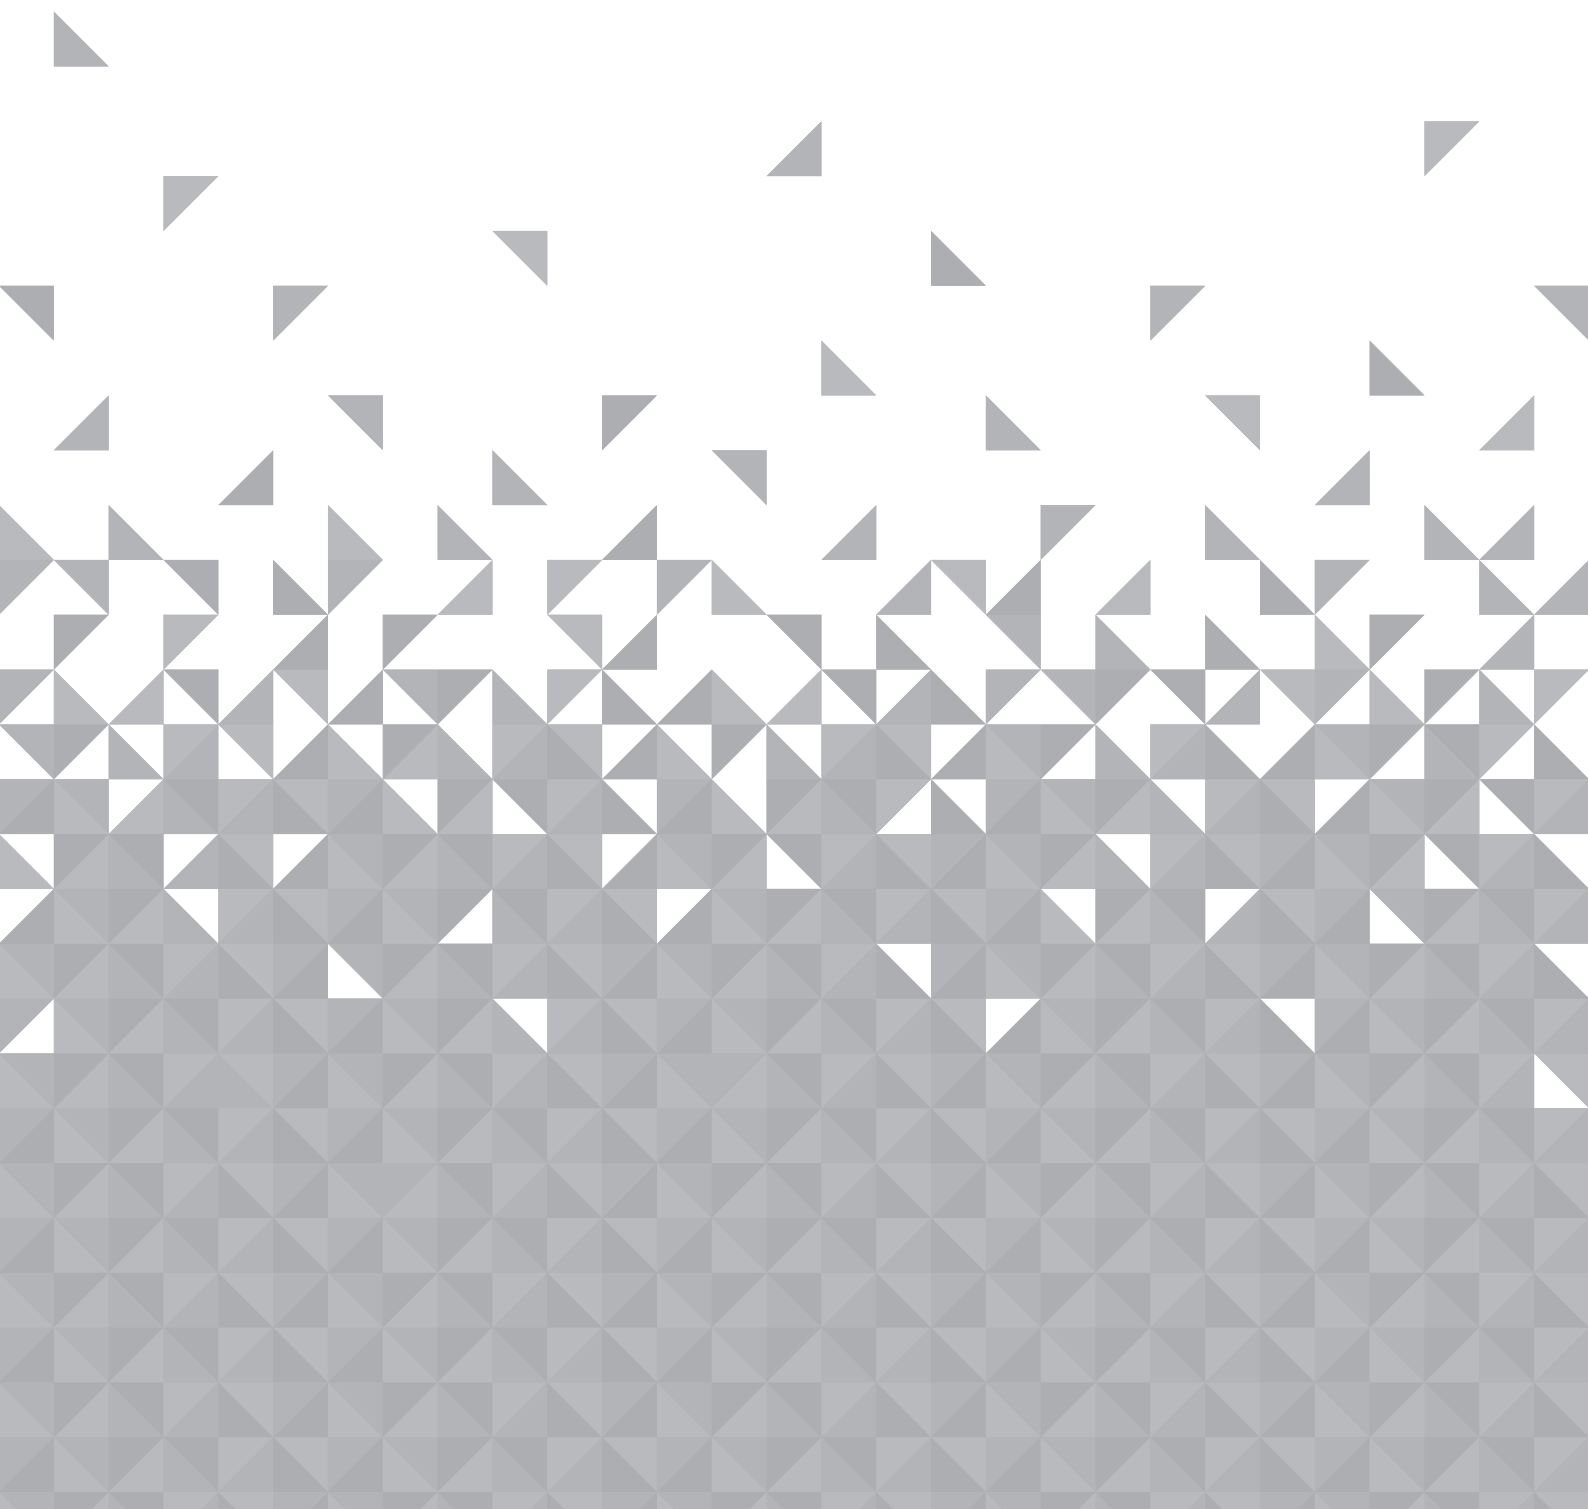


Functions

Simple everyday use

Display controls

 The control panel consists of two areas. The middle of topside shows conditions of the appliance surrounded by 6 icons as well as keys. And the bottom side is three keys related to ice maker.

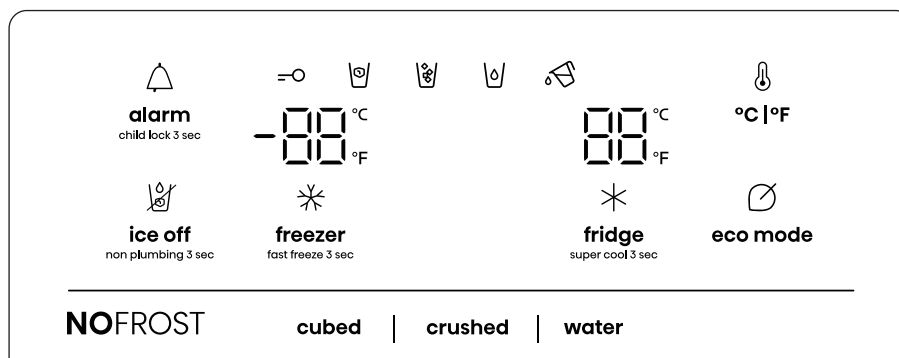

NOTE:

- Once the appliance is powered on, all icons on the display panel will be lit for 3 seconds. The Child Lock is off and the temperature setting reverts back to the previous setting.
- All the icons except "🔒", "❄️", and "⭐" will go off on the condition of all keys untouched and all doors closed for one minute.
- The control panel will light up when the door is open or you touch any button.

Caution!

The temperature only means the average temperature of the whole refrigerator cabinet. Temperatures inside each compartment may vary from those displayed on the panel, depending on how much food stored and where the refrigerator is placed. In addition, the actual temperature may vary depending on whether the appliance is installed in a warmer or cooler room.



alarm
child lock 3 sec

Child Lock and Door Alarm

This button serves two purposes:

1. Child Lock

Press and hold "Alarm" for 3 seconds to lock the entire Control Panel including dispenser function. If Control panel is locked, the icon "🔒" will illuminate. If any button is touched while locked, the icon "🔒" will flash 5 times, and the buzzer will beep 3 times. To unlock the Control panel, please press and hold "Alarm" for 3 seconds again.

2. Door Alarm

If the refrigerator door remains open for more than 1 minute, the door-open alarm will activate and the icon "🔔" will illuminate. During the first and second minutes, the alarm will beep five times per minute. If the door remains open for more than three minutes, the alarm will sound once per second and will automatically stop after 10 minutes.

To cancel the alarm, touch the "Alarm" button; the buzzer will stop. The alarm can also be deactivated by closing all the doors, and the icon "🔔" turn off. To save energy, avoid keeping the refrigerator doors open for extended periods.



ice off
non plumbing 3 sec

Ice Control

Touch the "Ice Off" button to control the ice maker. When the Child Lock is off, you can touch the "Ice Off" button to disable the ice maker, and the icon "❄️" will be illuminated. If you want to enable the ice maker, please touch the "Ice Off" button again, and the icon "❄️" will be off.

Note:

When the "Ice Off" is on, it only disable the ice maker not the dispenser.

Functions

Simple everyday use



°C|°F °F/°C

 
When the Child Lock is off, you can touch the "°F/°C" button to switch between Celsius and Fahrenheit units. The default state is Fahrenheit display. When it is switched to Fahrenheit, the icon "°F" will be on.



fridge
super cool 3 sec

Fridge Temperature Control

Press the "Fridge" button repeatedly to cycle through the temperature settings in the following sequence.

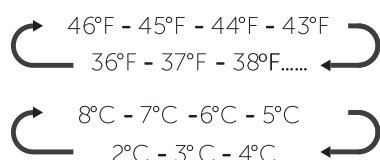


To reduce the time needed to cool food in the fridge, press and hold this button for 3 seconds. The Super Cool icon "*" will be illuminated, the fridge temperature setting will display 36°F(2°C). Super Cool automatically switches off after 6 hours, and the refrigerator temperature setting will revert back to the previous setting. To switch off Super Cool, touch the "Fridge" button at any time.



freezer
fast freeze 3 sec

Freezer Temperature Control

 Touch the "Freezer" button to adjust the freezer temperature. Press the button repeatedly to cycle through the temperature settings in the following sequence:

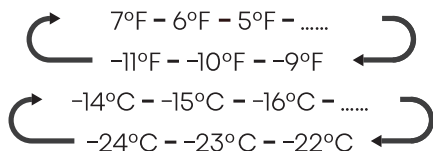

To speed up freezing in the freezer, press and hold this button for 3 seconds. The Super Freeze icon "*" will be illuminated, the freezer temperature setting will display -11°F(-24°C). Super Freeze can quickly lower the temperature and freeze your food faster than usual. This can retain more of the vitamins and nutrition in fresh food and keep your food longer.

If the freezing capacity according to the rating plate is to be used, switch on Super Freez at least 24

hours before the fresh freezer products are placed in the freezer compartment. Super Freeze will switch off automatically after 52 hours, and the freezer temperature will return to the previous setting. The Super Freeze function can also be turned off at any time by touching the "Freezer" button.

Super Freeze is used for pre-freezing and fast freezing in the freezer compartment. It speeds up the freezing of fresh food while helping to prevent already stored food from warming up.



eco mode "ECO"

Press the "ECO" button to turn ECO mode on and off. When ECO mode is on, the ECO icon 'Ø' lights up. The fridge temperature is automatically set to 6°C (43°F) and the freezer temperature to -17°C (1°F). If ECO mode is off, the icon 'Ø' will go off and the temperature setting will revert back to the previous setting.

Dispenser Control

To operate the dispenser, ensure the Child Lock is disabled. When the Child Lock is off, you can press the "Cubed" or "Crushed" button to choose the type of ice to be dispensed, and press the "Water" button will activate the water mode. When the function of Cubed is chosen, the "❏" icon will be illuminated, choose the function of Crushed the "❏" icon will be illuminated, and the "❏" icon will be illuminated when Water function is chosen.



Tank reset or Water shortage

If the water tank is not installed in place or the water tank is short of water, the icon "❏" will flicker. If the water tank is installed in place and there is enough water in the water tank, the icon "❏" will be extinguished. When the icon "❏" flicker, press and hold the "Non-Plumbing 3 Sec" button for 3 seconds to cancel the tank alarm. The icon will then turn off.

To make ice, ensure the water tank is properly installed and filled with sufficient water. Instructions on how to fill the water tank can be found in the "Using your appliance" section of this manual.

Functions

Simple everyday use

 
Demo Mode

Demo mode is intended for store display and prevents the refrigerator from cooling. When Demo mode is active, the appliance may appear to be operating, but it will not produce cold air. The control panel will display "OF".

To cancel Demo mode, touch and hold the "Alarm" and "°C/°F" buttons at the same time for 3 seconds until a long beep is heard..

Using your Fridge - Freezer

5

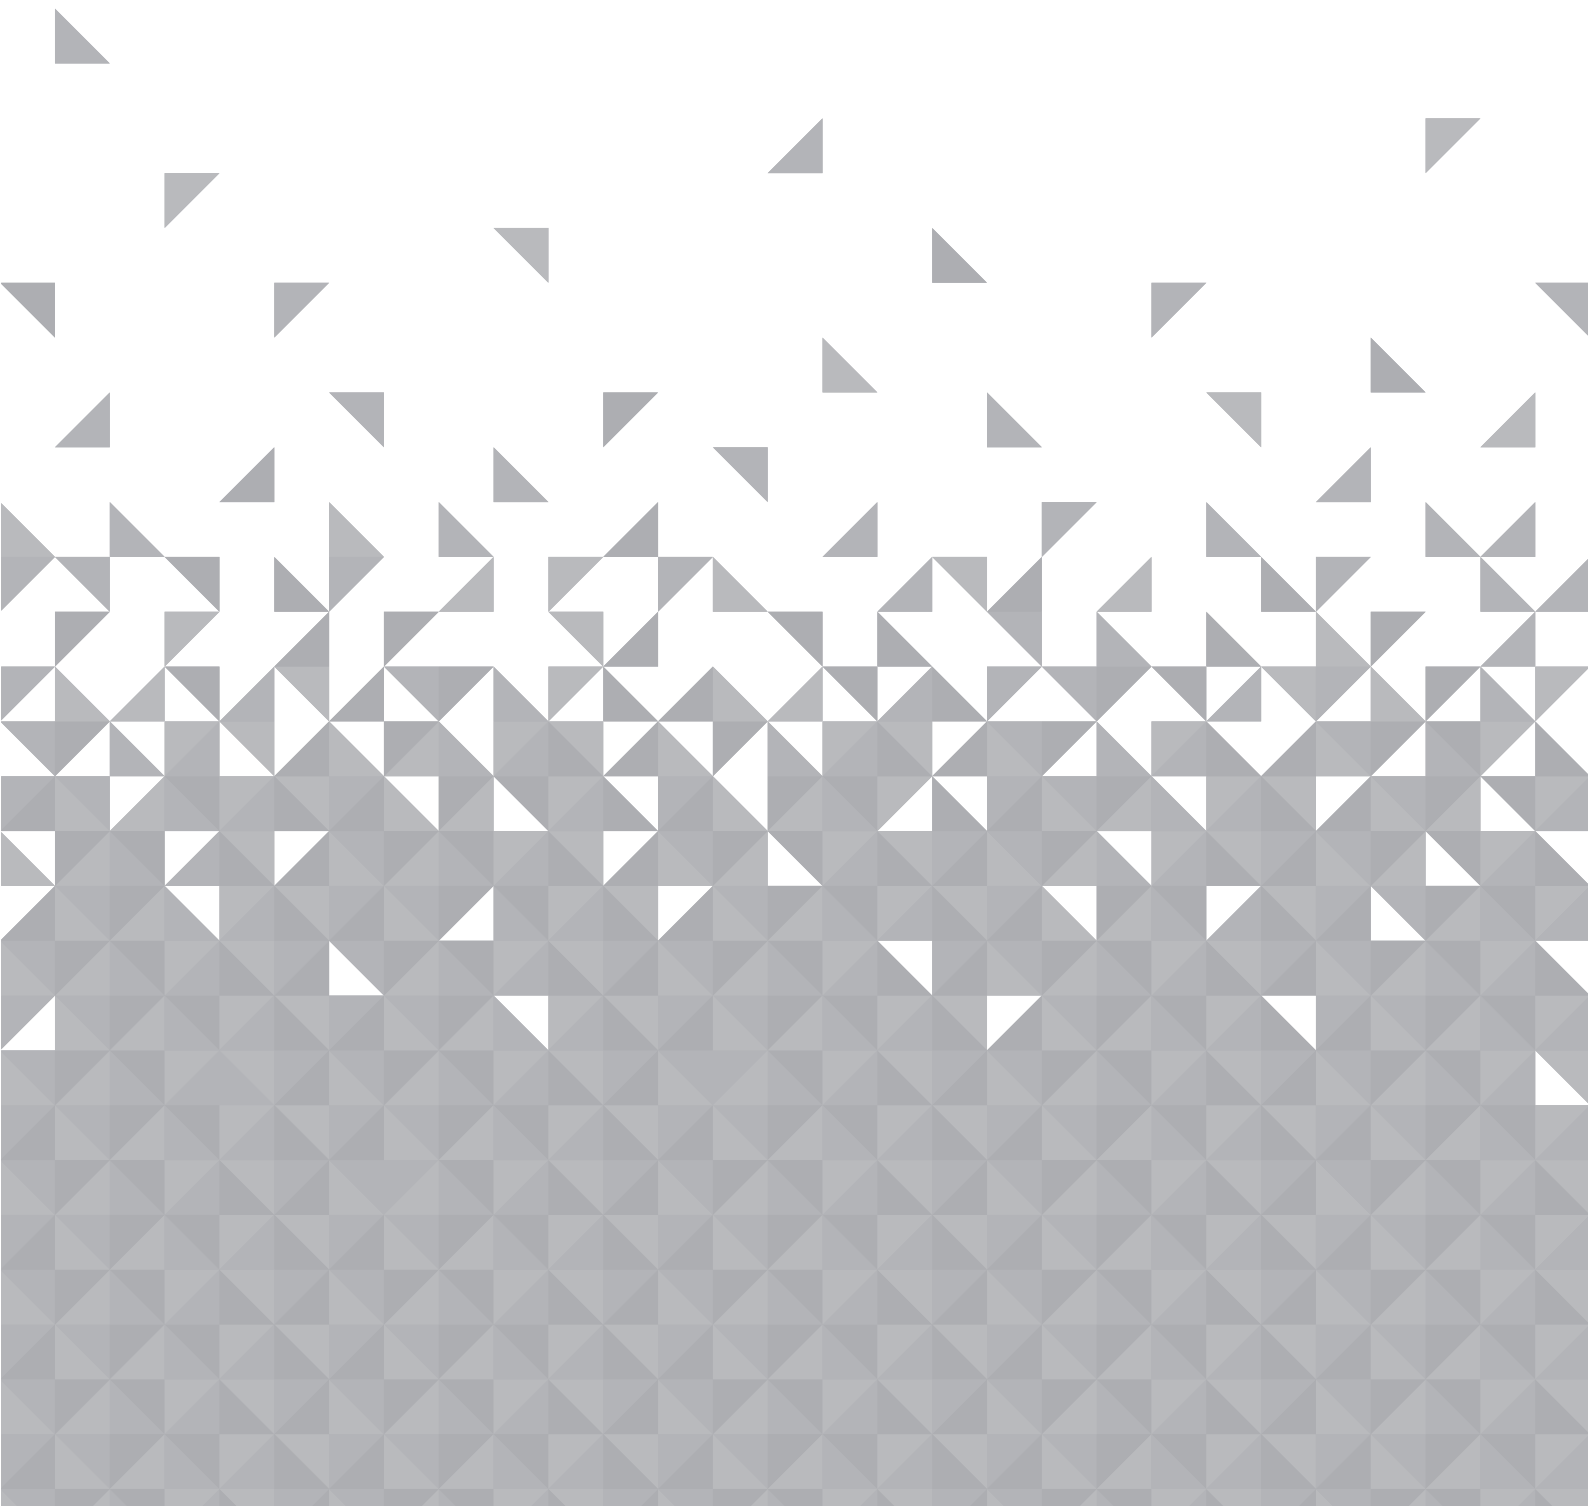

Using your Fridge-Freezer

Getting the most from your appliance

 
Opening and Closing Doors

Providing room for doors to open

Ensure there is enough space in front of the refrigerator for the doors to open fully. The two doors can be opened and closed either separately or together.

WARNING

- For proper installation, this refrigerator must be placed on a level surface of hard material that is the same height as the rest of the flooring. This surface should be strong enough to support a fully loaded refrigerator. The rollers, which are not castors, should be only used for forward or backward movement. Moving the refrigerator sideways may damage your floor and the rollers.

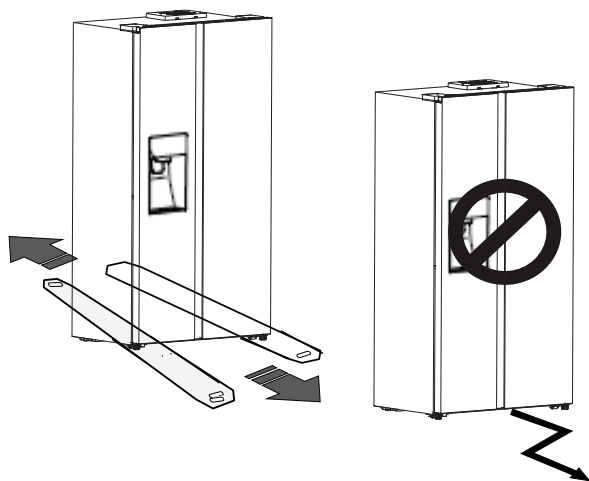


Using your refrigerator compartment

The refrigerator compartment is suitable for storage of vegetables and fruit. Food inside should be packed to store in order to avoid losing moisture or flavor permeating into other foods.

Caution! Never close the refrigerator door while the shelves, crisper and/or telescopic slides are extended. It may damage both them and the refrigerator.

Glass shelves and Door racks

 The refrigerator compartment is provided with glass shelves and several different door racks, which are suitable for the storage of eggs, canned liquid, bottled drinks and packed food. They can be placed at different heights according to your need. But do not place too many heavy things in racks. Remove all food before lifting the door shelf upward.

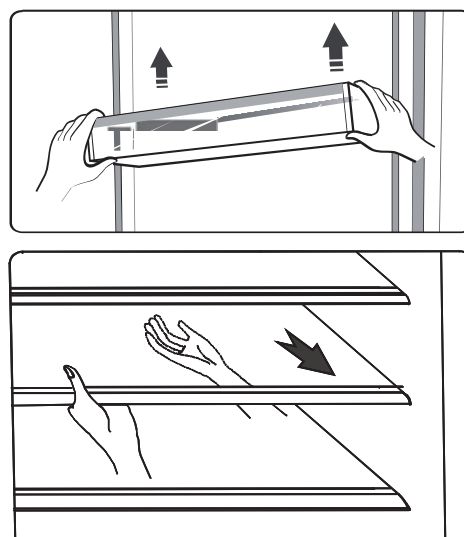

NOTE:

The door racks and shelves can be taken out to be cleaned.

To remove the shelves, gently pull them forward until the shelf comes clear of the shelf guides. When reinstalling the shelves, make sure there is no obstacle behind and gently push the shelf back into the position.

 
Using your Fridge-Freezer

Getting the most from your appliance


Water storage box

It is for providing water for ice maker and water dispenser. To fill the water storage box, follow the steps below:


① Pull out the water storage box

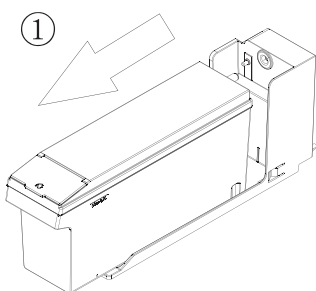

 ② Lift the small front cover and pour the water in directly.

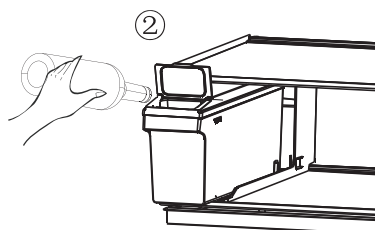

 ③ Refit the water storage box onto the refrigerator shelf.

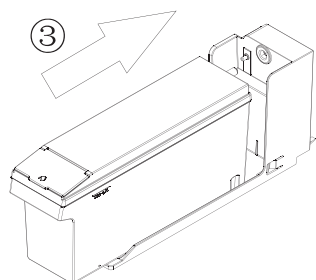

Caution:

When the water storage box needs to be refilled, pull it out and reinstall it correctly to ensure proper operation.

 
Do not exceed the recommended water volume of 4.5 L.

After reinstalling the water storage box, wait 10 seconds before dispensing water.

Only fill the box with WATER. DO NOT ADD SODA, JUICE, MILK, ALCOHOL, or any other liquids!

Drawers

These are suitable for storage of fruits and vegetables and can be taken out to be cleaned.

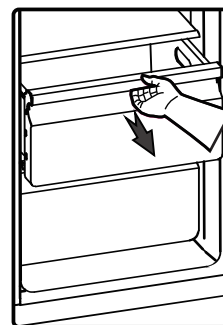

Using the freezer compartment

The freezer compartment is suitable for storing frozen foods such as meat, fish, ice cream, and other perishable items.

Caution! Ensure that bottles are not left in the freezer for longer than needed as freezing may cause the bottle break.

Bottled or canned liquid are at risk of exploding caused by volume expansion and so should not be stored in the freezer compartment.

Getting Cold Water and Ice

Press the appropriate ice or water button to select what you want to dispense.

 
Getting Cold Water

The water dispenser is located on the refrigerator door. To dispense water, press the "Water" button, then place your glass under the dispenser lever (A) as shown and press the lever.

Getting Cubed & Crushed Ice

To get ice, press the cubed or crushed ice button as required. Then move your glass down to the dispenser lever.

It is recommended to keep the glass close to the ice dispenser to prevent crushed ice from splashing outside the glass.

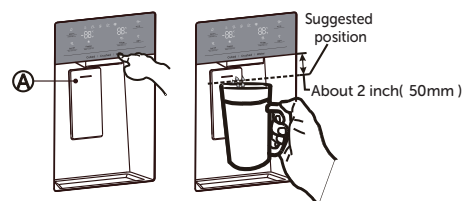

Using your Fridge-Freezer

Getting the most from your appliance

WARNING

 
- If a power failure occurs, ice cubes may melt and then refreeze when power is restored, which can cause the dispenser to stop working. To prevent this, remove the ice bucket and discard any remaining ice or water after a power failure.
- Don't push the water dispenser lever forward without a cup underneath, as this may cause water to spill.

Using the Ice Bucket


To remove the ice bucket, hold the handle as shown in the diagram below. Lift it up and pull it out slowly to avoid damage.

Removing Steps:

1. Lift the Ice Bucket upward.
2. Pull the Ice Bucket out slowly.

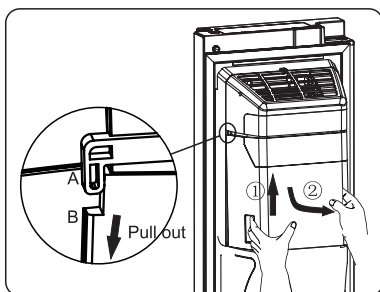

 
When reinstalling the ice bucket, make sure both sides (B & B) are properly aligned and securely fitted into the buckles (A & A).

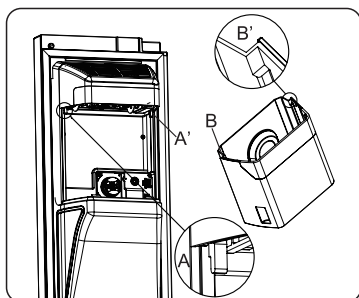

Installation Steps:

1. Push the Ice Bucket upward and ensure both sides (B & B) are securely engaged in the buckles (A & A).

 2. Pull the Ice Bucket downward to confirm it is firmly held in place by the bracket.

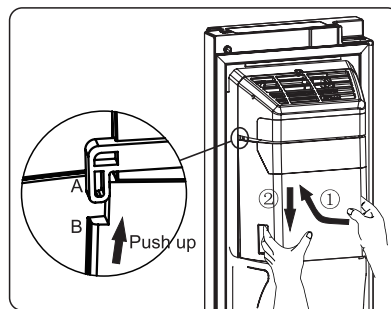


NOTE:

- When the ice maker dumps ice into the bucket, any sounds you hear are part of normal operation.
- If ice is not dispensed for a long period, the ice may clump together in the ice bucket. If this happens, remove all the ice and empty the bucket.
- If the refrigerator is without power for an extended period, the ice in the bucket may melt and water may leak onto the floor. To prevent this, remove all ice from the bucket.
- If ice doesn't come out, please check it for any ice stuck in the chute and remove it. Or pull out the Ice Bucket and check for any ice cubes clump, then remove them.
- To clean the Ice Bucket, wash with a mild detergent, rinse well, dry thoroughly. Do not use harsh or abrasive cleaners or solvents

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the Troubleshooting section of these instructions.


Using your Fridge-Freezer

 Getting the most from your appliance

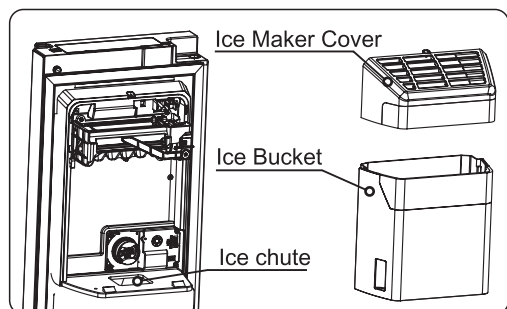

WARNING

 - Do not put your fingers, hands, or any other unsuitable objects in the ice chute or ice bucket. This can cause personal injury or material damage.
 - Do not allow your children to hang off the dispenser or pluck the ice storage bin. This could cause injury.
-
- The ice maker is connected to the water supply by a water line. Do not disassemble the water supply system yourself. It is recommended that this work be carried out by a suitably qualified person.
 - Do not use excessive force to open or close the door, or the water may spill out off the ice maker.

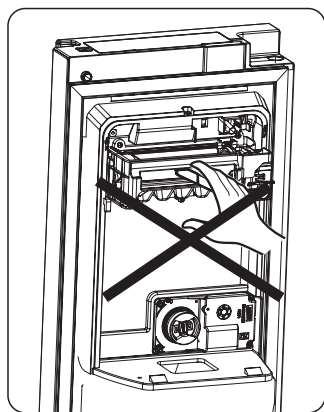

Helpful hints and tips

Energy saving tips

- Place your fridge away from direct sunlight, your oven or any other heat sources. Allow 10 cm clear space on both sides and above, and at least 5 cm behind.
- Cover all food stored, and arrange it so that cold air can circulate freely.
- Higher cold setting will use more energy. Do not set to maximum cold if it is not necessary.
- Cool the hot/warm food to room temperature before put them into your fridge.
- Frequently open and close door would cause internal temperature rise and it will consume more energy.
- Close the doors properly, and make sure the seals and hinges are airtight. Check the seals by putting a sheet of paper between the door and the main body of the fridge. If the paper moves, your seals need replacing.
- Defrost regularly if your refrigerator is not a frost-free or cyclic defrost model. Accumulated ice layer should not be more than 5 mm thick.
- The preset combination of drawers, baskets and shelves have already set in the most efficient use of this product.

Hints for refrigeration

- Do not place hot food directly into the refrigerator or freezer, the internal temperature will increase resulting in the compressor having to work harder and will consume more energy.
- Do cover or wrap the food, particularly if it has a strong flavor.
- Place food properly so that air can circulate freely around it.
- Meat (all types) Wrap in polythene food: wrap and place on the glass shelf above the vegetable drawer. Always follow food storage times and use by dates suggested by manufacturers.

Using your Fridge-Freezer

Getting the most from your appliance

- Cooked food, cold dishes, etc. should be covered and may be placed on any shelf.
- Fruit and vegetables should be stored in the special drawer provided.
- Butter and cheese should be wrapped in airtight foil or plastic film wrap.
- Milk bottles should have a lid and be stored in the door racks.

Hints for freezing

- When first starting-up or after a period out of use. Before putting the food in the compartment, let the appliance run at least 2 hours on the higher settings.
- Prepare food in small portions to enable it to rapidly and completely frozen and to make it possible to subsequently thaw only the quantity required.
- Wrap up the food in aluminum foil or polyethylene (plastic) and make sure that the packages are airtight.
- Do not allow fresh, unfrozen food to touch food that is already frozen, thus avoiding a rise in the temperature of latter.
- Iced products, if consumed immediately after removal from the freezer compartment can possibly cause skin to become freezer burnt.
- It is recommended to label and date each frozen package in order to keep track of the storage time.

Hints for the storage of frozen food

- Make sure that commercially frozen food was stored by the retailer.
- Once defrosted, foods deteriorate rapidly and can not be re-frozen.
- Do not exceed the storage period indicated by the food manufacturer.

Note: If the appliance contains related accessories and functions.

Useful information

The following guide lines and recommendations are suggested to obtain the best results and storage hygiene.

- Frequent door openings can cause internal temperature to rise so the doors should be closed as soon as possible after use.
- For hygiene reasons, it is always a good practice to pack, wrap and cover the food before storing.
- Use a polythene bag to store raw meat and place on the lowest shelf. Avoid contact with cooked food to prevent contamination. For safety reason, - store raw meat for two to three days only.
- Cooked dishes must be stored in airtight covered containers.
- Food should cool to room temperature.
- Most vegetables should be blanched and chilled before freezing.
- Bottles can be placed in the door section.
- Some fruits and vegetables like pineapples, melons, tomatoes, and cucumbers should be wrapped in polythene bags.
- Do not leave frozen food at room temperature to thaw. You could defrost the food by putting it in the fridge to thaw slowly. Make sure you avoid defrosting food dropping food juices on to other food.
- A high temperature setting may accelerate food to turn bad, hence increase food waste. Therefore for optimum food preservation, ECO setting is generally the most safe and suitable.

Using your Fridge-Freezer

Getting the most from your appliance

To avoid contamination of food, please respect the following instructions

- Opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance.
- Clean regularly surfaces that can come in contact with food and accessible drainage systems.
- Store raw meat and fish in suitable containers in the refrigerator, so that it is not in contact with or drip onto other food.
- Two-star frozen-food compartments are suitable for storing pre-frozen food, storing or making ice cream and making ice cubes.
- One-, two- and three-star compartments are not suitable for the freezing of fresh food.

Order	Compartments TYPE	Target storage temp.[°C]	Appropriate food
1	Fridge	+2~ +8	Eggs, cooked food, packaged food, fruits and vegetables, dairy products, cakes, Drinks and other foods which are not suitable for freezing.
2	(***)*-Freezer	≤ -18	Seafood (fish, shrimp, shellfish), freshwater aquatic products and meat products (recommended time is 3 months – nutrition values and taste decrease with time), suitable for frozen fresh food.
3	***-Freezer	≤ -18	Seafood (fish, shrimp, shellfish), freshwater aquatic products and meat products (recommended time is 3 months - nutrition values and taste decrease with time). Not suitable for freezing fresh food.
4	** -Freezer	≤ -12	Seafood (fish, shrimp, shellfish), freshwater aquatic products and meat products (recommended time is 2 months - nutrition values and taste decrease with time). Not suitable for freezing fresh food.
5	*-Freezer	≤ -6	Seafood (fish, shrimp, shellfish), freshwater aquatic products and meat products (recommended time is 1 month - nutrition values and taste decrease with time). Not suitable for freezing fresh food.
6	0-star	-6~ 0	Fresh pork, beef, fish, chicken, some packaged processed foods, etc. (Recommended to eat within the same day, preferably not later than 3 days) . Partially packed/wrapped up encapsulated processed foods (non-freezable foods)
7	Chill	-2~+3	Fresh/frozen pork, beef, chicken, freshwater aquatic products, etc.(7 days below 0°C and above 0°C is recommended for consumption within that day, preferably no more than 2 days). Seafood (less than 0 for 15 days, it is not recommended to store above 0°C)

Using your Fridge-Freezer

Getting the most from your appliance

Order	Compartments TYPE	Target storage temp.[°C]	Appropriate food
8	Fresh Food	0~+4	Fresh pork, beef, fish, chicken, cooked food, etc. (Recommended to eat within the same day, preferably no more than 3 days)
9	Wine	+5~+20	red wine, white wine, sparkling wine etc.

 
Note: please store different foods according to the compartments or target storage temperature of your purchased products.

- If the refrigerating appliance is left empty for long periods, switch off, defrost, clean, dry, and leave the door open to prevent mould developing within the appliance.
- Water dispenser cleaning (special for water dispenser products):
Clean water tanks if they have not been used for 48 h; flush the water system connected to a water supply if water has not been drawn for 5 days.

WARNING! Food needs to be packed in bags before putting into the refrigerator, and liquids need to be packed in bottles or capped containers to avoid the problem that the product design structure is not easy to clean.

Care and Maintenance

6

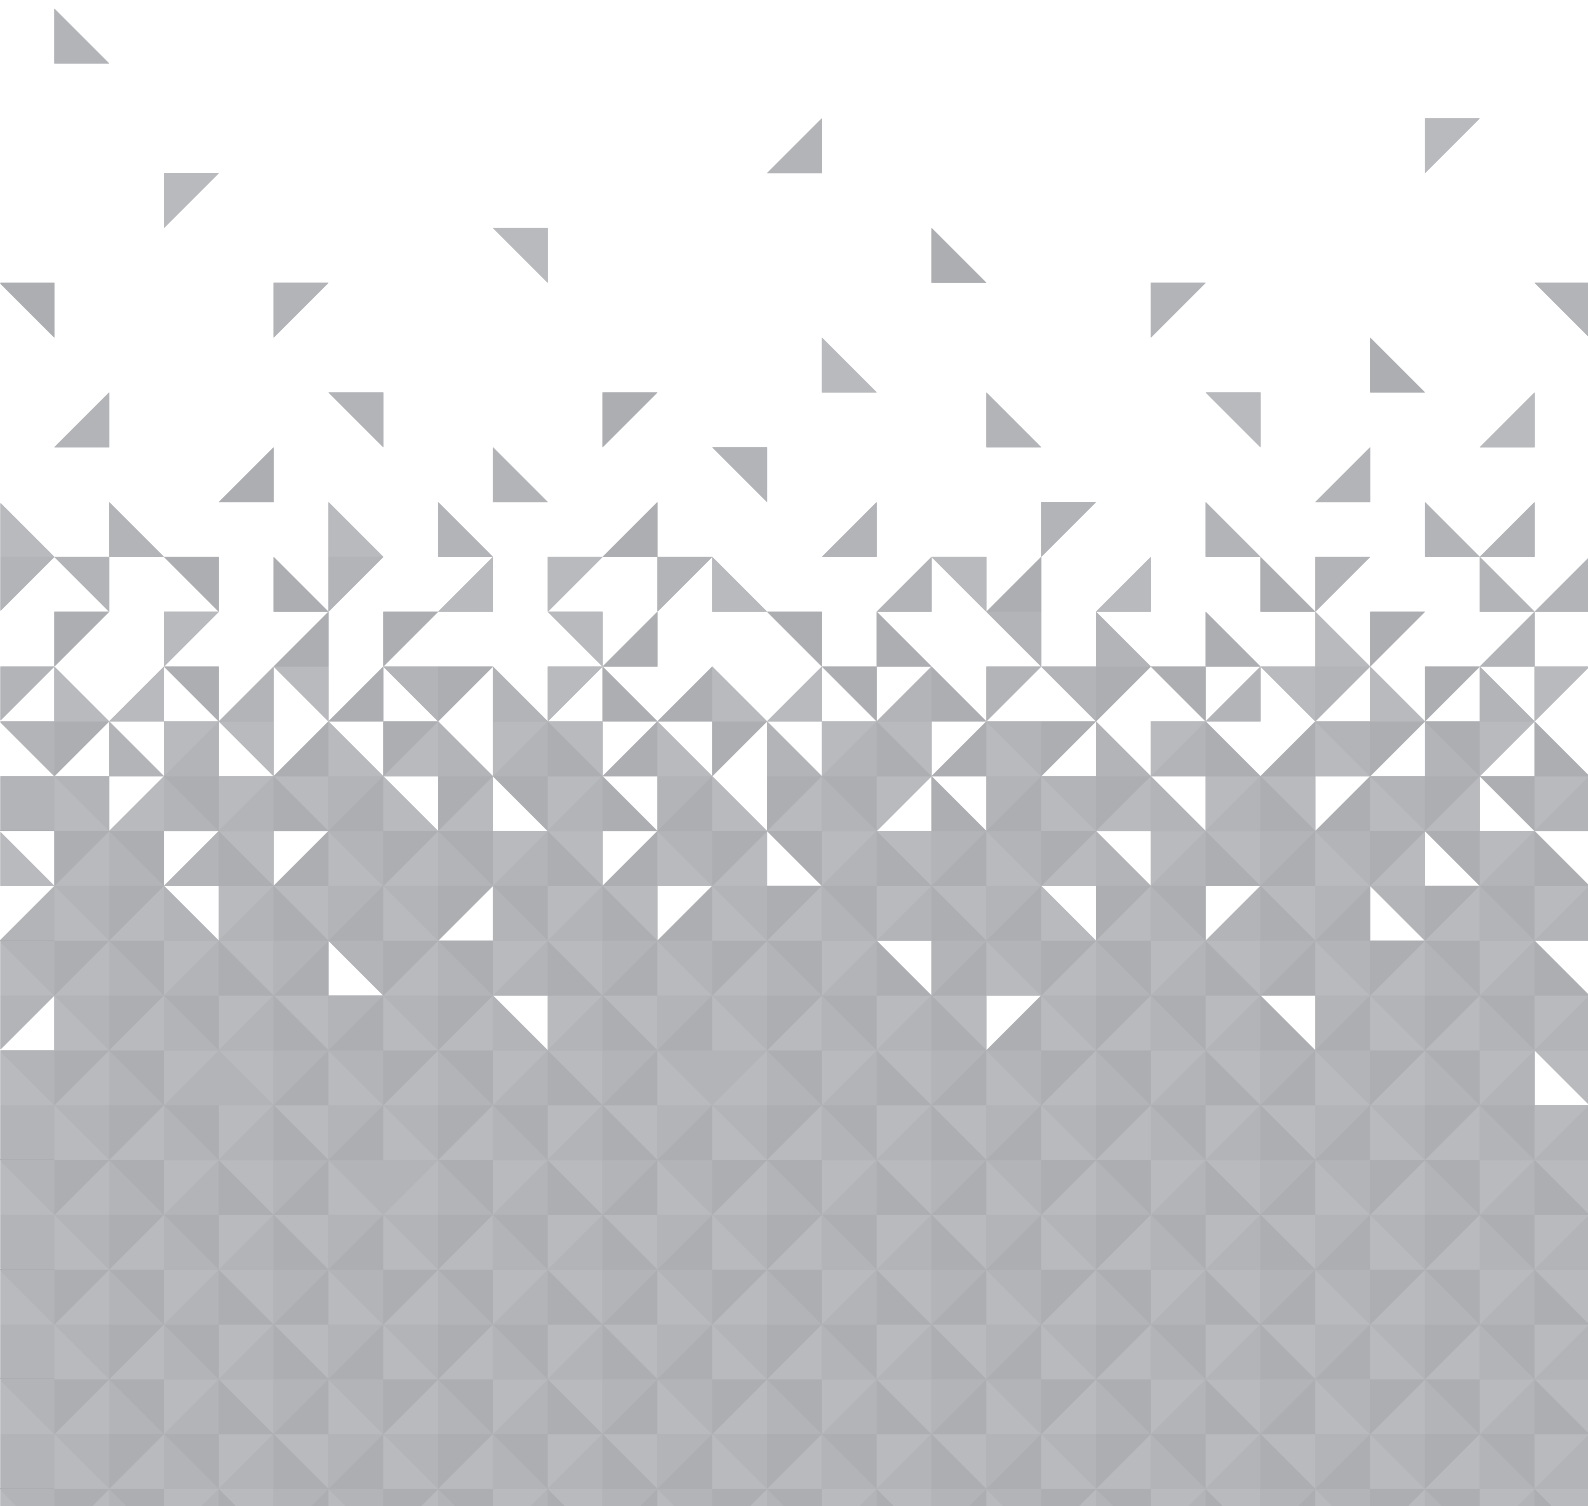

Care and maintenance

Looking after your appliance

Cleaning

Important: Always unplug the appliance from the power socket during cleaning and maintenance.

- Never use any sharp instruments or abrasive substances, soap, household cleaner, detergent or wax polish for cleaning.
 - Use luke warm water to clean the cabinet of the appliance and wipe it dry.
 - Never clean the appliance with flammable fluids. It could cause damage and a fire hazard.
 - Clean the exterior of the appliance and door seal with a damp cloth and dry it through.
 - Avoid water going into the temperature control box. Clean with a dry cloth only.
 - Shelves are all removable for cleaning purpose.
 - Dusts behind the refrigerator and on the ground shall be timely cleaned to improve the cooling effect and energy saving.
 - The interior of the refrigerator should be cleaned regularly to avoid odor.
 - Check the door gasket regularly to make sure there are no debris.
 - Please turn off the power before cleaning remove all food, shelves, drawers, etc.
 - Clean the door gasket with mild soap and water.
 - Use a soft cloth or sponge to clean the inside of the refrigerator, with two tablespoons of baking soda and a quart of warm water. Then rinse with water and wipe clean, and open the door and dry it naturally before the power is turned on.
 - For areas that are difficult to dean in the refrigerator (such as narrow sandwiches, gaps or corners), it is recommended to wipe them regularly with a soft rag soft bush, etc. And when necessary, combined with some auxiliary tools(- such as thin sticks) to ensure no contaminant accumulation in these areas.
- *Do not use soap, detergent, scrub powder, spray cleaner, etc., as these may cause odors in the interior of the refrigerator.

- Clean the door racks, shelves and drawers with a mild detergent and dry with a soft cloth.
- Wipe the outer surface of the refrigerator with a soft cloth damped with soapy water, detergent, etc., and then wipe dry.
- Do not use hard brushes, clean steel balls, wire brushes, abrasives, such as toothpastes, organic solvents (such as alcohol, acetone, banana oil, etc.), boiling water, acid or alkaline items clean refrigerator considering that this may damage the fridge surface and interior.
- Do not rinse with water so as not to affect the electrical insulation property.

Defrosting

- Although this appliance automatically defrosts, a layer of frost may occur on the freezer compartment's interior walls if the freezer door is opened frequently or kept open too long.
- If the frost is too thick, choose a time when the freezer is nearly empty and proceed as follow:
 1. Remove existing food and accessories baskets, unplug the appliance from the mains power and leave the doors open. Ventilate the room thoroughly to accelerate the process.
 2. When defrosting is completed, clean your freezer as described above.

Light bulb replacement

This appliance is equipped with LED light bulb. It can be used for long time. In case ,the LED bulb is blown, it must be replaced by the qualified person to avoid any hazard. Contact the service agent at 0345 257 7271.

Care and maintenance

Looking after your appliance

Power failure

In case there is a power failure, you should take the following actions:

If it lasts less than 24 hours, keep the doors closed. This will allow the stored food to stay cold as long as possible. If it lasts more than 24 hours, it is advised to empty the freezer compartment and temporarily store the food in a portable freezer or using artificial ice packs. Try to stay cold for as long as possible.

Remarks: Full appliance will stay cold longer than a partially filled one. If ice crystals are still visible on the food, it may be frozen again, although flavour and aroma may be affected. If food is found to be in a poor condition, it is best to throw it away.

Short vacation

There is no need to disconnect the appliance from the mains if you will be away for two to three weeks. Use up the perishable food.

Long vacation

Remove all the food if you are away for three weeks or more. Unplug the appliance and leave the doors open to provide air circulation to prevent odour and mould.

Moving your appliance

Refer to section "Transportation" under "installation".

Care and maintenance

Looking after your appliance

Technical specification

Brand	BUSH
Model	17891S
Energy Efficiency class	E
Annual Energy Consumption (kWh/a)	312
Fresh Food Compartment volume (litres)	347
Freezer 4-start Compartment Volume (litres)	181
Total Volume (litres)	528
Frozen food compartment rating	✱ ***
Climate class	SN, N, ST, T
Operating noise level dB(A)	40
Product Dimensions(mm)(W*D*H)	911x615x1786
Defrosting type	Automatic
Temperature range for fridge compartment	2~8°C
Temperature range for freezer compartment	-14~-24°C

The model information can be retrieved using the QR-code reported in the energy label. The label also includes the model identifier that can be used to consult the portal of the registry at <https://eprel.ec.europa.eu>.

This product contains a LED lamp which does not meet the definition of light source/control gear defined in regulation (EU) 2019/2020.

We apologize for any inconvenience caused by any minor inconsistencies in these instructions, which may occur as a result of product improvements and development.

Disposal of the appliance

It is prohibited to dispose of this appliance as household waste.

Before disposal of the appliance

1. Pull out the mains plug from the mains socket.
2. Cut off the power cord and discard with the mains plug

Warning!

- Refrigerators contain refrigerant and gases in the insulation. Refrigerant and gases must be disposed of professionally as they may cause eye injuries or ignition. Ensure that tubing of the refrigerant circuit is not damage prior to proper disposal.
- Doors and lids of the refrigeration appliance should be removed before disposal in the landfill to avoid children or animals getting trapped inside.
- Remember: Old fridge must be disposed of carefully - older models contain CFC gases that are harmful - if in doubt, contact your local council for details on how to dispose of an old fridge .

	Correct Disposal of this product
 	This symbol on the product or in its packing indicates that this product may not be treated as household waste. Instead, it should be taken to the appropriate waste collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by the inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council your household waste disposal service, or the shop where you purchased the product.

 


Care and maintenance

Looking after your appliance

Product Support

7

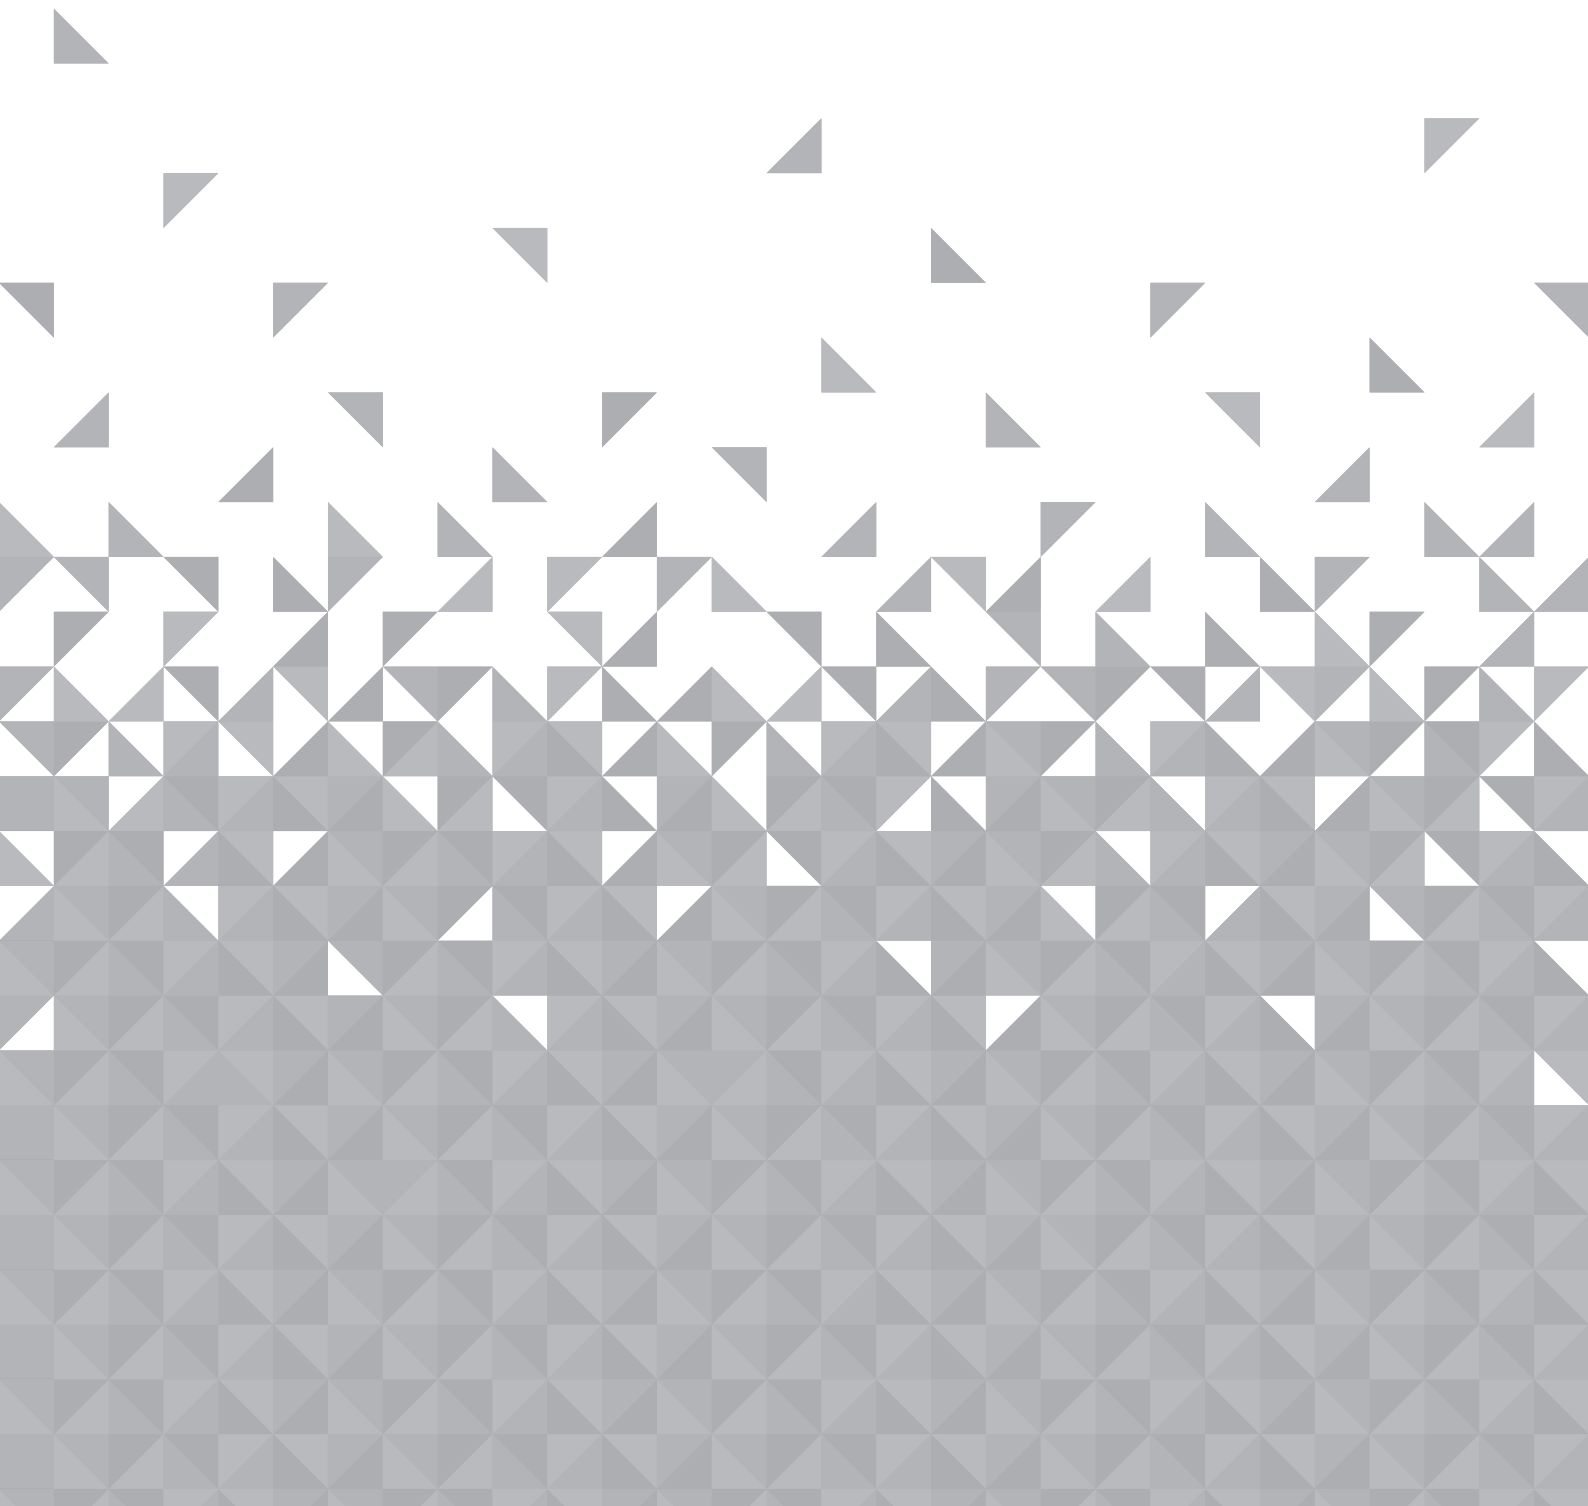

Troubleshooting

If you have a problem with your product, these questions may be able to assist you.

If you experience a problem with your appliance or are concerned that the appliance is not functioning correctly, you can carry out some easy checks before calling for service, please see below.

WARNING

- Don't try to repair the appliance yourself. If the problem persists after you have made the checks mentioned below, contact a qualified electrician, authorized service engineer or the shop where you purchased the product.

Problem	Possible cause & Solution
Appliance is not working correctly	Check whether the power cord is plugged into the power outlet properly.
	Check the fuse or circuit of your power supply, replace if necessary.
	The ambient temperature is too low. Try setting the chamber temperature to a colder level to solve this problem.
Appliance is not working correctly	It is normal that the refrigerator is not operating during the automatic defrost cycle, or for a short time after the appliance is switched on to protect the compressor.
Odours from the compartments	The interior may need to be cleaned.
	Some food, containers or wrapping cause odours.
Noise from the appliance	The sounds below are quite normal: • Compressor running noises. • Air movement noise from the small fan motor in the freezer compartment or other compartments. • Gurgling sound similar to water boiling. • Popping noise during automatic defrosting. • Clicking noise before the compressor starts.
	Other unusual noises are due to the reasons below and may need you to check and take action: • The cabinet is not level. • The back of appliance touches the wall. • Bottles or containers fallen or rolling.
The motor runs continuously	It is normal to frequently hear the sound of the motor, it will need to run more when in following circumstances: • Temperature setting is set colder than necessary. • Large quantity of warm food has recently been stored within the appliance. • The temperature outside the appliance is too high. • Doors are kept open too long or too often. • After your installing the appliance or it has been switched off for a long time.
A layer of frost occurs in the compartment	• Check that the air outlets are not blocked by food and ensure food is placed within the appliance to allow sufficient ventilation. • Ensure that the door can be fully closed. To remove the frost, please refer to the "Cleaning and care" chapter.

Problem	Possible cause & Solution
Temperature inside is too warm	You may have left the doors open too long or too frequently; or the doors are kept open by some obstacle; or the appliance is located with insufficient clearance at the sides, back and top.
Temperature inside is too cold	Increase the temperature by following the "Display controls" chapter.
Doors can't be closed easily	Check whether the top of the refrigerator is tilted back by 10-15mm to allow the doors to self close, or if something inside is preventing the doors from closing.
Water drips on the floor	The water pan (located at the rear bottom of the cabinet) may not be properly leveled, or the draining spout (located underneath the top of the compressor depot) may not be properly positioned to direct water into this pan, or the water spout is blocked, or the water is not fully inserted into the connector. - You may need to pull the refrigerator away from the wall to check the pan and spout. - Check if the refrigerator is power-off for a long time, this may cause the ice in the bucket to melt into water, and flow to the floor.
The light is not working	- The LED light may be damaged. Refer to replace LED lights in cleaning and care chapter. - The control system has disabled the lights due to the door being kept open too long, close and reopen the door to reactivate the lights.
Ice is not dispensing	- Did you wait for 10 hours after installation of the water supply line before making ice? if it is not sufficiently cool, it may take longer to make ice, such as when first installed. - Did you manually stop the ice making function? Make sure you have set the Cubed or Crushed mode on. - Is there any ice blocked within the ice maker bucket or ice chute? - Is the freezer temperature too warm? Try setting the freezer temperature lower.
Water dispenser is not functioning	- Is the water storage box installed accurately? Make sure there is enough water in the water storage box. - Is water line broke or bent? Make sure the water line is unblocked and clear of any obstruction. - Is the water storage box frozen for the refrigerator temperature is too low? Try selecting a warmer setting on the display panel. - Is the water pump working?
You can hear water bubbling in the refrigerator	This is normal. The bubbling comes from the refrigerant coolant liquid circulating through the refrigerator.

Error Code	Fault Description	Recommended Action
E0	Ambient temperature sensor error	Contact an authorised service technician or the customer helpline for assistance.
E1	Refrigerator temperature sensor error	Contact an authorised service technician or the customer helpline for assistance.
E3	Freezer temperature sensor error	Contact an authorised service technician or the customer helpline for assistance.
E4	Freezer defrost sensor error	Contact an authorised service technician or the customer helpline for assistance.
E8	Humidity sensor error	Contact an authorised service technician or the customer helpline for assistance.
Eb	Ice maker error	Contact an authorised service technician or the customer helpline for assistance.
dr	Door / Door switch error	Contact an authorised service technician or the customer helpline for assistance.
Others	--	Contact an authorised service technician or the customer helpline for assistance.

Product support

Help is always at hand

Help and assistance

If you require any technical guidance or find that your Combi Fridge-Freezer is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions or online at **www.bush-support.com**.

If you still require further assistance, call one of our experts on **0345 257 7271***. To help give us give you a fast and efficient service please have the following information ready:

Model Ref.

Serial number

Date of purchase

You can find these on the rating plate - a small information panel (usually a sticker or metal plate) on the rear of your appliance.

This will be shown on your receipt.

Local call rates applies*

Lines open 9am-6pm Monday to Saturday and 10am-6pm Sunday.

*Calls to Argos enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see www.bt.com/pricing for details.

For Security and training purposes, telephone calls to and from customer service centres maybe recorded and monitored. Calls from Republic of Ireland will attract international call charges.



The appliance complies with the following EEC directives:
2014/35/EU Low voltage directive
2014/30/EU EMC directive



The appliance complies with the following UK legislation:
Electromagnetic Compatibility Regulations 2016
Electrical Equipment (Safety) Regulations 2016

Spare Parts Supply

To order spare parts, please contact our customer helpline: **0345 257 7271**. The original spare parts for some specific components are available for a period of 7 or 10 years, based on the type of component, from the placing on the market of the last unit of the model.

Product support

Help is always at hand



Call us now and activate your 12 month guarantee

Thank you for choosing Bush. Your new product is guaranteed against faults and breakdowns for 12 months. Don't forget to register it with us today so we can provide you with our best possible after-sales service and useful updates.

www.bushregistration.co.uk

FREEPHONE*

0800 597 8548

Lines are open 8am - 8pm, 365 days a year. *Calls may be recorded and monitored

Your Bush Guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from who your purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in the manual.
- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- Bush disclaim any liability for loss or damage arising from the breakdown of the product.
- This guarantee is in addition to and does not diminish your statutory or legal rights.

Important Data Protection Information

To find out how we and Domestic & General Insurance, please refer to the guarantee registration material or visit www.bushregistration.co.uk.

BUSH

Produced in China for
Argos Limited, London, EC1M 6HA, UK
Argos (N.I.) Ltd., Forestside Shopping Centre,
Upper Galwally, Belfast, BT8 6FX, UK.

Contact:
www.argos-support.co.uk
www.bush-support.com
Helpline: 0345 257 7271