 


1		2		3		4		
						重要度	[B]	
A								A
B	技术要求 1. 颜色要求：封面：黑白印刷 内页：黑白印刷； 批量时要求统一，不能有明显色差， 2. 版面内容：封二印内容， 6-10页大写字高需大于3mm 图案与文字应印刷清晰、 规范，不能有印刷缺陷； 3. 页面印刷：双面印刷； 4. 成型方式：骑马钉； 5. 成品尺寸：A5 (140X210) 尺寸公差按GB/T 1804-c； 6. 批量生产前须送样确认。							B
C								C
D								D
								E
								E
								E
								E
借（通）用件登记						封面：80g双胶 内页：80g双胶		广东奥马冰箱有限公司
								说明书
出图审查		标志	处数	更改文件号	签名	日期	重量	
设计				会签				CKBSH-Z03
制图		郭丽娟		标准化		刘金利		
共 1 张		第 1 张						
日 期		审核		批准		钟浩亮		视角符号 
		工艺		日期		2026-04-14		
1		2		3		4		

BUSH

Instruction Manual

1909IB



You'll soon be enjoying your new refrigerator.

It all begins here, with your instructions. Don't worry, there's nothing too technical coming up. Just simple, step-by-step guidance to get you up and running quickly. Sound good? Then let's get started

Help and Guidance

We're here to help you get the most from your refrigerator. Should you require any guidance, a simple solution can often be found online at.

www.bush-support.com

If you still require further assistance, call one of our experts on 0345 257 7271.

Issue 1, 22/04/2026

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions,

Contents

1 Safety information

Safety information 6

2 Getting to know your refrigerator

Ready? Let's begin... 13
Parts

3 Installing your refrigerator

Transportation
Installation 17
Electrical Connection

4 Using your refrigerator

Before first use 22
Using your appliance
Useful information

5 Care and Maintenance

General 29
Power failure
Moving your appliance
Disassembly / assembly the door
Technical Specifications
Disposal information

6 Product support


Trouble Shooting 33
Help and assistance
Guarantee

Icon	Type	Meaning
	WARNING	Serious injury or death risk
	RISK OF ELECTRIC SHOCK	Dangerous voltage risk
	FIRE	Warning; Risk of fire / flammable materials
	CAUTION	Injury or property damage risk
	IMPORTANT	Operating the system correctly

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the Troubleshooting section of these instructions.

Safety information

1

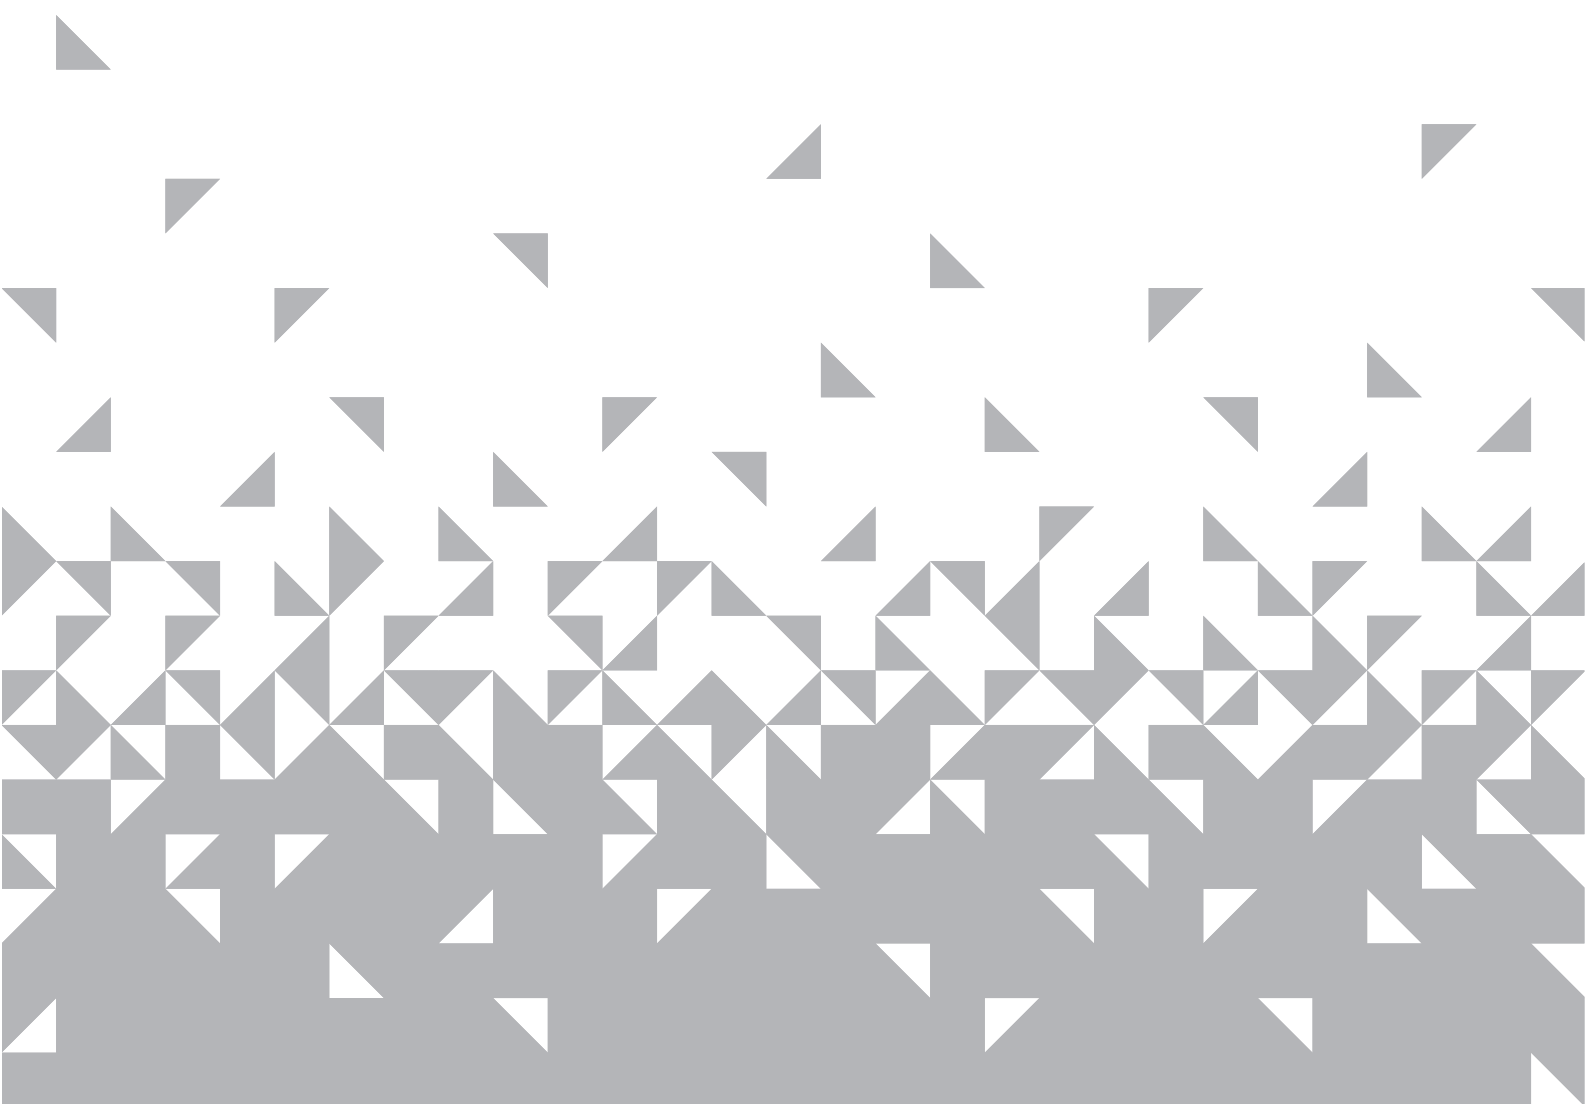



Safety information

Important-Please read these instructions fully before installing or operating

The installation of this appliance is best carried out by 2 people.

- Dispose of all packaging carefully and responsibly.
- The appliance is designed for **indoor use only** and must be protected from rain, moisture and extreme temperature variations.
- This appliance is designed for house hold use. **Do not** use the appliance for industrial and commercial use, or any other purpose.
- The appliance **MUST** be positioned on a firm level base.
- **Do not** splash water on the appliance. It may cause electrical parts to fail and result in an electric shock.
- Leave the appliance in its intended place of installation and in its correct orientation for at least 4 hours before switching on to allow the cooling system to settle before first use or after any transportation.
- Your appliance is an environmental friendly product and it contains non CFC/HFC gas substances in the cooling system (Called R600a) and in the insulation (Called cyclopentane) which are potentially flammable if exposed to fire. Therefore, take care not to damage, the cooling circuit/pipes of the appliance in transportation and in use. In case of damage do not expose the appliance to fire,



Safety information

Important-Please read these instructions fully before installing or operating

potential ignition source and immediately ventilate the room where the appliance is situated.

- **Do not** sit, stand or place any other heavy objects on top of the appliance. This could result in injury or damage to the appliance.
- **Do not** allow children to play with the appliance to avoid the risk of entrapment and suffocation.
-  **WARNING!** Keep ventilation opening, in the appliance enclosure or in the built-in structure, clear of obstruction.

During use

- This appliance is not intended for use by persons (including
-  **WARNING!**
Do not use mechanical,

children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

- This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely. Young children should be supervised to ensure that they do not play with the appliance.



Safety information

Important-Please read these instructions fully before installing or operating

electrical or chemical way to speed up the defrost process not recommended by the manufacturer.

- **! WARNING!**
Do not use or place other electrical products inside the appliance not recommended by the manufacturer.
- **Do not** store liquids in glass containers in the freezer compartment as these may shatter.
- **Do not** store flammable materials such as alcohol, gasoline, LP gas or glue etc in the appliance.
- In case there is an inflammable gas leaking, open the window for air circulation and do not pull out the plug or turn the temperature knob. **Do not** touch the appliance until the valve of gas is turned off. Otherwise, sparks may happen.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- **Do not** attempt to repair the appliance yourself. Contact the Customer Helpline:0345 257 7271.



Safety information

Important-Please read these instructions fully before installing or operating

- Children aged from 3 to 8 years are allowed to load and unload this appliance.
- **⚠ WARNING!** When positioning the appliance, ensure the supply cord is not trapped or damaged.
- **⚠ WARNING!** Do not locate multiple portable socket-outlets or portable power suppliers at the rear of the appliance.
- **CORD ENTANGLEMENT HAZARD**
The cable of the appliance can give rise to risks of entanglement, strangulation or tripping if not correctly placed.
You must make sure that the electric cable is positioned safely.
- To avoid contamination of food, please respect the following instructions:
 - Opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance.
 - Clean regularly surfaces that can come in contact with food and accessible drainage systems
 - Clean water tanks (where available) if they have not been used for 48h; flush the water system connected to a water supply if water has not been drawn for 5 days.
 - Store raw meat and fish in suitable containers in the refrigerator, so that it is not in contact with or drip onto other food.
 - Two-star frozen-food compartments(if they are presented in the appliance) are suitable for storing pre-frozen food, storing or making ice-cream and making ice cubes.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions,



Safety information

Important-Please read these instructions fully before installing or operating

One-, two- and three-star compartments (if they are presented in the appliance) are not suitable for the freezing of fresh food.

- If the appliance is left empty for long periods, switch off, defrost, clean, dry and leave the door open to prevent mould developing within the appliance.
- The refrigerating appliance is not intended to be used as a built-in appliance, unless specifically shown as such in its instruction manual.
- The drawers, baskets and shelves should be kept in their current position unless otherwise specified in this document.



• **WARNING!**

Risk of fire / Flammable Materials.

• **WARNING!**

 

During using, service and disposal the appliance, please pay attention to symbol similar as left side, which is located on rear of appliance (rear panel or compressor) and with yellow or orange color. It's risk of fire warning symbol. There are flammable materials in refrigerant pipes and compressor. Please be far away fire source during using, service and disposal.

-  **WARNING!** Do not damage the refrigerant circuit.



Getting to know your refrigerator

2

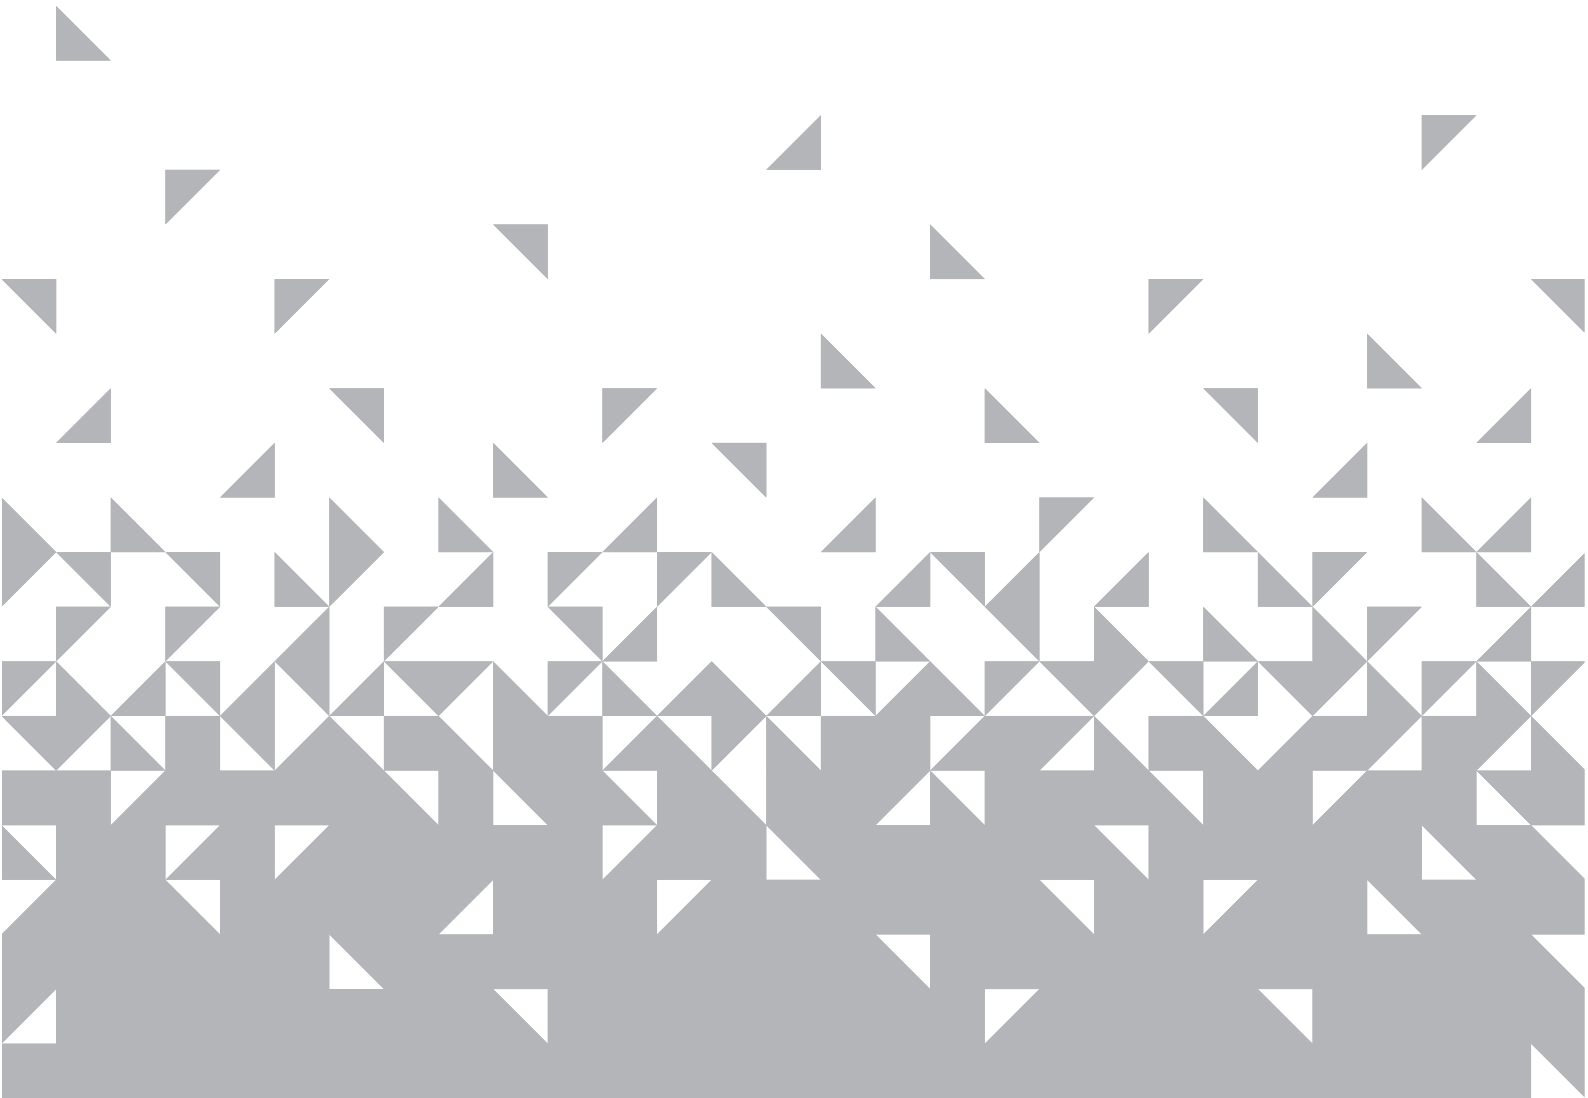

Getting to know your refrigerator

You'll be up and running in no time

Ready? Let's begin...


Please read these instructions carefully. They contain important information which will help you get the best from your refrigerator and ensure safe and correct installation and operation

If you require any further assistance, our technical experts are happy to help. For full details, refer to the product support section at the end of these instructions.


Getting to know your refrigerator

You'll be up and running in no time

Parts

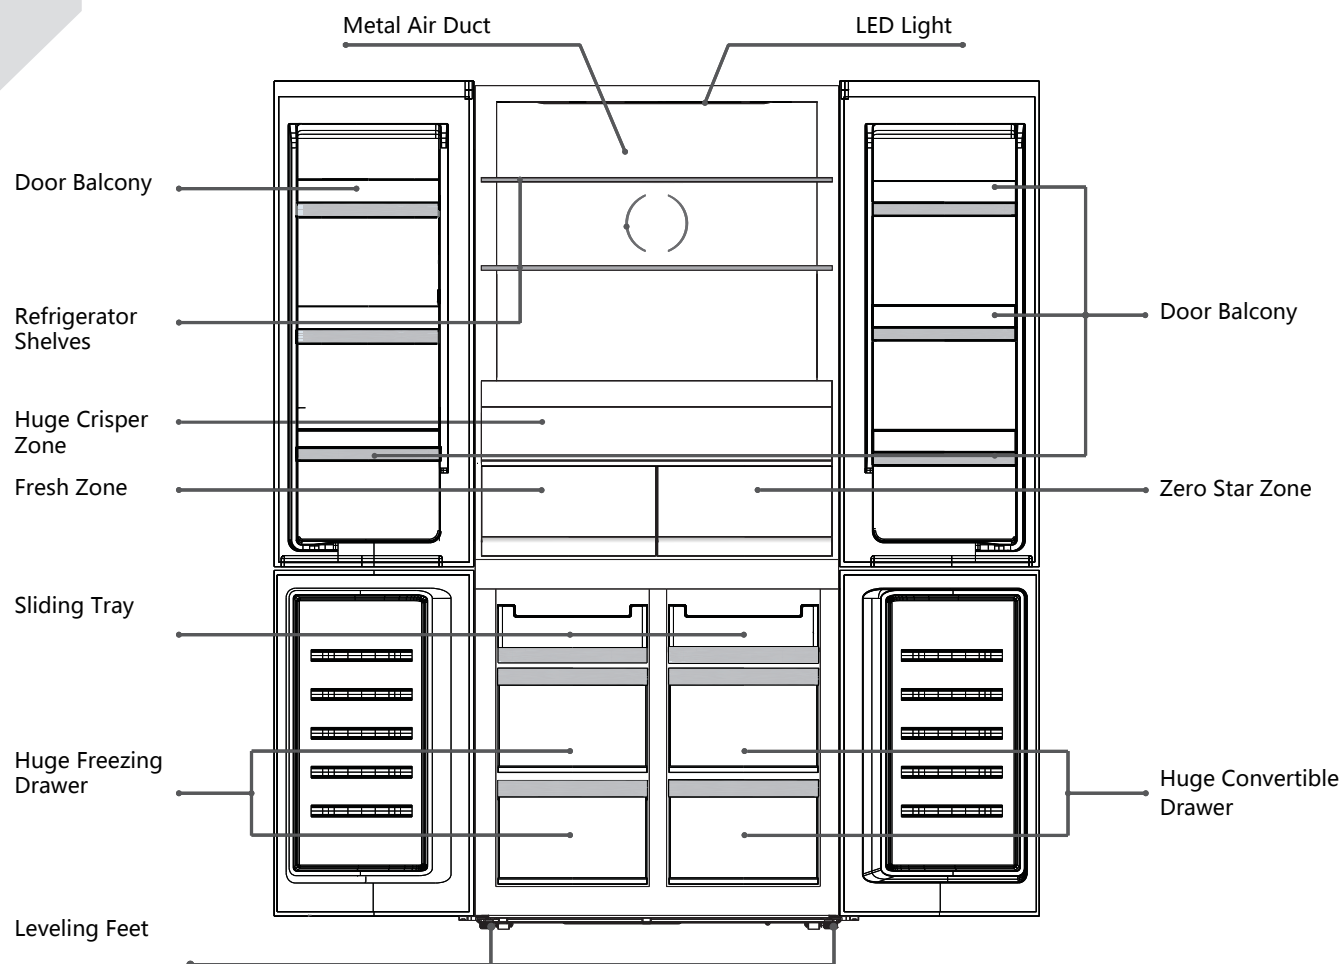


Accessories included

 


Instruction Manual



C type washers

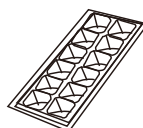

Ice tray

 


Egg tray

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions,

Installing your refrigerator

3

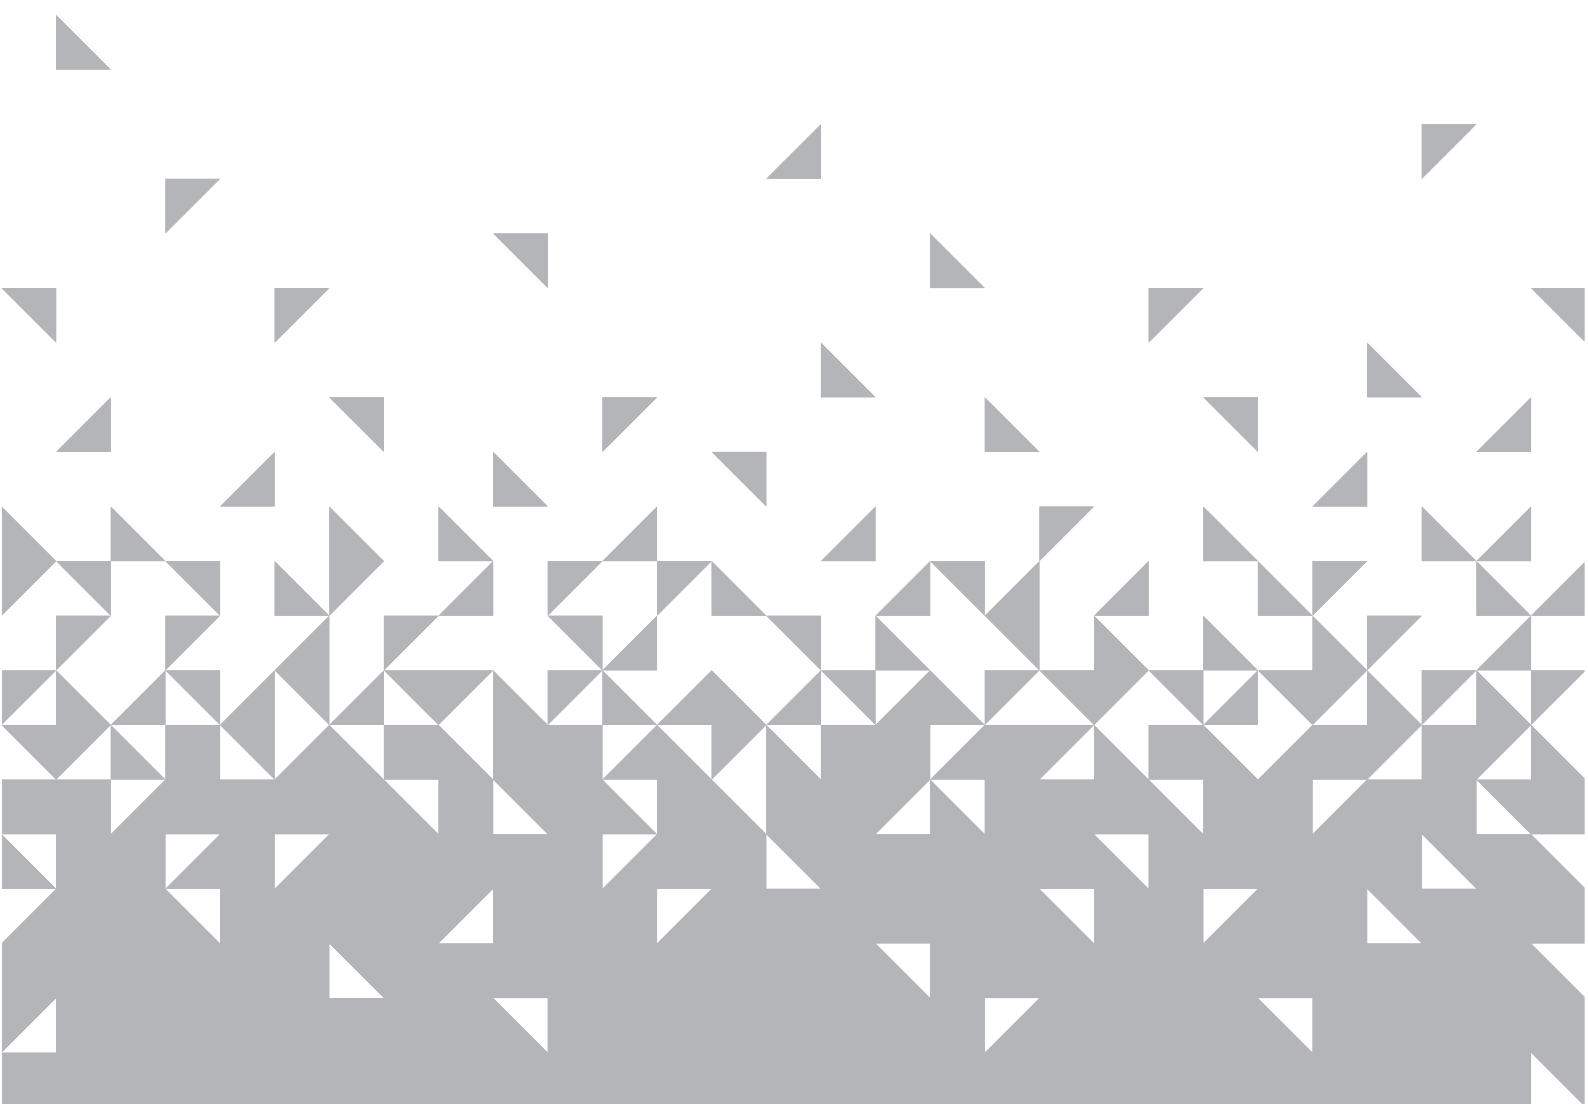

Installing your refrigerator

Bringing it all together

Transportation



Caution: 2 people are required to unpack and handle the appliance, it is recommended that gloves are worn.

- The appliance should be transported only in an upright position. Do not tilt the appliance greater than 45 degrees. The packaging as supplied must be intact during transportation.
- After transporting the appliance, leave it for at least 4 hours before switching on to allow the cooling system to settle. Failure to comply could result in damage to the appliance.
- Do not move the appliance by pulling the door or handle as it may damage your flooring and wall coverings etc.
- Empty any water in the drain tray (if it is presented in the appliance) before moving.
- Make sure that the defrost water pipe at the back of the product is fixed to the plastic evaporating pan (if it is presented in the appliance) placing next to the compressor, to avoid defrost water spillage on the floor.
- Ensure the electrical cable is not caught under the appliance during and after moving
- Carefully remove all packaging materials including the foam base, dispose of correctly

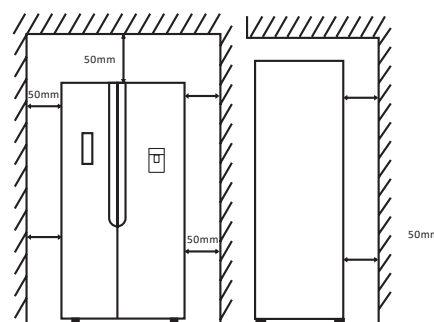


Fig.1

Installation

- Ensure sufficient spacing is provided for the appliance to be installed. Leave space on both sides (5cm), back (5cm) and above the appliance (5cm) to ensure proper ventilation and door opening. See fig. 1&2
- Do not place the appliance near a heat source or in direct sunlight
- Do not put any heavy objects on top of the appliance. It will damage the appliance.
- Do not install the appliance in a moist or wet place. It should be installed on a smooth surface to avoid excessive vibration and noise.
- The appliance is equipped with two castors on the bottom side for easy movement. Ensure the two leveling feet on the front side have been screwed upwards. Then move the appliance to the right location.
- Screw the leveling feet downwards to fix the appliance in place.


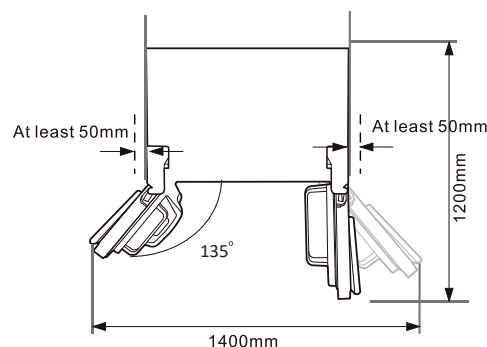


Fig.2

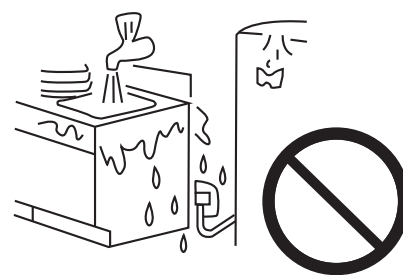

Installing your refrigerator


Bringing it all together

- Try some operations, i.e. Open/close door to confirm the appliance will not move under normal usage/operation. If the appliance moves, adjust the leveling feet again until it is fixed and do not move (See fig.3).
- If you need to relocate the appliance, please ensure the leveling feet on the front side have been screwed upwards before you move the appliance.
- Each appliance has a climate class (shown on the rating plate) that indicates the operating temperature range of the appliance. The appliance may not work properly if it is left for a long period at a temperature outside the specified range:
 extended temperate (SN): 'this refrigerating appliance is intended to be used at ambient temperatures ranging from 10 °C to 32 °C (from 50°F to 90°F)';
 temperate (N): 'this refrigerating appliance is intended to be used at ambient temperatures ranging from 16 °C to 32 °C (from 61°F to 90°F)';
 subtropical (ST): 'this refrigerating appliance is intended to be used at ambient temperatures ranging from 16 °C to 38 °C (from 61°F to 100°F)';
 tropical (T): 'this refrigerating appliance is intended to be used at ambient temperatures ranging from 16 °C to 43 °C (from 61°F to 110°F)'

- Refer to section “Care and Maintenance” to prepare your appliance for use.

Space Requirement

- Keep enough space of door open.

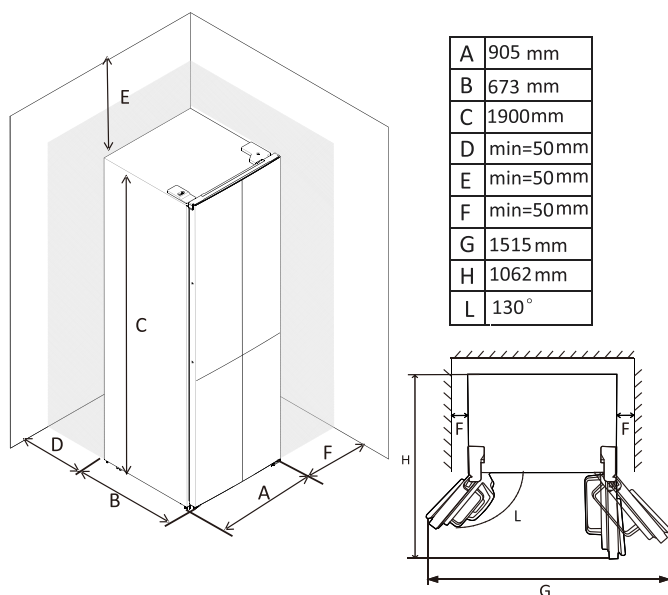

Levelling the unit

To do this adjust the two levelling feet at front of the unit.

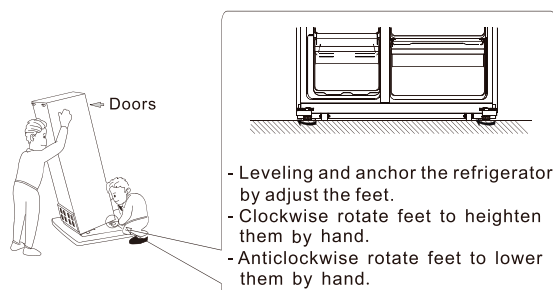


Fig.3

Level doors


After transportation or door balconies are loaded by food or beverage, upper two doors may not be aligned. There are 3 C type washers which are used to adjust doors. Please follow below process to level doors.



1. Before check alignment of doors, please make sure appliance stand levelly.
2. If top of upper two doors looks not in a line, please slightly lift lower door and insert a pieces of C type washer by a clip between bottom of door and middle hinge.

Installing your refrigerator

Bringing it all together

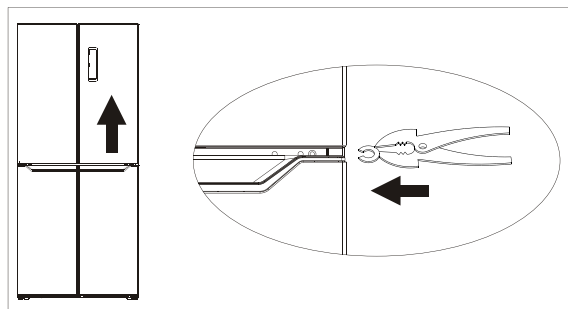


Warning! Please be careful to avoid fingers are clipped by door. Please use tool.



Warning! Please keep C type washers far away children to avoid them are swallowed by children. They are small parts.

Rubber blocks

 There is one rubber block on each door. They function as spring to relieve impact when door closes .



Please do not pull the rubber blocks. If they are absent from the doors, please take one from accessory bag and insert it to the hole of door.

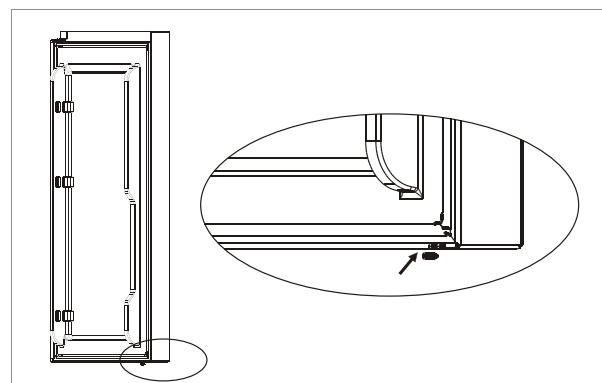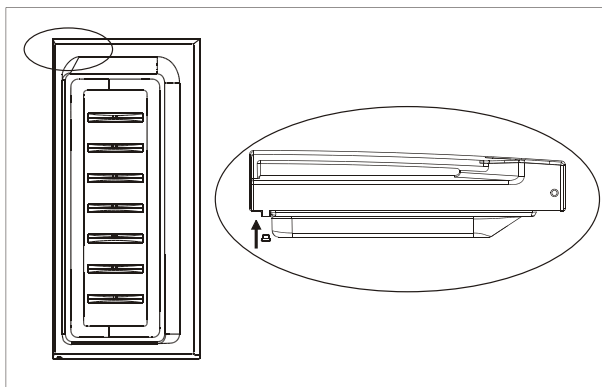

Warning! Please keep rubber blocks far away children to avoid them are swallowed by children. They are small parts.

Positioning

Install this appliance at a location where the ambient temperature corresponds to the climate class indicated on the rating plate of the appliance:

for refrigerating appliances with climate class:

- extended temperate: this refrigerating appliance is intended to be used at ambient temperatures ranging from 10 °C to 32 °C; (SN)
- temperate: this refrigerating appliance is intended to be used at ambient temperatures ranging from 16 °C to 32 °C;(N)
- subtropical: this refrigerating appliance is intended to be used at ambient temperatures ranging from 16 °C to 38 °C;(ST)
- tropical: this refrigerating appliance is intended to be used at ambient temperatures ranging from 16 °C to 43 °C;(T)

Location

The appliance should be installed well away from sources of heat such as radiators, boilers, direct sunlight etc. Ensure that air can circulate freely around the back of the cabinet. To ensure best performance, if the appliance is positioned below an overhanging wall unit, the minimum distance between the top of the cabinet and the wall unit must be at least 50 mm. Ideally, however, the appliance should not be positioned below overhanging wall units. Accurate leveling is ensured by one or more adjustable feet at the base of the cabinet.

This refrigerating appliance is not intended to be used as a built-in appliance;

Warning! It must be possible to disconnect the appliance from the mains power supply; the plug must therefore be easily accessible after installation.

Electrical connection

Before plugging in, ensure that the voltage and frequency shown on the rating plate correspond to your domestic power supply. The appliance must be earthed.

The power supply cable plug is provided with a contact for this purpose. If the domestic power supply socket is not earthed, connect the appliance to a separate earth in compliance with current regulations, consulting a qualified electrician.

The manufacturer declines all responsibility if the above safety precautions are not observed.

Installing your refrigerator

Bringing it all together

Electrical connection



Any electrical work that is required to install this appliance **MUST** be carried out by a qualified electrician.



Warning: THIS APPLIANCE MUST BE EARTHED

 

Before making any electrical connections, ensure that:

- Electrical safety is only guaranteed when the earth system of your house is in accordance with the related local regulations.
- Do not damage the refrigerant circuit.
- Do not bend, stretch or pull the supply cable to avoid electric shock.
- Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- Ensure the power socket is suitable for the maximum power of the machine (fuses in the power circuit must be 13 amp).
- The supply voltage should be the same as that indicated in the technical specifications and the appliance rating plate.
- The appliance should be earthed and in compliance with the applicable law.
- When installed, the power socket must be within easy reach.
- If the socket outlets in your home are not suitable for the plug supplied with this unit check with a qualified electrician for replacement.
- To avoid the risk of overloading your plug socket; adapters multiple connectors or extension cables should not be used.
- The appliance must be connected to a 220-240 volt 50Hz AC supply by means of a three pin socket, suitably earthed and protected by a 13 amp fuse.
- Should the fuse need to be replaced, a 13 amp fuse approved to BS1362 must be used.
- The plug contains a removable fuse cover that must be refitted when the fuse is replaced. If the fuse cover is lost or damaged, the plug must not be used until a replacement cover has been fitted or the plug is replaced.
- A damaged plug should be cut off as close to the plug body as possible, the fuse should be removed and the plug disposed of safely.

or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 257 7271.



Using your refrigerator 4

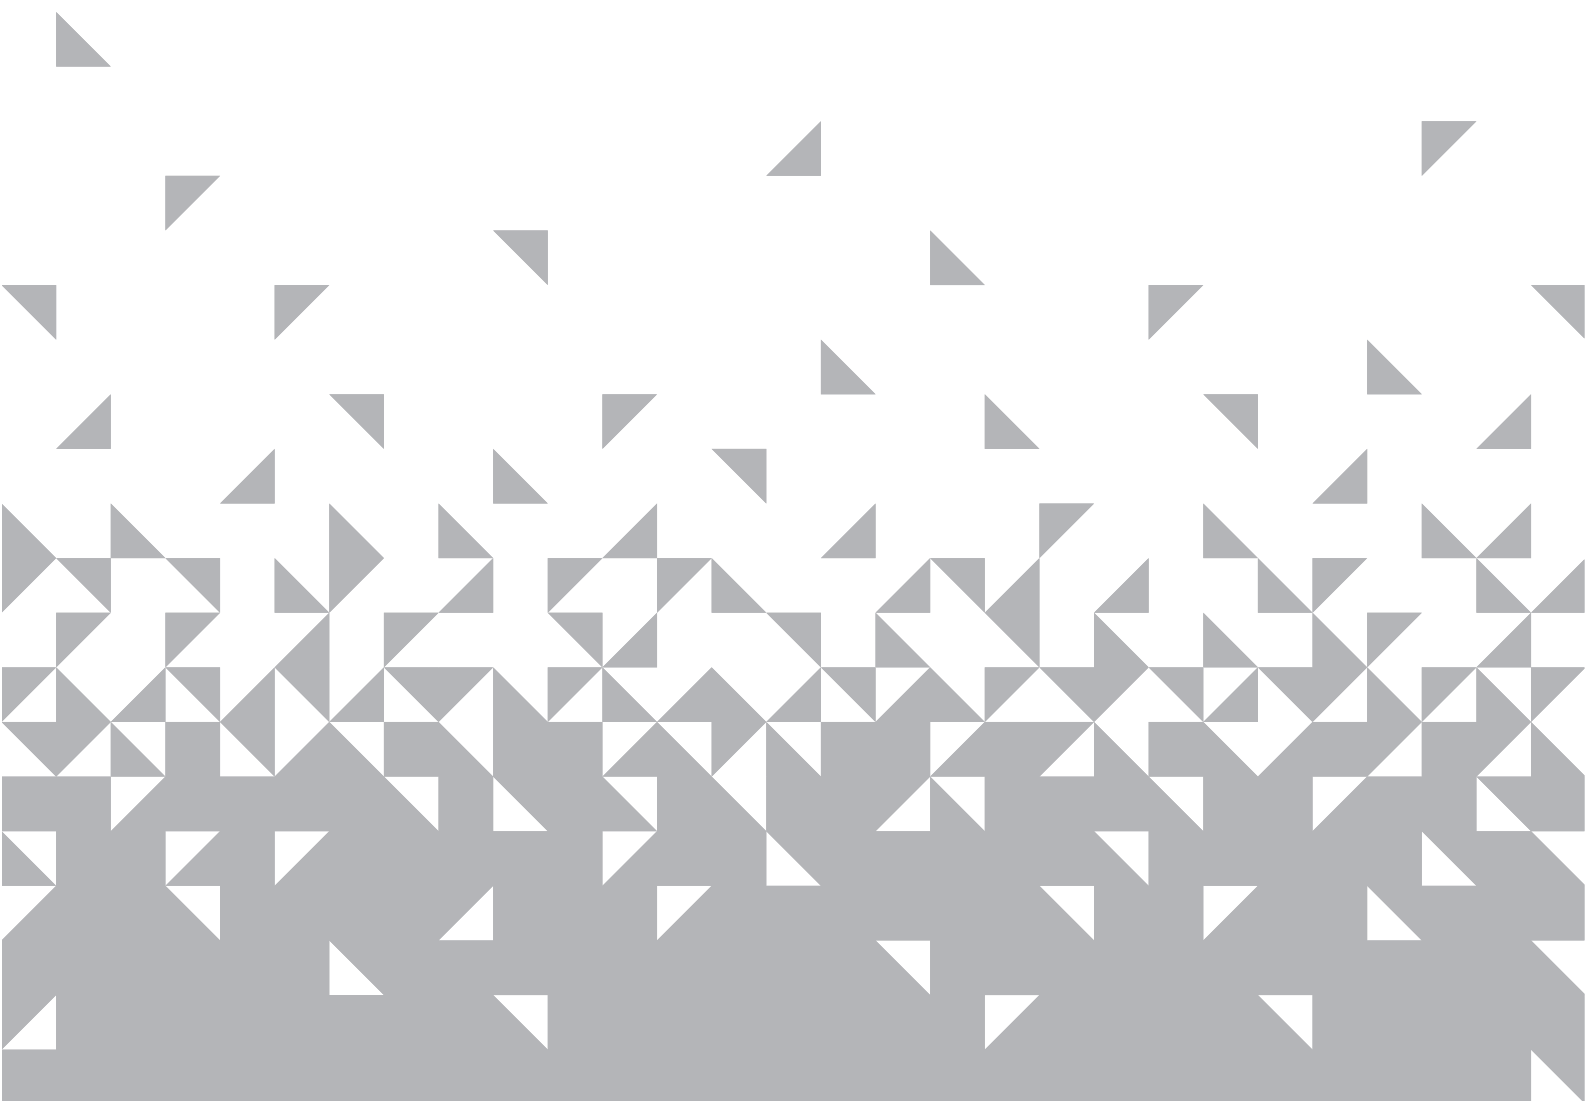

Using your refrigerator

Getting the most from your appliance

Before first use


Final checks before operating the appliance

1. Good air circulation around the appliance .
2. The feet have been adjusted for perfect levelling.
3. Clean the compartment per recommendation in section “Care and Maintenance”
4. Plug in the appliance and the interior light will come on when the door is open.



The compressor starts up and in operation may produce some background noise .It is normal, this is not a defect.

Using the Control Panel

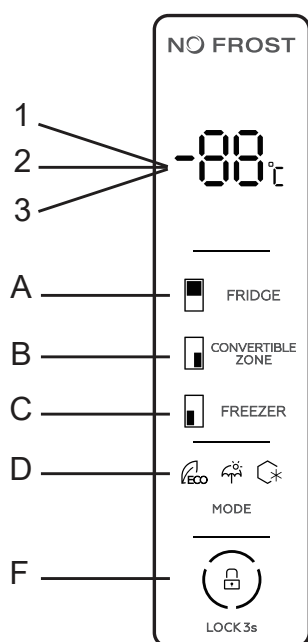

1.1 CONTROL BUTTONS

- A. Fridge Temperature Setting
- B. Convertible Zone Temperature Setting
- C. Freezer Temperature Setting
- D. Mode Selection (ECO, Holiday, Super Freezing, User defined)
- F. Lock / Unlock Function

1.2 LED DISPLAY

1. Temperature of Fridge Compartment
2. Temperature of Freezer Compartment
3. Temperature of Convertible Compartment

2.0 Operating Conditions

- a. When power is restored, the control panel illuminates for 3 seconds and resumes operation with the previous mode and temperature settings. The panel locks automatically 25 seconds after the last button operation, and the display switches off 120 seconds after locking.
- b. The fridge, freezer, and convertible zone temperatures are displayed individually when each zone is selected.

2.1 DISPLAY

2.1.1 The control panel will remain illuminated for 2 minutes when either the fridge or freezer compartment door is opened. Only one door signal is detected at a time.

2.1.2 The control panel will illuminate when any button is pressed and will switch off 2 minutes after the last operation.

2.1.3 Display during normal operation

Fridge Compartment Temperature Display:

Displays the currently set temperature.

Freezer Compartment Temperature Display:

Displays the currently set temperature.

Convertible Compartment Temperature Display:

Displays the currently set temperature.

3.0 ILLUSTRATION OF THE KEY

3.1 Temperature Control of the Fridge Compartment

a. Temperature Control of the Fridge Compartment:

This button can be used in both User defined Mode and Super Mode. When the fridge temperature setting is selected, the indicator will flash. Touch the button repeatedly to cycle through the temperature settings in the following order: 2° C, 3° C, 4° C, 5° C, 6° C, 7° C, 8° C, — — (Off). After 5 seconds without operation, the selected setting will be confirmed automatically.

b. To switch off fridge cooling:

Press the button "Fridge Temperature Setting" and select "— —". When the indicator flashes for 5 seconds, the setting is confirmed and refrigeration in the fridge compartment will stop.

3.2 Temperature Control of the Freezer Compartment

This button can be used in both User defined Mode and Holiday Mode. When the freezer temperature setting is selected, the indicator will flash. Touch the button repeatedly to cycle through the temperature settings in the following order: -14° C, -15° C, -16° C, -17° C, -18° C, -19° C, -20° C, -21° C, -22° C. After 5 seconds without operation, the selected temperature will be confirmed automatically.

Using your refrigerator

Getting the most from your appliance

3.3 Temperature Control of the Convertible Compartment

a. Convertible Compartment Temperature Control:
This button can be used in User defined Mode and other applicable modes. When the convertible compartment temperature setting is selected, the indicator will flash.

Touch the button repeatedly to cycle through the temperature settings in the following order: "5°C, 4°C, 3°C, 2°C, 1°C, 0°C, -1°C, -2°C, -3°C, -4°C, -5°C, -6°C, -7°C, -8°C, -9°C, -10°C, -11°C, -12°C, -13°C, -14°C, -15°C, -16°C, -17°C, -18°C, -19°C, -20°C, — (Off)." After 5 seconds without operation, the selected temperature will be confirmed automatically.

b. Switching Off the Convertible Compartment :
Press the button "Convertible Zone Temperature Setting" and select "— —". When the indicator flashes for 5 seconds, the setting is confirmed and refrigeration in the convertible compartment will stop.

3.4 Mode / Lock / Unlock

a. Mode Selection

Touch this button repeatedly to cycle through the operating modes in the following order: "ECO Mode → Holiday Mode → Super Mode → User defined Mode." When the selected mode icon flashes for 5 seconds, the mode setting is confirmed.

b. Lock / Unlock Function

When the lock symbol is illuminated, the control panel buttons are locked. Press and hold the button for 3 seconds to lock or unlock the control panel. A beep sounds to confirm the operation.

3.5 Button Operation

- A short beep sounds each time a button is pressed.
- All buttons are functional only when the control panel is unlocked.

3.6 Automatic Lock

If there is no operation for 25 seconds, the control panel will lock automatically.

3.7 ECO Mode

Select this mode to reduce energy consumption.

- Press the Mode button repeatedly to select ECO Mode.
- After the ECO indicator flashes for 5 seconds, ECO Mode is activated.
- In ECO Mode, the fridge and freezer temperatures are set automatically to energysaving defaults.

Ambient temperature (T)	T≤13°C	13°C<T≤20°C	20°C<T≤27°C
Fridge temperature	3°C	4°C	5°C
Freezer temperature	-18°C	-18°C	-18°C

Ambient temperature (T)	27°C<T≤34°C	T>34°C
Fridge temperature	6°C	8°C
Freezer temperature	-16°C	-15°C

In ECO Mode, the "Freezer" and "Fridge" temperature buttons are disabled. The temperature of the convertible compartment can still be adjusted using the convertible zone temperature setting.

To exit ECO Mode:

Press the Mode button to select another mode. After 5 seconds, ECO Mode will exit and the selected mode will be activated.

or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 257 7271.

3.8 Holiday Mode

Use this mode when you are away for an extended period. The fridge compartment is switched off, while the freezer compartment continues operating to save energy.

- Press the Mode button repeatedly to select Holiday Mode. After the icon flashes for 5 seconds, Holiday Mode will be activated and the icon will remain illuminated.
- The fridge compartment temperature is fixed at 17°C. The Fridge temperature button is disabled; pressing it will cause the Holiday icon to flash three times.
- The freezer compartment and convertible compartment temperatures can be adjusted freely.

To exit Holiday Mode:

Press the Mode button to select another operating mode. After 5 seconds, Holiday Mode will exit and the selected mode will be activated.

3.9 Super Mode

Press the Mode button repeatedly to select Super Freezing Mode. After the icon flashes for 5 seconds, the mode is activated and the icon will remain illuminated.

- The freezer compartment temperature is fixed at -25°C.
- The Freezer temperature button is disabled; pressing it will cause the Super Freezing icon to flash three times.
- The fridge compartment and convertible compartment temperatures can be adjusted freely.

Exiting Super Freezing Mode:

Super Freezing Mode will end automatically when one of the following conditions is met:

- The mode is exited manually by selecting another operating mode;
- The Super Freezing operation has run for more than 50 hours.

After exiting, the appliance will return to the operating mode used before Super Freezing was activated.

3.10 User defined mode

- Press mode select button **MODE** repeatedly until "ECO mode indicator / Holiday mode indicator / Super mode indicator" are light off, user defined mode is activated.
- In user defined mode, users can set fridge temperature and freezer temperature by manual.


Using your refrigerator

Getting the most from your appliance

4.0 Door Open Alarm

If the fridge (upper) door remains open for more than 60 seconds, a periodic alarm will sound until the door is closed.

Multi-Temperature Zone

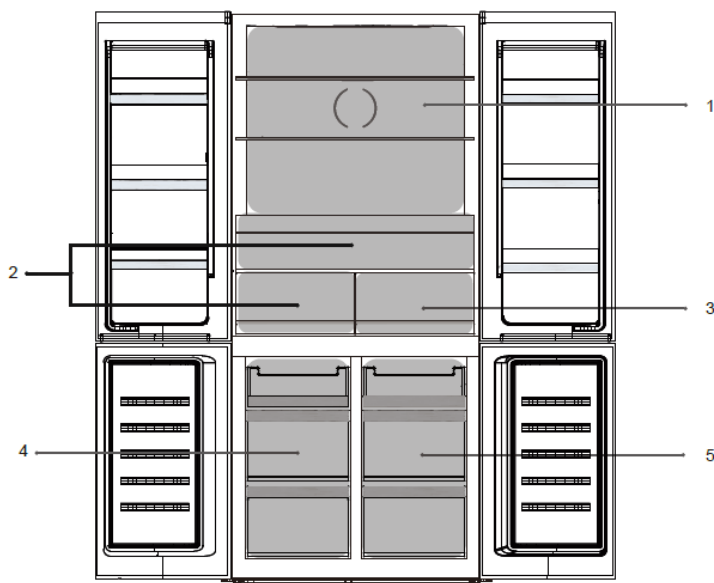

1. Fridge Temperature: Adjustable from 2°C to 8°C / Off, controlled via the display panel.

2. Fresh Compartment Temperature: Adjustable from 2°C to 8°C.

3. Zero Star Zone Temperature: Adjustable from -3°C to 0°C.

4. Freezer Temperature: Adjustable from -22°C to -14°C, controlled via the display panel.

5. Convertible Zone Temperature: Adjustable from -20°C to 5°C / Off, controlled via the display panel.

5. Storing fresh food

- Use the fridge compartment to store fresh food and drinks.
- Do not exceed the food capacity that the appliance is able to handle.
- Do not put warm food in the appliance immediately as it may cause excessive cooling of the compartment.
- Set the temperature at the recommended setting for storing fresh food.
- Do not mix already frozen food and fresh food.

6. Storing frozen food

• The freezer compartment is 4 Star rated and suitable for the freezing and storage of pre frozen food.

• Check the food packaging for  suggestio before storage.

7. Thawing

Deep-frozen or frozen food, prior to be used, can be thawed in the fridge compartment or at room temperature, depending on the time available for this operation. Small pieces may even be cooked still frozen, directly from the freezer. In this case, cooking will take longer.

8. Ice-cube Tray

This appliance may be equipped with one or more ice-cube Tray to produce ice.

9. Movable compartment glass shelves

The walls of the refrigerator are equipped with a series of runners so that the shelves can be positioned as desired.

10. Positioning the door shelves

• To permit storage of food

packages of various sizes, the door balconies can be placed at different heights. To make these adjustments



proceed as follows: gradually pull the balcony in the direction of the arrows until it comes free, then reposition as required.

11. Door

The door should be closed as soon as possible after use. When the door is opened more than 60 seconds, an alarm will alert you for a few seconds, and it repeats each 30 seconds. The door is allowed to open at a maximum angle of 135°.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions,

Using your refrigerator

Getting the most from your appliance

Useful information

The following guidelines and recommendations are suggested to obtain the best results and storage hygiene.

- Frequent door openings can cause internal temperature to rise so the door should be closed as soon as possible after use.
- For hygiene reasons, it is always a good practise to pack, wrap and cover the food before storing.
- Use a polythene bag to store raw meat and place on the lowest shelf. Avoid contact with cooked food to prevent contamination. For safety reasons, store raw meat for two to three days only.
- Cooked dishes must be stored in airtight covered containers.
- Food and beverages should cool to room temperature before storing.
- Most vegetables should be blanched and chilled before freezing.
- Bottles can be placed in the door section.
- Some fruits and vegetables like pineapples, melons, tomatoes, and cucumbers should be wrapped in polythene bags.
- Do not leave frozen food at room temperature to thaw. You could defrost the food by putting it in the fridge to thaw slowly. Make sure you avoid defrosting food dripping food juices onto other food.

Energy saving tips

- Place your fridge away from direct sunlight, your oven or any other heat sources. Allow 20 cm clear space on both sides and above, and at least 5 cm behind.
- Cover all food stored, and arrange it so that cold air can circulate freely.
- Higher cold setting will use more energy. Do not set to maximum cold if it is not necessary.
- Cool the hot/warm food to room temperature before putting them into your fridge.
- Frequently opening and closing the door

would cause the internal temperature to rise and it will consume more energy.

- Close the door(s) properly, and make sure the seals and hinges are airtight. Check the seals by putting a sheet of paper between the door and the main body of the fridge. If the paper moves, your seals need replacing.
- Defrost regularly if your refrigerator is not a frost-free or cyclic defrost model. Accumulated ice layer should not be more than 5 mm thick.
- The pre-set combination of drawers, baskets and shelves have already been set in the most efficient way for use of this product.

Defrosting

Fridge Compartment

- The fridge compartment defrosts automatically. The defrosting water runs through the drain port to the drain tray at the back of the appliance.
- In the case, that some droplets may remain inside the compartment and re-freeze, after the defrosting cycle, this is normal. Do not use pointed or sharp objects, i.e. knives or forks, to remove the droplets which have frozen.
- Check the collection channel to ensure that no food particles have blocked the drain channel.

Freezer Compartment

To help you make the most of the freezing process, here are some important hints:

- the maximum quantity of food which can be frozen in 24 hrs. is shown on the rating plate;
- the freezing process takes 24 hours. No further food, to be frozen should be added during this period;
- only freeze top quality, fresh and thoroughly cleaned, foodstuffs;
- prepare food in small portions to enable it to be rapidly and completely frozen and to make it possible to thaw only the quantity required;

Using your refrigerator

Getting the most from your appliance

Position different food in different compartments according to be below table

Refrigerator compartments	Type of food
Door or balconies of fridge compartment	• Foods with natural preservatives, such as jams, juices, drinks, condiments. • Do not store perishable foods.
Crisper drawer (salad drawer)	• Fruits, herbs and vegetables should be placed separately in the crisper bin. • Do not store bananas, onions, potatoes, garlic in the refrigerator.
Fridge shelf – bottom	• Raw meat, poultry, fish (for short-term storage)
Fridge shelf – middle	• Dairy products, eggs
Fridge shelf – top	• Foods that do not need cooking, such as ready-to-eat foods, deli meats, leftovers.
Freezer drawer(s)/shelf	• Foods for long-term storage. • Bottom drawer/shelf for raw meat, poultry, fish. • Middle drawer/shelf for frozen vegetables, chips. • Top drawer/shelf for ice cream, frozen fruit, frozen baked goods.
Door or balconies of freezer compartment	• Small foods like ice cream, pizza.

Daily Use

Temperature setting recommendation

Temperature Setting Recommendation		
Environment Temperature	Temperature Setting	
Summer (Above 38°C)	NO FROST -88°C FRIDGE CONVERTIBLE ZONE FREEZER ECO FRESH LOCK 3s	Fridge set on 2°C
		Freezer set on -20°C
Normal		Fridge set on 4°C
		Freezer set on -18°C
Winter (Below 16°C)		Fridge set on 5°C
		Freezer set on -18°C

- Information above give users recommendation of temperature setting.
- Temperature of convertible zone setting depends on food type.

Tips for Storing Foodstuffs

- The quantity of fresh food that can be frozen within a specific period is indicated on the rating plate.
- Load limits apply to baskets, drawers, shelves, flaps, and similar components. After loading, ensure that all components can still close easily and fully.


Impact on Food Storage

- Under Recommended setting, the best storage time of fridge is no more than 3 days.
- Under Recommended setting, the best storage time of freezer is no more than 1 month.
- The best storage time may reduce under other settings.

or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 257 7271.



Care and Maintenance 5

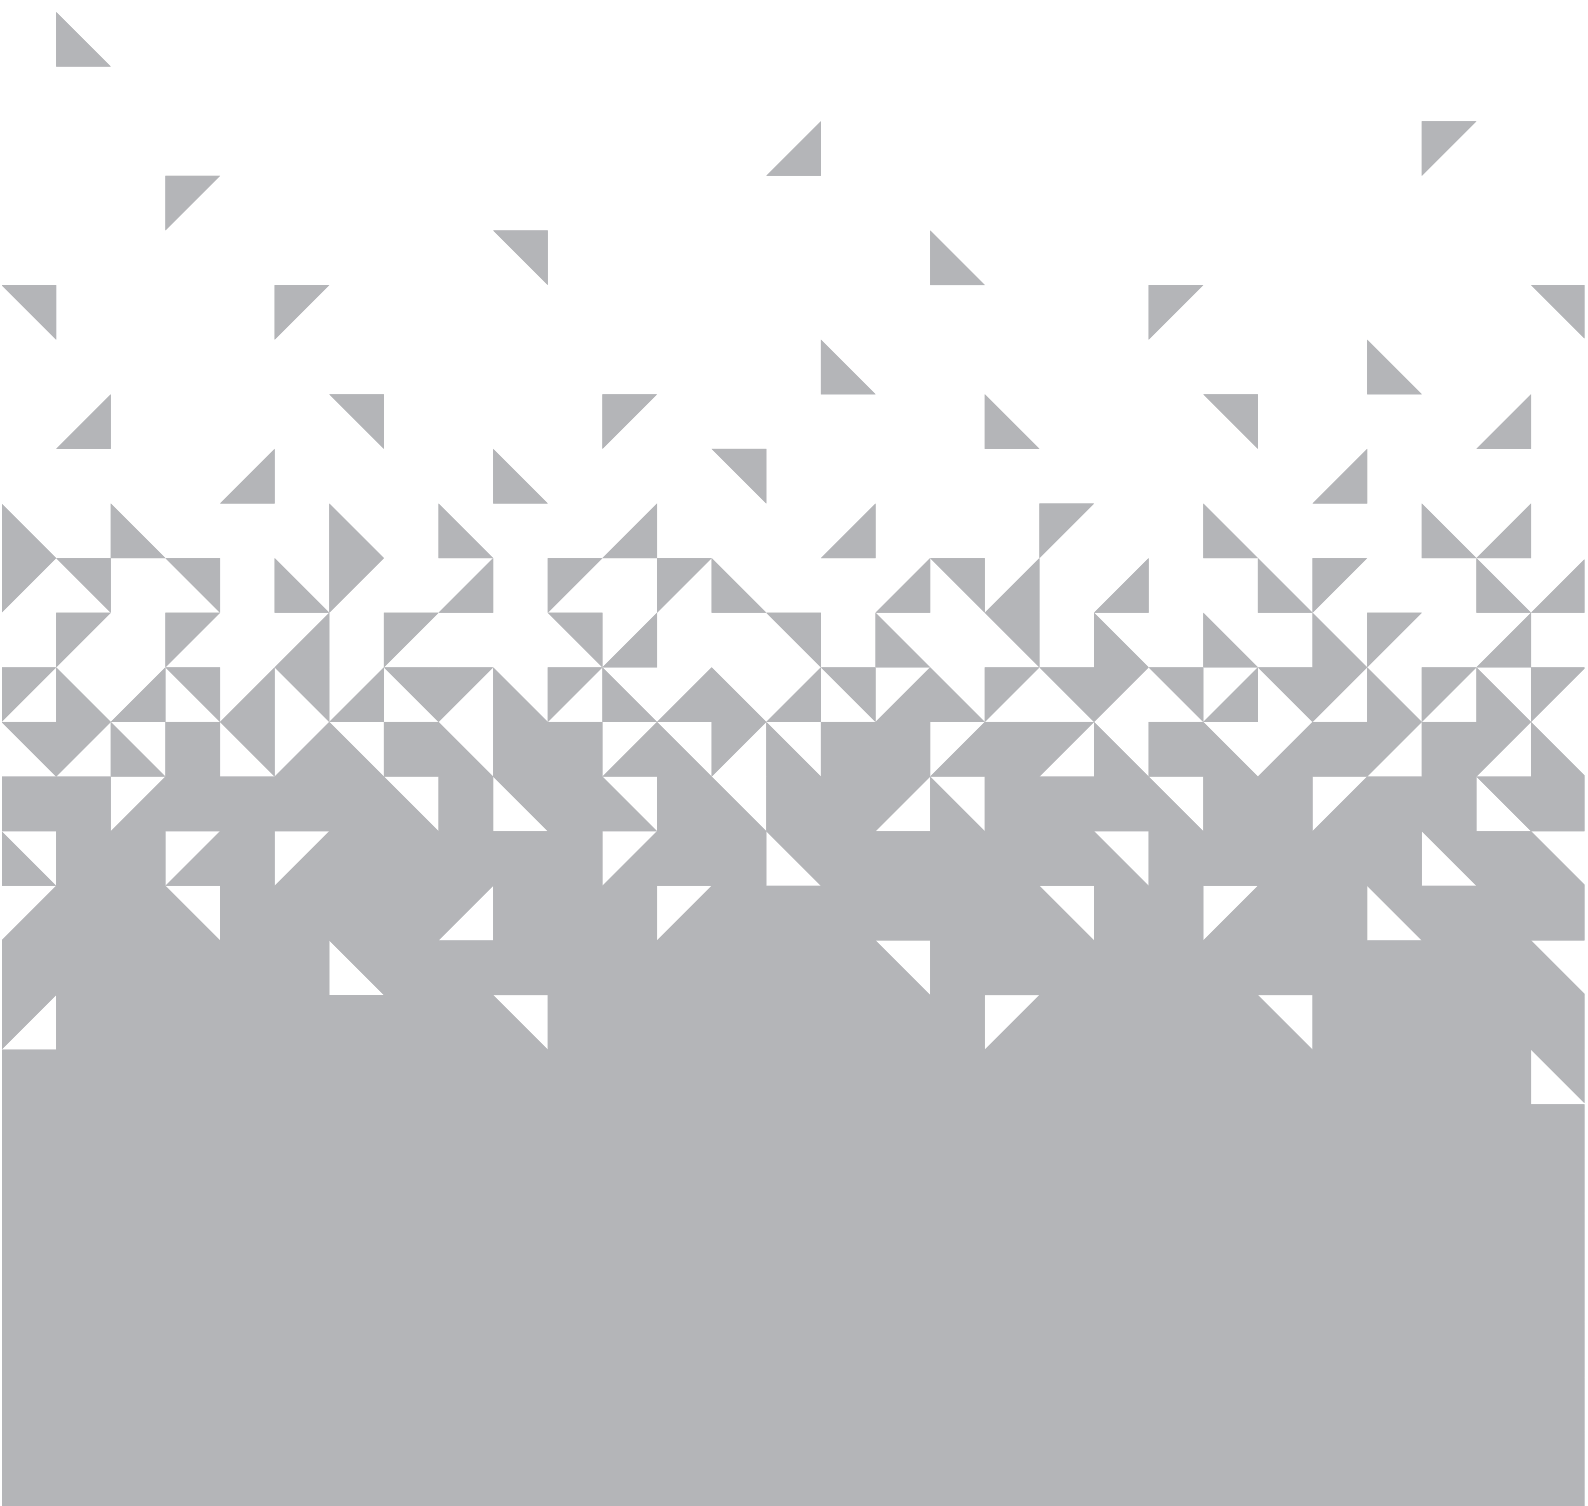

Care and maintenance

Looking after your appliance

General



Important: Always unplug the appliance from the power socket during cleaning and maintenance.

- Never use any sharp instruments or abrasive substances, soap, household cleaner, detergent or wax polish for cleaning.
- Use luke warm water to clean the cabinet of the appliance and wipe it dry.
- Never clean the appliance with flammable fluids. It could cause damage and a fire hazard.
- Clean the exterior of the appliance and door seal with a damp cloth and dry it through.
- Avoid water going into the temperature control box.. Clean with a dry cloth only.
- Clean the condenser (located at the back of the appliance) with a vacuum cleaner. It is suggested to remove the dust every year.
- Shelves are all removable for cleaning purpose.
- For hygienic reasons, the interior of the appliance, including interior accessories, should be cleaned regularly.



Important!

- Do not clean the appliance while it is connected to the power supply, as this may result in electric shock.
- Never clean the appliance using a steam cleaner. Steam and moisture may penetrate electrical components, resulting in electric shock or damage. Hot steam may also damage plastic parts.
- Essential oils and organic solvents may attack plastic parts (e.g. lemon juice, juice from orange peel, butyric acid, or cleaners containing acetic acid). Do not allow such substances to come into contact with appliance components.
- Do not use abrasive or aggressive cleaning agents.
- Ensure that the appliance is completely dry before reconnecting it to the mains supply and placing it back into operation.

Cleaning Procedure

- Remove all food from the freezer and store it in a cool place, well covered.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions,

- Switch off the appliance and disconnect it from the mains supply by unplugging it.
- Clean the appliance and interior accessories using a soft cloth and lukewarm water.
- After cleaning, wipe surfaces with clean water and dry thoroughly.

After all parts are completely dry, reconnect the appliance to the mains supply and return it to operation.



Important: Care must be taken while cleaning/carrying the appliance not to touch the bottom of the condenser metal wires at the back of the appliance, as this could cause injury to fingers and hands.

Light bulb replacement

This appliance is equipped with an LED light . It can be used for a long time. If the LED light is blown, it must be replaced by a qualified person

to avoid any hazard. Contact the service agent at 0345 257 7271.

Power failure

In case there is a power failure, you should contact the electricity supply company and take the following actions:

If it is less than 24 hours, keep the doors closed. This will allow the stored food to stay cold as long as possible.

If it lasts more than 24 hours, it is advised to empty the freezer compartment and temporarily store the food in a portable freezer or using artificial ice packs. Try to use up the food which is more easily perishable.

Remarks: A full appliance will stay cold longer than a partially filled one. If ice crystals are still visible on the food, it may be frozen again, although flavour and aroma may be affected. If food is found to be in a poor condition, it is best to throw it away.

Short vacation

There is no need to disconnect the appliance from the mains if you will be away for two to three weeks. Use up the perishable food.

Long vacation

Remove all the food if you are away for three weeks or more. Unplug the appliance and leave the doors open to provide air circulation to prevent odour and mould.

Moving your appliance

Moving

Refer to section “Transportation” under “Installation”

Care and maintenance

Looking after your appliance

Technical Specifications

Model	1909IB
Energy efficiency class	D
Energy consumption Kwh/year	255
Net storage volume fresh food (litres)	343
Net storage volume frozen food (litres)	179
Total net storage (litres)	522
Frozen food compartment rating	4star 
Climate class	SN/N/ST
Operating noise level dB(A)	39
Ambient Temperature Range	10 – 38°C
Defrosting Type	Auto-defrost
Product Dimension	910mmx690mmx1905mm

The model information can be retrieved using the QR-Code reported in the energy label.

The label also includes the model identifier that can be used to consult the portal of the registry at <https://eprel.ec.europa.eu>

This product contains a light source of energy efficiency class G (if present).

Disposal information




The symbol on the product or its packaging indicates that this product may not be treated as household waste . Instead it should be handed over to the applicable collection point for the recycling of electrical and electronic equipment , By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health , which could otherwise be caused by inappropriate waste handling of this product . For more detailed information about recycling this product , please contact your local council office , your household waste disposal service or the shop where the product was purchased .

Remember : Old fridges must be disposed of carefully - older models contain CFC gases that are harmful - if in doubt , contact your local council for details on how to dispose of an old fridge .

Doors and lids of the refrigeration appliance should be removed before disposal in the landfill, to avoid children or animals getting trapped inside.

or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 257 7271.

Product support 6

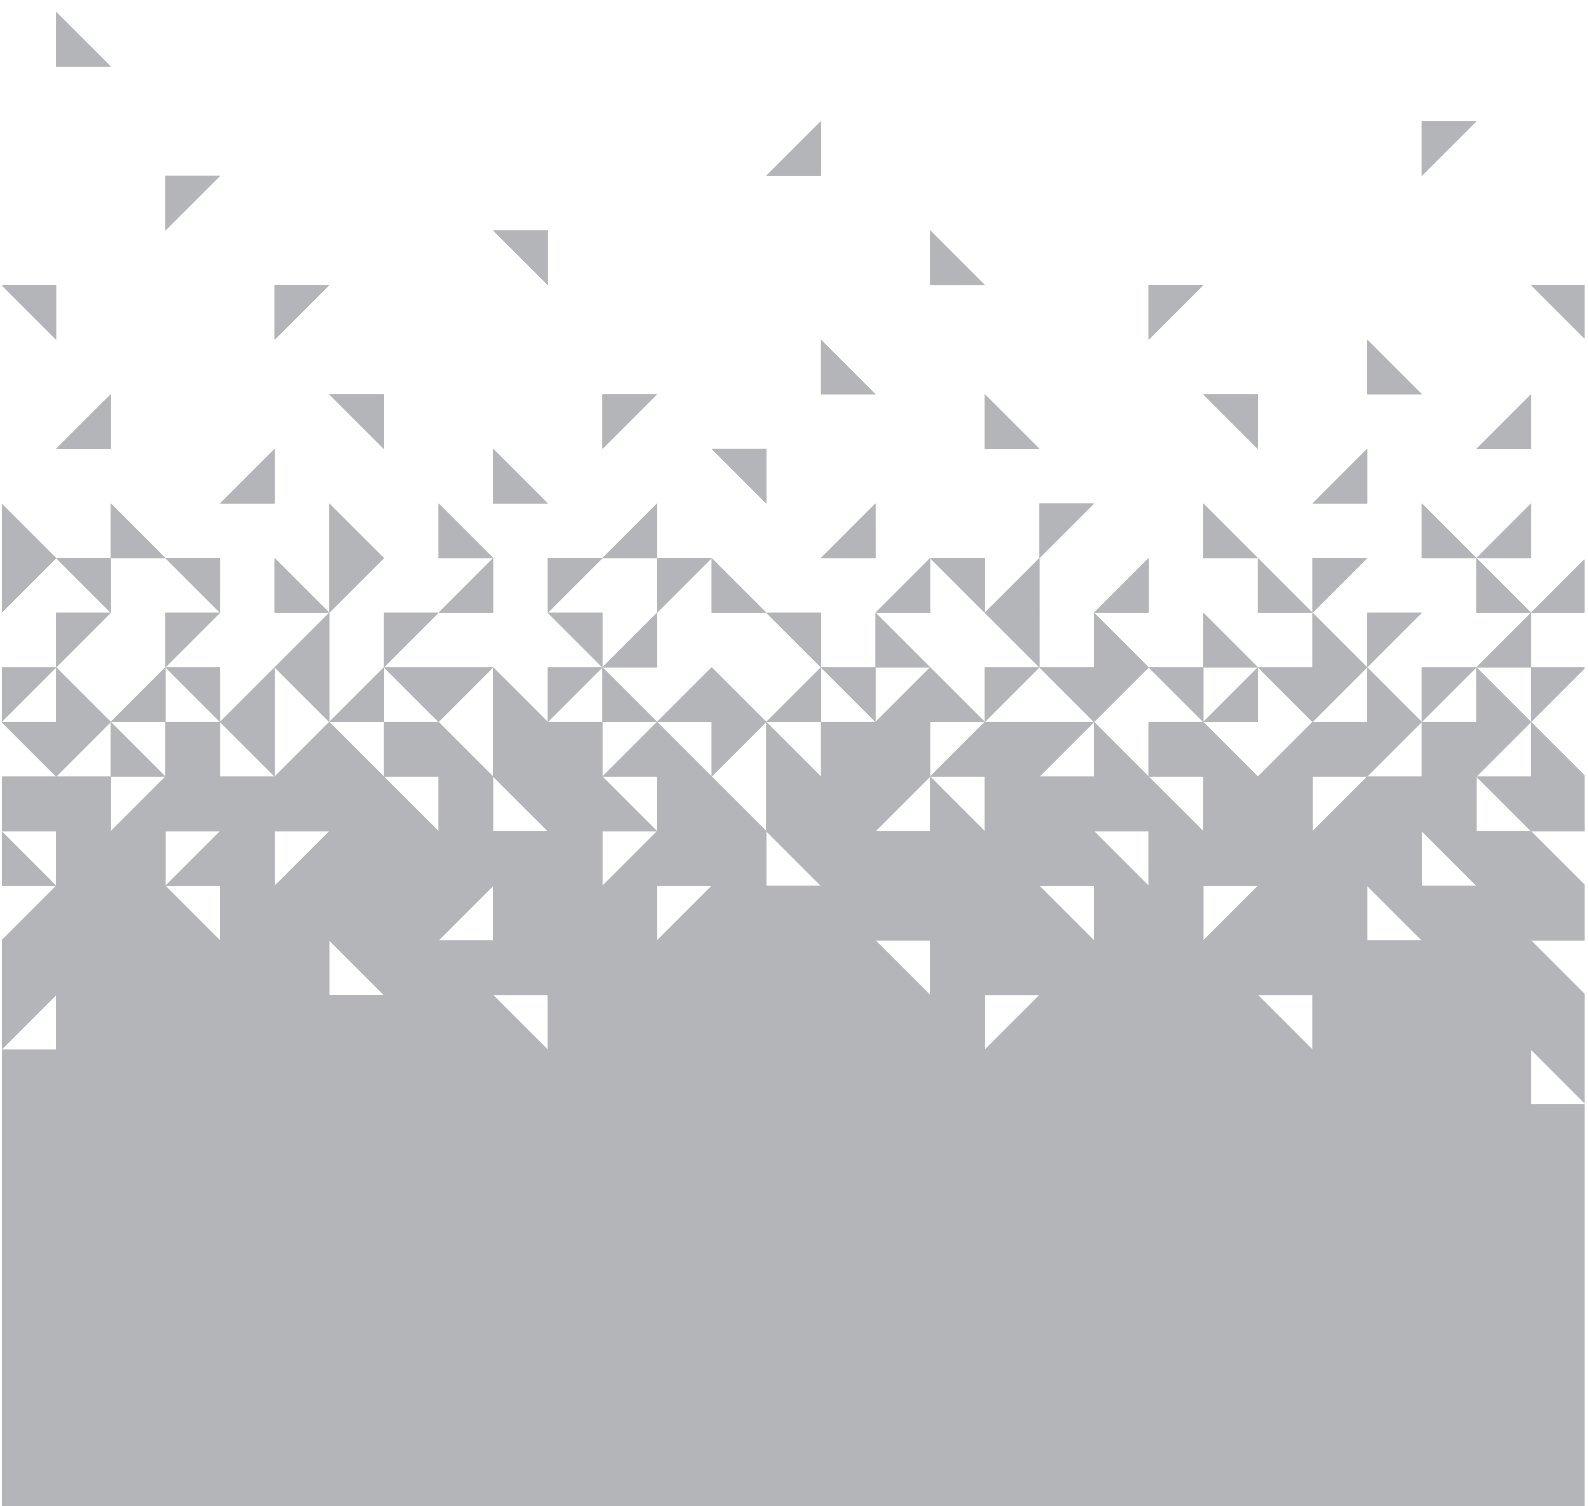

Product support

Help is always at hand

Troubleshooting

If you have a problem with your product, these questions may be able to assist you?

Question- Appliance does not work.

Answer

Appliance is not switched on - Turn on the appliances.

Mains plug is not plugged in or is loose. - Insert mains plug.

Fuse has blown or is defective - Check fuse, replace if necessary.

Socket is defective - Mains malfunctions are to be corrected by an electrician.

Question - Appliance cools too much.

Answer

Temperature is too cold - adjust to a warmer setting.

Question - The food is too warm.

Answer

Temperature is not properly adjusted - adjust to a cooler setting.

Door was open for an extended period - Open the door only as long as necessary.

A large quantity of warm food was placed in the appliance - adjust to a cooler setting.

Cool warm food before placing in the refrigerator.

The appliance is near a heat source - Position the refrigerator away from a heat source.

Question- Interior light does not work.

Answer

If the LED light is broken, please contact qualified technician.

Question-Heavy build up of frost, possibly also on the door seal.

Answer

Door seal is not air tight - Carefully warm the leaking sections of the door seal with a hair dryer(not hotter than approx 50 degree). At the same time shape the warmed door seal by hand such that it sits correctly.

Question - Water on the floor or on storage shelves.

Answer

Water drain hole is blocked - Remove food residue or ice from the entrance of the drain hole.

Question - Appliance is making unusual noises

Answers

Appliance is not level - Readjust the front levelling feet.

Appliance is in contact with wall or other objects. - Push appliance away a short distance

A part at the back of the appliance, e.g. a tube, is in contact with another appliance part or wall - Gently bend this part away carefully if necessary

Product support

Help is always at hand

Error code table

Error Code	Fault Description	Recommended Action
E0	Display panel communication failure	Display and mainboard to diagnosis and rework
E1	Fridge temperature sensor failure	Fridge temperature sensor to diagnosis and rework
E2	Freezer temperature sensor failure	Freezer temperature sensor to diagnosis and rework
E3	Defrost temperature sensor failure	Defrost temperature sensor to diagnosis and rework
E5	Defrost heater failure	Defrost heater to diagnosis and rework
E13	Ice maker sensor failure	Ice maker sensor to diagnosis and rework
E14	Ice maker defrost heater failure	Ice maker defrost heater to diagnosis and rework
E15	Ice maker failure	Ice maker component to diagnosis and rework
E16	Ice maker flowmeter failure	Ice maker flowmeter to diagnosis and rework

Product support

Help is always at hand

Help and assistance

If you require any technical guidance or find that your refrigerator is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions or online at www.bush-support.com

If you still require further assistance, call one of our experts on **0345 257 7271**. To help give us give you a fast and efficient service please have the following information ready.

Model Ref.		You can find these on the rating plate-a small information panel (usually a sticker or metal plate) on the rear of your appliance
Serial number		
Date of purchase		This will be shown on your receipt

Local call rates applies*

Line opens 9am-6pm Monday to Saturday and 10am-6pm Sunday.

*Calls to Bush enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see www.bt.com/pricing for details.

For security and training purpose, telephone calls to and from customer service centres maybe recorded and monitored. Call from Republic of Ireland will attract international call charges.



This appliance complies with the following EEC directives:
2014/35/EEC Low voltage directive
2014/30/EU EMC directive

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions,

Product support

Help is always at hand

BUSH

Call us now and activate your 12 month guarantee

Thank you for choosing Bush. Your new product is guaranteed against faults and breakdowns for 12 months. Don't forget to register it with us today so we can provide you with our best possible after-sale service and useful updates.

www.bushregistration.co.uk

FREEPHONE*

0800 597 8548

Lines are open 8am-8pm, 365 days a year. *Call may be recorded and monitored.

Your Bush Guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from who your purchased unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in the manual
- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- Bush disclaim any liability for loss or damage arising from the breakdown of the product
- This guarantee is in addition to and does not diminish your statutory or legal rights

Important Data Protection Information

To find out how we and Domestic & General Insurance Plc use your data please refer to the guarantee registration material or visit www.bushregistration.co.uk

Product support

Help is always at hand

Spare Parts Supply

To order spare parts, please contact our customer helpline: 0345 257 7271. The original spare parts for some specific components are available for a minimum of 7 or 10 years, based on the type of component, from the placing on the market of the last unit of the model.

BUSH

Produced in China for
Argos Limited, London, EC1M 6HA, UK.
Argos (N.I.) Ltd., Forestside Shopping Centre,
Upper Galwally, Belfast, BT8 6FX, UK.

Contact

www.argos-support.co.uk
www.bush-support.com
Helpline: 0345 257 7271

CKBSH-Z03