

	1	2	3	4				
				重要度	[B]			
A	技术要求 1. 颜色要求：封面：黑白印刷 内页：黑白印刷； 批量时要求统一，不能有明显色差， 2. 版面内容：封二印内容， 6-10页大写 字高需大于3mm 图案与文字应印刷清晰、 规范，不能有印刷缺陷； 3. 页面印刷：双面印刷； 4. 成型方式：骑马钉； 5. 成品尺寸：A5 (140X210) 尺寸公差按GB/T 1804-c； 6. 批量生产前须送样确认。							
B								
C								
D								
借（通）用件登记								
	标志	处数	更改文件号	签 名	日 期	重 量	比 例	说明书
出图审查	设计			会 签				
	制图	郭丽娟	标准化	刘金利		共 1 张	第 1 张	CKBSH-P04-A
日	审核		批准	钟浩亮		视角符号		
	工艺		日期	2026-04-11				
	1	2	3	4				



Instruction Manual

18660B



You'll soon be enjoying your new refrigerator.

It all begins here, with your instructions. Don't worry, there's nothing too technical coming up. Just simple, step-by-step guidance to get you up and running quickly. Sound good? Then let's get started

Help and Guidance

We're here to help you get the most from your refrigerator. Should you require any guidance, a simple solution can often be found online at.

www.bush-support.com

If you still require further assistance, call one of our experts on 0345 257 7271.

Issue 1, 27/04/2026

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions.

Contents

1 Safety information

Safety information	6
--------------------	---

2 Getting to know your refrigerator

Ready?Let's begin...	13
Parts	14

3 Installing your refrigerator

Transportation	16
Installation	16
Electrical Connection	18

4 Using your refrigerator

Before first use	21
Using your appliance	21
Useful information	22

5 Care and Maintenance

General	26
Power failure	27
Moving your appliance	27
Technical Specifications	28
Disposal information	28

6 Product support


Trouble Shooting	30
Help and assistance	31
Guarantee	32

Icon	Type	Meaning
	WARNING	Serious injury or death risk
	RISK OF ELECTRIC SHOCK	Dangerous voltage risk
	FIRE	Warning; Risk of fire / flammable materials
	CAUTION	Injury or property damage risk
	IMPORTANT	Operating the system correctly

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the Troubleshooting section of these instructions.

Safety information

1

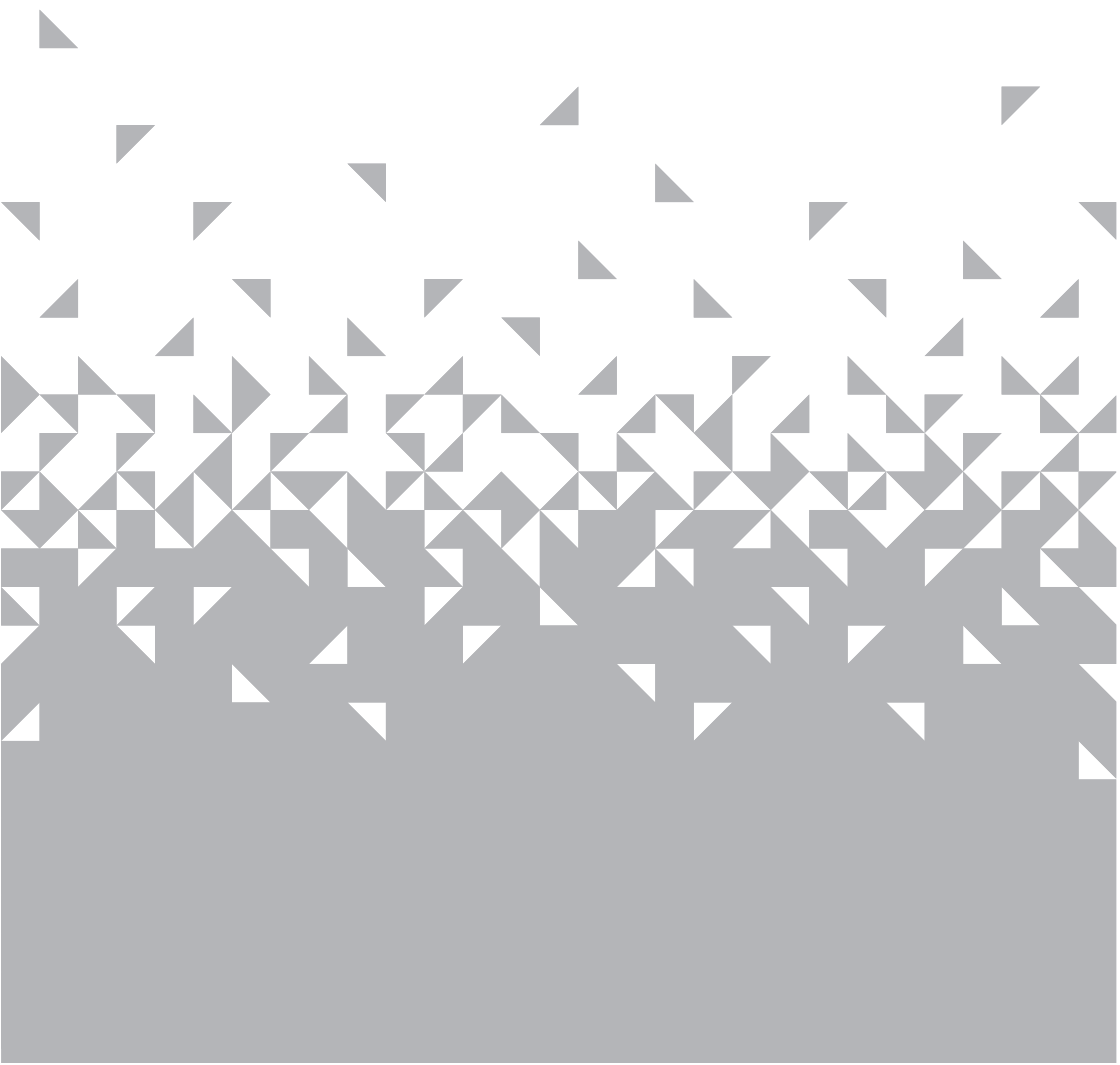



Safety information

Important-Please read these instructions fully before installing or operating

Before use

The installation of this appliance is best carried out by 2 people.

- Dispose of all packaging carefully and responsibly.
- The appliance is designed for **indoor use only** and must be protected from rain, moisture and extreme temperature variations.
- This appliance is designed for house hold use. **Do not** use the appliance for industrial and commercial use, or any other purpose.
- The appliance **MUST** be positioned on a firm level base.
- **Do not** splash water on the appliance. It may cause electrical parts to fail and result in an electric shock.
- Leave the appliance in

its intended place of installation and in its correct orientation for at least 4 hours before switching on to allow the cooling system to settle before first use or after any transportation.

- Your appliance is an environmental friendly product and it contains non CFC/HFC gas substances in the cooling system (Called R600a) and in the insulation (Called cyclopentane) which are potentially flammable if exposed to fire. Therefore, take care not to damage, the cooling circuit/pipes of the appliance in transportation and in use. In case of damage do not expose the appliance to fire,



Safety information

Important-Please read these instructions fully before installing or operating

- potential ignition source and immediately ventilate the room where the appliance is situated.
- **Do not** sit, stand or place any other heavy objects on top of the appliance. This could result in injury or damage to the appliance.
 - **Do not** allow children to play with the appliance to avoid the risk of entrapment and suffocation.
 - **⚠ WARNING!** Keep ventilation opening, in the appliance enclosure or in the built-in structure, clear of obstruction.
- During use**
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
 - This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely. Young children should be supervised to ensure that they do not play with the appliance.
 - **⚠ WARNING!** **Do not** use mechanical,



Safety information

Important-Please read these instructions fully before installing or operating

electrical or chemical way to speed up the defrost process not recommended by the manufacturer.

- **⚠ WARNING!**

Do not use or place other electrical products inside the appliance not recommended by the manufacturer.

- **Do not** store liquids in glass containers in the freezer compartment as these may shatter.
- **Do not** store flammable materials such as alcohol, gasoline, LP gas or glue etc in the appliance.
- In case there is an inflammable gas leaking, open the window for air circulation and do not pull out the plug or

turn the temperature knob. **Do not** touch the appliance until the valve of gas is turned off. Otherwise, sparks may happen.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- **Do not** attempt to repair the appliance yourself. Contact the Customer Helpline:0345 257 7271.



Safety information

Important-Please read these instructions fully before installing or operating

- Children aged from 3 to 8 years are allowed to load and unload this appliance.
- **⚠ WARNING!** When positioning the appliance, ensure the supply cord is not trapped or damaged.
- **⚠ WARNING!** Do not locate multiple portable socket-outlets or portable power suppliers at the rear of the appliance.
- **CORD ENTANGLEMENT HAZARD**
The cable of the appliance can give rise to risks of entanglement, strangulation or tripping if not correctly placed.
You must make sure that the electric cable is positioned safely.

To avoid contamination of food, please respect the following instructions:

- Opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance.
- Clean regularly surfaces that can come in contact with food and accessible drainage systems.
- Clean water tanks (where available) if they have not been used for 48h; flush the water system connected to a water supply if water has not been drawn for 5 days.
- Store raw meat and fish in suitable containers in the refrigerator, so that it is not in contact with or drip onto other food.
- Two-star frozen-food compartments(if they are presented in the appliance) are suitable for storing pre-frozen food, storing or making ice-cream and making ice cubes.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions.



Safety information

Important-Please read these instructions fully before installing or operating

One-, two- and three-star compartments (if they are presented in the appliance) are not suitable for the freezing of fresh food.

- If the appliance is left empty for long periods, switch off, defrost, clean, dry and leave the door open to prevent mould developing within the appliance.
- The refrigerating appliance is not intended to be used as a built-in appliance, unless specifically shown as such into its instruction manual.
- The drawers, baskets and shelves should be kept in their current position unless otherwise specified in this document.



• **WARNING!**

Risk of fire / Flammable Materials.

• **WARNING!**

During using, service and disposal the appliance, please pay attention to symbol similar as left side, which is located on rear of appliance (rear panel or compressor) and with yellow or orange color. It's risk of fire warning symbol. There are flammable materials in refrigerant pipes and compressor. Please be far away fire source during using, service and disposal.

• **WARNING!**


Do not damage the refrigerant circuit.

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.



Getting to know your refrigerator

2

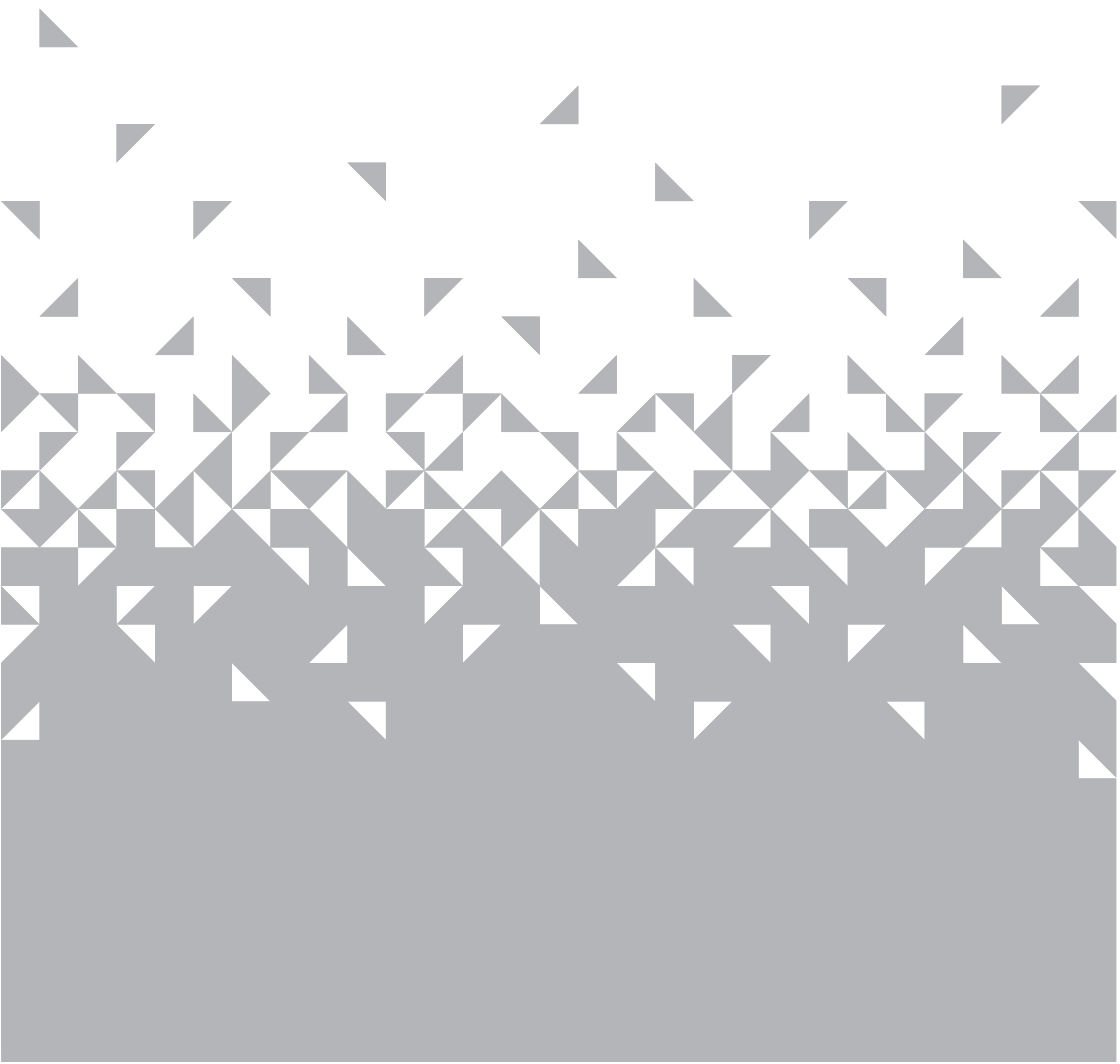A decorative geometric pattern consisting of numerous small, light gray triangles of various sizes and orientations, scattered across the lower half of the page. The pattern is denser in some areas and sparser in others, creating a textured, abstract background.

Getting to know your refrigerator

You'll be up and running in no time

Ready? Let's begin...


Please read these instructions carefully. They contain important information which will help you get the best from your refrigerator and ensure safe and correct installation and operation

If you require any further assistance, our technical experts are happy to help. For full details, refer to the product support section at the end of these instructions.

Getting to know your refrigerator

You'll be up and running in no time

Parts

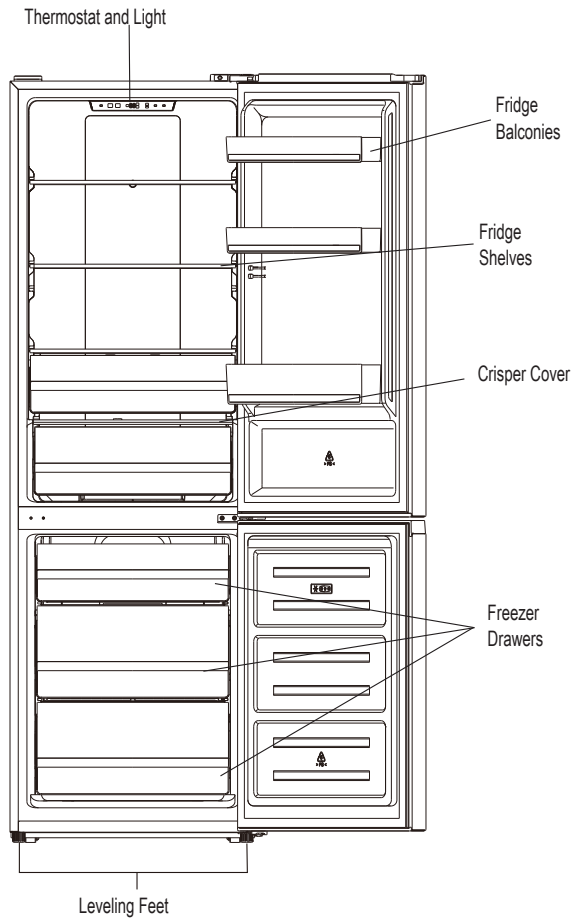

Accessories included



Instruction Manual



Door stopper




Ice tray



Egg tray

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions.

Installing your refrigerator 3

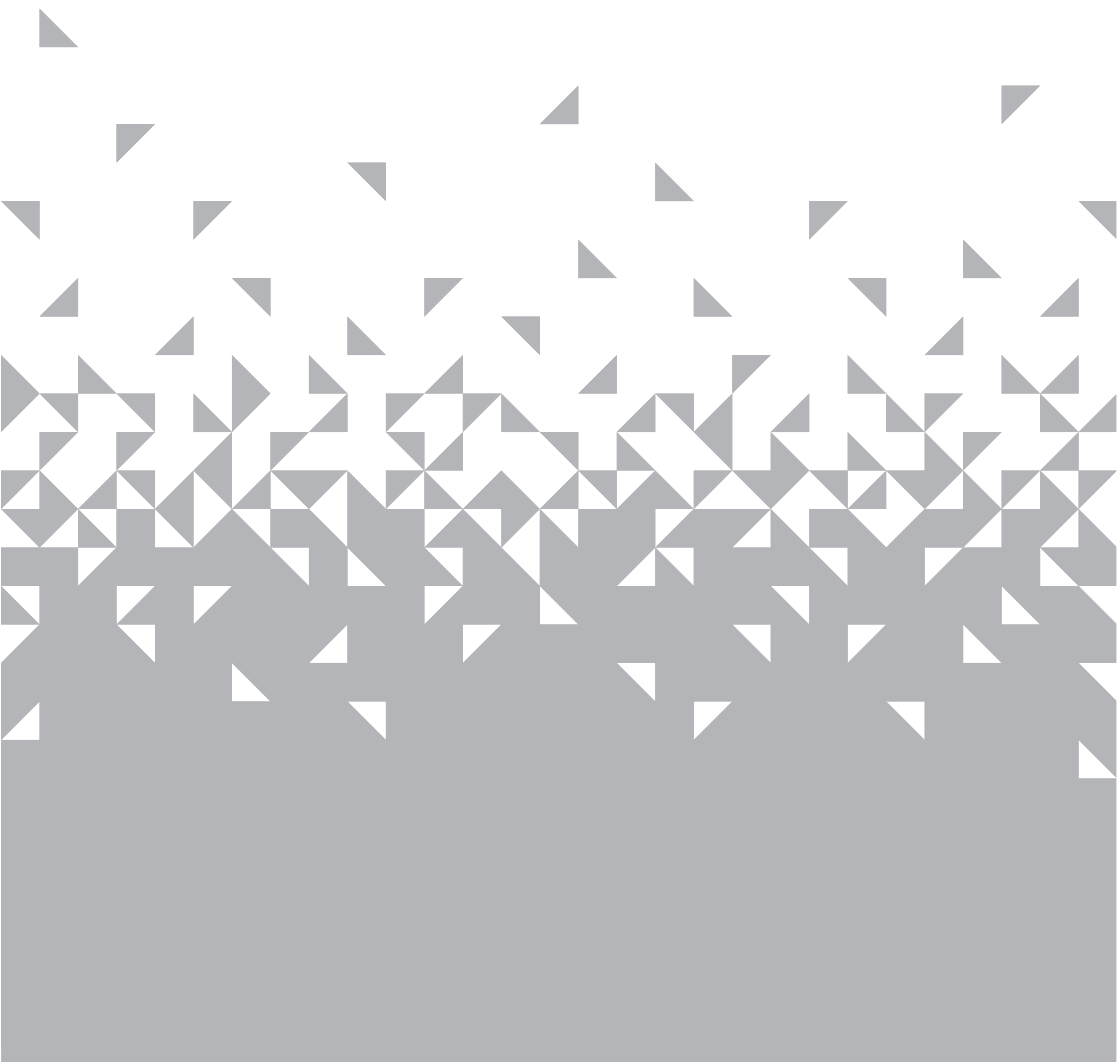

Installing your refrigerator

Bringing it all together

Transportation



Caution: 2 people are required to unpack and handle the appliance, it is recommended that gloves are worn.

- The appliance should be transported only in an upright position. Do not tilt the appliance greater than 45°. The packaging as supplied must be intact during transportation.

- After transporting the appliance, leave it for at least 4 hours before switching on to allow the cooling system to settle. Failure to comply could result in damage to the appliance.

- Do not move the appliance by pulling the door or handle as it may damage your flooring and wall coverings etc.

- Empty any water in the drain tray before moving.


- Make sure that the defrost water pipe at the back of the product is fixed to the plastic evaporating pan next to the compressor, to avoid defrost water spillage on the floor.

- Ensure the supply cable is not caught under the appliance during and after moving.

- Carefully remove all packaging materials including the foam base, dispose of correctly.

Installation


- Ensure sufficient spacing is provided for the appliance to be installed. Leave space on both sides (5cm), back (5cm) and above the appliance (5cm) to ensure proper ventilation.

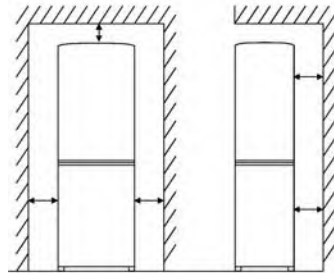

- Do not place the appliance near a heat source or in direct sunlight.

- Do not put any heavy objects on top of the appliance. It will damage the appliance.

- Do not install the appliance in moist and wet place.

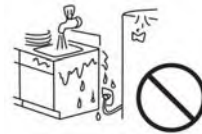

- Adjust the feet at front to level the appliance. It should be installed on a smooth surface to avoid excessive vibration and noise.

- Refer to section "Care and Maintenance" to prepare your appliance for use.

- Each appliance has a climate class (shown on the rating plate) where it indicates the temperature range of the appliance operation in place. The appliance may not work properly if it is left for a long period at a temperature outside the specified range.

extended temperate (SN): 'this refrigerating appliance is intended to be used at ambient temperatures ranging from 10 °C to 32 °C (from 50°F to 90°F)';

temperate (N): 'this refrigerating appliance is intended to be used at ambient temperatures ranging from 16 °C to 32 °C (from 61°F to 90°F)';

subtropical (ST): 'this refrigerating appliance is intended to be used at ambient temperatures ranging from 16 °C to 38 °C (from 61°F to 100°F)';

tropical (T): 'this refrigerating appliance is intended to be used at ambient temperatures ranging from 16 °C to 43 °C (from 61°F to 110°F)'

Installing your refrigerator

Bringing it all together

Installation

Door Reverse



Warning: Remove the main plug before reversing the door. 2 people may be required to reverse the door.

Door Reversibility



Important

Before you begin, switch off the appliance and disconnect it from the power supply.

What You Will Need

- Flathead screwdriver
- Cross-head screwdriver
- Spanner
- Parts supplied in the accessory bag

Steps to Reverse the Door

1. Remove the top hinge cover and unplug the door switch connector.
2. Unscrew and remove the top hinge.
3. Remove the hinge pin, turn the hinge bracket over, then reinstall the pin.
4. Take the door switch from the righthand hinge cover and fit it into the left hand hinge cover from the accessory bag.
5. Move the top cover from the left side of the cabinet to the right side.
6. Lift off the upper door. Unscrew the middle hinge, then remove the lower door.
7. Move the hinge hole covers from the left side of the cabinet to the right side.
8. Remove the bottom hinge and take off the adjustable feet from both sides.
9. Remove the bottom hinge pin, turn the hinge around, and refit the pin.
10. Reinstall the bottom hinge and refit both adjustable feet.
11. Remove the door closers from the bottom of both doors. Fit the new door closers from the accessory bag to the opposite side.
12. Install the lower door, then position and secure the middle hinge.
13. Refit the upper door. Make sure the door is properly aligned and the seal fits tightly. Secure the top hinge.
14. Reconnect the door switch, then refit and secure the top hinge cover.

After Installation

- Check that the doors open and close smoothly.
- Make sure the door seal fits tightly all around.
- Reconnect the appliance to the power supply.


Left Door Hinge Cover x 1



Left Aid-Closer on Upper Door x 1



Left Aid-Closer on Lower Door x 1

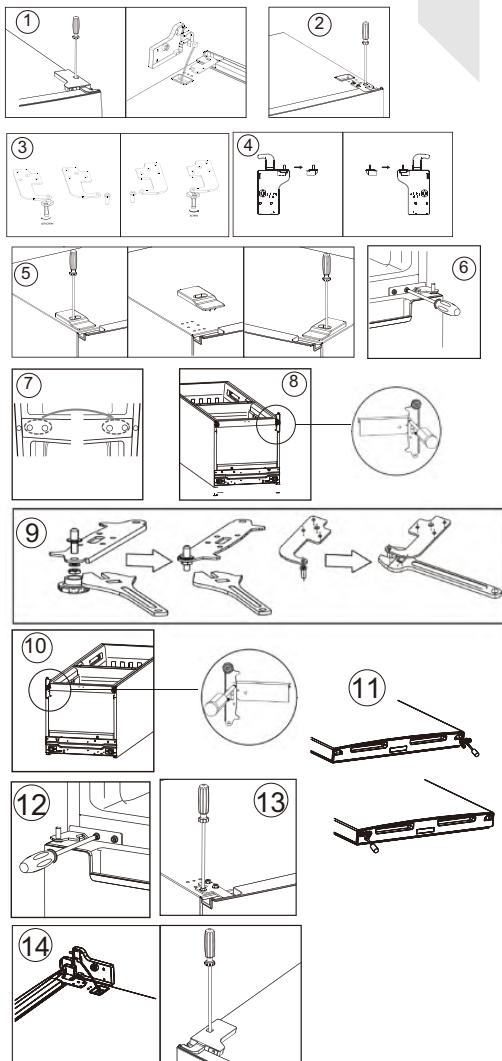

Lyáú-l-ftlyÿ è2dzNj NŠTfNjAŠNj-ú2Nj

Bringing it all together

9tŠÖÜNjAÖI-t ö2yyŠÖÜA2y




Must be tilted more than 45 degree to access the bottom hinge. It is advised to leave the unit for 4 hours to allow the cooling to settle before switch on.

[ŠÖŠftlyÿ] úKŠ I-LjLftI-yÖŠ

MöRotate feet clockwise to heighten.

HöRotate feet anti clock wise to lower.

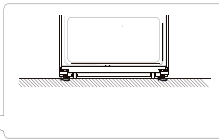

! ye ŠtŠÖÜNjAÖI-t ö2Nj úKŠI-ú ää NŠIjdzANj ŠR ú2
lyáú-l-ftt úKŠä I-LjLftI-yÖŠ a | {¢ öŠ öI-NjNjAŠR 2dzú
öë I-ljdzI-fttAŠR ŠtŠÖÜNjAÖI-yö



² I-NjlyÿY ¢I L { ! tt [L ! b / 9 a | { ¢ . 9
9 ! w ¢ I 95
. Št2NjŠ YI-ljlyÿ I-ye ŠtŠÖÜNjAÖI-t ö2yyŠÖÜA2yäz
ŠyädzNjŠ úKŠI-úY

Electrical safety is only guaranteed when the earth system of your house is in accordance with the related local regulations.

Do not damage the refrigerant circuit.

Do not bend, stretch or pull the supply cable to avoid electric shock.

Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

Ensure the power socket is suitable for the maximum power of the machine (fuses in the power circuit must be 13 amp).

The supply voltage should be the same as that indicated in the technical specifications and the appliance rating plate.

The appliance should be earthed and in compliance with the applicable law.

When installed, the power socket must be within easy reach.

If the socket outlets in your home are not suitable for the plug supplied with this unit check with a qualified electrician for replacement.

To avoid the risk of overloading your plug socket, do not use adapters, multiple connectors or extension cables.

The appliance must be connected to a 220-240 volt 50Hz AC supply by means of a three pin socket, suitably earthed and protected by a 13 amp fuse.

Should the fuse need to be replaced, a 13 am pfuse approved to BS1362 must be used.

The plug contains a removable fuse cover that must be refitted when the fuse is replaced. If the fuse cover is lost or damaged, the plug must not be used until a replacement cover has been fitted or the plug is replaced.

A damaged plug should be cut off as close to the plug body as possible, the fuse should be removed and the plug disposed of safely.



Using your refrigerator 4



Using your refrigerator

Getting the most from your appliance

Final checks before operating the appliance


1. Good air circulation around the appliance positioned.
2. The feet have been adjusted for perfect leveling.
3. Clean the compartment per recommendation in section "Care and Maintenance".
4. Plug in the appliance and interior light will come on when the door is open.



The compressor starts up and in operation may produce some background noise and it is normal, this is not a defect.

Using your appliance

1. Control Panel

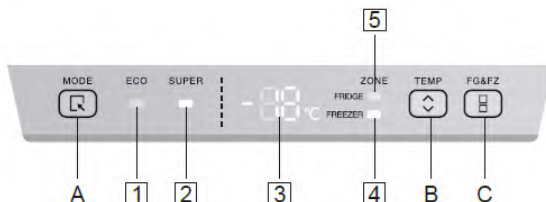

1.1 Operation button (A & B & C)



: Mode selection button

Press this button to select the operating mode (ECO, SUPER, or User defined mode).



: Temperature selection button

Press this button to select setting temperature of fridge compartment and freezer compartment.



: Compartment selection button

Press this button repeatedly. The fridge and freezer compartment indicators will light up in sequence.

When the FRIDGE indicator is lit, the fridge compartment is selected.

When the FREEZER indicator is lit, the freezer compartment is selected.

1.2 Indicators (1 & 2 & 4 & 5)

(1) **ECO Mode Indicator.** This indicator lights up when ECO mode is selected.

(2) **SUPER Mode Indicator.** This indicator lights up when SUPER mode is selected.

(4) **Fridge Compartment Indicator.** When this indicator is lit, the displayed temperature is the set temperature of the fridge compartment, and temperature adjustment applies only to the fridge compartment.

(5) **Freezer Compartment Indicator.** When this indicator is lit, the displayed temperature is the set temperature of the freezer compartment, and temperature adjustment applies only to the freezer compartment.

1.3 Display (3)

(3) **Setting Temperature Display (Fridge/Freezer Compartment)**

This area displays the set temperature of the fridge or freezer compartment, depending on the selected compartment.

If E0, E1, E2, E3, or E5 is displayed, please contact customer helpline.

2. Illustration of the Control Keys

2.1 Operation and Display

- When the appliance is powered on, the control panel lights up fully for 3 seconds and resumes operation using the settings that were active before the power was switched off.

- A prompt beep sounds each time a key is pressed to confirm the operation.

2.2 Temperature Setting of the Fridge Compartment

1) In User defined mode or SUPER mode, press the Compartment Selection button  until the Fridge Compartment indicator lights up.

2) Press the Temperature Selection button  repeatedly to set the desired fridge temperature. The temperature settings cycle as follows: 2°C → 3°C → 4°C → 5°C → 6°C → 7°C → 8°C → OF.

3) The selected temperature is confirmed automatically after the display flashes for 5 seconds.

Note: If OF is displayed, the fridge compartment is switched OFF.

or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 257 7271.

Using your refrigerator

Getting the most from your appliance

2.3 Temperature Setting of the Freezer Compartment

- 1) In User-defined mode press the Compartment Selection button  until the Freezer Compartment indicator lights up.
- 2) Press the Temperature Selection button  repeatedly to set the desired freezer temperature.
- The temperature settings cycle as follows: -14°C → -15°C → -16°C → -17 °C → -18 °C → -19°C → -20°C → -21°C → -22°C) The selected temperature is confirmed automatically after the display flashes for 5 seconds.

2.4 Temperature setting recommendation

Temperature setting recommendation		
Environment Temperature	Fridge Compartment	Freezer Compartment
Summer		
Normal		
Winter		

2.5 ECO Mode

Activate ECO Mode

- Press the Mode Selection button  repeatedly until the ECO Mode indicator lights up.
- After the ECO Mode indicator flashes for 5 seconds, ECO mode is activated.
- When ECO mode is activated, the fridge and freezer temperatures are automatically set to 5°C and -18°C respectively.
- In ECO mode, if the fridge or freezer temperature is adjusted manually, the ECO Mode indicator will flash for 3 seconds, and temperature setting operations will not take effect.

Exit ECO Mode

- Press the Mode Selection button  When the ECO Mode indicator turns off, the appliance exits ECO mode.

2.6 Super mode

Activate SUPER mode:

- Press mode select button  consecutively until SUPER mode indicator is lit up, SUPER mode is selected.
- After 5s of flashing of SUPER mode indicator, SUPER mode will be activated.
- When SUPER mode is activated, freezer temperature will be set automatically to -25 °C, fridge temperature setting operation is available.
- In SUPER mode, if you set freezer temperature by manual, SUPER mode indicator will flash for 3s, freezer temperature setting operations are not workable.
- This mode will stop automatically after 50 hours

Quit from SUPER mode:

- Press mode select button , when SUPER mode indicator is light off, the appliance quits from SUPER mode.

WARNING !!!

In SUPER mode, the appliance will keep running under heavy load, noise level will be slightly higher than normal condition.

2.7 User defined mode

- Press mode select button  repeatedly until ECO mode indicator / SUPER mode indicator are both light off, user defined mode is activated.
- In user defined mode, users can set fridge temperature and freezer temperature by manual.

3. Storing fresh food

- Use the fridge compartment to store fresh food and drinks.
- Do not exceed the food capacity that the appliance able to handle.
- Do not put warm food to the appliance immediately as it may cause excessive cooling of the compartment.
- Set the temperature knob at medium position for storing fresh food.
- Do not mix already frozen food and fresh food.

4. Storing frozen food

- The freezer compartment is  4 Star rated and suitable for the freezing and storage or pre-frozen food.
- Check the food packaging for  suggestion before storage.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions.

Using your refrigerator

Getting the most from your appliance

Useful information

The following guidelines and recommendations are suggested to obtain the best results and storage hygiene.

- Frequent door openings can cause internal temperature rise so the door shall be closed as soon as possible after use.
 - For hygiene reasons, it is always a good practise to pack, wrap and cover the food before storing.
 - Use a polythene bag to store raw meat and place on the lowest shelf. Avoid contact with cooked food to prevent contamination. For safety reason, store raw meat for two to three days only.
 - Cooked dishes must be stored in airtight covered containers.
 - Food and beverages shall cool to room temperature before storing.
 - Most vegetables should be blanched and chilled before freezing.
 - Bottles can be placed in the door section.
 - Some fruits and vegetables like pineapples, melons, tomatoes, and cucumbers shall be wrapped in polythene bags.
 - Do not leave frozen food at room temperature to thaw. You could defrost the food by putting it in the fridge to thaw slowly. Make sure you avoid defrosting food or food juices drip onto other food.
 - Do not fill the appliance with too much food, cold air must circulate freely for food to be preserved properly.
 - Never re-freeze anything that has thawed out unless you cook it again, to kill off harmful bacterial.
 - Never re-freeze thawed shellfish.
 - Re-seal packs properly after removing items. This prevents drying or freezer burn' and a build up of frost on any remaining food.
 - A high temperature setting may accelerate food to turn bad, hence increase food waste. Therefore for optimum food preservation, the recommended temperature setting is generally the most safe and suitable.
- Position different food in different compartments according to the table below.**

Refrigerator compartments	Type of food
Door or balconies of fridge compartment	• Foods with natural preservatives, such as jams, juices, drinks, condiments. • Do not store perishable foods.
Crisper drawer (salad drawer)	• Fruits, herbs and vegetables should be placed separately in the crisper bin. • Do not store bananas, onions, potatoes, garlic in the refrigerator.
Fridge shelf – bottom	• Raw meat, poultry, fish (for short-term storage)
Fridge shelf – top	• Foods that do not need cooking, such as ready-to-eat foods, deli meats, leftovers.
Freezer compartment	• Foods for long-term storage. • Raw meat, poultry, fish frozen, vegetables, chips, ice cream, frozen fruit, frozen baked goods.

or online at www.argos-support.co.uk if you still require further assistance, call one of our experts on 0345 257 7271.

Using your refrigerator

Getting the most from your appliance

Energy saving tips

- Place your fridge away from direct sunlight, your oven or any other heat sources. Allow 20cm clear space on both sides and above, and at least 5cm behind.
- Cover all food stored, and arrange it so that cold air can circulate freely.
- Higher cold setting will use more energy. Do not set to maximum cold if it is not necessary.
- Cool the hot/warm food to room temperature before put them into your fridge.
- Frequently open and close door would cause internal temperature rise and it will consume more energy.
- Close the doors properly, and make sure the seals and hinges are airtight. Check the seals by putting a sheet of paper between the door and the main body of the fridge. If the paper moves, your seals need replacing.
- Defrost regularly if your refrigerator is not a frost free or cyclic defrost model. Accumulated ice layer should not be more than 5mm thick.
- The preset combination of drawers, baskets and shelves have already set in the most efficient use of this product.

Temperature setting recommendation

Impact on Food Storage

- Under Recommended setting, the best storage time of fridge is no more than 3 days.
- Under Recommended setting, the best storage time of freezer is no more than 1 month.
- The best storage time may reduce under other settings.

Tips for Storing Foodstuffs


- The quantity of fresh food that can be kept frozen in a specific time period is indicated on the rating plate.
- Load limits are determined by baskets, flaps, drawers, shelves etc. Make sure that these components can still close easily after loading.

Thawing

Deep-frozen or frozen food, prior to be used, can be thawed in the freezer compartment or at room temperature, depending on the time available for this operation. Small pieces may even be cooked still frozen, directly from the freezer. In this case, cooking will take longer.

Accessories Movable shelves

The walls of the refrigerator are equipped with a series of runners so that the shelves can be positioned as desired.

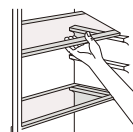


Positioning the door balconies

Door balconies can be disassembled for cleaning. To make the disassembling as follows: gradually pull the balcony in the direction of the arrows until it comes free, after cleaning, reposition it.



Disassemble the bottom drawer

1. Pull out the bottom drawer to stopper position.
2. Lift up the front of drawer.
3. Pull out the bottom drawer.

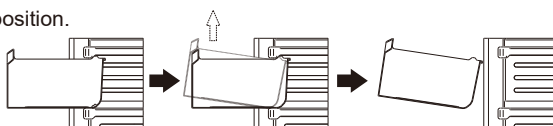

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions.

Using your refrigerator

Getting the most from your appliance

Helpful hints and tips

Hints for freezing

To obtain the best freezing performance, please follow these important guidelines:

- The maximum quantity of food that can be frozen within 24 hours is indicated on the rating plate.
- The freezing process takes approximately 24 hours. Do not add additional food during this period.
- Only freeze food that is fresh, high quality, thoroughly cleaned, and suitable for freezing.
- Divide food into small portions to ensure quick and complete freezing and to allow only the required amount to be thawed later.
- Wrap food securely in aluminum foil or polythene, ensuring all packages are airtight.
- Do not allow fresh, unfrozen food to come into contact with food that is already frozen, as this may cause the temperature of the frozen food to rise.
- Lean foods store better and longer than fatty foods. Salt reduces the storage life of food.
- Ice lollies or water ice may cause freeze burns if consumed immediately after removal from the freezer.
- It is recommended to label each package with the freezing date to help monitor storage time.

Hints for Storage of Frozen Food

To obtain the best performance from this appliance, please observe the following guidelines:

- Ensure that commercially frozen food has been properly stored by the retailer before purchase.
- Transfer frozen food from the shop to the freezer in the shortest possible time.
- Do not open the freezer door frequently or leave it open longer than necessary.
- Once defrosted, food deteriorates rapidly and must not be refrozen.
- Do not exceed the storage period indicated by the food manufacturer.

Hints for Fresh Food Refrigeration

To achieve optimal performance:

- Do not place warm food or evaporating liquids in the refrigerator.
- Always cover or wrap food, especially food with strong odours.

Hints for Refrigeration

Useful storage tips:


- Meat (all types): Wrap in polythene bags and place on the glass shelf above the vegetable drawer.

For safety reasons, store for no more than one or two days.

- Cooked foods and cold dishes: These should be covered and may be placed on any shelf.
- Fruit and vegetables: Wash thoroughly and store in the designated drawer(s).
- Butter and cheese: Store in airtight containers or wrap in aluminium foil or polythene bags to minimise air exposure.
- Milk bottles: Ensure they are capped and store them in the door balconies.
- Bananas, potatoes, onions and garlic: Do not store in the refrigerator unless packed.
- For energy efficiency, all drawers, baskets, and shelves must be correctly positioned and should not be removed from the refrigerator.

or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 257 7271.

Care and Maintenance 5

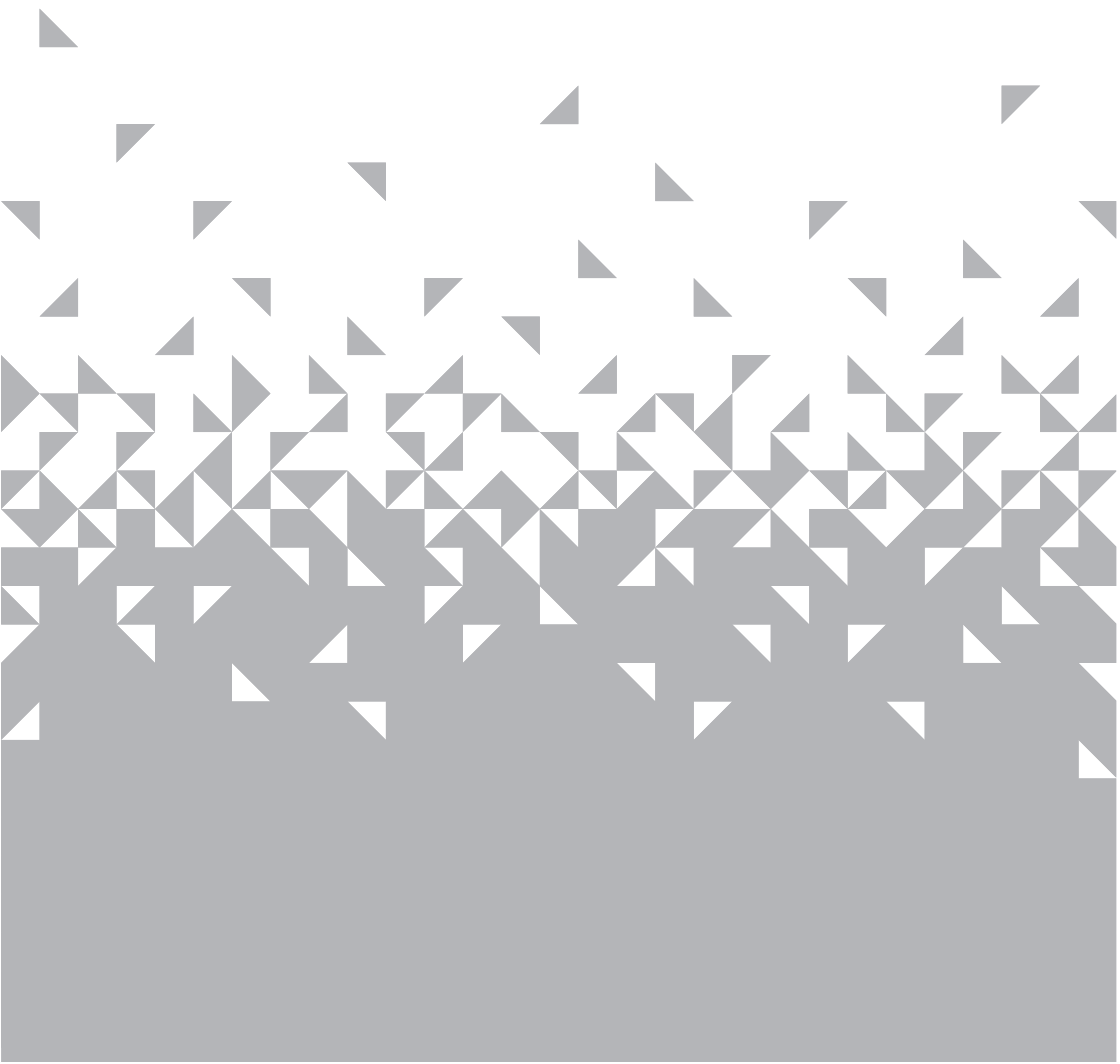

Care and maintenance

Looking after your appliance

General



Important: Always unplug the appliance from the power socket during cleaning and maintenance.

- Never use any sharp instruments or abrasive substances, soap, household cleaner, detergent or wax polish for cleaning.
- Use luke warm water to clean the cabinet of the appliance and wipe it dry.
- Never clean the appliance with flammable fluids. It could cause damage and a fire hazard.
- Clean the exterior of the appliance and door seal with a damp cloth and dry it through.
- Avoid water going into the temperature control box. Clean with a dry cloth only.
- Clean the condenser (located at the back of the appliance) with a vacuum cleaner. It is suggested to remove the dust every year.
- Shelves are all removable for cleaning purpose.
- For hygienic reasons, the interior of the appliance, including interior accessories, should be cleaned regularly.



Important!

- Do not clean the appliance while it is connected to the power supply, as this may result in electric shock.

- Never clean the appliance using a steam cleaner. Steam and moisture may penetrate electrical components, resulting in electric shock or damage. Hot steam may also damage plastic parts.
- Essential oils and organic solvents may attack plastic parts (e.g. lemon juice, juice from orange peel, butyric acid, or cleaners containing acetic acid). Do not allow such substances to come into contact with appliance components.
- Do not use abrasive or aggressive cleaning agents.
- Ensure that the appliance is completely dry before reconnecting it to the mains supply and placing it back into operation.

Cleaning Procedure

- Remove all food from the freezer and store it in a cool place, well covered.
 - Switch off the appliance and disconnect it from the mains supply by unplugging it.
 - Clean the appliance and interior accessories using a soft cloth and lukewarm water.
 - After cleaning, wipe surfaces with clean water and dry thoroughly.
- After all parts are completely dry, reconnect the appliance to the mains supply and return it to operation.

Care and maintenance

Looking after your appliance

General



Important:

Care must be taken while cleaning/carrying the appliance not to touch the bottom of the condenser metal wires at the back of the appliance, as this could cause injury to fingers and hands.

Light bulb replacement

This appliance is equipped with a light bulb . It can be used for a long time. If the light bulb is blown, it must be replaced by a qualified person to avoid any hazard. Contact the service agent at 0345 257 7271.

Power failure

In case there is a power failure, you should contact the electricity supply company and take the following actions:

If it is less than 24 hours, keep the doors closed. This will allow the stored food to stay cold as long as possible.

If it lasts more than 24 hours, it is advised to empty the freezer compartment and temporarily store the food in a portable freezer or using artificial ice packs. Try to use up the food which is more easily perishable.

Remarks: A full appliance will stay cold longer than a partially filled one. If ice crystals are still visible on the food, it may be frozen again, although flavour and aroma may be affected. If food is found to be in a poor condition, it is best to throw it away.

Short vacation

There is no need to disconnect the appliance from the mains if you will be away for two to three weeks. Use up the perishable food.

Long vacation

Remove all the food if you are away for three weeks or more. Unplug the appliance and leave the doors open to provide air circulation to prevent odour and mould.

Moving your appliance

Moving

Refer to section “Transportation” under “Installation”

Care and maintenance

Looking after your appliance

Technical Specifications

Model	18660B
Energy efficiency class	D
Energy consumption Kwh/year	216
Net storage volume fresh food (litres)	273
Net storage volume frozen food (litres)	127
Total net storage (litres)	400
Frozen food compartment rating	4star 
Climate class	SN,N,ST
Operating noise level dB(A)	37
Ambient Temperature Range	10-38°C
Product Dimension	600mmx680mmx1865mm

The model information can be retrieved using the QR-Code reported in the energy label.

The label also includes the model identifier that can be used to consult the portal of the registry at <https://eprel.ec.europa.eu>

This product contains a light source of energy efficiency class"G"

Disposal information




The symbol on the product or its packaging indicates that this product may not be treated as household waste . Instead it should be handed over to the applicable collection point for the recycling of electrical and electronic equipment , By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health , which could otherwise be caused by inappropriate waste handling of this product . For more detailed information about recycling this product , please contact your local council office , your household waste disposal service or the shop where the product was purchased .

Remember : Old fridges must be disposed of carefully - older models contain CFC gases that are harmful - if in doubt , contact your local council for details on how to dispose of an old fridge .

Doors and lids of the refrigeration appliance should be removed before disposal in the landfill, to avoid children or animals getting trapped inside.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions,

Product support 6

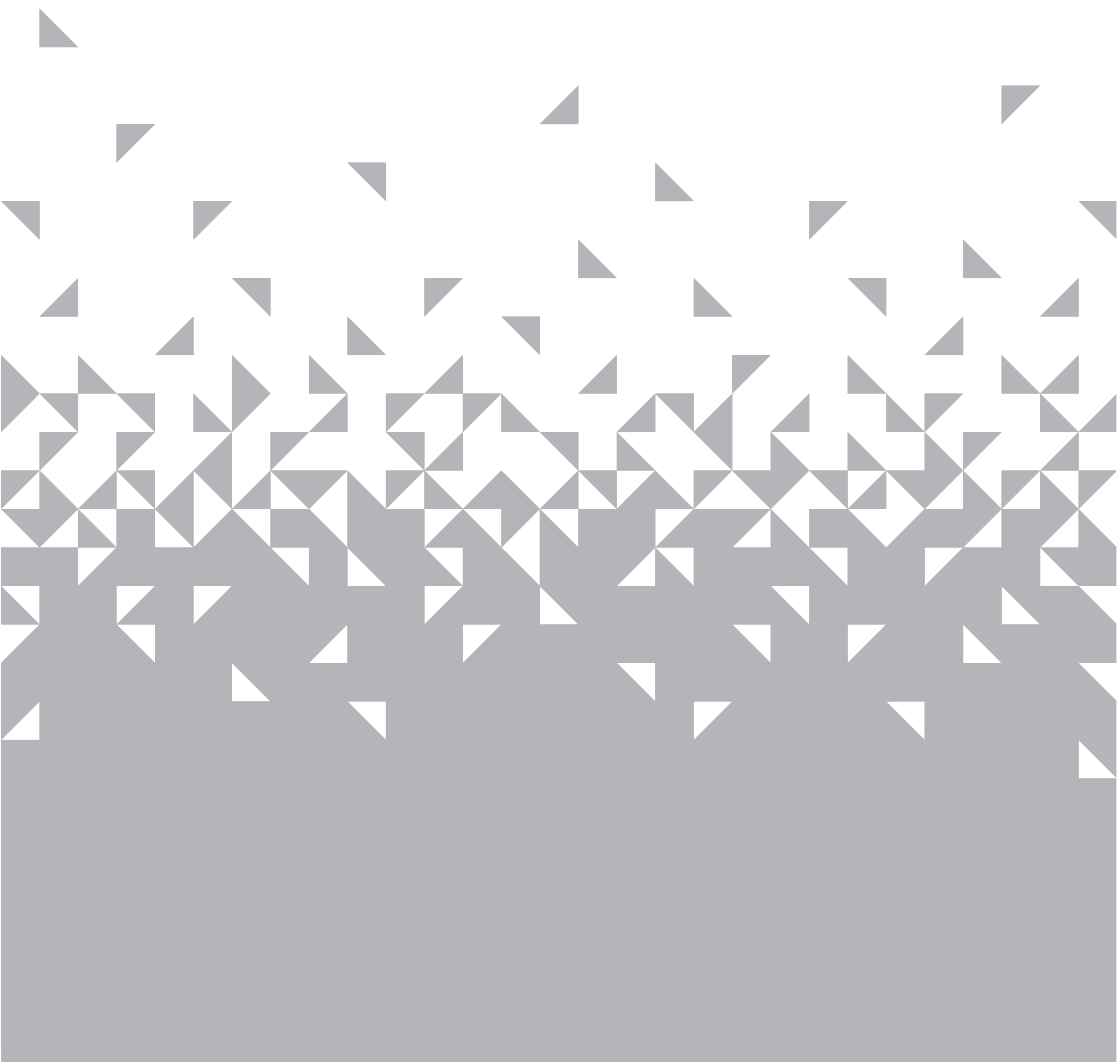

Product support

Help is always at hand

Troubleshooting

If you have a problem with your product, these questions may be able to assist you?

Question- Appliance does not work.

Answer

Appliance is not switched on - Turn on the appliances.

Mains plug is not plugged in or is loose. -Insert mains plug.

Fuse has blown or is defective - Check fuse, replace if necessary.

Socket is defective - Mains malfunctions are to be corrected by an electrician.

Question - Appliance cools too much.

Answer

Temperature is too cold - adjust to a warmer setting.

Question - The food is too warm.

Answer

Temperature is not properly adjusted - adjust to a cooler setting.

Door was open for an extended period - Open the door only as long as necessary.

A large quantity of warm food was placed in the appliance - adjust to a cooler setting.

Cool warm food before placing in the refrigerator.

The appliance is near a heat source - Position the refrigerator away from a heat source.

Question- Interior light does not work.

Answer

If the light bulb is broken, please contact qualified technician.

Question-Heavy build up of frost, possibly also on the door seal.

Answer

Door seal is not air tight - Carefully warm the leaking sections of the door seal with a

hair dryer(not hotter than approx 50 degree). At the same time shape the warmed door seal

by hand such that it sits correctly.

Question - Water on the floor or on storage shelves.

Answer

Water drain hole is blocked - Remove food residue or ice from the entrance of the drain hole.

Question - Appliance is making unusual noises

Answers

Appliance is not level - Readjust the front levelling feet.

Appliance is in contact with wall or other objects. - Push appliance away a short distance

A part at the back of the appliance, e.g. a tube, is in contact with another appliance part or

wall - Gently bend this part away carefully if necessary

Product support

Help is always at hand

Help and assistance

If you require any technical guidance or find that your refrigerator is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions or online at www.bush-support.com

If you still require further assistance, call one of our experts on **0345 257 7271**. To help give us give you a fast and efficient service please have the following information ready.

Model Ref.

Serial number

Date of purchase

You can find these on the rating plate—a small information panel (usually a sticker or metal plate) on the rear of your appliance

This will be shown on your receipt

Local call rates applies*

Line opens 9am-6pm Monday to Saturday and 10am-6pm Sunday.

*Calls to Bush enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see www.bt.com/pricing for details.

For security and training purpose, telephone calls to and from customer service centres may be recorded and monitored. Call from Republic of Ireland will attract international call charges.



This appliance complies with the following EEC directives:
2014/35/EEC Low voltage directive
2014/30/EU EMC directive

Product support

Help is always at hand

BUSH

Call us now and activate your 12 month guarantee

Thank you for choosing Bush. Your new product is guaranteed against faults and breakdowns for 12 months. Don't forget to register it with us today so we can provide you with our best possible after-sale service and useful updates.

www.bushregistration.co.uk

FREEPHONE*

0800 597 8548

Lines are open 8am-8pm, 365 days a year. *Call may be recorded and monitored.

Your Bush Guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from who your purchased unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in the manual
- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- Bush disclaim any liability for loss or damage arising from the breakdown of the product
- This guarantee is in addition to and does not diminish your statutory or legal rights

Important Data Protection Information

To find out how we and Domestic & General Insurance Plc use your data please refer to the guarantee registration material or visit www.bushregistration.co.uk

Product support

Help is always at hand

Spare Parts Supply

To order spare parts, please contact our customer helpline: 0345 257 7271. The original spare parts for some specific components are available for a minimum of 7 or 10 years, based on the type of component, from the placing on the market of the last unit of the model.

A decorative geometric pattern consisting of numerous small, grey and white triangles arranged in a complex, overlapping fashion, covering the lower half of the page.

Produced in China for
Argos Limited, London, EC1M 6HA, UK.
Argos (N.I.) Ltd., Forestside Shopping Centre,
Upper Galwally, Belfast, BT8 6FX, UK.

Contact

www.bush-support.com
www.argos-support.co.uk
Helpline: 0345 257 7271