

Carbon Steel Woks



Care & Use Instructions:	Warnings:	Icons:
Before first use remove all packaging, handwash with warm soapy water and dry thoroughly. Do not allow a gas flame or heat source to extend beyond the base of the pan. We recommend the use of a low to medium heat setting when using this product. If any burnt food is left in the pan, leave to soak in hot soapy water before attempting to clean. Only use wooden, nylon or silicone utensils to prevent scratching the coating of the pan. Wipe lightly with vegetable oil before each use. Dishwasher safe but hand wash is recommended. Freezer safe	Metal tools should not be used as they may damage the wok. Wok may become hot during use, the use of oven gloves is recommended when handling. Handle may become loose & should be tightened to avoid a safety hazard. Do not slide or drag the pan as this may damage the base and leave a mark on some cooker surfaces.	 Gas  Radiant Ring  Solid Hot Plate  Ceramic  Halogen  Dishwasher Safe  Induction  Freezer Safe