

BUSH

Instruction manual

CD Micro with DAB and Bluetooth

BD608





You'll soon be enjoying your new CD Micro with DAB and Bluetooth.

It all begins here, with your instructions. Don't worry, there's nothing too technical coming up. Just simple, step-by-step guidance to get you up and running quickly. Sound good? Then let's get started.



Help and Guidance

We're here to help you get the most from your CD Micro with DAB and Bluetooth. Should you require any guidance, a simple solution can often be found online at:

www.argos-support.co.uk

If you still require further assistance, call one of our experts on **0345 600 3021**.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

BUSH



Contents

1 Safety information

General safety information	8
Power source	9

2 Getting to know your CD Micro with DAB and Bluetooth

Check the package contents	14
Where to put your Micro	14
Setting up	14
Switch on	15
Switch off	15
Change the mode	15
Adjusting the volume	15
Mute	16
Equalizer or EQ setting	16
Headphone socket	16

3 Using your CD Micro with DAB and Bluetooth

Using the DAB Radio	20
Wire radio aerial	20
DAB radio mode	20
Changing DAB stations	20
Scanning for DAB stations	20
Prune DAB stations	21
Storing a DAB station preset	21
Tune to a DAB station preset	22
DAB display information	22
Dynamic range control (DRC)	24

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 600 3021

Contents

Using the FM Radio	25
Wire radio aerial	25
FM Radio mode	25
Tuning to an FM station	25
Changing the scan setting	26
Audio mode	26
Storing an FM station preset	27
Tune to an FM station preset	27
FM display information	28
Using the CD Player	29
CD mode	29
Play a CD	29
CD controls	30
Programmed play mode	30
Repeat and Random modes	31
Remove the CD	32
Caring for compact discs	32
Bluetooth mode	33
Connecting or 'Pairing' with your Micro	33
Listening to Music/Audio using Bluetooth	34
Delete all paired Bluetooth device records from your Micro	34
Aux in mode	35

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Contents

4 Other information

Technical specification 38

5 Product support

Troubleshooting 42

Factory reset 44

Help and assistance 45

Your Bush Guarantee 47




This page is left intentionally blank



Safety information

1

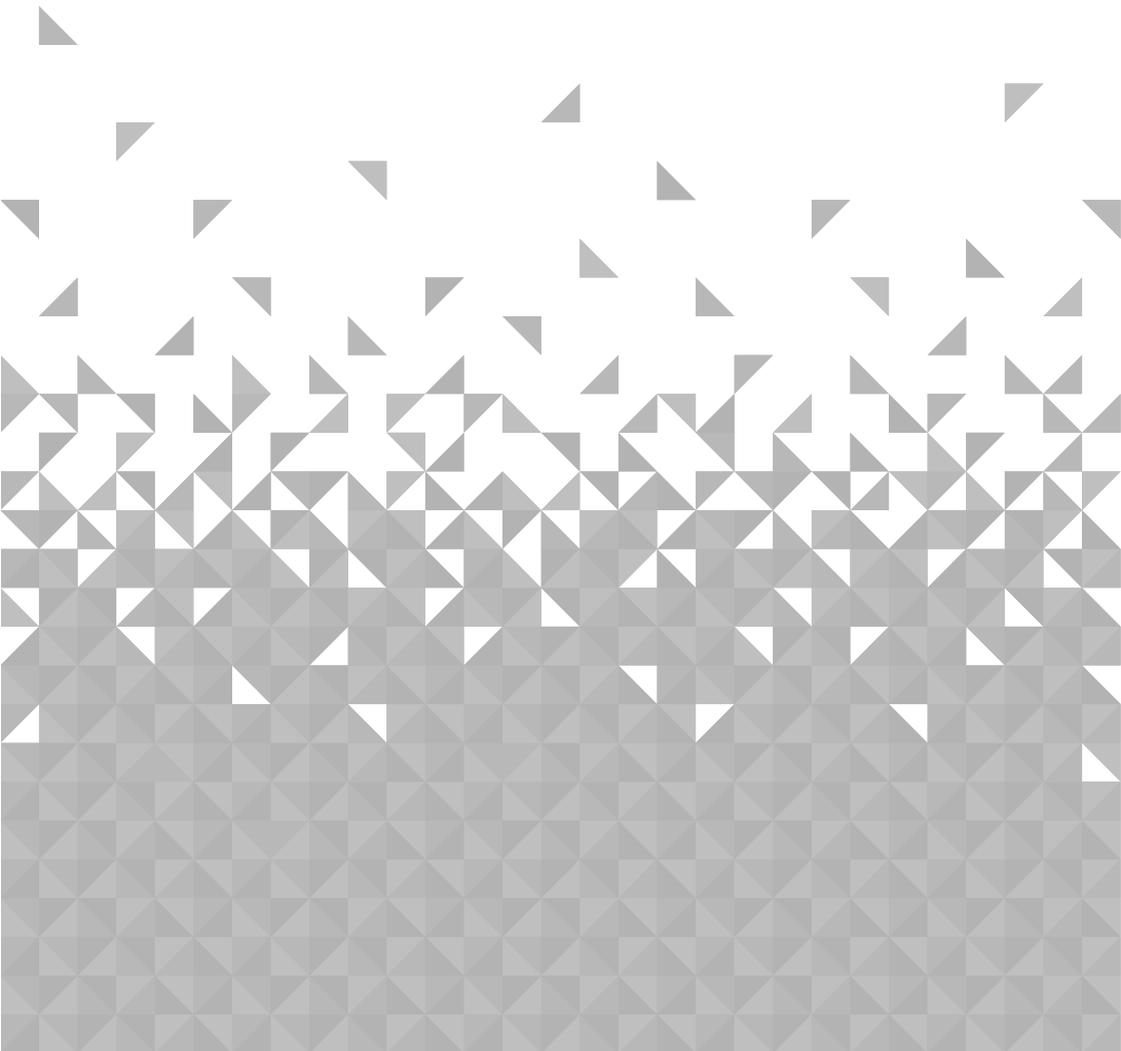



Safety information

Important - Please read these instructions fully before installing or operating

General safety information

- Keep the product and all its parts out of reach of small children.
- This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Keep it dry. Avoid exposure to precipitation, humidity and liquids which could all affect the product circuitry.
- Do NOT leave it in high temperatures as electronic devices and plastic parts may warp in heat.
- No naked flame sources, such as lit candles, should be placed on the product.
- Do NOT leave it in low temperatures as moisture can form inside the product, which may damage the circuit board.
- To reduce the risk of fire or electric shock, do not expose this product to rain or moisture. Do not place objects filled with water, such as a vase, on the product.
- Disconnect your Micro from the mains power supply during thunderstorms or electrical storms.
- Always check that you have completely switched off your Micro, before you change or disconnect the power supply.
- Do NOT attempt to open the product. This product does not contain any user serviceable parts. Unauthorised handling of the device may damage it and will void your warranty.
- Do NOT use your Micro near emergency/intensive care medical equipment.
- Do NOT use harsh chemicals, cleaning solvents or detergents to clean the product. Wipe with a damp (not wet) soft cloth to clean.



This is a CLASS-1 laser product

Use of controls or adjustments other than those specified herein, may result in hazardous laser light beam exposure. Do NOT open the cover and do NOT repair yourself. Refer servicing to qualified personnel.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**



Safety information

Important - Please read these instructions fully before installing or operating



CAUTION

Never touch or look into the optical lens within the CD compartment.

- Do NOT place foreign objects into the CD compartment.
- The underneath and sides of this product may become warm after a long period of use. This is normal.
- If the Micro will not be used for a long period of time, remove the CD and make sure that the mains power is unplugged and the battery is removed from the remote control.
- Only use recommended batteries or those of the same equivalent type. Batteries are to be inserted with the correct polarity.
- The supply terminals are not to be short-circuited.

Ventilation

- Do NOT block or cover slots, holes or openings on the product by placing on soft furnishings such as carpets, rugs or beds as these are provided for functionality and/or ventilation to ensure safe operation of the product
- Do NOT store in dusty or dirty areas.

Power source

- Only use the power supply that came with the product. Using an unauthorised power supply will invalidate your guarantee and may irreversibly damage the product.
- Where the mains power plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- Do not attempt to recharge non-rechargeable batteries.
- Dispose of old batteries carefully.
- Never throw batteries in a fire or attempt to open the outer casing. Do not expose them to excessive heat, such as sunshine.
- Batteries are harmful if swallowed, so keep away from young children.

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 600 3021.



Safety information

Important - Please read these instructions fully before installing or operating



CAUTION

Danger of explosion if batteries are incorrectly replaced. Replace only with the same or equivalent type.



WARNING

Do not ingest the battery, Chemical Burn Hazard.

The remote control supplied with this product contains a button cell battery. If the button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.


Keep new and used batteries away from children.

If the battery compartment does not close securely, stop using the product and keep it away from children.

If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.


Getting to know your CD Micro with DAB and Bluetooth

2

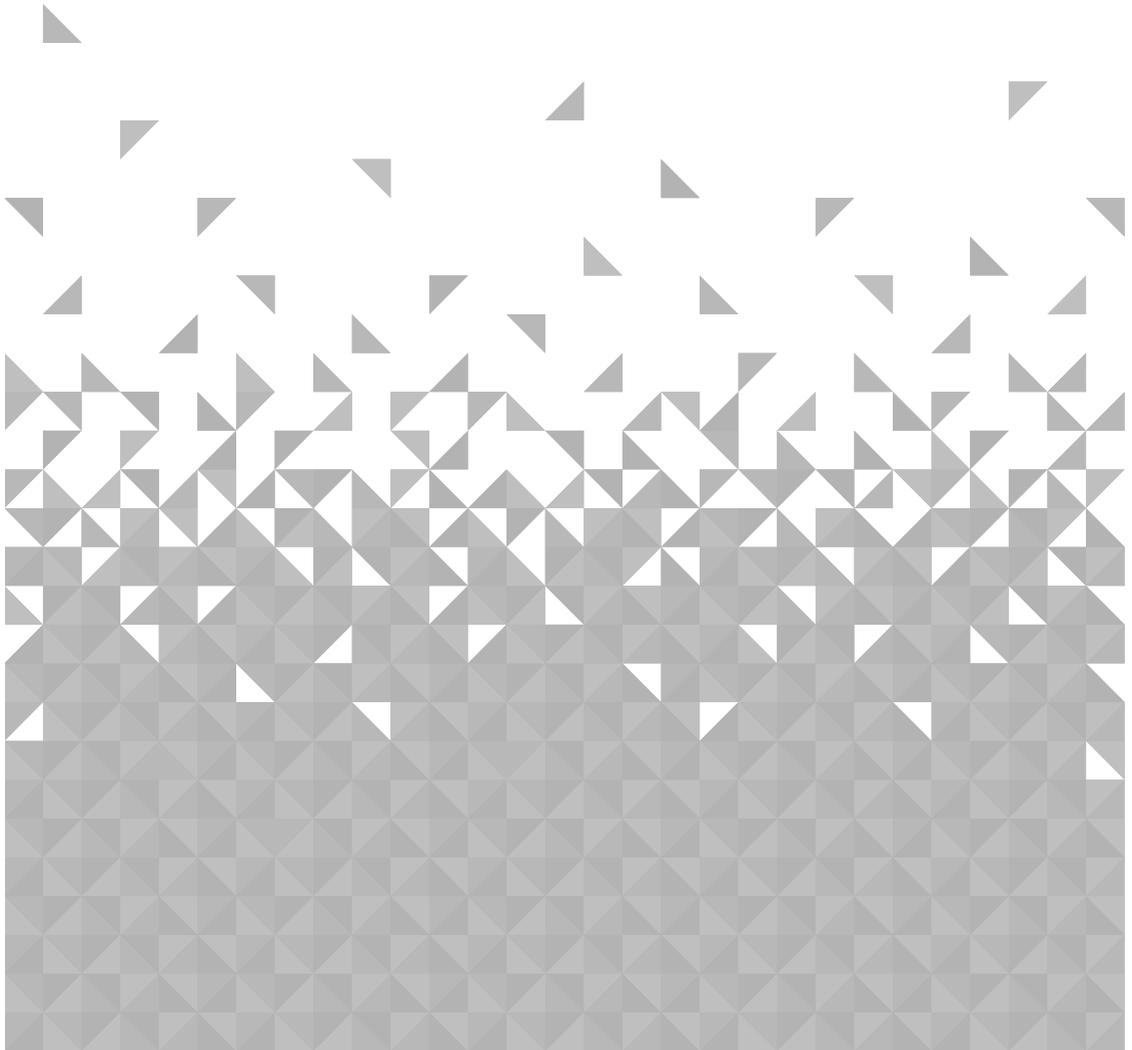


CD Micro with DAB and Bluetooth

You'll be up and running in no time

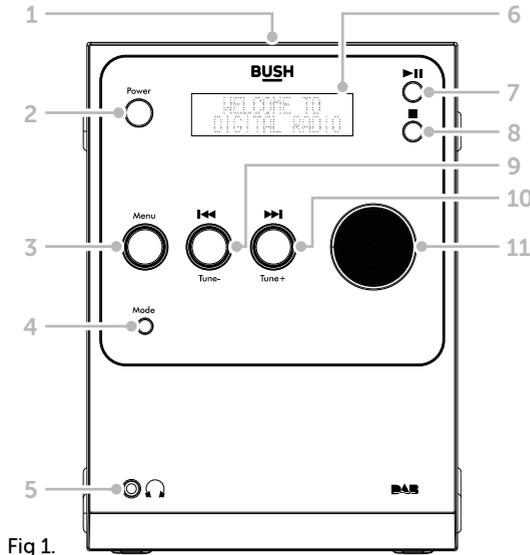

CD Micro (front)

1. CD compartment
2. Power (On/Off)
3. Menu
4. Mode
5. Headphone socket
6. Backlit display
7. Play/Pause
8. Stop
9. Skip back/Tune -
10. Skip forward/Tune+
11. Rotary volume control/
Push to select

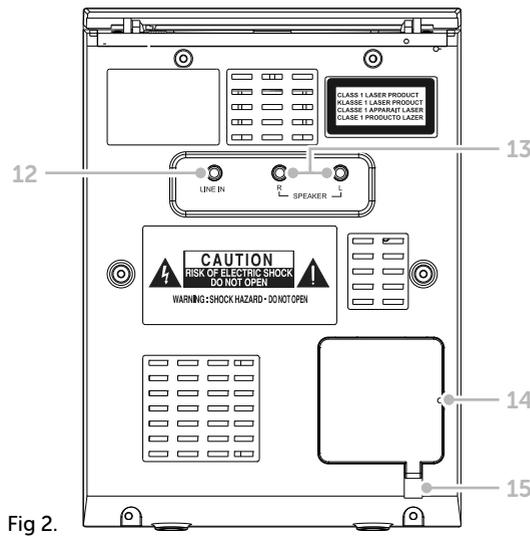


CD Micro (back)

12. Line in
13. Left and Right speaker sockets
14. Wire radio aerial
15. Mains power cable

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

CD Micro with DAB and Bluetooth

You'll be up and running in no time

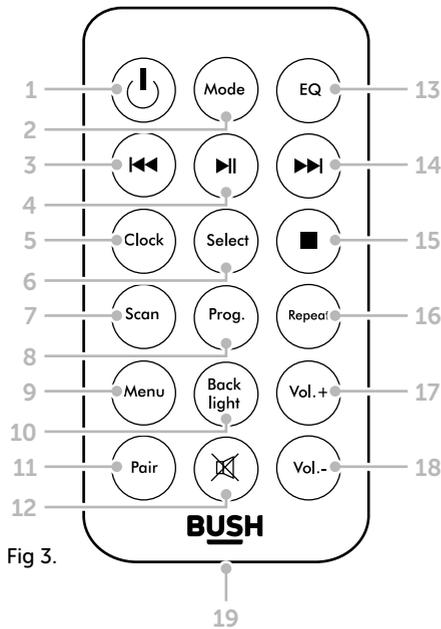

Remote control

1. Power On/Off
2. Mode
3. Skip back
4. Play/Pause
5. Clock
6. Select
7. Scan
8. Prog
9. Menu
10. Backlight
11. Pair
12. Mute
13. EQ
14. Skip forward
15. Stop
16. Repeat
17. Volume +
18. Volume -
19. Battery compartment (at base) 1 x CR2025 battery required (Supplied)

Note: The remote signal may not be received if there is an obstacle between the remote and the Micro. Direct sunlight or other bright light sources shining on the remote sensor to the right of the Micro display, may affect the performance of the remote control.

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 600 3021.

CD Micro with DAB and Bluetooth

You'll be up and running in no time

Check the package contents

The package contains:

- 1 x CD Micro with DAB and Bluetooth with an attached mains power lead and plug
- 2 x Separate speakers (1 x Left and 1 x Right)
- 1 x Remote control
- 1 x Instruction manual

Where to put your Micro

It is important that you consider carefully in advance where your Micro and speakers will be situated and make sure that they are:

- on a flat and stable surface

Note: Never place your Micro directly onto antique or polished surfaces.

- within 1.4 metres of a power socket. Please ensure that the mains power lead and speaker cables are not a trip hazard.
- at least 1 metre away from other electrical appliances to avoid interference
- where it will be in range of the connected or 'paired' bluetooth device (e.g. iPod/iPhone/iPad/Android/other phone/Computer), which is about 10 metres or less (33 feet or less) in line of sight.
- where you can fully extend the wire radio aerial

Setting up

1. Connect the speakers to the Left and Right speaker sockets on the back of the Micro. Please note that the speakers are shaped and so you will need to view them from the front before you connect them to the speaker sockets.
2. Fully extend the wire radio aerial on the back of the Micro to receive the best possible radio reception and sound quality.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

CD Micro with DAB and Bluetooth

You'll be up and running in no time

3. Plug the mains power plug into the mains power wall socket and switch on. Your Micro will now be in 'Standby' mode.
4. Pull out the safety strip on the remote control to activate the battery.

Switch on

Press and release the 'Power' button on the Micro or the  button on the remote control to Switch on .

The first time you use the Micro or if the DAB station list is empty, your Micro will automatically begin to scan for DAB radio stations.

Note: Always make sure that the wire aerial on the back of the Micro is fully extended before your Micro scans for DAB radio stations, to ensure the maximum signal strength.

Switch off

Press and release the 'Power' button on the Micro or the  button on the remote control to go to Standby mode.

To completely power off the Micro, switch off the mains power at the wall socket.

Change the mode

Press and release the 'Mode' button on the Micro or on the remote control to change the mode.

DAB Radio, FM Radio, CD, Bluetooth and AUX modes are available.

Please check the display, which will confirm the mode.

Adjusting the volume

Turn the rotary volume control on the front of the Micro to adjust the volume. Turn clockwise to increase the volume and anti-clockwise to decrease the volume. You can also adjust the volume using the 'Vol+' and 'Vol-' buttons on the remote control.

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 600 3021

CD Micro with DAB and Bluetooth

You'll be up and running in no time

Mute

Press and release the 'Mute' button on the remote control to mute the sound. 'MUTE ON' will flash in the display.

Press and release the 'Mute' button again to turn this feature off and unmute the sound.

Equalizer or EQ setting

You can change the sound of your Micro using the EQ setting. There are 5 options available (Flat, Classic, Rock, Pop and Jazz).

Press and release the 'EQ' button on the remote control to display and change the EQ setting.

Headphone socket

You can connect headphones with a 3.5mm plug (not included) to the socket on the front of the Micro. When you have headphones connected the Micro speakers are switched off and all sound is via the headphones.

Note: Always keep the volume within reasonable limits.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

This page is left intentionally blank




This page is left intentionally blank



Using your CD Micro with DAB and Bluetooth

3

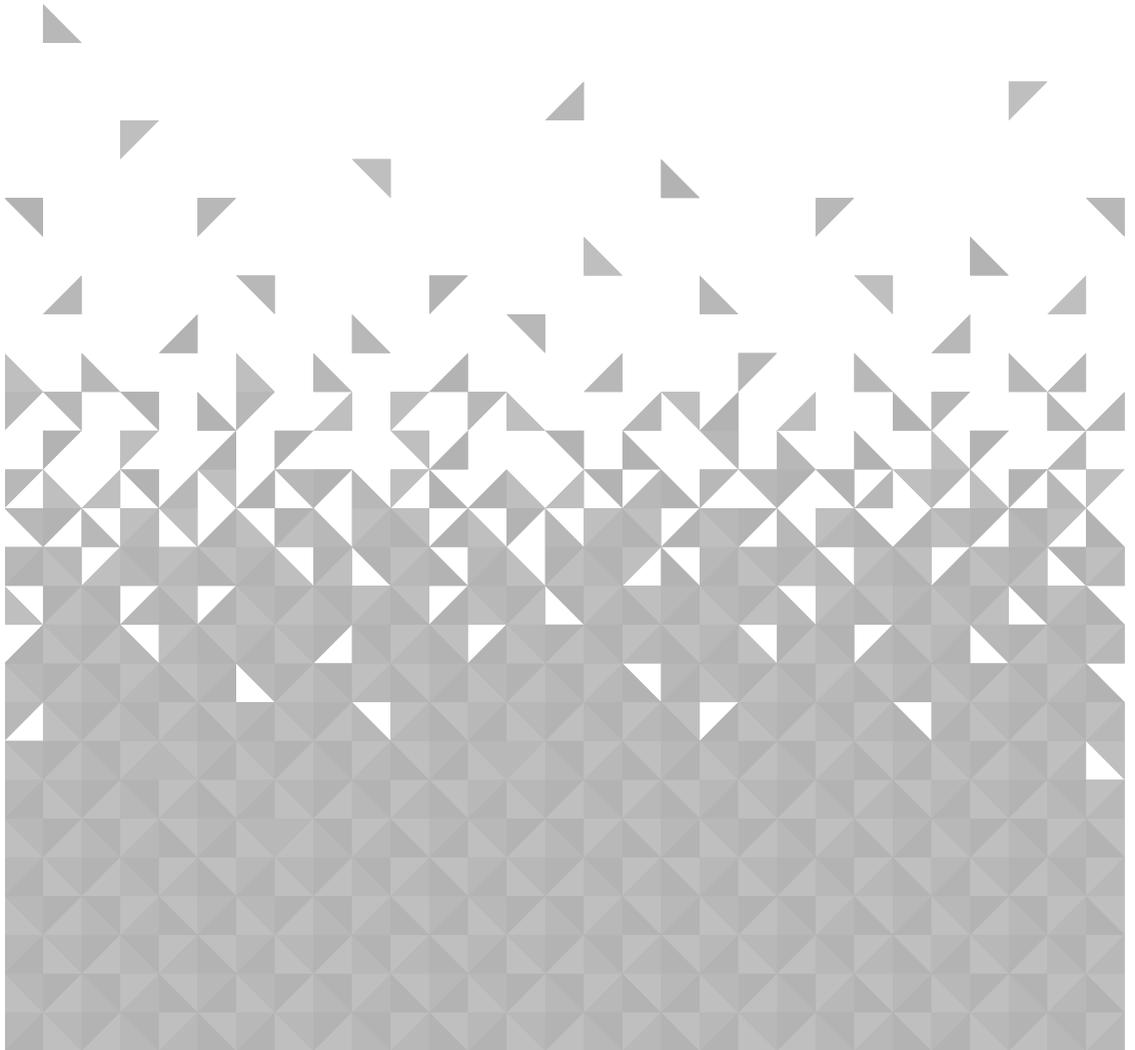

Using your CD Micro with DAB and Bluetooth

Let's get started

Using the DAB Radio

Wire radio aerial

Please make sure that the wire aerial on the back of the Micro is fully extended and adjusted before you attempt to tune to a DAB radio station (a vertical position is recommended). This will ensure that the maximum signal strength is available when the Micro begins to scan. Extending the aerial also ensures the best possible sound quality.

DAB radio mode

Check that your Micro is in DAB radio mode. If you are not already in DAB mode, briefly press and release the 'Mode' button on the front of the Micro or on the remote control, until you are in DAB mode (check the display).

The first time you use the Radio or if the station list is empty, your Micro will automatically begin to scan for DAB radio stations. A progress bar will show the progress of the scan and the number of stations found during the scan will also be displayed.

When the scan is complete your Micro will select the first available station and begin to play. Stations are listed in numerical and then alphabetical order by default.

Changing DAB stations

In DAB mode:

1. Press and release the 'Tune+' or 'Tune-' on the front of the Micro or the  and  buttons on the remote control to move through the available stations.
2. When the station that you would like to listen to is displayed press the rotary control on the Micro to 'Select' or press 'Select' on the remote control. There will be a short delay whilst your Micro tunes to your selected station.

Scanning for DAB stations

With DAB radio, additional stations and services regularly become available so it's a good idea to carry out a manual scan every now and then to make sure that you have the most up to date station listing stored within the memory of your Micro.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Using your CD Micro with DAB and Bluetooth

Let's get started

If you have moved your Micro to another location, e.g.: if you go on holiday, then it's also a good idea to carry out a manual scan.

In DAB mode:

Press and release the **▶▶** button on the Micro or the 'Scan' button on the remote control to begin a search for stations. The display will change to 'Scanning...'. A progress bar will show the progress of the scan and the number of stations found during the scan will also be displayed.

Prune DAB stations

You can remove the DAB stations in the station list that cannot be received in your area. These are listed with a '?' prefix.

1. Press and hold the 'Menu' button on the Micro or on the remote control. Use the **▶▶** and **◀◀** buttons on the Micro or on the remote control to move to <Prune>. Press the rotary control on the Micro to 'Select' or the 'Select' button on the remote control.
2. 'Prune? Yes <No>' is displayed. Use the **◀◀** button on the Micro or on the remote control to move to 'Yes'. Press the rotary control on the Micro to 'Select' or the 'Select' button on the remote control to prune the station list. Stations with a '?' prefix will now no longer be displayed. Press and release the 'Menu' button on the Micro or on the remote control to exit the Menu.

Storing a DAB station preset

Your Micro can store up to 10 DAB radio stations in its preset memories for instant access to your favourite stations.

1. Tune the Micro to the DAB radio station that you wish to preset.
2. Press and hold the **■** button on the Micro or the 'Prog.' button on the remote control for approximately 2 seconds until 'Preset store' is displayed.
3. Use the **▶▶** and **◀◀** buttons on the Micro or on the remote control to move to the preset location that you would like to store the radio station to (1-10).

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 600 3021

Using your CD Micro with DAB and Bluetooth

Let's get started

4. Press the rotary control on the Micro to 'Select' or the 'Select' button on the remote control. The display will confirm 'Preset X stored', where 'X' is the number of the preset (1-10).

Note: If there is already an existing DAB station stored under a preset, it will be overwritten when you store the new station.

Tune to a DAB station preset

In DAB mode:

1. Press and release the  button on the Micro or the 'Prog.' button on the remote control. 'Preset Recall' is displayed together with the number of the current preset location.
2. Use the  and  buttons on the Micro or on the remote control to move to the Preset location and station that you would like to listen to (1-10).
3. Press the rotary control on the Micro to 'Select' or the 'Select' button on the remote control. The Micro will instantly tune to that station and begin to play.

Note: If no DAB station has been stored under the preset button, 'Preset Empty' will be displayed, then the Micro will revert to the previously selected radio station.

DAB display information

When listening to a DAB station you can change the information that will appear on the display. There are several different types of information that are sent by the broadcaster.

- **Dynamic Label Segment (DLS)**

This is scrolling text information supplied by the broadcaster. Information could be the name of an artist or music title, DJ's name, contact details for the radio station etc.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Using your CD Micro with DAB and Bluetooth

Let's get started

- **Signal Strength**

A row of solid rectangles will be displayed to indicate the actual signal strength that you are receiving. An empty within the row of solid rectangles will indicate the minimum signal strength for acceptable listening. The stronger the signal, the further to the right the row of solid rectangles will be.

- **Program Type (PTY)**

Such as 'Rock', 'Pop', 'Talk' or 'News'

- **Multiplex Name**

Displays the broadcasting area and collection of radio stations on this frequency e.g.: BBC National DAB, Digital 1 Network.

- **Channel and Frequency**

e.g.: 12B 225.648 MHz

- **Signal error**

This is displayed as a number between 0-99. It would not be possible to satisfactorily listen to a radio station with a signal error rate of 30 or above. Try adjusting the aerial or relocating your Micro to improve reception.

- **Signal information**

The data rate at which the signal is being transmitted.

- **Time and date**

Supplied by the broadcaster

1. Repeatedly press and release the 'Menu' button on the Micro or on the remote control to cycle through the different information options.

Using your CD Micro with DAB and Bluetooth

Let's get started

Dynamic range control (DRC)

In DAB mode:

The dynamic range for each radio programme is set by the broadcaster for each radio station and may be different for the types of programme broadcast, such as pop or classical music or a chat show. The dynamic range control signal is transmitted in parallel with the audio signal for each programme and with your Micro you can use this control signal to expand or compress the dynamic range (the difference between the loudest and quietest sounds) of the reproduced audio signal. Changing the dynamic range can affect the 'loudness' and/or 'quality of sound' of the programme that you hear so that it will be more suited to your listening conditions and your own personal listening requirements. e.g. in a noisy environment, where quiet sounds might be swamped, setting the compression to maximum will 'boost' the quiet sounds, whilst keeping the loudest sounds at their original level.

There are 3 levels of compression:

- **DRC off:** No compression. This is the default setting.
 - **DRC low:** Medium compression.
 - **DRC high:** Maximum compression.
1. Press and hold the 'Menu' button on the Micro or on the remote control. Use the **▶▶** and **◀◀** buttons on the Micro or on the remote control to move to <DRC>.
 2. Press the rotary control on the Micro to 'Select' or the 'Select' button on the remote control. The current DRC setting will have an '*' next to it.
 3. Use the **▶▶** and **◀◀** buttons on the Micro or on the remote control to move through the options and press the rotary control on the Micro to 'Select' or the 'Select' button on the remote control to confirm.
 4. Press and release the 'Menu' button to exit the Menu.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Using your CD Micro with DAB and Bluetooth

Let's get started

Using the FM Radio

Wire radio aerial

Please make sure that the wire aerial on the back of the Micro is fully extended and adjusted before you attempt to tune to an FM radio station (a vertical position is recommended). This will ensure that the maximum signal strength is available when the Micro begins to scan. Extending the aerial also ensures the best possible sound quality.

FM Radio mode

Check that your Micro is in FM radio mode. If you are not already in FM mode, briefly press and release the 'Mode' button on the front of the Micro or on the remote control, until you are in FM mode (check the display). When your Micro is in FM mode it can receive Radio Data System or 'RDS' information if this is being transmitted by the broadcaster. RDS information will often include the station name, detail about the programme and the current time.

If you were listening to an FM station when you switched the Micro off then this station will be automatically selected when you switch the Micro back on.

Tuning to an FM station

In FM mode:

1. Press and release the ►|| button on the Micro or the 'Scan' button on the remote control to scan up the frequency band. Press and hold the ►|| button on the Micro or the 'Scan' button on the remote control to scan down the frequency band.
Your Micro will search for the next available station and then stop on that station.
2. Press and release the 'Tune+' or 'Tune-' on the front of the Micro or the ►|| and ◀◀ buttons on the remote control to fine tune each frequency in 0.05MHz steps, if necessary.

Note: If reception is still poor check that the wire aerial is fully extended or try moving the Micro to another location.

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 600 3021

Using your CD Micro with DAB and Bluetooth

Let's get started

Changing the scan setting

In FM mode:

1. Press and hold the 'Menu' button on the Micro or on the remote control.
<Scan setting> is displayed. Press the rotary control on the Micro to 'Select' or the 'Select' button on the remote control.

There are now two different options to choose from and the current setting will have an '*' next to it.
 - **All stations**
The scan will stop for every station it receives, even if the signal strength is poor.
 - **Strong stations**
The scan will only stop when a strong signal strength is received which should also result in a better audio quality.

It is possible that the station you are scanning for may be missed using this option.
2. Use the **▶▶** and **◀◀** buttons on the Micro or on the remote control to move to and choose from the two options available. Press the rotary control on the Micro to 'Select' or the 'Select' button on the remote control to confirm.
3. Press and release the 'Menu' button to exit the Menu.

Audio mode

The radio will automatically switch between Stereo and Mono, depending on the quality of the signal being received but you can override this function and manually switch between 'Stereo' and 'Mono'.

Note: You may wish to select 'Stereo' if you are listening to your Micro using headphones.

1. Press and hold the 'Menu' button on the Micro or on the remote control.
2. Use the **▶▶** and **◀◀** buttons on the Micro or on the remote control to move to <Audio setting>. Press the rotary control on the Micro to 'Select' or the 'Select' button on the remote control.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Using your CD Micro with DAB and Bluetooth

Let's get started

There are now two different options of 'Forced mono' and 'Stereo allowed' and the current setting will have an '*' next to it.

3. Use the **▶▶** and **◀◀** buttons on the Micro or on the remote control to move to and choose from the two options available. Press the rotary control on the Micro to 'Select' or the 'Select' button on the remote control to confirm.
4. Press and release the 'Menu' button to exit the Menu.

Storing an FM station preset

Your Micro can store up to 10 FM radio stations in its preset memories for instant access to your favourite stations.

1. Tune the Micro to the FM radio station that you wish to preset.
2. Press and hold the **■** button on the Micro or the 'Prog.' button on the remote control for approximately 2 seconds until 'Preset store' is displayed.
3. Use the **▶▶** and **◀◀** buttons on the Micro or on the remote control to move to the preset location that you would like to store the radio station to (1-10).
4. Press the rotary control on the Micro to 'Select' or the 'Select' button on the remote control. The display will confirm 'Preset X stored', where 'X' is the number of the preset (1-10).

Note: If there is already an existing FM station stored under a preset, it will be overwritten when you store the new station.

Tune to an FM station preset

In FM mode:

1. Press and release the **■** button on the Micro or the 'Prog.' button on the remote control. 'Preset Recall' is displayed together with the number of the current preset location.
2. Use the **▶▶** and **◀◀** buttons on the Micro or on the remote control to move to the Preset location and station that you would like to listen to (1-10).

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 600 3021

Using your CD Micro with DAB and Bluetooth

Let's get started

3. Press the rotary control on the Micro to 'Select' or the 'Select' button on the remote control. The Micro will tune to that station and begin to play.

Note: If no FM station has been stored under the preset button, 'Preset Empty' will be displayed, then the Micro will revert to the previously selected radio station after a few seconds.

FM display information

When listening to an FM station you can change the information that will appear on the second line of the display. There are several different types of information that are sent by the broadcaster.

- **Radiotext (RT)**

This is scrolling text information supplied by the broadcaster. Information could be the name of an artist or music title, DJ's name, contact details for the radio station etc.

- **Program Type (PTY)**

Such as 'Rock', 'Pop', 'Talk' or 'News'

- **Station name or frequency**

Such as BBC R4 or 92-95MHz

- **Audio mode**

Stereo or Mono.

Note: The radio will automatically switch between Stereo and Mono, depending on the quality of the signal being received but you can override this function and manually switch between 'Stereo' and 'Mono'. Please refer to 'Audio Mode' on page 26.

1. Repeatedly press and release the 'Menu' button on the Micro or on the remote control to cycle through the different information options.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Using your CD Micro with DAB and Bluetooth

Let's get started

Using the CD Player

Note: Please make sure that you remove the cardboard shipping protector from within the CD compartment before you try to use CD mode.

CD mode

Check that your Micro is in CD mode. If you are not already in CD mode, briefly press and release the 'Mode' button on the front of the Micro or on the remote control, until you are in CD mode (check the display). 'Load...'; followed by 'NO DISC' will be displayed.

If there is a CD in the compartment, after a short delay, the first track will begin to play and 'T-01' together with the elapsed time of the track will be displayed.

Play a CD

Your Micro will play Audio CDs. It is not possible to play DVD or computer CDs.

Note: Please make sure that you remove the cardboard shipping protector from within the CD compartment before you try to use CD mode.

1. Press and release the lid of the CD player on the front right edge, where 'Push to Open' is printed. 'OPEN' will be displayed.
 2. Place an audio CD, label side up, into the CD compartment. Please ensure that you line up the hole in the centre of the CD, with the central spindle and press down into place.
 3. Close the lid of the CD player, pressing down on the front right edge, ensuring that it 'clicks' shut. 'Load...' will be displayed and after a short delay the first track will begin to play. 'T-01' and the elapsed time of the track will be displayed.
-

Note: If there is no CD in the compartment, 'NO DISC' will be displayed.

Using your CD Micro with DAB and Bluetooth

Let's get started

CD controls

You can use the following controls on your Micro in CD mode.

- **Play**
Press and release the ►|| button on the Micro or on the remote control. The first track will begin to play and the track number and the elapsed time of the track will be displayed.
- **Pause**
Press and release the ►|| button on the Micro or on the remote control. The elapsed time of the track will flash in pause mode. Press and release the ►|| button again to continue to play the track/CD.
- **Next track:**
Press and release the ►| button on the Micro or on the remote control.
- **Previous track:**
Press and release the ◀| button on the Micro or on the remote control.
- **Fast forward within a track:**
Press and hold the ►| button on the Micro or on the remote control.
- **Fast backward within a track:**
Press and hold the ◀| button on the Micro or on the remote control.
- **Stop**
Press and release the ■ button on the Micro or on the remote control.

Programmed play mode

In programmed play mode, you can program the play order of the tracks on your CD. You can program up to 20 tracks in total.

Note: To set up programmed play mode, the CD must be stopped in the CD compartment and must not be paused or playing.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Using your CD Micro with DAB and Bluetooth

Let's get started

In CD mode, with the CD you wish to programme in the CD compartment and stopped:

1. Press and release the 'Menu' button on the Micro or press and release the 'Prog.' button on the remote control to enter CD programmed play mode. 'P01 00' will be displayed.
2. Use the **⏮** or **⏭** buttons on the Micro or on the remote control to go to the track number that you would like to program to play first. Press and release the 'Menu' button on the Micro or the 'Prog.' button on the remote control to confirm.
3. 'P02 00' will now be displayed and you can select the second track that you would like to programme. Continue to select each track as in Step 2 above, up to a total of 20 tracks. Press and release the 'Menu' button on the Micro or the 'Prog.' button on the remote control again to confirm the last track in the programmed play mode list.
4. Press and release the **▶||** button on the Micro or on the remote control to play the programmed tracks.
5. To exit programmed play mode, press and release the **■** button on the Micro or on the remote control.

Repeat and Random modes

Press and release the 'Repeat' button on the remote control. 'RP1' is displayed. Continuously press and release the 'Repeat' button to cycle through the available options of :

- 'Repeat' (current track) 'RP1' is displayed.
- 'Repeat all' (all the tracks on the CD) 'ALL' is displayed.
- 'Random' (random play order) 'RDM' is displayed.

Press and release the 'Repeat' button one more time to turn off Repeat and Random modes.

Using your CD Micro with DAB and Bluetooth

Let's get started

Remove the CD

Press and release the lid of the CD player on the front right edge, where 'Push to Open' is printed. 'OPEN' will be displayed.

Put your thumb on the central spindle and put your fingers under the outside edge of the CD and lift off and remove the CD from the compartment.

Close the lid of the CD player, pressing down on the front right edge, ensuring that it 'clicks' shut. 'NO DISC' will be displayed.

Note: If you stop or pause playing a CD for approximately 30 minutes, your Micro will go to Standby mode automatically.

Caring for compact discs

- Do NOT touch the playback side of the CD.
- Do NOT attach paper or tape or any other material to the disc.
- Fingerprints and dust on the disc will cause sound deterioration. Wipe the disc from the centre outwards with a soft cloth. Always keep the disc clean.
- If dust or marks cannot be removed with a soft cloth, wipe the disc lightly with a slightly damp soft cloth and then wipe with a soft dry cloth.
- Do NOT use any type of solvent, commercially available cleaners or antistatic spray for vinyl as it may damage the disc.
- Do NOT store discs in a place subject to direct sunlight or near a heat source.
- Do NOT store discs in a place subject to moisture or dust, such as a bathroom or near a humidifier.
- Always store discs vertically in a case, stacking or placing objects on discs may cause warping.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Using your CD Micro with DAB and Bluetooth

Let's get started

Bluetooth mode

Check that your Micro is in Bluetooth (BT) mode. If you are not already in BT mode, briefly press and release the 'Mode' button on the front of the Micro or on the remote control, until you are in BT mode (check the display). 'Searching' will be displayed. If a device has not been 'paired' or connected with your Micro 'Searching' will continue to be displayed. If you have previously 'paired' or connected a device with your Micro, after a few seconds 'Connected' will be displayed.

Connecting or 'Pairing' with your Micro

In Bluetooth (BT) Mode:

1. 'Searching' will be displayed.
2. On the device that you would like to connect to your Micro via Bluetooth (e.g. iPhone/iPad/Android/other phone/Tablet/Computer), turn on Bluetooth connectivity and ensure that it is 'discoverable'.

Note: If necessary, refer to the instructions for your device to add or set up Bluetooth.

3. Select to 'Add new device', if necessary.

Note: Some products will automatically search for a new device and so the 'Add new device' option is not available.

4. When found, your Micro will be displayed as 'BUSH DAB Micro'. Select the device name to begin pairing.
5. When pairing is complete 'Connected' will be displayed.
6. Now that you have paired your device with the Micro, it will connect to it when it is within range, which is about 10 metres or less (33 feet or less), line of sight.
7. Your device will remain paired with the Micro unless you decide to disconnect or 'unpair' it.

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 600 3021

Using your CD Micro with DAB and Bluetooth

Let's get started

Note: If your device should be come unpaired for any reason, follow the steps above to 'pair' it again.

Alternatively, you can press and release the 'Pair' button on the remote control to restart the Bluetooth pairing process

Listening to Music/Audio using Bluetooth

In Bluetooth mode:

1. Select and start the music or audio that you wish to listen to on your paired Bluetooth device, it will now be heard through the Micro speakers. Adjust the volume on the connected device and/or your Micro.

Note: If your previously paired device is within range but does not automatically connect, go to the Bluetooth connectivity settings on your device and select 'BUSH DAB Micro' to reconnect. Alternatively, press and release the 'Pair' button on the remote control to restart the Bluetooth pairing process.

2. You can use the controls on your paired Bluetooth device as well as those on the front of the Micro or on the remote control when listening to music via Bluetooth.

Controls available on your Micro and the remote control are:

- **Play/Pause**
 Press and release to play/pause.
- **Skip back**
 Press and release to skip back to the previous track.
- **Skip forward**
 Skip forward. Press and release to skip forward to the next track.

Delete all paired Bluetooth device records from your Micro

Press and hold the  button on the Micro or on the remote control to delete all the Bluetooth device records from your Micro. 'Searching' will be displayed.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Using your CD Micro with DAB and Bluetooth

Let's get started

Aux in mode

Check that your Micro is in Aux in mode. If you are not already in Aux in mode, briefly press and release the 'Mode' button on the front of the Micro or on the remote control, until you are in Aux in mode (check the display).

Using a 3.5mm audio input connection cable (not included), Aux in allows for a quick and easy connection to an external sound source.

1. Connect one end of the 3.5mm audio connection cable to the headphone (or auxiliary out) socket of your secondary device, connect the other end to the Line in socket on the back of your Micro.
2. Press the 'Play' button on your external device to start playback through the Micro speakers..
3. To gain optimal volume levels, adjust the output volume level on both the secondary device and on the Micro.

Note: It is recommended that you unplug the Audio cable from the Line in socket after you have finished listening to your external device.




This page is left intentionally blank



Other information

4

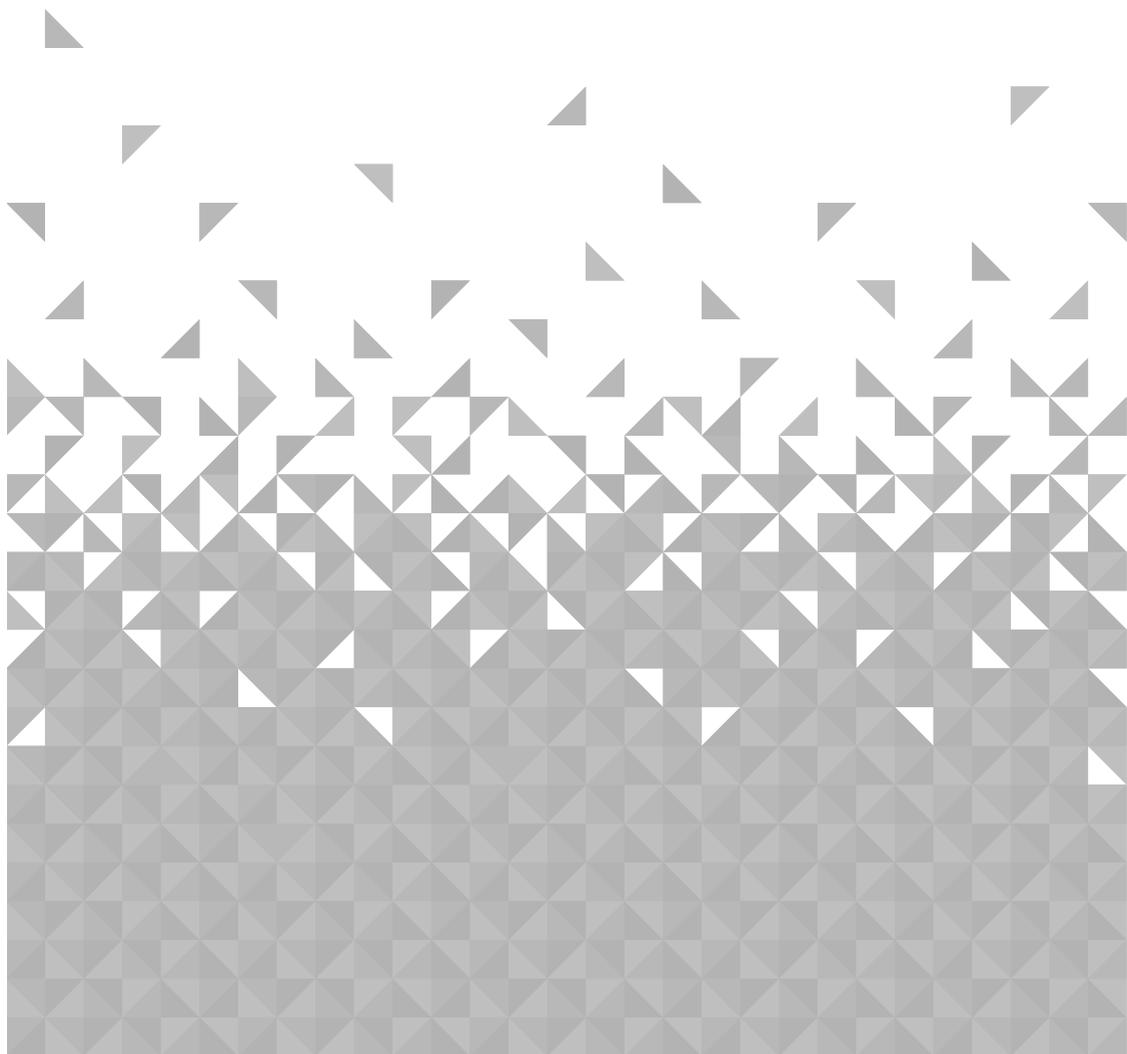

Other information

Helpful technical information

Technical specification

Power:	Input AC 230-240V/50Hz
Battery:	1 x 3V CR2025 for the remote control
Output:	2 x 3W RMS
Frequency range:	FM: 87.5 MHz to 108 MHz DAB: Band III, 174 MHz to 240 MHz
Bluetooth:	Version 2.1 Profiles A2DPV1.2, AVRCPV1.4 Frequency range: 2.4GHz-2.480GHz
Pairing name:	BUSH DAB Micro



This product is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

This page is left intentionally blank




This page is left intentionally blank



Product support

5

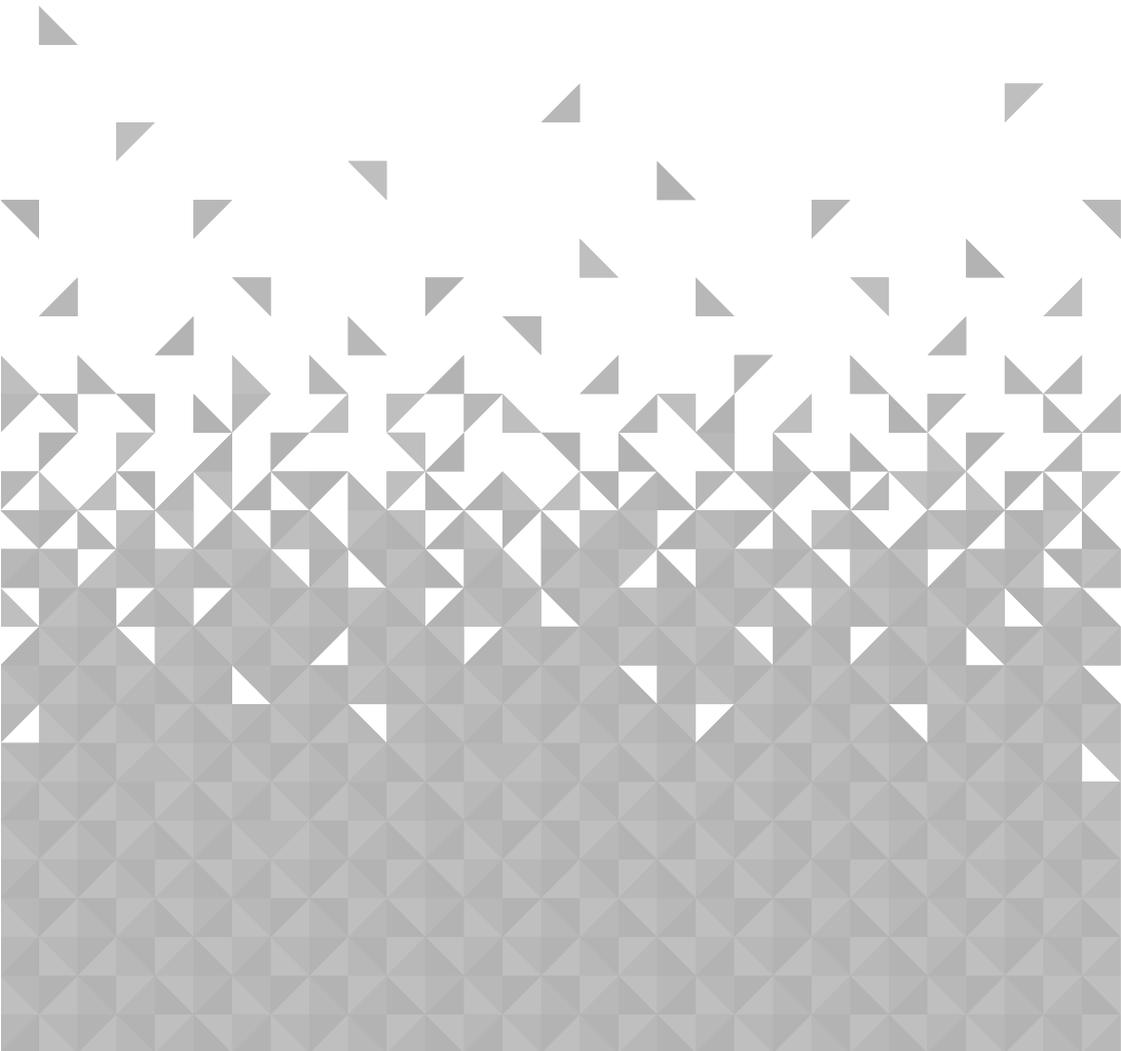

Product support

Help is always at hand

Troubleshooting

No sound / power:

- Adjust the volume using the rotary control on the Micro or the 'Vol +' and 'Vol -' buttons on the remote control.
- Check that the speakers are plugged fully home into the sockets on the back of the Micro.
- Check that the mains power wall socket is switched on and that the Micro is not in Standby mode.
- You may have headphones connected. Either use the headphones to listen to your Micro or unplug the headphones.
- If you are using a Bluetooth connected device or an external sound source via Line in. Increase the volume on the secondary device and on the Micro.

Radio reception is poor:

- Fully extend the wire aerial to get the best reception and sound quality.
- Retune the radio station/s.
- Try moving your Micro to another location to see if reception improves.
- Check that you do not have other electrical equipment too close to your Micro, causing interference.
- Visit www.digitalradionow.com for information about DAB reception in your area.

The function buttons do not respond:

- Check that mains power wall socket is switched on and that the Micro is not in Standby mode.
- Check that you are trying to use the function buttons for the mode that you are in.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Product support

Help is always at hand

CD does not play:

- Check that you are in CD mode. Press and release the 'Mode' button on the Micro or on the remote control to change the mode (check the display).
- Take out the CD and check that it is not marked or scratched. Damaged CDs cannot be played in the Micro or may skip or not rotate correctly.
- Please check that you are using an original audio CD and not a copy. Often copied CDs will not play.

Unable to pair with a Bluetooth device:

- Check that you are in Bluetooth mode. Press and release the 'Mode' button on the Micro or on the remote control to change the mode (check the display).
- Ensure that you are within range of the Micro for Bluetooth functionality, 10 metres or less (33 feet or less).
- Move the Micro and Bluetooth device away from other Bluetooth devices/electrical equipment.

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 600 3021

Product support

Help is always at hand

- If possible, turn off other nearby Bluetooth devices or disable their Bluetooth functionality.

Factory reset

You can reset your Micro and restore all of the original factory settings.

Note: All of your settings, including the radio station list, any radio presets and paired Bluetooth device records will be deleted when you reset the Micro

In DAB or FM mode:

1. Press and hold the 'Menu' button on the Micro or on the remote control. Use the **▶▶** and **◀◀** buttons on the Micro or on the remote control to move to <System>. Press the rotary control on the Micro to 'Select' or the 'Select' button on the remote control.
2. Use the **▶▶** and **◀◀** buttons on the Micro or on the remote control to move to <Factory Reset>. Press the rotary control on the Micro to 'Select' or the 'Select' button on the remote control.
3. 'Factory Reset? Yes <No>' is displayed. Use the **◀◀** button on the Micro or on the remote control to move to 'Yes'. Press the rotary control on the Micro to 'Select' or the 'Select' button on the remote control.
4. Your Micro will now reset, after a short delay, 'Waiting', followed by Scanning... will be displayed. The Micro will then automatically begin to scan for DAB radio stations. A progress bar will show the progress of the scan and the number of stations found during the scan will also be displayed. When the scan is complete your Micro will select the first available station and begin to play. Stations are listed in numerical and then alphabetical order by default.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Product support

Help is always at hand

Help and assistance

If you require any technical guidance or find that your CD Micro with DAB and Bluetooth is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions or online at www.argos-support.co.uk

If you still require further assistance, call one of our experts on **0345 600 3021***. To help give us give you a fast and efficient service please have the following information ready:

Model Ref.

Serial number

You can find these on the rating plate - a small information panel (usually a sticker or metal plate) on the rear or base of your product.

Date of purchase

This will be shown on your receipt

Local call rates applies*

Lines open 8am-7pm Monday to Saturday and 10am-4pm Sunday.

*Calls to Argos enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see www.bt.com/pricing for details.

For security and training purposes, telephone calls to and from customer service centres may be recorded and monitored. Calls from Republic of Ireland will attract international call charges.

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on **0345 600 3021**.

Product support

Help is always at hand

Disposal



- Disposal of your old product. Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.
- When this crossed out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2012/19/EC..
- Please make yourself aware of the local collection system for electrical and electronic products.
- Please act according to your local rules and do not dispose of your old products with your normal household waste.
- The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.



This product is intended for use within the UK. This equipment complies with the essential requirements of the Radio Equipment Directive 2014/53/EU.

Declaration of Conformance

Hereby, Argos Ltd, declares that this CD Micro with DAB and Bluetooth is in compliance with the essential requirements and other relevant provisions of the Radio Equipment Directive 2014/53/EU. The complete declaration of conformity can be obtained by contacting <http://www.argos-support.co.uk/>

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Product support

Help is always at hand

BUSH

Call us now and activate your 12 month guarantee

Thank you for choosing Bush. Your new product is guaranteed against faults and breakdowns for 12 months. Don't forget to register it with us today so we can provide you with our best possible after-sales service and useful updates.

www.bushregistration.co.uk

FREEPHONE*

0800 597 8548

Lines are open 8am - 8pm, 365 days a year. *Calls may be recorded and monitored.

Your Bush Guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from who your purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in the manual.
- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexperienced repair.
- Specifications are subject to change without notice.
- Bush disclaim any liability for loss or damage arising from the breakdown of the product.
- This guarantee is in addition to and does not diminish your statutory or legal rights.

Important Data Protection Information

If you provide us with information about another person, you confirm that they have appointed you to act for them, to consent to the processing of their personal data including sensitive personal data and that you have informed them of our identity and the purposes (as set out in the Important Data Privacy notice displayed overleaf) for which their personal data will be processed.

You are entitled to ask for a copy of the information we hold about you (for which we may charge a small fee) and to have any inaccuracies in your information corrected.

For quality control and training purposes, we may monitor or record your communications with us.

If your personal details change, if you change your mind about any of your marketing preferences or if you have any queries about how we use your information, please let us know by contacting our Data Protection Officer, Domestic & General, Leicester House 17 Leicester Street, Bedworth, Warwickshire CV12 8JP.

Guarantor: Argos Limited - 489 - 499 Avebury Blvd. - Milton Keynes - MK9 2NW

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 600 3021

BUSH

Contact:

www.argos-support.co.uk

Helpline: 0345 600 3021

 DAB Digital
Radio