

# BUSH

## Instruction manual

Washing Machine

BIWM81400W





You'll soon be enjoying your new washing machine.

It all begins here, with your instructions. Don't worry, there's nothing too technical coming up. Just simple, step-by-step guidance to get you up and running quickly. Sound good? Then let's get started.

## Help and Guidance

We're here to help you get the most from your <washing machine>. Should you require any guidance, a simple solution can often be found online at:

**[www.bush-support.com](http://www.bush-support.com)**

If you still require further assistance, call one of our experts on **0345 257 7271**.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions, or online at **[www.bush-support.com](http://www.bush-support.com)** If you still require further assistance, call one of our experts on **0345 257 7271**.

# Contents

## 1 Safety information

|                    |   |
|--------------------|---|
| Safety information | 6 |
|--------------------|---|

## 2 Getting to know your washing machine

|                    |    |
|--------------------|----|
| Ready? Let's begin | 10 |
| Accessories        | 12 |

## 3 Installing your washing machine

|                                      |    |
|--------------------------------------|----|
| Installation requirements            | 14 |
| Unpacking                            | 14 |
| Connections (electrical, water, gas) | 15 |

## 4 Functions

|           |    |
|-----------|----|
| Functions | 17 |
|-----------|----|

## 5 Using your washing machine

|                                     |    |
|-------------------------------------|----|
| First use of <washing machine>      | 27 |
| Standard and advanced functions/use | 28 |

## 6 Care and Maintenance

|                     |    |
|---------------------|----|
| Cleaning            | 31 |
| Maintenance actions | 32 |

## 7 Product support

|                          |       |
|--------------------------|-------|
| Troubleshooting          | 35-36 |
| Error Signals            | 37    |
| Technical Specifications | 38    |
| Help and assistance      | 39    |
| Disposal                 | 40    |
| Guarantee                | 41    |



# Safety information

1



## Safety information

**Important** - Please read these instructions fully before installing or operating your washing machine

### Before use

- If the supply cord is damaged, it must be replaced by the manufacturer, their service agent or similarly qualified persons in order to avoid a hazard.
- The new hose-set supplied with the appliance are to be used and that old hose-set should not be reused.
  - This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children without supervision.
  - Children should be supervised to ensure that they do not play with the appliance.
  - Pull out its plug from the power socket before cleaning or maintenance.
  - Make sure that all pockets are emptied.
  - Pull out its plug and cut off water supply after the operation.
  - Pets and children may climb into the machine. Check the machine before every operation.
  - Glass door may be very hot during the operation. Keep children and pets far away from the machine during the operation.
  - Take care that power voltage and frequency shall be identical to those of washing machine.
  - Do not use any socket with rated current less than that of washing machine. Never pull out the power plug with wet hands.
  - To ensure your safety, the power cord plug must be inserted into an earthed three-pole socket. Check carefully and make sure that your socket is properly and reliably earthed.
  - Packing materials may be dangerous to the children. Please keep all packing materials (plastic bags, foams etc) far away from the children.
- The installation of this appliance is best carried out by 2 people.
- Dispose of all packaging carefully and responsibly.
- This appliance is for indoor use only. Only install in a dry indoor environment.
- The appliance **MUST** be positioned on a firm level base.
- Do not position the appliance where it is exposed to direct sunlight or heat sources as this will age the plastic and rubber components.
- Ensure all 4 packing bolts have been removed.
- Ensure the appliance is connected directly to a domestic mains water supply.
- Warning: This washing machine **MUST** only be connected to a cold water supply.
- Ensure all electrical connections are as stated in this document.
- Ensure the appliance is plugged into a separate earthed socket that is easily accessible.
- Ensure the power lead is not trapped under the appliance.
- Do not connect the appliance to the power supply until installation is complete.
- This appliance is for domestic/household use only and is not suitable for commercial use.
- Check that the water hose joints and connections are secure and there are no leaks. If the hoses leak, do not use them until the leaks have been stopped.
- Do not forget that the packing material of your machine may be hazardous for children.

**WARNING:** The manufacturer is not responsible for any damage or injury if the safety instructions are not followed.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions, or online at [www.bush-support.com](http://www.bush-support.com) If you still require further assistance, call one of our experts on **0345 257 7271**.



## Safety information

**Important** - Please read these instructions fully before installing or operating your washing machine

### During use

- Do not use a multiple socket or extension cord.
- Do not use if the power lead is damaged. It must be replaced by the manufacturer, their approved service agent or similarly qualified person. Customer Helpline: 0345 257 7271.
- Do not insert the plug into the power supply with wet hands.
- Do not touch or use the appliance when barefoot or with wet or damp hands.
- Do not open the detergent drawer during a wash cycle.
- Do not touch the porthole (door) during the washing cycle - it will get hot.
- Never force the machine door open while the machine is running.
- Do not open the door if water is visible through the porthole.
- Do not wash foam rubber or sponge like materials on a hot wash.
- The machine can reach high temperatures while running. Do not touch the drain hose or waste water during draining.
- Keep your pet away from your machine.
- Do not use flammable detergent, sprays or dry cleaning agents in or near to the appliance.
- Do not remove or insert the plug in the presence of flammable gas.
- The appliance should not be put on a carpet which can block the air ventilation on the bottom side.
- Do not place heavy objects or sources of heat or damp on top of the washing machine.
- Only use detergents which are suitable for automatic washing machines and follow the detergent manufacturers recommendations.
- Do not use this appliance if there are any missing or damaged parts.
- Do not attempt to repair the appliance yourself. Contact the manufacturer, their approved service agent

 
or the Customer Helpline: 0345 257 7271.

### Door emergency opening function

When the machine is running, any power cut or when the program is not yet complete, the door will remain locked.

To open the door;

- Please turn off the machine. Take off the power plug from the mains socket.
- To drain the waste water, follow the instructions given in cleaning the pump filter section.(\*)
- Pull the down the emergency opening mechanism with the help of a tool and open the door at the same time.
- Doors, move the emergency opening handle to the open position after being closed again, if the door remains locked.



(\*) Instead of pump cover part, Plinth sheet part is using in Built-in Machine. To remove the plinth sheet part, please follow the Built-in Installation Manual instructions.

If the machine is Built-in;

- Built-in Machine must be used with Plinth sheet.
- Please keep the plug accessible after the installation.

Please follow the Built-in Installation Manual instructions to use Built-in Machine.

**WARNING:** The manufacturer is not responsible for injuries or damage caused by improper installation or use.



# Getting to know your washing machine 2



# Getting to know your washing machine

You'll be up and running in no time


## Ready? Let's begin...

Please read these instructions carefully. They contain important information which will help you get the best from your washing machine and ensure safe and correct installation and operation.

If you require any further assistance, our technical experts are happy to help. For full details, refer to the product support section at the end of these instructions.


# Getting to know your washing machine

You'll be up and running in no time

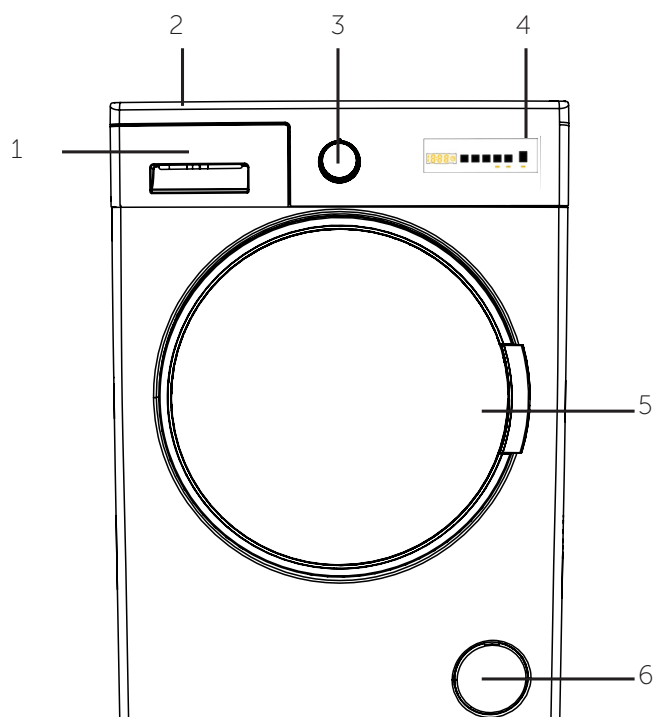

## Front

1. Detergent drawer
2. Top panel
3. Programme knob
4. Start/Pause button
5. Door
6. Filter

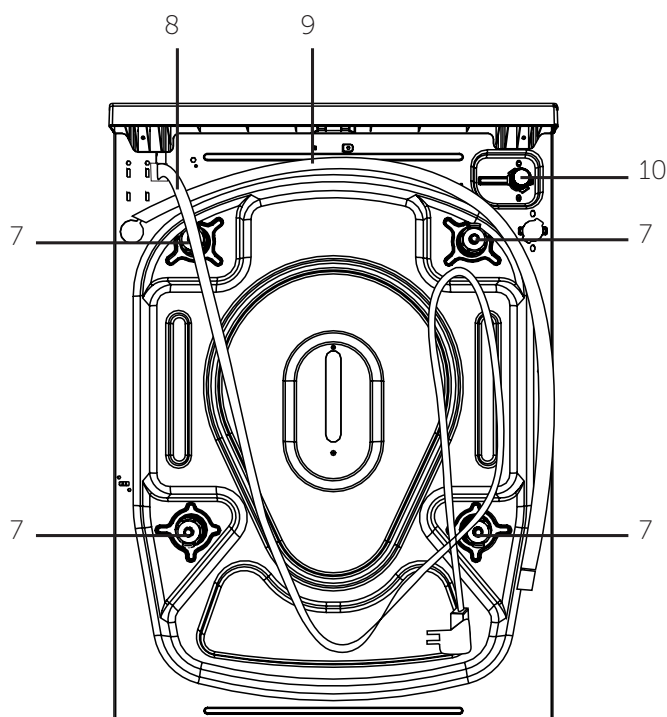

## Back

7. Packing bolt x 4
8. Power lead
9. Drain hose
10. Water inlet

# Getting to know your washing machine



You'll be up and running in no time

| Model      | Capacity | Spin Speed |
|------------|----------|------------|
| BIWM81400W | 8kg      | 1400rpm    |

## Accessories

This machine includes the below accessories, please install these parts before operating.

- plastic hole plug x 4
- Inlet hose

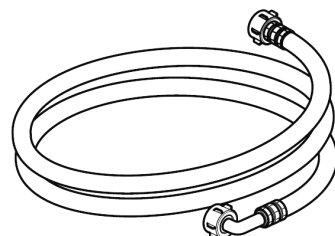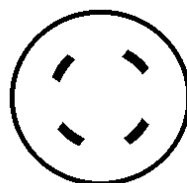

# Installing your washing machine

3



# Installing your washing machine


Bringing it all together

## Unpacking your washing machine

**Caution:** 2 people are required to unpack the washing machine, it is recommended that gloves are worn.

**a:** Carefully remove all packaging materials including the foam base, dispose of correctly.

**Note:** When opened, water droplets may be visible in the drum etc. this is normal as each appliance is factory tested.

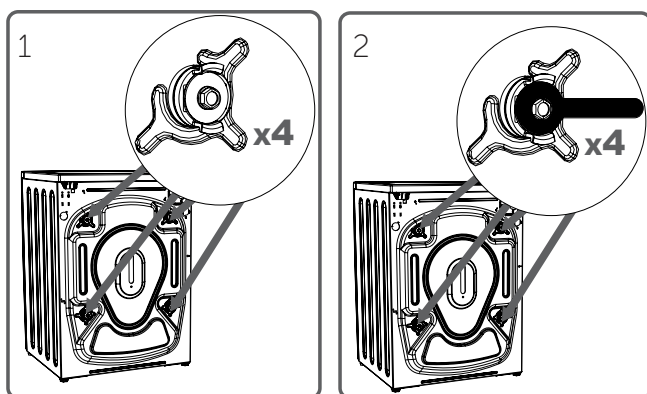


## Removing the packing bolts

**Important:** The packing bolts are designed to support the internal components during transit, these **MUST** be removed before use.

**a:** Loosen the screws by rotating counter clockwise with a suitable wrench. (1 & 2)

**b:** Remove the bolts by pulling them. (3)

**c:** When the transport bolts have been removed, insert the plastic transport screw taps found in the accessories bag into the holes. (4)

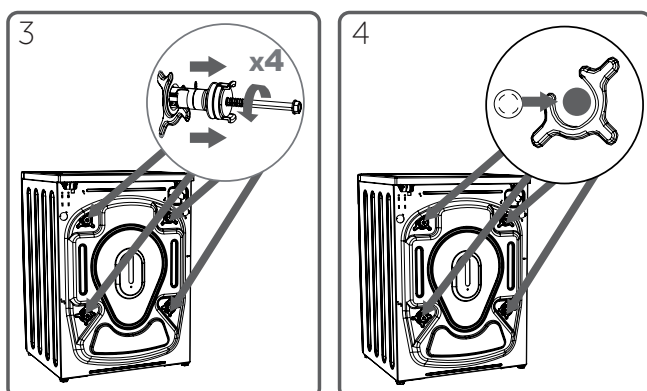

## Adjusting the feet

**a:** For your machine to work efficiently with minimum vibration it should be settled on flat, non-slippery, firm ground.


**b:** You can adjust the balance of your machine by changing the positioning of its feet.

**c:** First, loosen the plastic adjustment nut. (5)

**d:** Adjust by rotating the feet upwards or downwards. (6)

**e:** After the desired position has been reached, tighten the plastic adjustment nut again by rotating it upwards.

**Note:** Never put cartons, wooden blocks or similar materials under the machine to balance irregularities in the level of the ground.

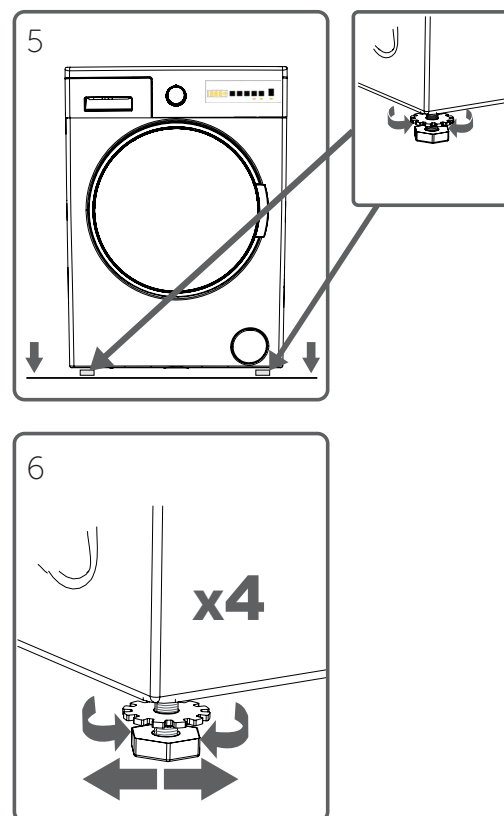

# Installing your washing machine

Bringing it all together

## Connections

### Water inlet hose connections


**Important:** This washing machine **MUST** only be connected to a cold water supply.

**a:** Connect the water inlet hose, the angled connection attaches to the water inlet on the back of the washing machine. (7)

**b:** The straight connection attaches to the water supply valve. (8)

**c:** Ensure all seals are in place before connecting.

**Important:** Only tighten the hose connection nut by hand - do not overtighten.

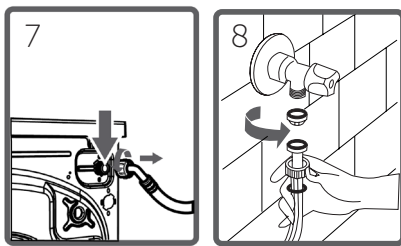


### Drain hose connections

**Important:** The height of the top of the curve in the drain hose **MUST** be between 60 - 100cm from the floor. (9)

**Important:** The end of the water drain hose may be fitted directly to the waste water outlet hole or a special apparatus mounted on the outlet bracket of the wash-stand.

**Important:** Never attempt to extend the water drain hose by adding extra parts.

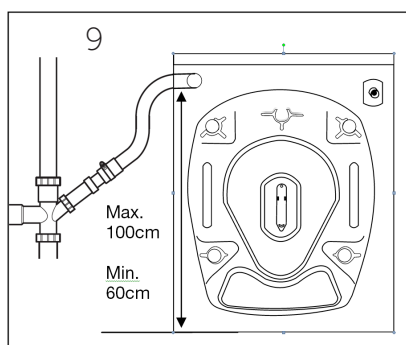

## Electrical



**Any electrical work that is required to install this washing machine **MUST** be carried out by a qualified electrician.**



**THIS APPLIANCE MUST BE EARTHED**

Before making any electrical connections, ensure that:


- The power socket is suitable for the maximum power of the washing machine (fuses in the power circuit must be 13 amp).
- The supply voltage should be the same as that indicated in the technical specifications and the appliance rating plate (located where shown).
- The appliance should be earthed and in compliance with the applicable law.
- Additional earth cables should not be necessary if the plug and socket are earthed. If necessary, an additional earth cable should be attached to the earth terminal on the back of the washing machine and earthed.
- When installed, the power socket must be within easy reach.
- The use of adapters, multiple connectors or extension cables are not recommended.
- The appliance must be connected to a 220-240 volt 50 cycle AC supply by means of a three pin socket, suitably earthed and protected by a 13 amp fuse.
- Should the fuse need to be replaced, a 13 amp fuse approved to BS1363/A must be used.
- The plug contains a removable fuse cover that must be refitted when the fuse is replaced. If the fuse cover is lost or damaged, the plug must not be used until a replacement cover has been fitted or the plug is replaced.
- A damaged plug should be cut off as close to the plug body as possible, the fuse should be removed and the plug disposed of safely.

# Functions 4




# Functions

Simple everyday use

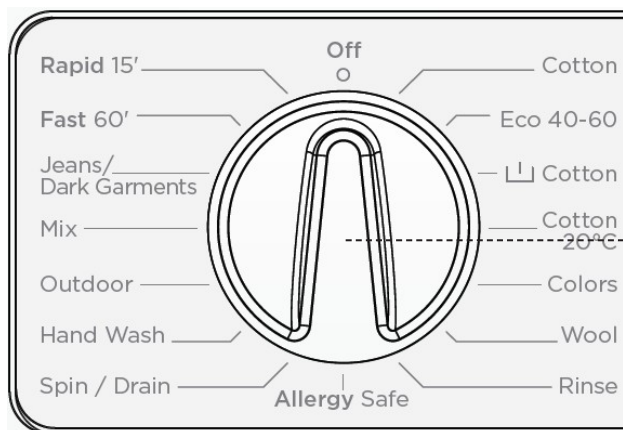

Programme selection knob  
For you to select different washing programme.

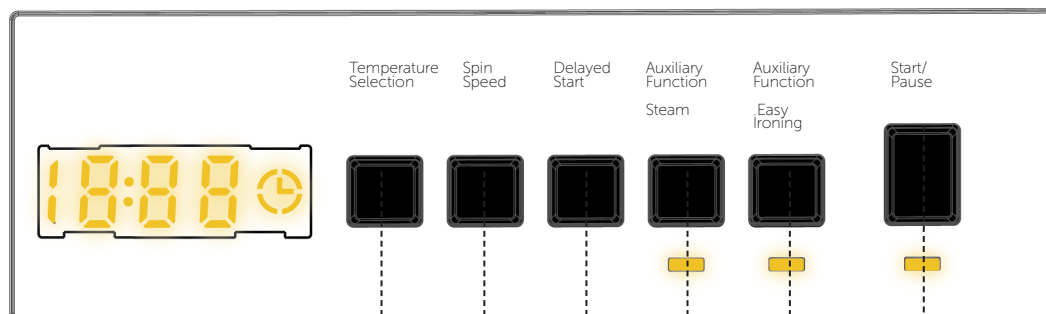

Auxiliary functions setting  
Press the buttons set the Additional Function Buttons.

Start/Pause  
Press the button to start or pause the wash cycle

# Functions

## Simple everyday use

### WASHING SEQUENCE

- Plug your machine into the mains power supply.
- Open the water tap.
- Open the washing machine door.
- Load your items of clothing into the drum, ensuring they are loosely packed.
- Push the door of your machine until you hear the locking sound to close it.

### Selecting programme

Select the programme appropriate for your laundry from the programme table (Page-23).

### EXTRA FUNCTIONS


Before starting the programme you can optionally select an extra function.

- Press on the button of extra function you would like to select.
- If an auxiliary function symbol on the electronic display flashes continuously, the extra function you have selected will be activated.
- If an extra function symbol on electronic display blinks, the extra function you have selected will not be activated.

#### Reason for non-activation:

- The extra function you want to use in the washing programme you have selected is not applicable.
- Your machine has passed over the stage, during which the extra function you would like to select would be implemented.
- It is not compatible with an extra function you have selected previously.

### 1-Temperature Selection

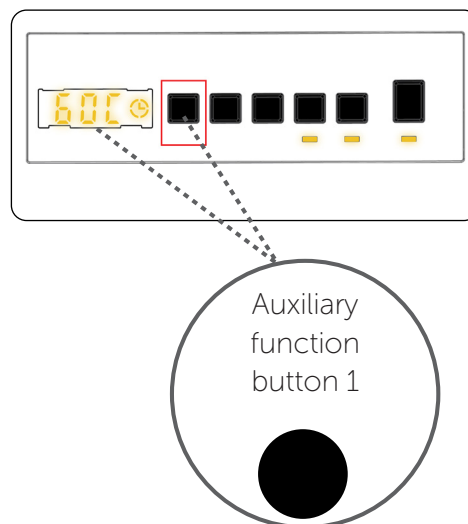

Use the washing water temperature adjustment button to alter the automatically programmed washing water temperature.

When you select a programme the maximum temperature for that programme is automatically selected. To adjust the temperature, press the water temperature adjustment button until the desired temperature is displayed on the digital display.

You can gradually decrease the washing water temperature between the maximum washing water temperature of the selected programme and cold washing (- - C) selections by pressing the temperature adjustment button.

# Functions


## Simple everyday use

### 2- Spin Speed Selection


You can adjust the spin speed of your laundry with the spin speed setting button.

To adjust the spin speed between the maximum spin speed and the cancel spinning option (- - -), press the Spin speed button until the desired speed is displayed.

If you have skipped the spin speed you want to set, keep pressing the spin speed adjustment button until the desired spin speed is displayed again.

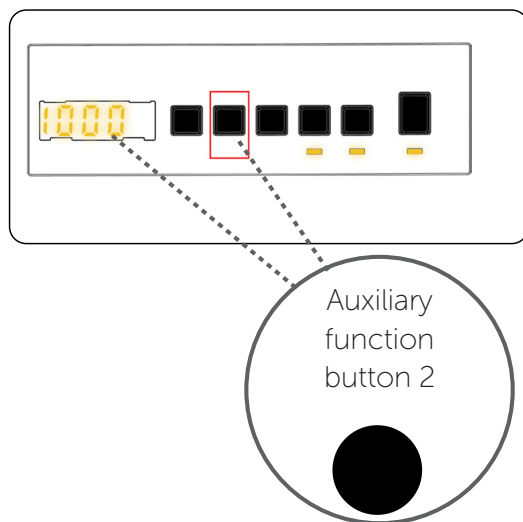

### 2- Delay Timer

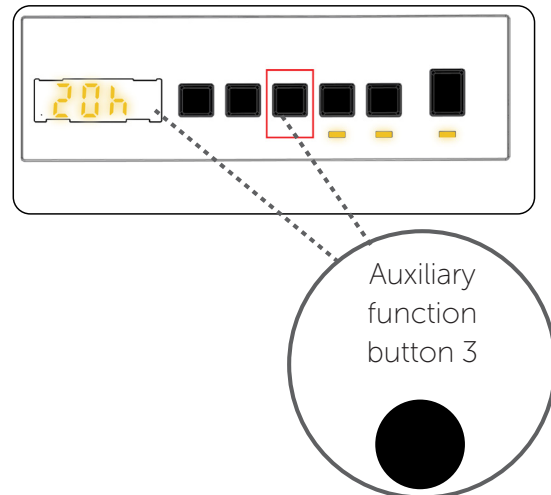

You can use this auxiliary function to delay the start time of the washing cycle for 1 to 23 hours .

To use the delay function:


- Press the delay key once.
- "01h" will be displayed. ☉ will light up on the electronic display.
- Press the delay key until you reach the time after which you want the machine to start the washing cycle.
- If you have skipped the delay time you would like to set, you can keep pressing the delay key until you reach that time again.
- To use the time delay function, you need to press the Start/Pause key to start the machine.
- If you want to cancel the delay:
  - If you have pressed the Start/Pause key to start the machine, you just need to press the delay key once. ☉ will go off on the electronic display.
  - If you have not pressed the Start/Pause key, press the delay key continuously until ☉ goes off on the electronic display. ☉ will go off on the electronic display.

**NOTE:** In the case that you want to select the auxiliary function feature, if the auxiliary function LED is not on, this means that this feature is not being used in the washing programme you have selected.

# Functions

## Simple everyday use


### 3- Steam Assist

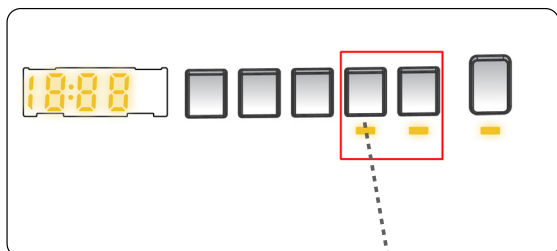

Auxiliary  
function  
button 4




### Start/Pause button

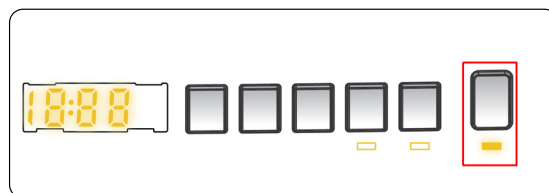

By pressing on the Start/Pause button, you may start the programme you have selected or suspend a running programme. If you switch your machine to the standby mode, the Start/Pause led on the electronic display will blinkdisplay will blink

Owing to the steam system ironing has become quick and as easy. The steam used dream washing penetrates and loosens the fibres, eliminates creases and leaves our clothes soft and delicate.

### 4- Easy Ironing(

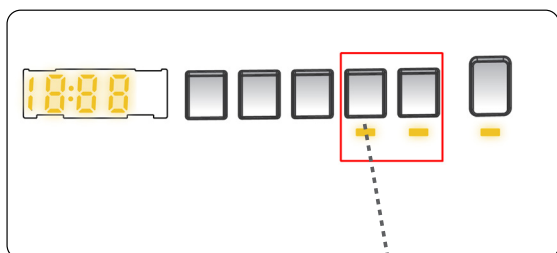

Auxiliary  
function  
button 5



Using this function will result in your laundry being less wrinkled at the end of the selected washing programme.

To select this function, press the Easy ironing button when the  symbol is displayed.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions, or online at [www.bush-support.com](http://www.bush-support.com) If you still require further assistance, call one of our experts on **0345 257 7271**.


# Functions

## Simple everyday use

### Child Lock

The Child Lock function allows you to lock the buttons so that the wash cycle you have chosen cannot be changed unintentionally.

To activate child lock, press and hold buttons 4 and 5 simultaneously for at least 3 seconds. "CL" will flash on the electronic display for 2 seconds when the child lock is activated.

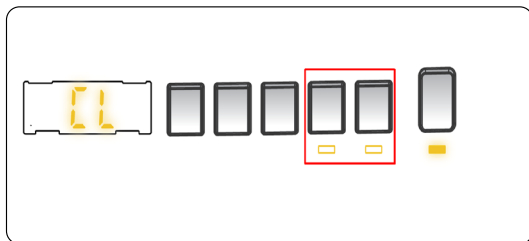

If any button is pressed or the selected programme is changed by the programme dial while the child lock is active, the "CL" symbol will flash on the electronic display for 2 seconds.

If the child lock function is active and a programme is running, when the programme dial is turned to the CANCEL position and another programme is selected, the previously selected programme continues from where it was left.

To deactivate the child lock, press and hold buttons 4 and 5 simultaneously for at least 3 seconds until the "CL" symbol on the electronic display disappears.

### Cancelling Programme

If you want to cancel any programme running:


1. Turn the programme dial to the "Off" position.
2. Your machine will stop the washing operation and the programme will be cancelled.
3. Turn the programme dial to any other programme to drain the machine.
4. Your machine will perform the necessary draining operation and cancel the programme.

You can now select and run a new programme.

### Finishing Programme

Your machine will stop by itself as soon as the programme you have selected finishes.

- "End" led will blink on the display panel.

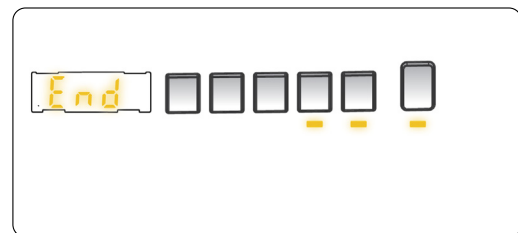

- You can open the machine's door and remove the laundry.
- Leave the door of your machine open to allow the inner part of your machine to dry after removing your laundries.
- Switch the programme dial to Off position.
- Unplug your machine.
- Turn the water tap off.

# Functions

## Simple everyday use

### Programme Selection Guide

| Programme             | Washing temperature (°C)     | Prog. Time (mins) WMSAEINT812W | Detergent compart. | /Max load capacity (kg) WMSAEINT812W | Type of laundry                                                                                                                                                                                                                                                                                                                                                                                                    |
|-----------------------|------------------------------|--------------------------------|--------------------|--------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| COTTON                | *60-90-80-70-40              | 145                            | 2                  | 8                                    | Very dirty, cotton and flax textiles. (Underwear, linen, Tablecloths, towel (maximum 4,0 kg), bedclothes, etc.)                                                                                                                                                                                                                                                                                                    |
| ECO 40-60             | *40 - 60                     | 218                            | 2                  | 8                                    | Dirty cotton and flax textiles. (Underwear, linen, Tablecloths, towel (maximum 4,0 kg), bedclothes, etc.)                                                                                                                                                                                                                                                                                                          |
| COTTON Pre-Wash       | *60 - 50 - 40 - 30 - " - -C" | 164                            | 1&2                | 8                                    | Dirty cotton and flax textiles. (Underwear, linen, Tablecloths, towel (maximum 4,0 kg), bedclothes, etc.)                                                                                                                                                                                                                                                                                                          |
| COTTON 20°C           | *20- " - -C"                 | 59                             | 2                  | 4                                    | Less dirty, cotton and linen textiles. (Underwear, bedsheet, Tablecloths, towel (max.2,0 kg) bedcloth, etc.)                                                                                                                                                                                                                                                                                                       |
| COLORS                | *40 - 30 - " - -C"           | 130                            | 2                  | 8                                    | Less dirty, cotton and linen textiles. (Underwear, bedsheet, Tablecloths, towel (max.4,0 kg) bedcloth, etc.)                                                                                                                                                                                                                                                                                                       |
| WOOL                  | *30 - " - -C"                | 44                             | 2                  | 2,5                                  | Woollen laundry with machine wash labels.                                                                                                                                                                                                                                                                                                                                                                          |
| RINSE                 | *" - -C"                     | 30                             | -                  | 8                                    | Provides an additional rinse to any type of laundry after the washing cycle.                                                                                                                                                                                                                                                                                                                                       |
| Allergy Safe          | *60 - 50 - 40 - 30 - " - -C" | 212                            | 2                  | 4                                    | Baby laundry                                                                                                                                                                                                                                                                                                                                                                                                       |
| Spin/Drain            | *" - -C"                     | 17                             | -                  | 8                                    | You can use this programme for any type of laundry if you want an additional rinsing step after the washing cycle./ You can use the drain program to drain the water accumulated inside the machine (adding or removing laundry). To enable the drain program, turn the program knob to the spin/drain program. After you select "spin cancelled" using the auxiliary function key, the program will start to run. |
| Hand Wash             | *30 - " - -C"                | 90                             | 2                  | 2,5                                  | Laundry recommended for hand wash or sensitive laundry.                                                                                                                                                                                                                                                                                                                                                            |
| Easy Care / Outdoor   | *40 - 30 - " - -C"           | 135                            | 2                  | 3,5                                  | Very dirty or synthetic-mixed textiles. (Nylon socks, shirts, blouses, synthetic-including trousers etc. )                                                                                                                                                                                                                                                                                                         |
| Mixed                 | *40 - 30 - " - -C"           | 105                            | 2                  | 3,5                                  | Dirty cotton, synthetics, colour and flax textiles can be washed together.                                                                                                                                                                                                                                                                                                                                         |
| Jeans / Dark Garments | *30 - " - -C"                | 96                             | 2                  | 3,5                                  | Black and dark items made of cotton, mixed fibre or jeans. Wash inside out., Jeans often contains excess dye and may run during the first few washes. Wash light and dark coloured items separately                                                                                                                                                                                                                |
| FAST 60' 60°C         | *60 - 50 - 40 - 30 - " - -C" | 60                             | 2                  | 4                                    | Dirty, cotton, coloured and linen textiles washed at 60°C in 60 minutes.                                                                                                                                                                                                                                                                                                                                           |
| Rapid 15 Min.         | *30 - " - -C"                | 15                             | 2                  | 2                                    | In a short time of 15 minutes, Lightly soiled, cotton, colored and linen textiles your can wash.                                                                                                                                                                                                                                                                                                                   |

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions, or online at [www.bush-support.com](http://www.bush-support.com) If you still require further assistance, call one of our experts on **0345 257 7271**.

# Functions

## Simple everyday use

You can use softeners in all programmes (except spinning and draining programmes) optionally. When you arrange the quantity of the softener, comply with the warning of the softener producer. Fill your softener in the  (softener) compartment of the detergent drawer..



NOTE: PROGRAMME DURATION MAY CHANGE ACCORDING TO THE AMOUNT OF LAUNDRY, TAP WATER, AMBIENT TEMPERATURE AND SELECTED ADDITIONAL FUNCTIONS.

(\*) Washing water temperature of the programme is the factory default.

Due to the short washing time of this programme, we recommend that less detergent is used. The programme may last longer than 15 minutes if your machine detects an uneven load. You can open the door of your machine 2 minutes after the completion of a washing operation. (The 2 minute period is not included in the programme duration).

According to regulation 1015/2010 and 1061/2010, the programme 1 and the programme 2 are respectively the 'Standard 60°C cotton programme' and the 'Standard 40°C cotton programme'.

The Eco 40-60 programme is able to clean normally soiled cotton laundry declared to be washable at 40°C or 60°C, together in the same cycle, and that this programme is used to assess the compliance with the EU ecodesign legislation.

# Functions

## Simple everyday use

- The most efficient programmes in terms of energy consumption are generally those that perform at lower temperatures and longer duration.
- Loading the household washing machine up to the capacity indicated by the manufacturer for the respective programmes will contribute to energy and water savings.
- Program duration, energy consumption and water consumption values may vary according to wash load weight and type, selected extra functions, tap water and ambient temperature.
- It's recommended to use liquid detergent for the washing programmes at low temperature. The amount of detergent to be used may vary depending on the amount of laundry and the level of dirtiness of the laundry. Please follow the detergent manufacturers' recommendations for the amount of the detergent to be used.
- The noise and remaining moisture content are influenced by the spinning speed. The higher spinning speed in the spinning phase, the higher noise and the lower remaining moisture content.
- You can access the product database where the model information is stored by reading the QR code on the energy label.

| Programme Name      | Rated Capacity kg | Energy Consumption kWh/cycle |          |          | Programme Duration Hours:Minutes |          |          | Water Consumption Litres/Cycle |          |          | max. Temperature °C |          |          | Remaining Moisture Content % 1400 Rpm |          |          |
|---------------------|-------------------|------------------------------|----------|----------|----------------------------------|----------|----------|--------------------------------|----------|----------|---------------------|----------|----------|---------------------------------------|----------|----------|
|                     |                   | Rated Capacity               | 1/2 Load | 1/4 Load | Rated Capacity                   | 1/2 Load | 1/4 Load | Rated Capacity                 | 1/2 Load | 1/4 Load | Rated Capacity      | 1/2 Load | 1/4 Load | Rated Capacity                        | 1/2 Load | 1/4 Load |
| COTTON 90°C         | 8                 | 2,38                         |          |          | 03:13                            |          |          | 82                             |          |          | 81                  |          |          | 53%                                   |          |          |
| COTTON 60°C         | 8                 | 0,85                         |          |          | 02:25                            |          |          | 36                             |          |          | 57                  |          |          | 53%                                   |          |          |
| ECO 40-60           | 8                 | 0,79                         | 0,37     | 0,20     | 03:38                            | 02:48    | 02:48    | 55                             | 40       | 40       | 37                  | 28       | 22       | 53%                                   | 53%      | 53%      |
| Easy Care / Outdoor | 3,5               | 0,82                         |          |          | 02:15                            |          |          | 72                             |          |          | 45                  |          |          | 53%                                   |          |          |
| FAST 60°            | 4                 | 1,02                         |          |          | 01:00                            |          |          | 34                             |          |          | 58                  |          |          | 53%                                   |          |          |
| COTTON 20°C         | 4                 | 0,12                         |          |          | 00:59                            |          |          | 33                             |          |          | 20                  |          |          | 53%                                   |          |          |

# Functions

## Simple everyday use

### Important Informations

- Use detergents, softeners and other additives suitable for automatic washing machines only. Excessive foam has occurred and automatic foam absorption system has been activated due to too much detergent usage.
- We recommend that periodic cleaning for washing machine every 2 months. For periodic cleaning please use Drum Clean programme. If your machine do not have Drum Clean programme, use Cottons-90 programme. When required, use limescale removers manufactured specifically for washing machines only.
- Never force the door open when your Washing Machine is running. You can open the door of your machine 2 minutes after the completion of a washing operation. \*
- Never force the door open when your Washing Machine is running. The door will open immediately after the washing cycle has ended. \*
- The installation and repairing procedures should always carried out by the Authorised Service Agent in order to avoid possible risks. The manufacturer shall not be held liable for damages that may arise from procedures carried out by unauthorised persons.

(\*) Specifications may vary depending on the machine purchased.



# Using your washing machine

## Getting the most from your appliance

- Your laundry has product labels on them that specify their specifications. Wash or dry your laundry according to the specifications on the product label.
- Separate your laundry according to their types (cotton, synthetic, sensitive, wool etc.), their temperatures (cold, 30°, 40°, 60°, 90°) and degree of contamination (slightly stained, stained, highly stained).
- Never wash your coloured and white laundry together.
- Wash your coloured laundry separately in the first washing as they may bleed.
- Ensure that there are no metallic materials on your laundry or in the pockets; if so, take them up.

**CAUTION: Faults that will emerge in case of penetration of foreign substances into your machine are not included within the scope of warranty.**

- Zip up and button up your laundry.
- Remove the metallic or plastic hooks of tulle curtains or curtains or place them in a washing net or bag and then muzzle them.
- Reverse textiles such as pants, knitwear, t-shirt and sweat suit.
- Wash socks, handkerchief and suchlike small laundry in a washing net.

### PUTTING LAUNDRY IN THE MACHINE

|                                                                                                    |                                                                                                                      |                                                                                                          |                                                                                                                                      |                                                                                                                    |                                                                                                                         |
|----------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------|
| <br>Normal wash | <br>Warm wash (max 40 °C)         | <br>Hand wash         | <br>Bleach                                        | <br>Chlorine bleach may be used | <br>Tumble dry: Medium (max 50 °C)   |
| <br>Gentle wash |                                                                                                                      | <br>Do not wash       | <br>Do not bleach                                 |                                                                                                                    | <br>Tumble dry: Low heat (max 30 °C) |
| <br>Do not iron | <br>Cool iron (max 110 °C)        | <br>Do not dry clean  | <br>Dry clean normal cycle with any solvent       | <br>Tumble dry normal           | <br>Drip dry                         |
|                                                                                                    | <br>Warm iron medium (max 150 °C) |                                                                                                          | <br>Dry clean normal cycle petroleum solvent only | <br>Dry flat                    | <br>Hang to dry / Line dry           |
| <br>Steam iron  | <br>Line Dry in shade             | <br>Do not tumble dry | <br>Line Dry                                      | <br>No Wring                    | <br>No machine wash                  |

- Open the door of your machine.
- Spread your laundry in your machine.

**NOTE: Maximum loading capacity may vary based on the laundry type you will wash, degree of contamination and the programme you have chosen. Do not exceed maximum dry loading capacity indicated in the programme table for washing programmes.**

You can take the following table of weights as an example.

- Put each item of laundry separately.
- Ensure that no laundry is stuck between the cover and bellow seal when closing the door of your machine.
- Push the door of your machine until hearing the locking sound to close it.
- Close the door of your machine properly, otherwise your machine will not start the washing operation.

| LAUNDRY TYPE | WEIGHT (g) |
|--------------|------------|
| Towel        | 200        |
| Linen        | 500        |
| Bathrobe     | 1200       |
| Quilt cover  | 700        |
| Pillow slip  | 200        |
| Underwear    | 100        |
| Tablecloth   | 250        |


### ADDING DETERGENT INTO MACHINE

The amount of detergent you will put in your machine will depend on the following criteria:

- Your detergent utilization will be based on the degree of contamination of your laundry. Do not prewash your less stained laundry and put your slight amount of detergent in the 2nd compartment of the detergent drawer.
- For your much stained laundry, select a programme including prewashing, and put 1/4 of the detergent you will put in the detergent drawer in the 1st compartment of the detergent drawer while putting the remaining 3/4 of it into 2nd compartment.

# Using your washing machine

## Getting the most from your appliance

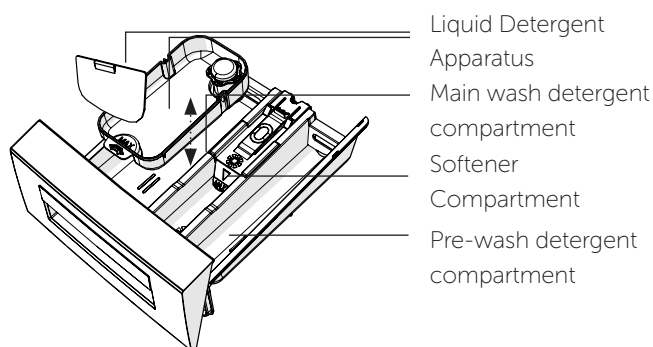


- Use detergents produced for automatic washing machine in your machine. The amount of detergent you will use for your laundry is printed on the detergent package.
- The higher the degree of hardness of the water the more detergent you will use.
- The amount of the detergent you will use will increase as the amount of your laundry increase.
- Put the softener in the softener compartment in the detergent drawer. Do not exceed the MAX level. Otherwise, softener will flow into washing water through flushing.
- Softeners with high density are required to be thinned to a degree before being put in the drawer. Because high-density softener will clog the flush and avoid the flow of the softener.
- You can use your liquid detergents in all programmes without prewashing. For this, fit liquid detergent level plate in the accessories bag or the liquid detergent apparatus (\*) into 2nd compartment of the detergent drawer and set the amount of liquid detergent according to the levels on this plate. Remember to detach the liquid detergent plate.

(\*)Machinery specifications may vary depending on the product purchased.

# Using your washing machine

Getting the most from your appliance

## Quick start

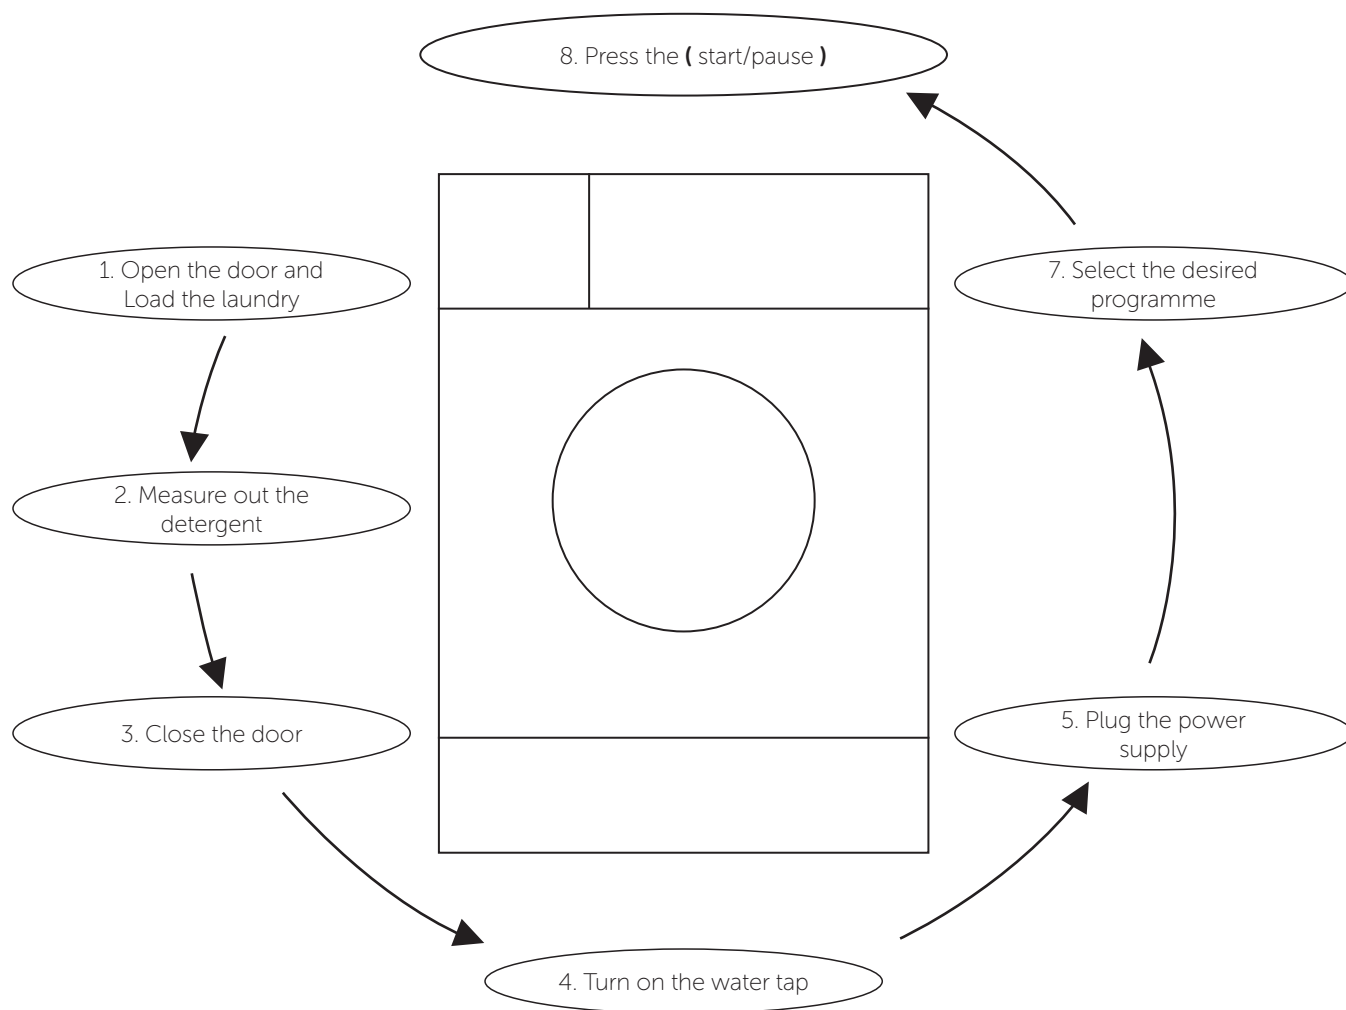

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions, or online at [www.bush-support.com](http://www.bush-support.com). If you still require further assistance, call one of our experts on **0345 257 7271**.



# Care and maintenance

## Looking after your appliance



Before cleaning your washing machine.

**a:** Unplug your machine from the mains power supply.

**b:** Close the water tap.

### Water inlet filters

On the tap part of your machine's water inlet hose and at the ends of water inlet valves, there are filters to prevent entrance of the dirt and foreign materials in the water to the machine. If the machine is unable to receive sufficient water even though your water tap is fully opened, filters should be cleaned.

- Remove the water inlet hose.
- Remove the filters found on the water inlet valves by using a pincer and wash thoroughly with a brush. (1)
- Clean the filters of the water inlet hoses located on the tap side by removing manually together with the seal. (2)
- After you clean the filters, you can fit them the same way as you have removed them.

### Pump filter

The pump filter system elongates the life of your pump, which is used to drain the dirty water. It prevents dirt entering the pump. Cleaning of your pump filter every 2-3 months is recommended. To clean your pump filter:

- To open the pump cover, you can use the powder detergent spade (\*) or liquid detergent level plate coming out of your machine. (1-A & 2-A) (\*\*)
- Before opening the filter cover, place a cup in front of the filter cover to prevent flow of the remaining water in the machine.
- Clean the foreign materials in the filter with a brush and flush with clean water. (3-A)
- Check for the rotation of the pump manually.
- After cleaning the filter, fit the filter cover and tighten it by rotating it in clockwise direction. (4-A)
- Remove the foreign materials from the filter.
- Do not forget that if you do not fit the filter cover properly, it will leak water.

• While closing the pump cover, ensure that the parts on the inner side of the cover match the holes on the front panel side. (5-A)

• You can reattach the pump cover in the reverse order that you removed it.




### Danger of being scalded!

**The water inside the pump maybe hot- wait for it to cool.**

(\*) Machinery specifications may vary depending on the product purchased.

(\*\*) Instead of pump cover part, Plinth sheet part is using in Built-in Machine. To remove the plinth sheet part, please follow the Built-in Installation Manual instructions.

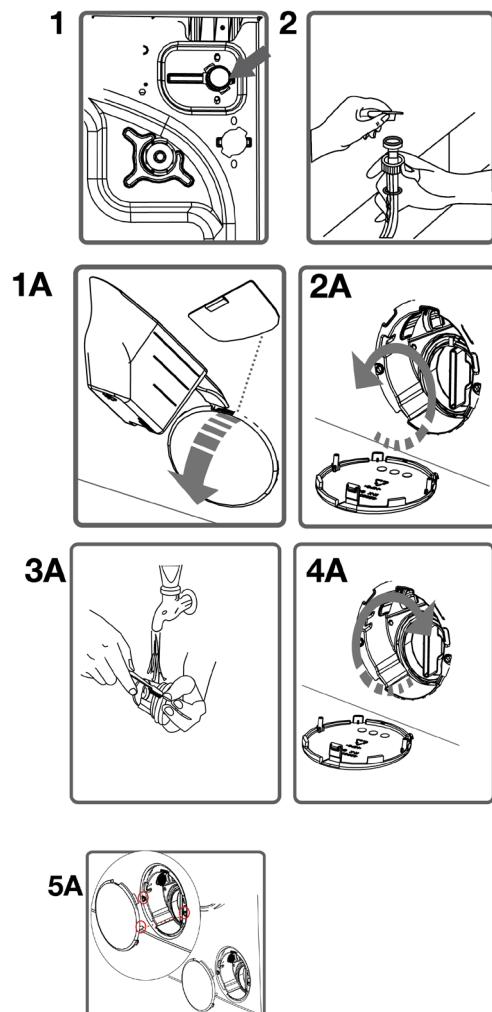

# Care and maintenance

## Looking after your appliance

### Detergent drawer

Detergents may form sediments in your detergent drawer or in the housing of the detergent drawer over time. To clean the sediment, pull out the detergent drawer from time to time. To pull out the detergent drawer:

- Pull the detergent drawer to the end. (1)
- Keep on pulling by depressing on the section shown below in the detergent drawer and keep pulling and then remove the detergent drawer. (2&3)
- Clean the detergent drawer with a soft brush like an old toothbrush and flush with clean water.
- Collect residues in the housing of the detergent drawer without dropping them inside the machine.
- Assemble the detergent drawer after drying it using a towel or dry cloth.
- Do not wash your detergent drawer in a dishwasher!

### Liquid Detergent Apparatus (\*)

Take out the liquid detergent level apparatus for cleaning and maintenance purposes as shown in the picture and clean away detergent residues. Put the apparatus back into its place. Make sure no residues are left inside.

(\*) Machinery specifications may vary depending on the product purchased.

### Siphon plug

Pull out the detergent drawer. Remove the siphon plug and clean any residues away. Fit the cleaned siphon plug in its location. Check it is placed properly. (3)




### Cabinet

Clean the exterior surface of the cabinet of your machine with lukewarm water and a cleaning substance that will not damage the cabinet. After rinsing with clean water, wipe it with a soft and dry cloth.

**Note:** To get the best out of your machine. We recommend that you periodically run a wash cycle with


limescale remover, especially in hard water areas.

**Note:** After each wash leave the door of the machine open to help air the drawer and reduce any mould build up;

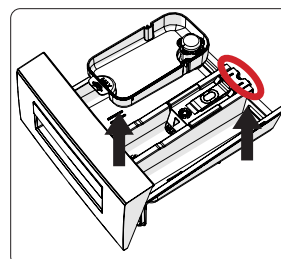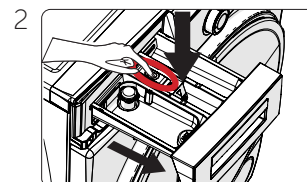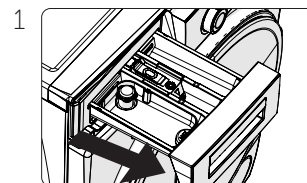

**Note:** Wipe the door seal ideally after each wash;

**Note:** Undertake a maintenance wash every 4-6 weeks with the drum empty. This wash should be undertaken with lime scale and detergent remover;

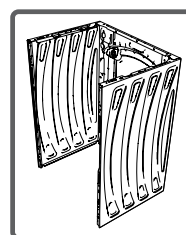


# Care and maintenance

## Looking after your appliance

### Drum

Do not leave metallic objects such as needles, paper clips, coins etc. in your machine. These objects lead to stains in the drum. To clean such rust stains, use a non-chlorine cleaning agent and follow the instructions of manufacturers of the cleaning agent. Never use wire wool or similar hard objects for cleaning rust stains.

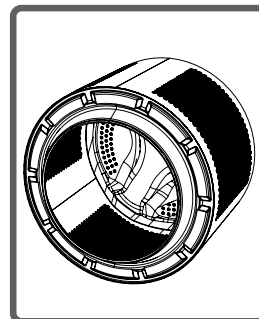



# Product support

Help is always at hand

All repairs to the machine must be carried out by an authorised repair agent. When a repair is required or you are unable to eliminate the failure with the help of the information below:

a: Unplug the machine.

b: Close the water tap.

c: Contact the nearest authorised repair agent.

| FAILURE                              | PROBABLE CAUSE                                                                                                 | METHODS OF ELIMINATION                                                                                              |
|--------------------------------------|----------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------|
| Your machine does not operate.       | It is unplugged.                                                                                               | Insert the plug into the socket.                                                                                    |
|                                      | Your fuse is defective.                                                                                        | Change your fuse.                                                                                                   |
|                                      | The electric power is off.                                                                                     | Check the electric power.                                                                                           |
|                                      | Start/pause button has not been pressed.                                                                       | Press the start/pause button.                                                                                       |
|                                      | The programme knob is in the 0 (off) position.                                                                 | Turn the programme knob to the desired position.                                                                    |
|                                      | The door is not shut properly.                                                                                 | Shut the door properly. You should hear the click.                                                                  |
| Your machine does not receive water. | Water tap is closed.                                                                                           | Open water tap.                                                                                                     |
|                                      | The water inlet hose may be bent.                                                                              | Check the water inlet hose.                                                                                         |
|                                      | The water inlet hose is obstructed.                                                                            | Clean the filters of water inlet hose. (*)                                                                          |
|                                      | The valve inlet filter is obstructed.                                                                          | Clean the valve inlet filters. (*)                                                                                  |
|                                      | The door is not shut properly.                                                                                 | Shut the door properly. You should hear the click.                                                                  |
| Your machine is not draining water.  | The drain hose is obstructed or bent.                                                                          | Check the drain hose.                                                                                               |
|                                      | The pump filter is obstructed.                                                                                 | Clean the pump filter. (*)                                                                                          |
|                                      | The clothes are not placed inside the machine in a well-balanced manner.                                       | Spread the clothes inside the machine in an orderly and well-balanced manner.                                       |
| Your machine is vibrating.           | The feet of your machine are not adjusted.                                                                     | Adjust the feet. (**)                                                                                               |
|                                      | Transportation screws are not removed.                                                                         | Remove transportation screws. (**)                                                                                  |
| Your machine is vibrating.           | There are only few clothes in the device.                                                                      | It does not prevent operation of the machine.                                                                       |
|                                      | Excessive amount of clothes are filled in the machine or the clothes are not placed in a well-balanced manner. | Do not exceed the recommended quantity of clothes and spread your clothes in the machine in a well-balanced manner. |
|                                      | Your machine is touching a rigid object.                                                                       | Ensure machine is not in contact with hard objects.                                                                 |

(\*) See the section concerning the care and maintenance of your machine.

(\*\*) See the section concerning installation of your machine.

# Product support

Help is always at hand

| FAILURE                                                        | PROBABLE CAUSE                                                                                                      | METHODS OF ELIMINATION                                                                                                                                                                                                                                                             |
|----------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Excessive foam in the detergent drawer.                        | Too much detergent has been used.                                                                                   | Press the start/pause button. In order to stop the foam, dilute one table-spoon of softener in half liter of water and pour it in the detergent drawer. Press the start/pause button after 5-10 minutes. Arrange the amount of the detergent properly in the next washing process. |
|                                                                | Wrong detergent has been used.                                                                                      | Use only the detergents produced for full automatic machines.                                                                                                                                                                                                                      |
| The washing result is poor.                                    | Your laundry is too dirty for the programme you have selected.                                                      | Select a suitable programme.                                                                                                                                                                                                                                                       |
|                                                                | The amount of detergent used is not sufficient.                                                                     | Use more detergent.                                                                                                                                                                                                                                                                |
| The washing result is not good.                                | Clothes exceeding the maximum capacity have been loaded in the machine.                                             | Put the clothes in your machine in a manner not to exceed its maximum capacity.                                                                                                                                                                                                    |
|                                                                | Your water may be hard.                                                                                             | Use the amount of detergent specified by the detergent manufacturer.                                                                                                                                                                                                               |
|                                                                | Distribution of the clothes in your machine is not well-balanced.                                                   | Spread the clothes inside the machine in an orderly and well-balanced manner.                                                                                                                                                                                                      |
| The water is drained from the machine as soon as it is filled. | The end of the water drain hose is in a position too low according to the machine.                                  | Position the water drain at an appropriate height. (**)                                                                                                                                                                                                                            |
| No water is seen in the drum during washing.                   | No failure. The water is in the lower part of the drum.                                                             | -                                                                                                                                                                                                                                                                                  |
| There are residues of detergent on the clothes.                | Some detergents contain ingredients which are not soluble in water and which may form white stains on your clothes. | By adjusting your machine, carry out an additional rinse, or eliminate the stains after drying, with a brush.                                                                                                                                                                      |
| There are grey stains on the clothes.                          | These stains may be caused by oil, cream or ointment.                                                               | In the next washing operation, use the maximum detergent amount declared by the detergent producer.                                                                                                                                                                                |
| The spinning process is not done or starts with delay.         | No failure. The unbalanced load control may work in that way.                                                       | The unbalanced load control system will try to distribute your clothes in a homogenous manner. After your clothes are distributed, passage to spinning process will be realized. In the next washing process, place your clothes into the machine in a well-balanced manner.       |

(\*) See the section concerning the care and maintenance of your machine.

(\*\*) See the section concerning installation of your machine.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions, or online at [www.bush-support.com](http://www.bush-support.com). If you still require further assistance, call one of our experts on **0345 257 7271**.

# Product support

Help is always at hand

## Error Signals

Your machine is equipped with systems which will take the necessary precautions and warn you in case of any.

**IMPORTANT: IT CAN TAKE UPTO 10 MINUTES FOR ERROR TO REGISTER.**

| Failure code | Probable failure                                                                                                              | Process to be followed                                                                                                                                                                                                                       |
|--------------|-------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| E01          | The door is not shut properly.                                                                                                | Shut the door properly so that you hear the click. If the problem persists, turn off the machine unplug and contact the nearest authorised service agent immediately.                                                                        |
| E02          | The water level in your machine is below heater. The pressure of your water supply may be low or water supply may be blocked. | Turn on the tap fully. The water supply may be interrupted. If the problem persists, your machine will automatically stop after a while. Unplug your machine, turn off the tap and contact the nearest authorised service agent immediately. |
| E03          | The pump has failed or the pump filter is obstructed.                                                                         | Clean the pump filter. If the problem persists and contact the nearest authorised service agent immediately. (*)                                                                                                                             |
| E04          | Your machine has excessive amount of water.                                                                                   | Your machine will discharge water by itself. Pursuant to discharging operation, turn off your machine and unplug it. Turn off your tap and contact the nearest authorised service.                                                           |

(\*) See the section regarding the care and maintenance of your machine.

# Product support

Help is always at hand

## Technical Specifications

| Model / Item                    | BIWM81400W                           |
|---------------------------------|--------------------------------------|
| Power supply                    | (220-240) V ~/50Hz                   |
| Max working current             | 10 amp                               |
| Water pressure                  | Maximum : 1Mpa<br>Minumum : 0.01 MPa |
| Maximum power                   | 2100 watt                            |
| Maximum wash-<br>ing load (dry) | 8 kg                                 |
| Spinning speed                  | 1400 rpm                             |
| Washing<br>programmes           | 15                                   |
| Size                            | 817,4 x 597,4 x 544,3                |
| Net weight                      | 65.7 kg                              |

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions, or online at [www.bush-support.com](http://www.bush-support.com) If you still require further assistance, call one of our experts on **0345 257 7271**.

# Product support

Help is always at hand

## Help and assistance

If you require any technical guidance or find that your washing machine is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions or online at **[www.bush-support.com](http://www.bush-support.com)**

If you still require further assistance, call one of our experts on **0345 257 7271\***. To help give us give you a fast and efficient service please have the following information ready:

Model Ref.

Serial number

You can find these on the rating plate - a small information panel (usually a sticker or metal plate) on the rear of your appliance

Date of purchase

This will be shown on your receipt

Local call rates applies\*

Lines open 8am-7pm Monday to Saturday and 10am-4pm Sunday.

\*Calls to Bush enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see [www.bt.com/pricing](http://www.bt.com/pricing) for details.

For Security and training purposes, telephone calls to and from customer service centres maybe recorded and monitored. Calls from Republic of Ireland will attract international call charges.

## Product support

Help is always at hand



### Notes on disposal :



The symbol on the product or its packaging indicates that this product may not be treated as household waste. Instead it should be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling this product, please contact your local council office, your household waste disposal service or the shop where the product was purchased.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions, or online at [www.bush-support.com](http://www.bush-support.com) If you still require further assistance, call one of our experts on **0345 257 7271**.

# Product support

Help is always at hand



## Call us now and activate your 12 month guarantee

Thank you for choosing Bush. Your new product is guaranteed against faults and breakdowns for 12 months. Don't forget to register it with us today so we can provide you with our best possible after-sales service and useful updates.

**[www.bushregistration.co.uk](http://www.bushregistration.co.uk)**

FREEPHONE\*

**0800 597 8548**

Lines are open 8am - 8pm, 365 days a year. \*Calls may be recorded and monitored.

## Your Bush Guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from who you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in the manual.
- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- Bush disclaim any liability for loss or damage arising from the breakdown of the product.
- This guarantee is in addition to and does not diminish your statutory or legal rights.

## Important Data Protection Information

To find out how we and Domestic & General Insurance Plc use your data please refer to the guarantee registration material or visit [www.bushregistrations.co.uk](http://www.bushregistrations.co.uk).

Guarantor: Sainsbury's Supermarkets Ltd, 33 Holborn, London EC1N 2HT.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions, or online at [www.bush-support.com](http://www.bush-support.com). If you still require further assistance, call one of our experts on **0345 257 7271**.





# BUSH

**Contact:**

[www.bush-support.com](http://www.bush-support.com)

Helpline: 0345 257 7271

52589031