 


Assembly & Operation Instructions

HOME

2 Tier Heated Airer (LYJ156-14M - 8119412)

Parts Included:

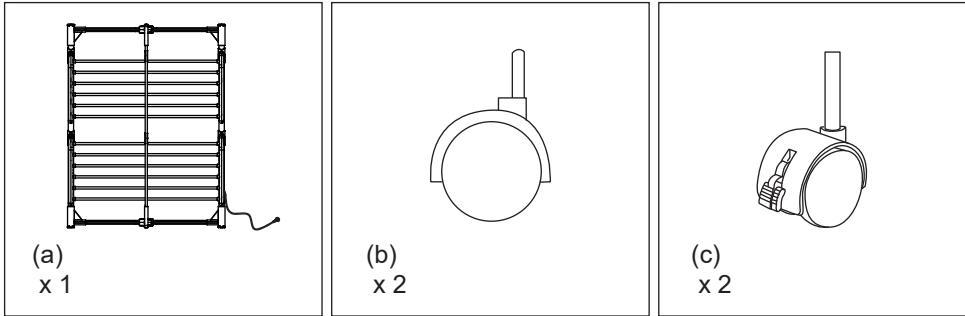

 
WARNING

1. If the supply cord is damaged, it must be replaced by the manufacture or its service agent or a similarly qualified person in order to avoid a hazard.
2. Children shall not play with the appliance.
3. Operating Temperature (ambient <20°C)
 - Airer max temp: 50°C
 - With cover: +15°C (total 65°C)

⚠ May cause burns - do not touch bars when hot


OPERATING INSTRUCTION

1. Please read the installation instruction carefully to understand how to install your heated airer.
2. Make sure to complete the installation. Press the switch to (O) position (Power indicator is off)
3. Plug the power cord into an electrical outlet.
4. Press the switch to (I) position (Power indicator lights up) , then the heater is start working.

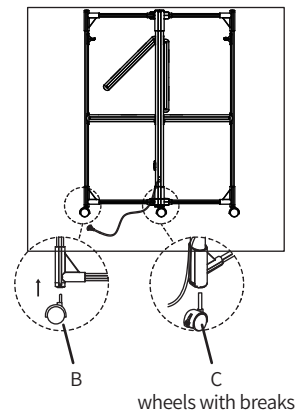

IMPORTANT SAFEGUARDS

 1. Read all instructions before using this heater.
2. Just keep extreme caution is necessary when item is in use. Do not leave unattended.
3. Always unplug heater immediately after use.
4. Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Return heater to authorized service facility for examination, electrical or mechanical adjustment, or repair.
5. Do not use outdoors .
6. Never locate heater where it may fall into a bathtub or other water containers.
7. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or the like. Arrange cord away from traffic area and where it will not be tripped over.
8. To disconnect heater ,remove plug from outlet.
9. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock ,fire or damage the heater .
10. Do not use it in area where gasoline ,paints ,or flammable liquids.
11. Use this heater only as descibed in this manual .Any other use not recommended by the manufacture may cause fire ,electric shock ,or injury to persons.
12. Keep these instructions for your reference.

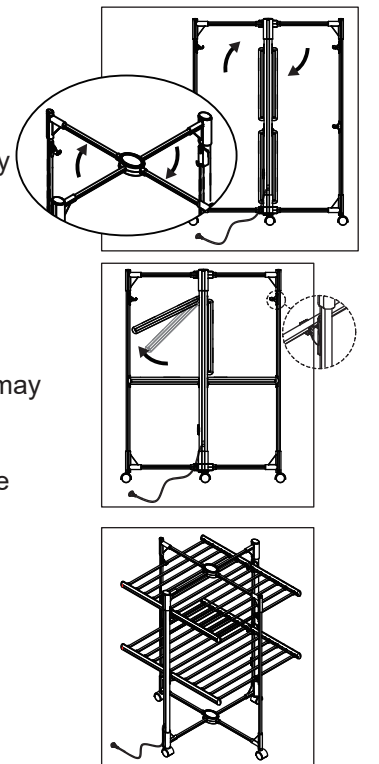

Storage

This heater only operates in upright position.
Store the heater in cool dry location when not in use.
Do not store away until the heater cools down.
If used with cable assemblies or portable socket outlets, ensure that their location is not subject to splashing or the ingress of moisture.

Warning

ANY OTHER SERVICING SHOULD BE PERFORMED BY AN AUTHORISED SERVICE REPRESENTATIVE.
THE HEATER MUST NOT BE LOCATED IMMEDIATELY BELOW A SOCKET-OUTLET.
DO NOT EXCEED MAXIMUM LOAD (12KG).

IMPORTANT INFORMATION

Power	200 Watts
Voltage	AC 220-240v
Frequency	50Hz

ENVIRONMENT PROTECTION

At the end of its life please make sure that this appliance is disposed of in an environmentally friendly way.
Information on waste disposal for consumers of electrical equipment is readily available on your local Council's website or at your local waste recycling centre.

Disposal and recycling



Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities.
Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.

Customer Support

📞 0345 640 2020

Produced in China for Argos Limited, London,
EC1M 6HA, UK. [Argos \(N.I.\) Ltd](#), Forestside
Shopping Centre, Upper Galwally, Belfast,
BT8 6FX, UK.

argos.co.uk/help/contact-us