

Bakeware

Care & Use Instructions:	Warnings:	Icons:
Before first use remove all packaging, handwash with warm soapy water and dry thoroughly. Grease lightly before each use. Only use wooden, nylon or silicone utensils to prevent scratching the non-stick surface during cooking. For use in the oven up to temperatures of 230°C / 450°F / Gas Mark 8. Bakeware should be cleaned as soon as it has cooled down by using hot soapy water and a soft cloth. If any burnt food is left in the pan, leave to soak in hot soapy water before attempting to clean. Do not use harsh abrasives or cleaners. Never cut food inside of the product. Only stand hot pans on heat protected surfaces. Suitable for oven use. This product is dishwasher safe but hand washing is recommended. Freezer safe. — Please add following if bakeware has loose base — Line the tin with greaseproof paper before use.	Always use oven gloves when handling or removing from a hot oven. Not suitable for use on a direct heat or under the grill. DO NOT use in a microwave.	 Oven Safe  Dishwasher Safe  Freezer Safe