RADLEY



 
Thank you for purchasing your RADLEY™ watch.

Please find enclosed all the information you need to look after your watch and if you have any enquiries please
contact us via email: Radleywatches@peershardy.co.uk or telephone: ±44 (0)121 524 1400

SETTING THE TIME & DATE

To set your watch: Pull the crown out gently and turn it clockwise. When the correct time is reached simply push the crown back into place. For models with a date, pull the crown out one click and turn the crown clockwise to adjust the date. Pull the crown out one click further to adjust the time.

Ensure the crown is fully pushed in before exposure to water, the crown or any buttons on the watch must not be operated when wet



FOLD

BRACELET ADJUSTMENT & BRACELET LINK REMOVAL

Your Radley bracelet can be easily adjusted to achieve the perfect fit.

MESH BRACELET - Unlock clamp plate by using an appropriate tool or even a simple paperclip. Move the entire clasp to adjust length by sliding along the bracelet. Adjust length while wearing the watch to make sure you get a good fit. Make sure the clasp locates into a molded indent on back of bracelet. Lock clamp plate in position by pressing it into place using your thumb. DO NOT use retaining bar to gain leverage as this will cause damage preventing the clasp to lock.

BRACELET - Watches with removable links are a quick & easy way of being able to shorten bracelets.* Lift the tab at the end of the centre section on both clasps and remove link. Only applicable to watches with bracelet bands.





BRACELET

FOLD

FOLD

Radley_Gtee_SS18_Concertina_V3.indd 1 29/05/2018 09:42



FOLD

BASIC WATCH CARE

RADLEY™ certifies that this watch has been produced using first class materials and fully tested before leaving our manufacturing centre. Subject to the conditions stated below, this watch is guaranteed against defects of material and manufacture for the period of two years from the date of purchase. This does not affect your statutory rights.

The guarantee does not cover the following:

· Batteries, straps and bracelets.

THE RADLEY™ GUARANTEE

- . Damage caused by accidents or mishandling of any part of the watch, including straps, buckles, bracelets and lenses.
- Water penetration, except in watches marked as water resistant (ATM). · Tarnishing of the watch case or bracelet caused by external agents.

RADLEY™ watches use carefully selected leathers of the highest quality standards. Variations in the colour and grain are natural characteristics of the leather. Please be aware light coloured straps i.e. whites, creams and pastel colours, are prone to attract colour transfer from other surface materials and cosmetic substances. Please take caution whilst wearing these products as discolouration of straps is not covered within the guarantee.

- Keep this booklet safe as it has important information about the care of your watch.
- · The battery should only be replaced by a qualified technician.
- · Remove your watch before applying sprays or cosmetics.
- . Do not use chemical cleaners on your strap and avoid contact with cosmetic products, such as fake tan or perfumes.

the watch clearly stating the nature of the fault.

previously stated. FOLD

- Avoid humid atmosphere and direct heat/sunlight.
- When you are not wearing your watch, we recommend you store it in the gift box received with purchase. . Take care to avoid bending the bracelet beyond the normal curvature of the wrist.

 Avoid placing the watch under heavy objects or loose in a handbag. Your watch is designed to be water resistant to 3ATM. It can withstand accidental splashing or rain but is NOT suitable

for swimming. In the unlikely event of a fault arising, under the terms of the guarantee, return the watch directly to RADLEY™ Watch Services, where it will receive expert attention and will be returned promptly. Please include your proof of purchase with

At RADLEY™ we offer excellent product servicing for watches outside the guarantee period. The watch will then be guaranteed against defective workmanship or materials for a period of six months in accordance with the exclusive clauses

FOLD

FOLD

The consumer has a significant role to play in reducing the impact of waste electrical and electronic equipment, batteries and accumulators on the environment through re-using or recycling those articles. Some batteries and accumulators and some of the components used in electrical and electronic equipment may contain hazardous substances that can damage the environment and present a risk to human health if not properly disposed of. The crossed out wheelie bin symbol is to remind you that waste electrical and electronic products, batteries and accumulators should not be disposed of with household waste. If you are unable to re-use or recycle your article it should be disposed of at a civic amenity site or a local authority recycling facility.





Made under licence by: Peers Hardy (UK) Ltd. United Kingdom B37 7GN





