



Stainless Steel Coffee & Herb Grinder

Model No. CG9100



Care & Instruction Manual

For household and indoor use only

Please read these instructions before use and retain for future reference



ELECTRICAL SAFETY




- You should only plug the appliance into a 220V-240V AC, 50Hz supply. Connecting it to other power sources may damage the appliance and will invalidate the guarantee.
- Switch off and unplug when not in use and before cleaning the appliance.
- Keep the appliance and its cord out of reach of children less than 8 years.
- Do not allow children to use the appliance without supervision.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep motor housing, cable, and plug dry and away from areas where it is likely to get splashed. Never immerse in water.
- Do not pull on the cable to disconnect from the mains supply.
- Do not operate the coffee grinder if damaged or after it malfunctions. In the event the supply cord is damaged, it must only be replaced by a qualified service engineer, with a suitably approved part.
- This appliance must be positioned so that the plug is accessible and the plug socket is within easy reach of the power cord

WARNING!

- This appliance is intended exclusively for use in domestic households. It is not suitable for commercial use.
- Always unplug the motor housing of the coffee grinder if unattended and before assembling, disassembling or cleaning.
- Only use with the parts supplied and fully assembled.
- The grinder blades are sharp, take care when emptying the bowl and cleaning.
- Suitable for chopping dry brittle foods such only. Not suitable for chopping anything moist, hard or oily.
- Do not leave unattended during use.
- Do not attempt to operate the grinder without the cover fitted.
- Do not cover the grinder and allow the motor housing to cool fully before storing.
- This appliance can cause personal injury if misused.

PARTS

On / Off button

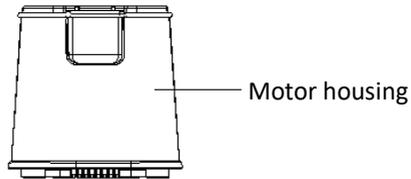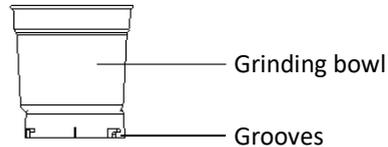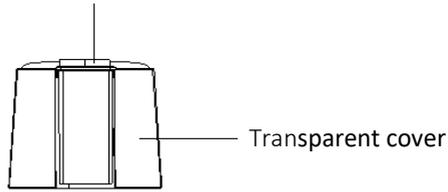

GRINDING TIPS

- For the most flavourful coffee, grind only enough for the pot / cup that you are making.
- Keep coffee beans in an airtight container in the fridge to help retain flavour.
- The coarseness of grind required will depend on the type of coffee maker to be used.

Coarse grind	Percolators and coffee urns
Medium grind	Drip coffee makers and steam-type espresso machines
Fine grind	Espresso machines with an electric pump.

For a coarse grind, grind for a short time. As the time increases, the grind will get finer.

TO USE

1. Dismantle and clean thoroughly before first use – see cleaning section.
2. Place the motor housing on a stable, flat surface.
3. Fill the desired quantity of coffee beans or spices into the grinding bowl. Do not fill past the maximum line marked.
4. Fit the grinding bowl onto the motor housing. Align the grooves in the collar of the grinding bowl with the lugs in the top of the motor housing and turn clockwise firmly in the direction of the ‘locked’ padlock symbol marked on the rim of the motor housing.
5. Fit the transparent cover onto the motor housing.
6. Fully unwind the coffee grinder cable and plug in.
7. Press down on the ON / OFF button to start the grinder. Grind for a **maximum** of 30 seconds.
8. To switch off, release the button and allow the blade to come to a complete stop before checking the fineness of the grind. If satisfactory, remove the cover and bowl from the motor housing.
9. If further grinding is required, wait a few seconds before restarting.
10. After using the grinder for 2 x 30 second cycles, a short rest interval (e.g. 3 minutes) is required before using the grinder again.
11. To stop or interrupt the grinding process, release the ON / OFF button or turn off at the mains.

Note:

- Do not run the grinder empty / without the blades covered.

CLEANING

Clean the coffee grinder after each use.

1. Switch off and unplug.
2. Lift of the transparent cover.
3. Twist the grinding bowl anticlockwise (in the direction of the 'unlocked' padlock) and remove from the motor housing, taking care not to touch the blades. Wipe with a damp lint free cloth.
4. Wipe the outside of the motor housing with a damp cloth; do not use detergents or abrasives as these may scratch the surface. Never immerse the motor housing, cable or plug in water.
5. Wash the transparent cover in hot water with a little washing up liquid. Rinse and wipe dry. Not suitable for the dishwasher.

TECHNICAL SPECIFICATION

Cookworks Stainless Steel Coffee & Herb Grinder	
Model	CG9100
Cat no.	8208251
Rated Voltage & Frequency	220 - 240V AC 50 - 60Hz
Rated Power Input	180 - 220W
Capacity	60g
Class rating	II (double insulated)
BS 1362 fuse	3A
Product dimensions (external)	122 x 122 x 209mm
Product weight (net)	0.98 kg approx.



RECYCLING ELECTRICAL PRODUCTS

You should now recycle your waste electrical goods and in doing so help the environment.

This symbol means an electrical product should not be disposed of with normal household waste. Please ensure it is taken to a suitable facility for disposal when finished with.

Visit www.recycle-more.co.uk, click on “bank locator” and enter your postcode to find your nearest recycling site.



PLUG / WIRING ADVICE

The wires in this mains lead are coloured in accordance with the following UK electrical code:

BLUE = NEUTRAL


BROWN = LIVE

Non-rewireable plug

This appliance may be fitted with a “non-rewireable” plug. If you need to change the fuse in a “non-rewireable” plug, the fuse cover must be refitted. If the fuse cover is lost or damaged, the appliance must not be used.

Rewireable plug

The colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in a rewireable plug. **Rewireable plugs should only be replaced by a suitably competent person. If in doubt, consult a qualified electrician.**

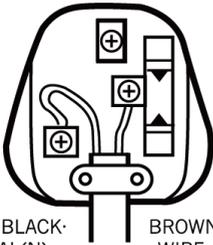

BLUE OR BLACK-
NEUTRAL(N)

BROWN OR RED
WIRE - LIVE(L)

The BLUE wire must be connected to the terminal marked with the letter N

The BROWN wire must be connected to the terminal marked with the letter L

Produced in China. Argos Limited, 489-499 Avebury Boulevard, Milton Keynes, MK9 2NW.
Argos (N.I.) Ltd, Forestside Shopping Centre, Upper Galwally, Belfast, United Kingdom, BT8 6FX.
Argos Distributors (Ireland) Limited, Unit 7, Ashbourne Retail Park, Ballybin Road, Ashbourne, County Meath, Ireland
www.argos.co.uk/cookworks
Tel: 0345 640 3030



PRODUCT GUARANTEE

This product is guaranteed against manufacturing defects for a period of



Year

This product is guaranteed for twelve months from the date of original purchase.

Any defect that arises due to faulty materials or workmanship will either be replaced, refunded or repaired free of charge where possible during this period by the dealer from whom you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual. A replacement copy of this instruction manual can be obtained from www.argos-support.co.uk
- It must be used solely for domestic purpose.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- The manufacturer disclaims any liability for the incidental or consequential damages.
- The guarantee is in addition to, and does not diminish your statutory or legal rights.

Guarantor: Argos Ltd
489 - 499 Avebury Boulevard
Central Milton Keynes
MK9 2NW
www.argos-support.co.uk