

# BUSH

## Instruction manual

Fabric Speaker BT26



You'll soon be enjoying your new Fabric Speaker.

It all begins here, with your instructions. Don't worry, there's nothing too technical coming up. Just simple, step-by-step guidance to get you up and running quickly. Sound good? Then let's get started.

## Help and Guidance

We're here to help you get the most from your Fabric Speaker. Should you require any guidance, a simple solution can often be found online at:

**[www.bush-support.com](http://www.bush-support.com)**

If you still require further assistance, call one of our experts on **0345 600 3021**.

## Contents

### 1 Safety information

General safety information	6
Power source	6
Moisture and water	7
Ventilation	7
Heat sources and flames	7

### 2 Getting to know your Fabric Speaker

Your Fabric speaker	10
Positioning the Fabric Speaker	12
Power connection	12

### 3 Using your Fabric Speaker

Power on	16
Status LEDs	16
Connect to a Bluetooth device	16
Adjusting the volume	17
Listening to Music/Audio using Bluetooth	18
Aux in mode	18

### 4 Other information

Technical specification	22
-------------------------	----

### 5 Product support

Troubleshooting	26
Help and assistance	27
Disposal	28
Your Bush Guarantee	29

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

section of these instructions, or online at **[www.bush-support.com](http://www.bush-support.com)** If you still require further assistance, call one of our experts on 0345 600 3021.

# Safety information

1

This page is left intentionally blank

## Safety information

**Important** - Please read these instructions fully before installing or operating

### General safety information

Keep the product and all its parts out of reach of small children.

This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.

- Do not attempt to open the product. This product does not contain any user serviceable parts. Unauthorised handling of the device may damage it and will void your warranty.
- Do not use your Fabric Speaker emergency/intensive care medical equipment; or during an electrical storm.



To avoid possible hearing damage, do not listen to this Fabric Speaker at high volume levels for long periods of time. Always keep the volume within reasonable limits.

### Power source

Only use the power supply that came with the product. Using an unauthorised power supply will invalidate your guarantee and may irrecoverably damage the product.

Disconnect your Fabric Speaker from the mains power supply during thunderstorms.

Always check that you have completely switched off your Fabric Speaker, before you change or disconnect the power supply.

Where the mains power plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

If the Fabric Speaker will not be used for a long period of time, make sure that the mains power is unplugged.

## Safety information

**Important** - Please read these instructions fully before installing or operating

### Moisture and water

- Do not leave it in low temperatures as moisture can form inside the product, which may damage the circuit board.

### Ventilation

- Do not block or cover slots, holes or openings on the product by placing on soft furnishings such as carpets, rugs or beds as these are provided for functionality and/or ventilation to ensure safe operation of the product.

### Heat sources and flames

Do not leave it in high temperatures as electronic devices and plastic parts may warp in heat.

 
Keep it away from bright sunlight or heat sources, such as a radiator.

No naked flame sources, such as lighted candles, should be placed on or near the product.

## Getting to know your Fabric Speaker

2

This page is left intentionally blank

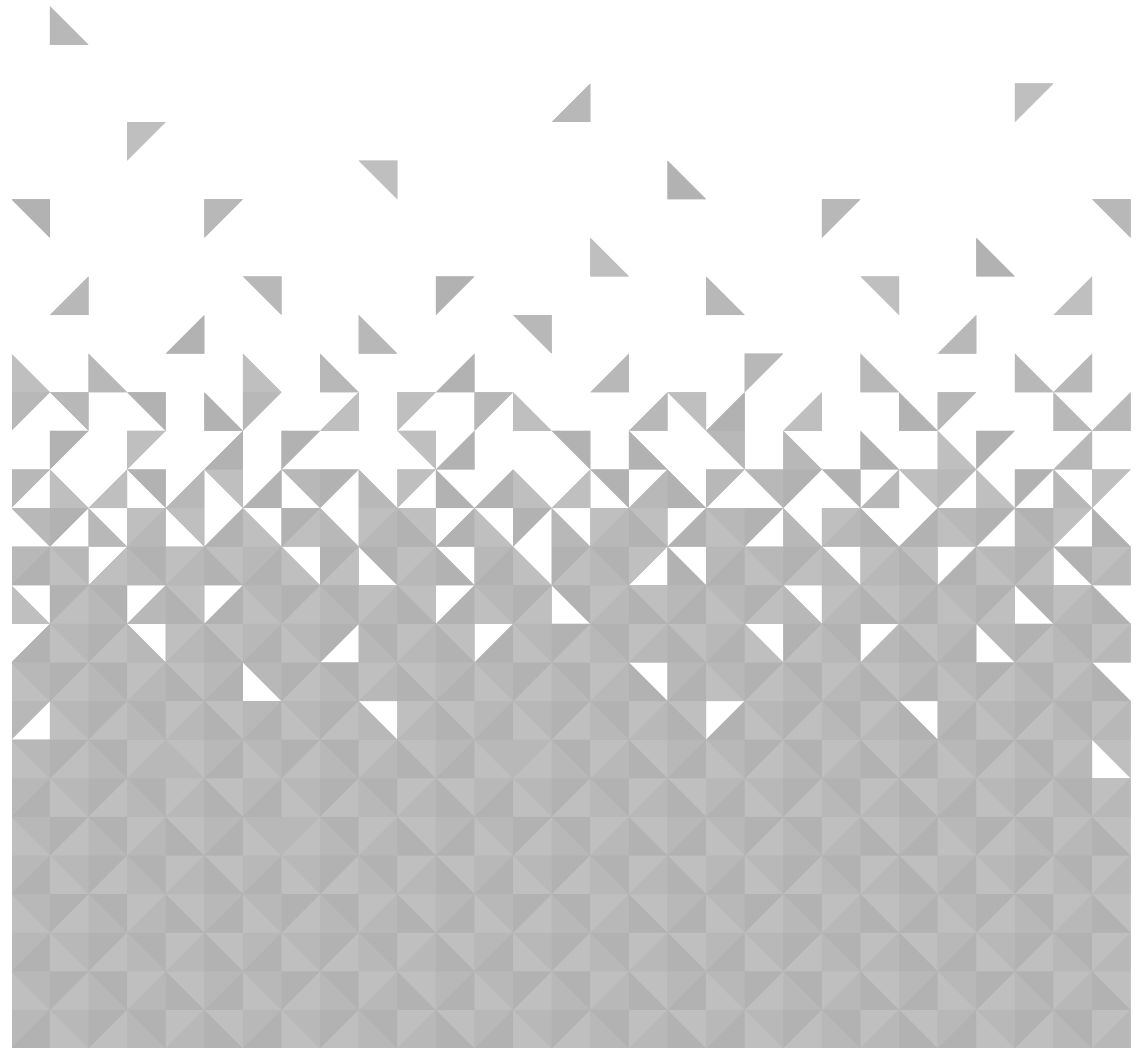

## Getting to know your Fabric Speaker


You'll be up and running in no time

### Ready? Let's begin...

Please read these instructions carefully. They contain important information which will help you get the best from your product and ensure safe and correct installation and operation.

If you require any further assistance, our technical experts are happy to help. For full details, refer to the product support section at the end of these instructions.

 Fig 1.

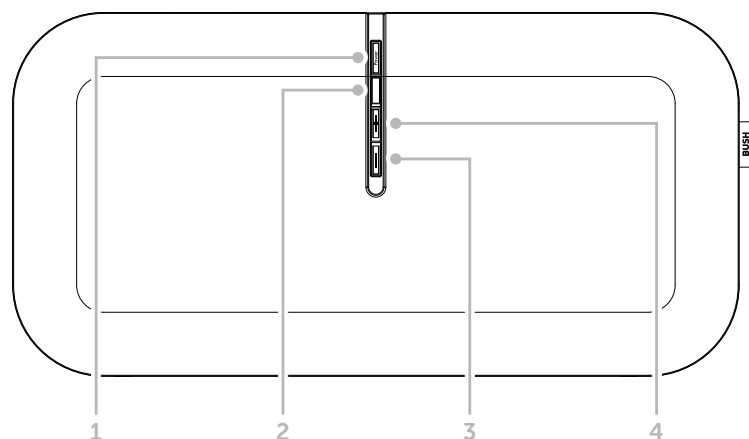


- |  |   |
|--|---|
| 1. Power on/Standby                                      | • <b>Blue steady on:</b> BT connected             |
| 2. Status LED  | • <b>Red steady on:</b> Aux in mode               |
| • <b>Blue flashing quickly:</b> Searching for BT devices | • <b>Red flashing slowly:</b> Aux in standby mode |
| • <b>Blue flashing slowly:</b> BT standby mode           | 3. Volume -                                       |
|  | 4. Volume +                                       |

## Getting to know your Fabric Speaker

You'll be up and running in no time

 Fig 2.

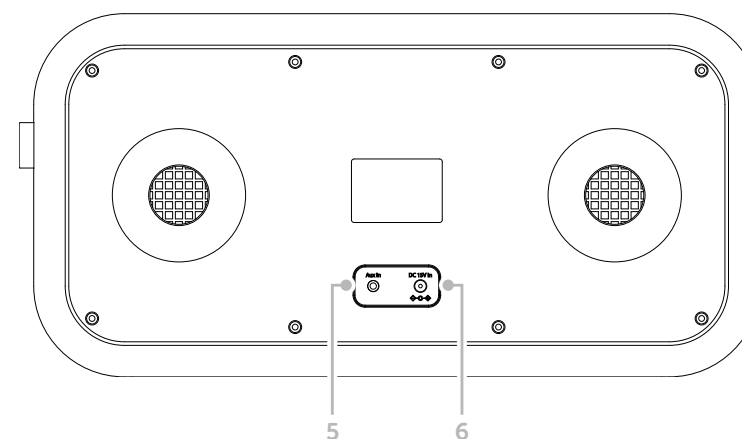

5. Power socket      6. Aux in socket

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

section of these instructions, or online at [www.bush-support.com](http://www.bush-support.com) If you still require further assistance, call one of our experts on 0345 600 3021.

## Getting to know your Fabric Speaker

You'll be up and running in no time

### Positioning the Fabric Speaker

It is important that you consider carefully in advance where your Fabric Speaker will be situated and make sure that it is:

- on a flat and stable surface.
- at least 1 metre away from other electrical appliances to avoid interference.
- where it will be in range of the connected or 'paired' bluetooth device (e.g. iPod/iPhone/iPad/Android/other phone/computer, which is about 10 metres or less (33 feet or less) in line of sight.
- Never place your Fabric Speaker directly onto antique or polished surfaces.

### Power connection

 
1. Connect the mains power lead into the socket on the back of the Fabric Speaker and plug the power adaptor into the mains power wall socket and switch on.
2. The status LED will start to flash quickly whilst the product searches for bluetooth devices.

This page is left intentionally blank

## Using your Fabric Speaker

3

This page is left intentionally blank

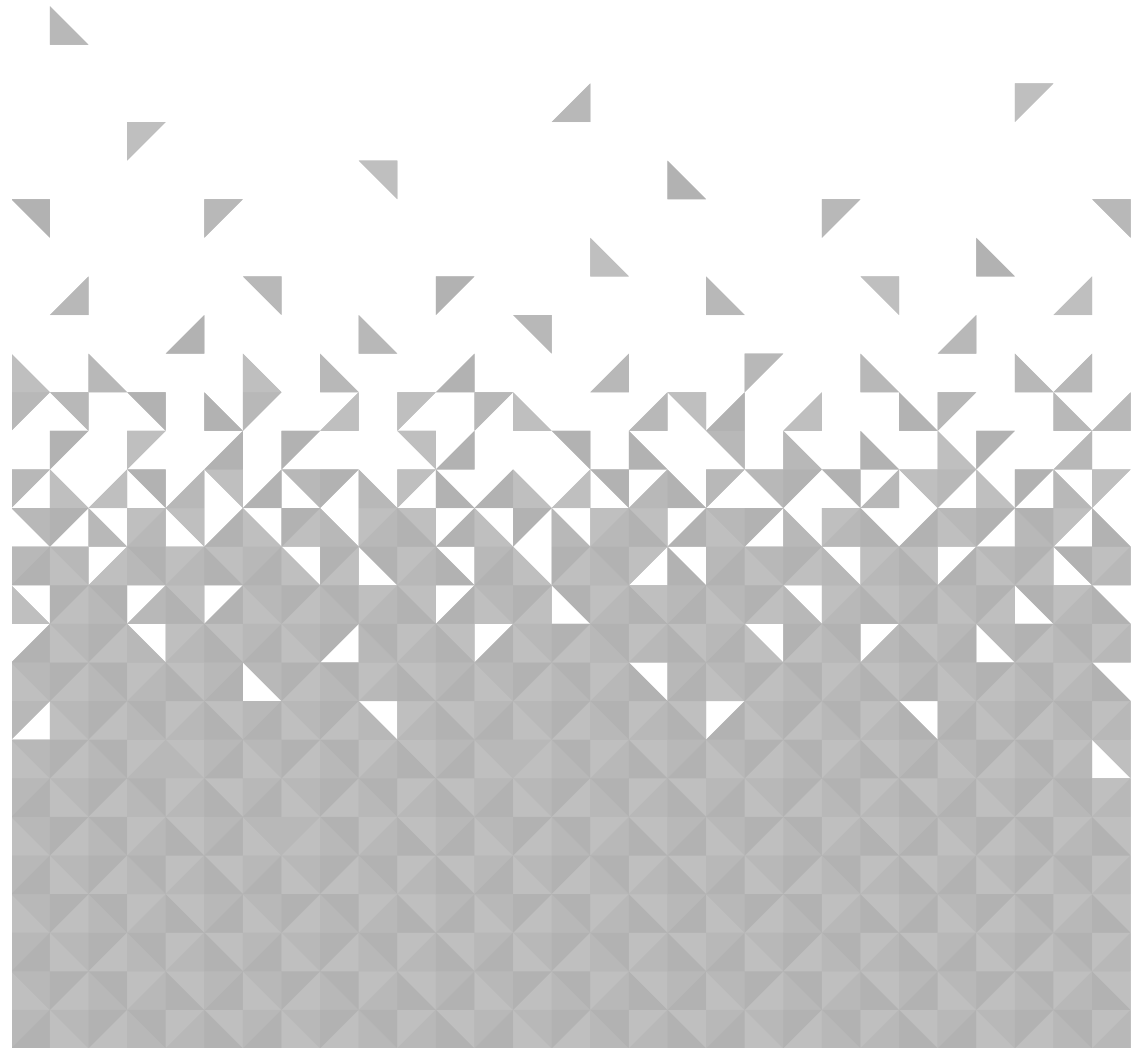

# Using your Fabric Speaker

Let's get started

## Power on

After you have connected the power to the Fabric speaker, the status LED will start to flash quickly whilst the product searches for bluetooth devices. If the Fabric Speaker does not receive an audio signal for approximately 20 minutes it will go to Standby mode.

## Standby mode

If the Fabric Speaker does not receive an audio signal for approximately 20 minutes, it will go to Standby mode and the status LED will flash slowly. Press and release the Power button to turn the product back on again.

## Status LEDs

<b>Blue flashing quickly:</b>	Searching for BT devices
<b>Blue flashing slowly:</b>	BT standby mode
<b>Blue steady on:</b>	BT connected
<b>Red steady on:</b>	Aux in mode
<b>Red flashing slowly:</b>	Aux in standby mode

## Power off

Press and release the Power switch to go to Standby mode and then switch off at the wall socket to power off the product completely

## Connect to a Bluetooth device

1. With the Status LED flashing blue quickly, whilst your product searches for Bluetooth devices:
2. On the device that you would like to connect to your Fabric Speaker via Bluetooth (e.g. iPhone/iPad/Android/other phone/Tablet/Computer), turn on Bluetooth connectivity and ensure that it is 'discoverable'.

# Using your Fabric Speaker

Let's get started

---

**Note:** If necessary, refer to the instructions for your device to add or set up Bluetooth.

---

3. Select to 'Add new device', if necessary.

---

**Note:** Some products will automatically search for a new device and so the 'Add new device' option is not available.

---

4. When found, your Fabric Speaker will be displayed as 'BUSH BT26'. Select the device name to begin pairing.

---

**Note:** If your device requests a password, please enter '0000' to complete the device pairing.

---

5. When pairing is complete the LED will change to be continuously on (not flashing) and 'Audio device connected' will be announced.
6. Now that you have paired your device with the Fabric Speaker, it will connect to it when it is within range, which is about 10 metres or less (33 feet or less), line of sight.
7. Your device will remain paired with the Fabric Speaker unless you decide to disconnect or 'unpair' it.

## Adjusting the volume

### Volume+

- Press and release to increase the volume in steps.
- Press and hold to progressively increase the volume.

### Volume-

- Press and release to decrease the volume in steps.
- Press and hold to progressively decrease the volume.

---

**Note:** You will hear an audible alert and the status LED will quickly flash when the minimum or maximum volume level has been reached.

---

section of these instructions, or online at [www.bush-support.com](http://www.bush-support.com) If you still require further assistance, call one of our experts on 0345 600 3021.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

# Using your Fabric Speaker

Let's get started

## Listening to Music/Audio using Bluetooth

In Bluetooth mode:

1. Select and start the music or audio that you wish to listen to on your paired Bluetooth device, it will now be heard through the Fabric Speaker. Adjust the volume on the connected device and/or your Fabric Speaker.
2. You can use the controls on your paired Bluetooth device as well as the volume control on your Fabric Speaker.

## Aux in mode

1. Connect one end of a 3.5mm audio cable (not supplied) to the headphone (or auxiliary out) socket of your secondary device. Connect the other end to the Aux in socket on the back of your Fabric Speaker. This will switch your Fabric Speaker to Aux in mode. The status LED will be red in Aux-in mode.
2. Press the Play button on your external device to start playback through the Fabric Speaker.
3. To gain optimal volume levels, adjust the volume level on both the secondary device and on the Fabric Speaker.

---

**Note:** After you have finished listening to your external device you must unplug the audio cable from the Aux in socket, to be able to use it as a Bluetooth speaker again.

---

This page is left intentionally blank

## Other information

4

This page is left intentionally blank

## Other information

Helpful technical information

### Technical specification

Audio output:	2 x 12W RMS
Power adapter:	Input 100-240V 50/60Hz Output 15V 2A
Bluetooth:	Version 4.2
Pairing name:	BUSH BT26
Profiles:	A2DP, AVCTP, AVDTP, AVRCP
Frequency range:	2.4GHz-2.480GHz

This product is intended for use within the UK. This equipment complies with the essential requirements of the Radio Equipment Directive 2014/53/EU.

### Declaration of Conformance

Hereby, Argos Ltd, declares that this Fabric Speaker BT26 is in compliance with the essential requirements and other relevant provisions of the Radio Equipment Directive 2014/53/EU. The complete declaration of conformity can be obtained by contacting <http://www.bush-support.com/>

This page is left intentionally blank

**Product support**

5

This page is left intentionally blank

## Product support

Help is always at hand

### Troubleshooting

Unable to pair with a Bluetooth device:

- Check that you are in Bluetooth mode.
- Ensure that you are within range of the Fabric Speaker for Bluetooth functionality, 10 metres or less (33 feet or less).
- Check that the device you are attempting to pair with supports A2DP stereo audio transmission.
- Move the Fabric Speaker and Bluetooth device away from other Bluetooth devices/ electrical equipment.
- If possible, turn off other nearby Bluetooth devices or disable their Bluetooth functionality.

No sound / Sound distortion:

- Adjust the volume.
- If you are using a Bluetooth connected device, check the volume on the secondary device and on your Fabric Speaker

## Product support

Help is always at hand

### Help and assistance

If you require any technical guidance or find that your Fabric Speaker is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions or online at [www.bush-support.com](http://www.bush-support.com)

If you still require further assistance, call one of our experts on **0345 600 3021\***. To help give us give you a fast and efficient service please have the following information ready:

Model Ref.

Serial number

You can find these on the rating plate - a small information panel (usually a sticker or metal plate) on the rear or base of your product.

Date of purchase

This will be shown on your receipt

Local call rates applies\*

Lines open 8am-7pm Monday to Saturday and 10am-4pm Sunday.

\*Calls to Argos enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see [www.bt.com/pricing](http://www.bt.com/pricing) for details.

For security and training purposes, telephone calls to and from customer service centres may be recorded and monitored. Calls from Republic of Ireland will attract international call charges.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

section of these instructions, or online at [www.bush-support.com](http://www.bush-support.com) If you still require further assistance, call one of our experts on 0345 600 3021.

## Product support

Help is always at hand

### Disposal



- Disposal of your old product. Your product is designed and manufactured with high quality materials and components, which can be recycled and reused
- When this crossed out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2012/19/EC.
- Please make yourself aware of the local collection system for electrical and electronic products.
- Please act according to your local rules and do not dispose of your old products with your normal household waste.
- The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.

## Product support

Help is always at hand

# BUSH

### Call us now and register your 12 month guarantee

Thank you for choosing Bush. Your new product is guaranteed against faults and breakdowns for 12 months. Don't forget to register it with us today so we can provide you with our best possible after-sales service and useful updates.

**[www.bushregistration.co.uk](http://www.bushregistration.co.uk)**

FREEPHONE\*

**0800 597 8548**

Lines are open 8am - 8pm, 365 days a year. \*Calls may be recorded and monitored.

### Your Bush Guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from who your purchased the unit.

#### The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in the manual.
- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- Bush disclaim any liability for loss or damage arising from the breakdown of the product.
- This guarantee is in addition to and does not diminish your statutory or legal rights.

### Important Data Protection Information

If you provide us with information about another person, you confirm that they have appointed you to act for them, to consent to the processing of their personal data including sensitive personal data and that you have informed them of our identity and the purposes (as set out in the Important Data Privacy notice displayed overleaf) for which their personal data will be processed.

You are entitled to ask for a copy of the information we hold about you (for which we may charge a small fee) and to have any inaccuracies in your information corrected.

For quality control and training purposes, we may monitor or record your communications with us.

If your personal details change, if you change your mind about any of your marketing preferences or if you have any queries about how we use your information, please let us know by contacting our Data Protection Officer, Domestic & General, Leicester House 17 Leicester Street, Bedworth, Warwickshire CV12 8JP.

Guarantor: Argos Limited - 489 - 499 Avebury Blvd. - Milton Keynes - MK9 2NW

section of these instructions, or online at [www.bush-support.com](http://www.bush-support.com) If you still require further assistance, call one of our experts on 0345 600 3021.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**



# BUSH

**Contact:**

[www.bush-support.com](http://www.bush-support.com)

Helpline: 0345 600 3021