



Assembly & Operation Instructions

HOME

HOME MULTI FIT GROUND SPIKE

(CDG50-T32/35/38/40/45 - 8269403 / 131406377)

 Parts Included

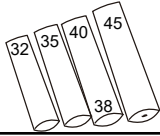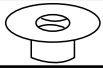Ref	Description	Illustration	Qty
A	50mm Metal ground spike		1
B	32mm,35mm,38mm,40mm, 45mm insert sizer		4
C	Installation cap		1
D	Spike cap		1

Before You Start




1. Check the pack to make sure you have all the parts listed above. If not, return the product to store.
2. You are now ready to install.

Directions for Use

Remove all packaging and establish a suitable location for your ailer, ensuring there is enough space for it to rotate freely when fully open then you can install the ground spike.




Permanent fixing in concrete

1. Remove all the parts from the ground spike.
2. Dig a hole 30cm square and 45cm deep.
3. Partly fill hole with concrete and place the spike upright in the centre.
4. Complete filling with concrete and ensure when installing the spike that it is firmly located in a vertical position. Allow 48 hours for setting before use.

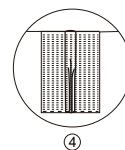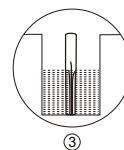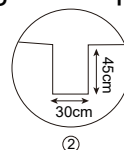

Non permanent fixing in semi firm ground

1. Remove all the plastic sizers from the ground spike and insert the installation cap
2. Using a piece of wood to protect the installation cap, strike it with a hammer driving your spike into the ground, stopping occasionally to check the spike always maintains a vertical position.
3. Continue driving your spike into the ground until the top of the spike is at ground level and remove the installation cap.

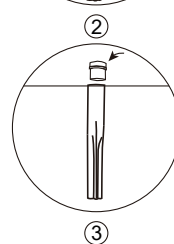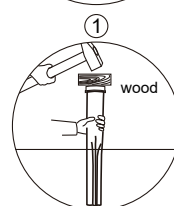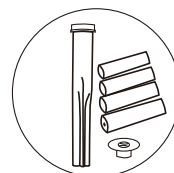

Select 1 of the 4 inserts (B) that fits your rotary ailer best by sliding it onto the bottom of the centre pole. Note: if you have a rotary ailer that has a 50mm diameter centre pole then none of the inserts will be required. Once selection has been made, remove your selected inserts off the rotary ailer and place it into the remaining larger inserts. Note: The 38mm & 40mm sizes are on one insert. Rotate for required size.

Place the assembled inserts into ground spike.

The ground spike is now ready to support your rotary ailer.

Use the spike cap to cover your spike if you remove your rotary ailer.

Warning

Note: During installation be sure to keep the spike vertical.

This is not a children's toy. Do not allow children to play with this product.

Customer Support

0345 640 2020